


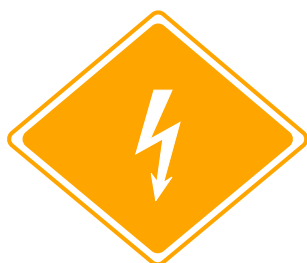

INFORMATION FOR FIRST AND SECOND RESPONDERS EMERGENCY RESPONSE GUIDE FOR VEHICLE




**ZEEKR RT
ELECTRIC VEHICLE
2025 -**



Contents

0. Rescue sheet(s)	3
1. Identification / recognition	4
2. Immobilisation / stabilisation / lifting	6
3. Disable direct hazards / Safety regulations	8
4. Access to the occupants	11
5. Stored energy / Liquids / Gases / Solids	17
6. In case of fire	19
7. In case of submersion	20
8. Towing / transportation / storage	21
9. Important additional information	23
10. Explanation of pictograms used	24

0. Rescue sheet(s)

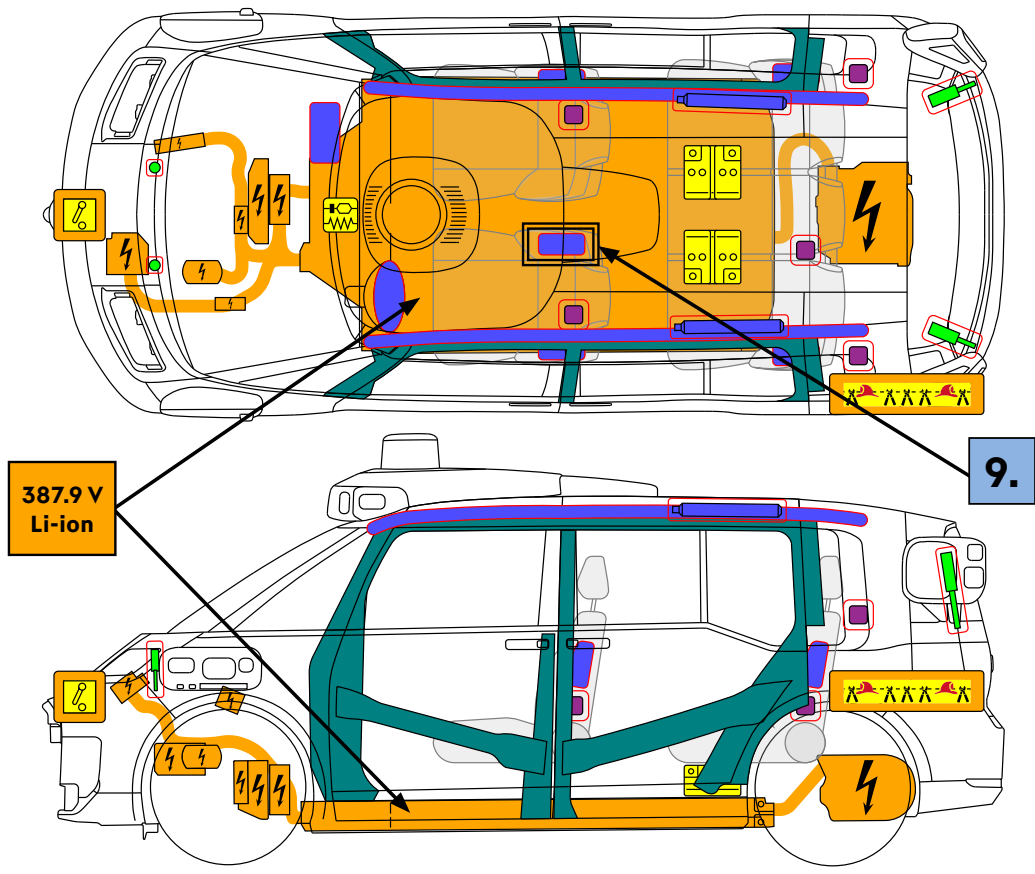	Zeekr RT Type: 5dr MPV (2025 -)		
    Airbag  Stored gas inflator  Seat belt pretensioner  SRS control unit  Battery low voltage  Gas strut / Preloaded spring  Low voltage device that disconnects high voltage  Cable cut  High voltage component  Battery pack, high-voltage  High voltage power cable  High strength zone  Zone requiring special attention			
Internal reference	Version	Creation date	Page
Zeekr_RT__MPV_2025_5d_Electric_EN	01	12/2024	1 / 5

1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS SHUT DOWN. WEAR APPROPRIATE PPE.

HOW TO IDENTIFY A ZEEKR RT


Zeekr RT can be identified by its brand and model badges, location of the charge port and VIN number.



Brand name front




AD Sensors

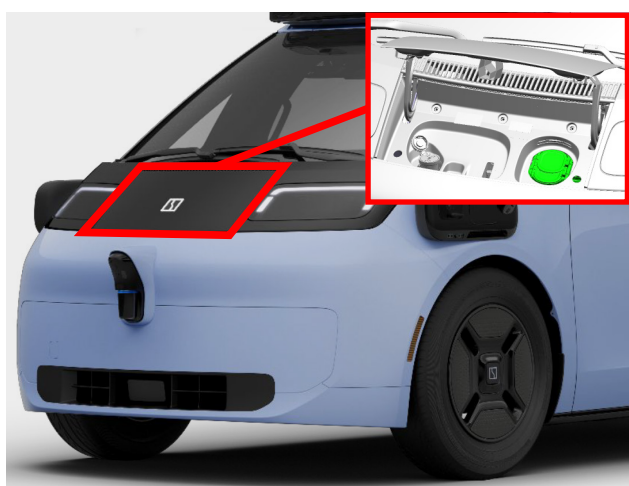


Charge port

VEHICLE IDENTIFICATION NUMBER (VIN)


The VIN code is made up with 17 numbers or words. The Vehicle Identification Number (VIN) can be found on these locations:

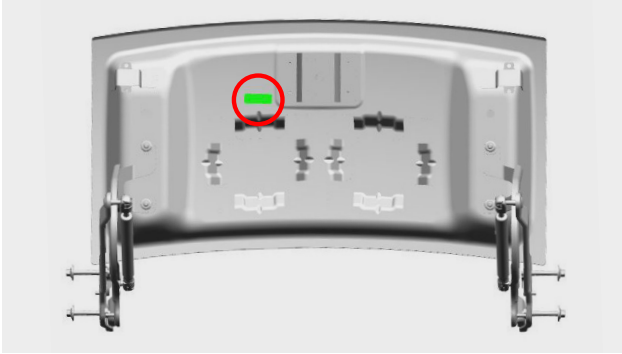

Engine hood inner panel

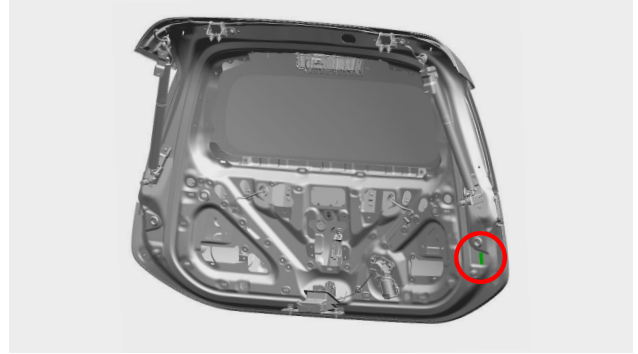

Tailgate inner panel left

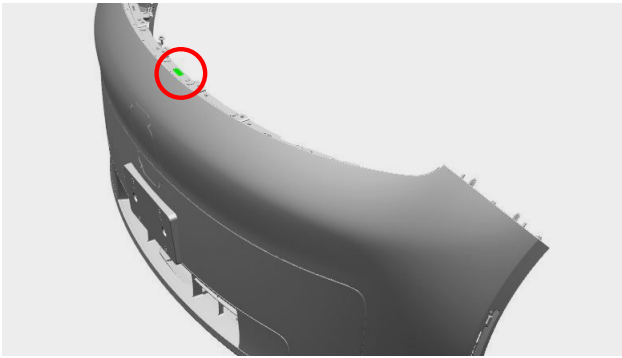


Front bumper



Rear bumper



Left front fender

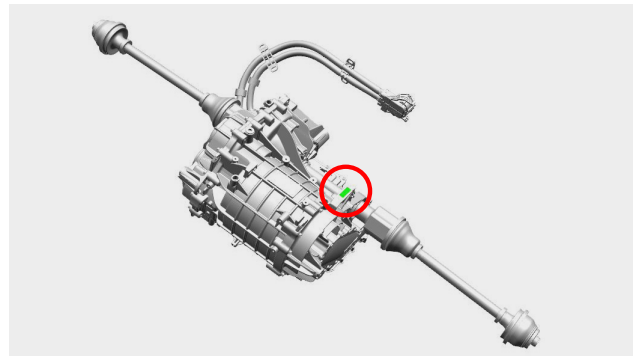


EDU (Electric Drive Unit)



Left front door panel



Right rear door panel

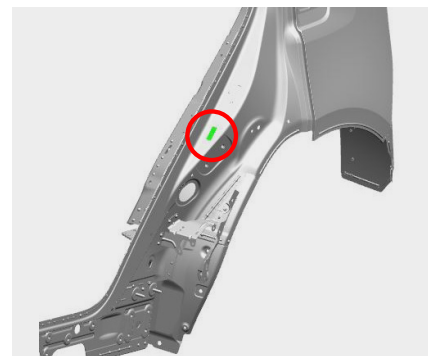

Right rear wheel panel

2. Immobilisation / stabilisation / lifting

IMMOBILISE VEHICLE:


1. Block wheels and set parking brake



2. Push the P (park) button to select the P (park) position



LIFTING POINTS:

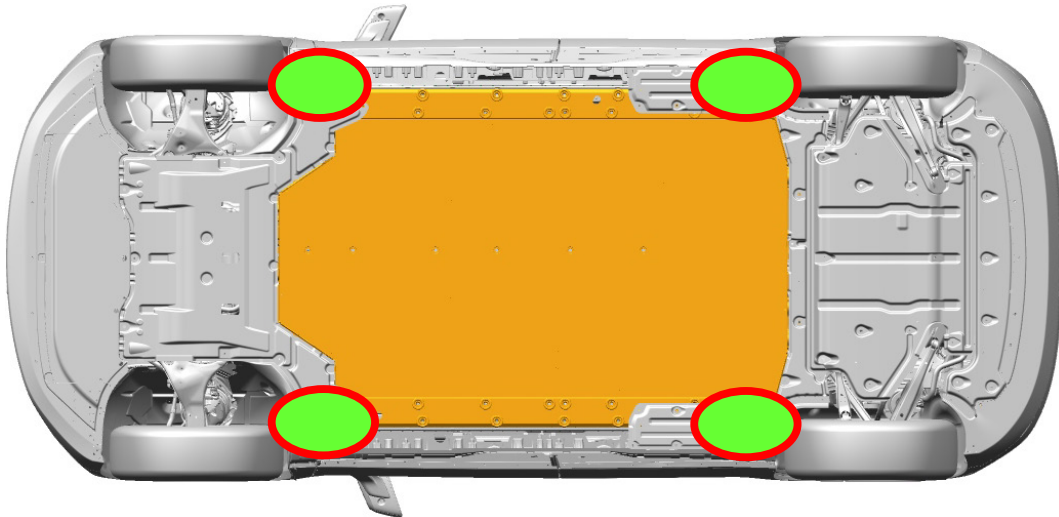

Appropriate lifting points



High voltage battery



Be careful to not damage high voltage cables and/or high voltage battery while stabilizing / lifting the vehicle.



Never touch, cut, or open any orange high voltage power cable or high voltage component; In case of a collision with seat belt pretensioner activation / airbag deployment, the high voltage system will be disabled automatically. The restraint systems are still active. Wear appropriate PPE.

3. Disable direct hazards / Safety regulations

After immobilizing and stabilizing the vehicle, the next step is to disable the vehicle, its SRS components and the high voltage electrical system.





First responders should always assume that the high-voltage system is powered on, and take the appropriate action described in this guide to power off the system.

To prevent the current flow through the system, use one of the following procedures to disable the vehicle.

CHARGING CABLE

Manually release the charging cable

- Open the hood
- Remove the front compartment's plastic cover
- Pull the release lever located behind the charging port to release the charging cable
- Remove the charging cable from the charging port


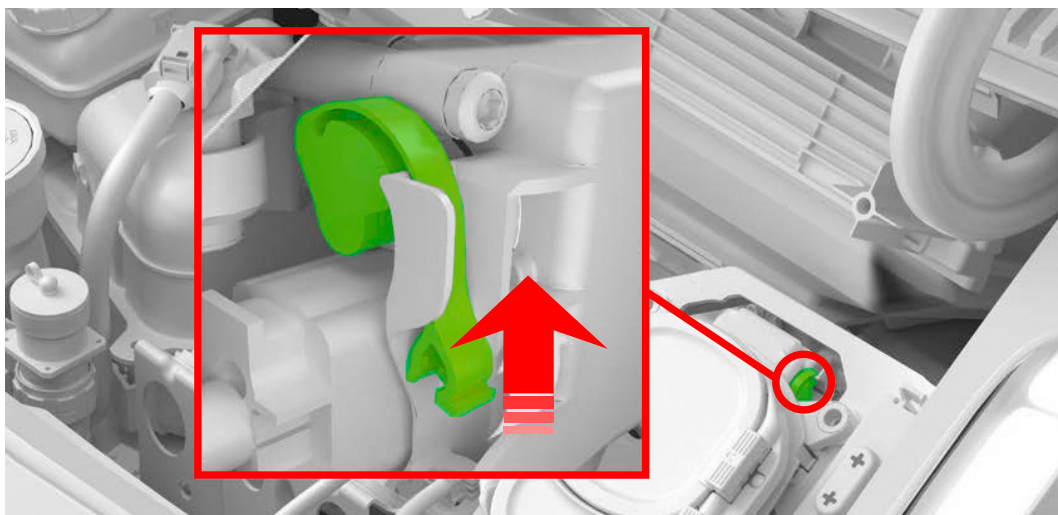
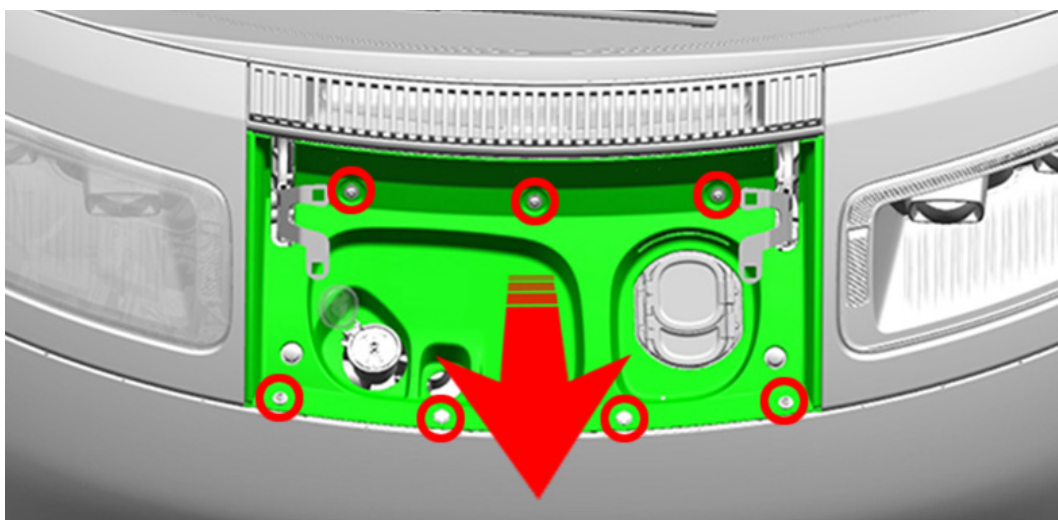


MAIN METHOD:

The propulsion system is disabled when the 'Safety mode See Manual' indicator in the instrument cluster is illuminated.




ALTERNATIVE METHOD 1:

1. Open the trunk
2. Remove the access cover by pulling it to release the clips that hold it in place.
3. Cut the cable according to the cutting label, to interrupt the circuit of the high voltage system.

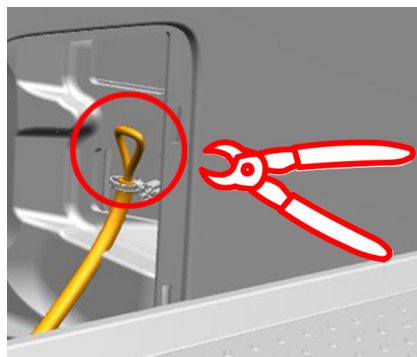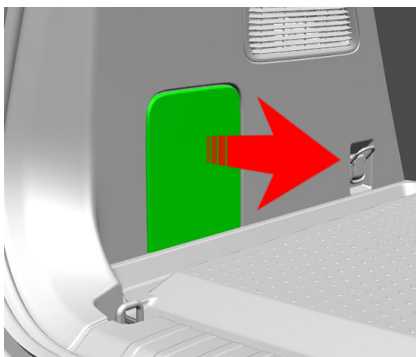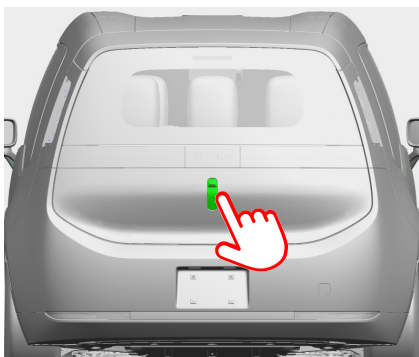





ALTERNATIVE METHOD 2:

1. Open the hood
2. Remove the front compartment's plastic cover
3. Use the Service/Emergency disconnect connector

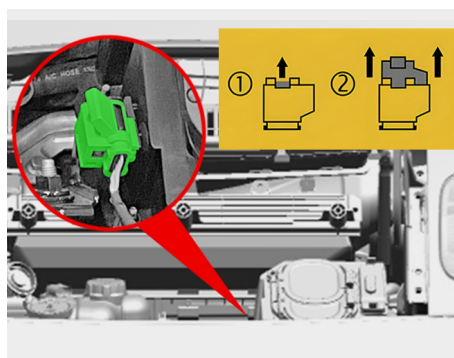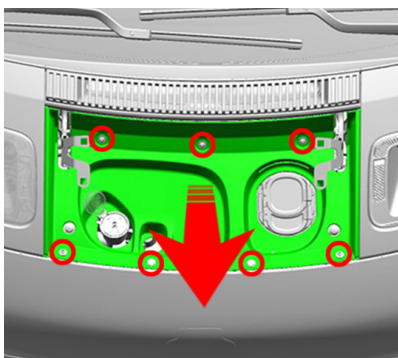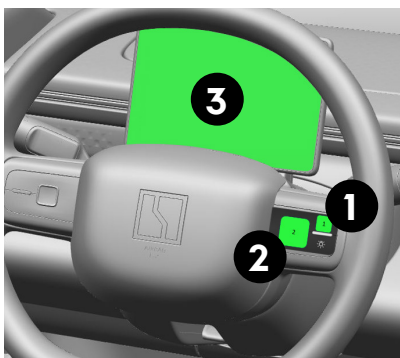

DISCONNECT 12 VOLT BATTERIES

1. Remove the front cover
2. Remove the access cover by pulling it upward to release the clips that hold it in place.
3. Disconnect 12 Volt battery

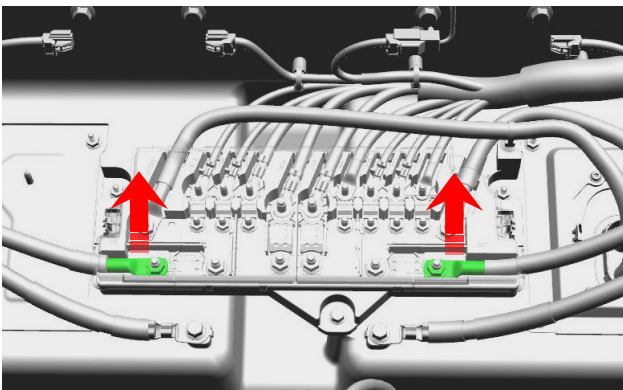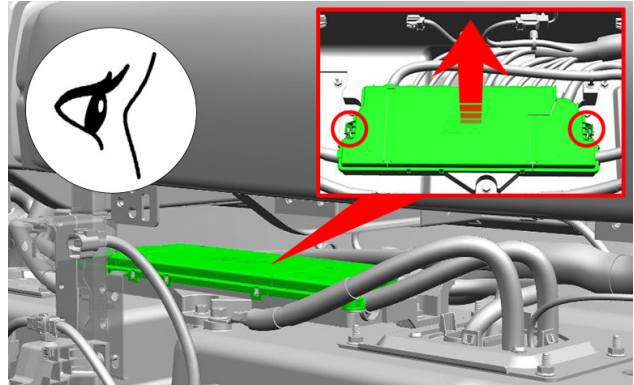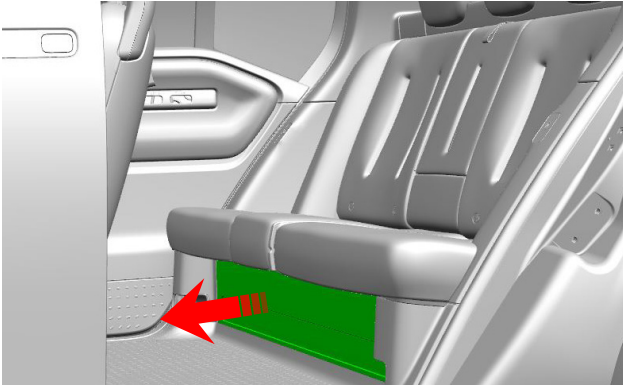

Always assume the vehicle is powered, even if it is silent!
Make sure that the vehicle is immobilized and the propulsion system is deactivated; Never touch, cut, or open any orange high voltage power cable or high voltage component; In case of a collision with seat belt pretensioner activation / airbag deployment, the high voltage system will be disabled automatically. The restraint systems are still active.




It takes approximately 2 minutes for the electrical charge stored in the capacitor etc. to discharge. After the high voltage has been switched off, take care to avoid short circuits, etc.

4. Access to the occupants

LOCATION OF HIGH STRENGTH STEEL

The body of the Zeekr RT is made of multiple types of steel and are indicated by the colored areas.

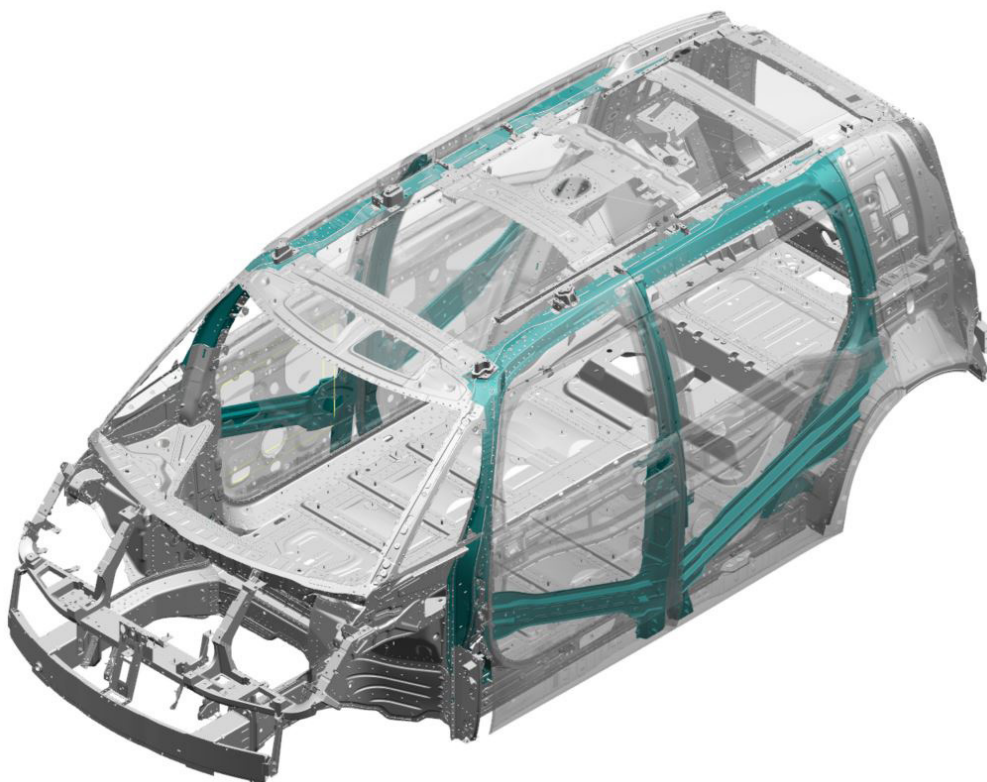


 Press Hardened Steels Hard Zone

HIGH STRENGTH ZONE




CUT ZONE (CUTTABLE AREA)

If it is necessary to cut the vehicle body or use hydraulic cutters, etc. to rescue the occupants, do so within the cut zones shown in the image below. Do not cut the area near the high-pressure gas generator part of the side curtain airbag on the side of the vehicle (non-cut zone shown below).

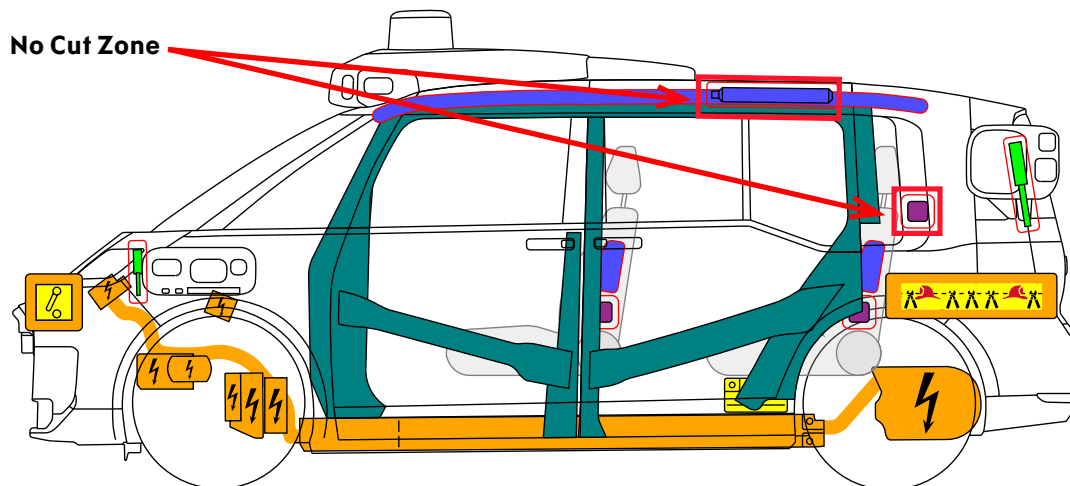

GLASS TYPES

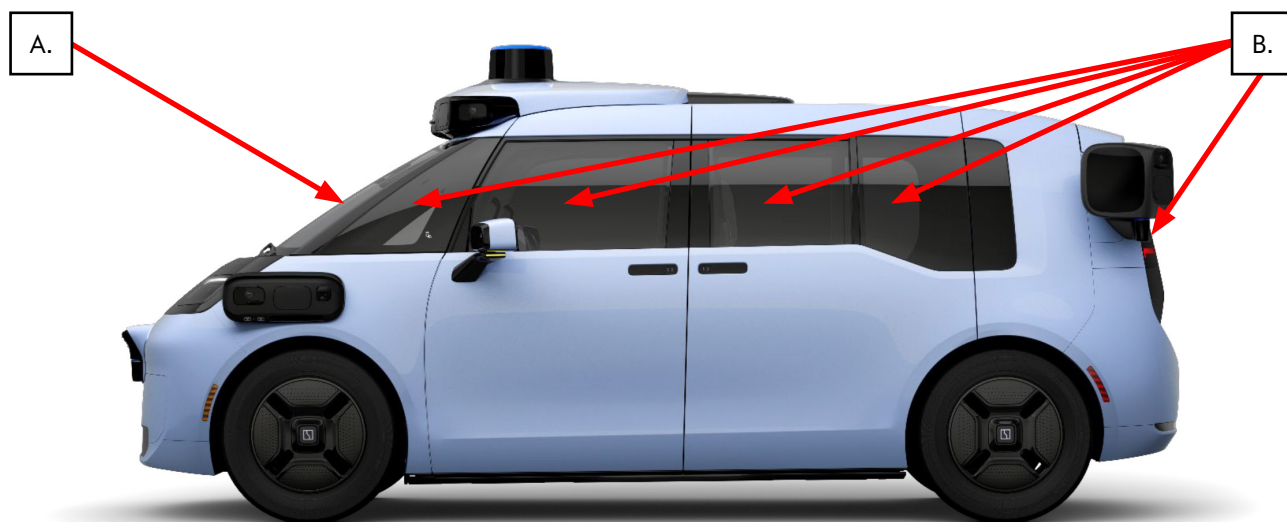

A. Laminated glass


B. Tempered glass

LOCK AND UNLOCK

An NFC card is used to lock and unlock the car. To unlock/lock the car, hold the NFC card against the key induction area on the driver side's front pillar. This unlocks/locks all doors.

OPENING DOORS



Opening side doors from outside with power

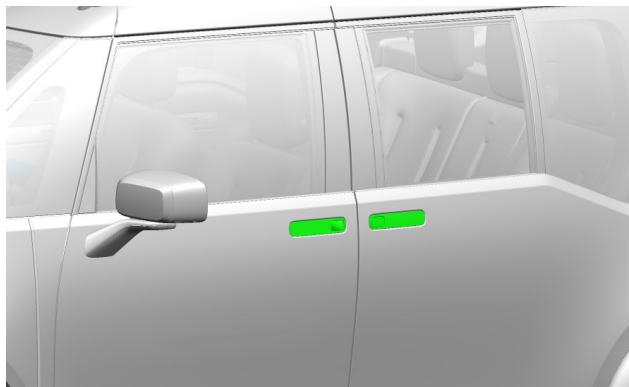

To open or close a door, press the door's button. All outside door buttons illuminate when the car is being unlocked or locked, or when any of the door buttons is pressed.

Opening the hood without power


If no- or low battery voltage it is not possible to open the hood. To resolve this, the vehicle must be jumpstarted, see pictures below.

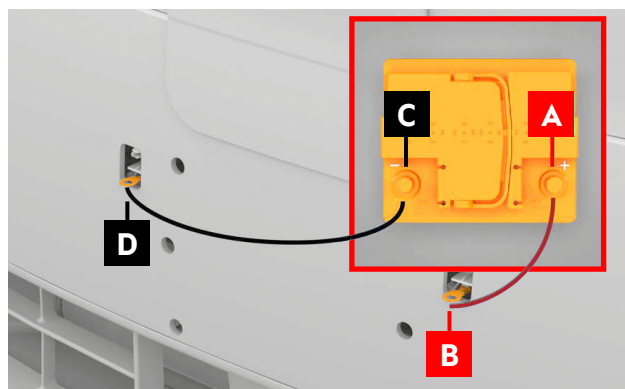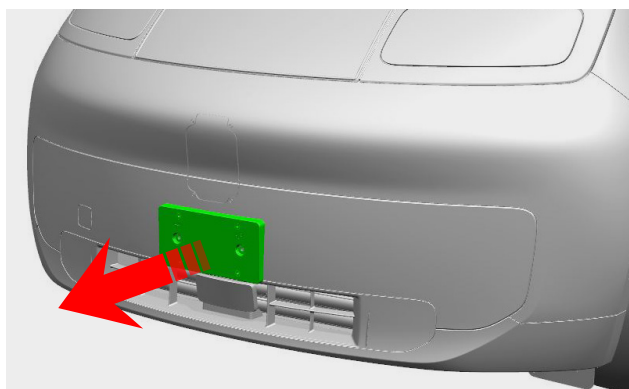

1. Remove the front license plate and the license plate holder.
2. Connect the red jumper cable to the positive terminal of the external battery source (A).
3. Connect the other end of the red jumper cable to the car's positive terminal (B).

4. Connect the black jumper cable to the negative terminal of the external battery source (C).
5. Connect the other end of the black jumper cable to the car's negative terminal (D).

Opening side doors from inside with power


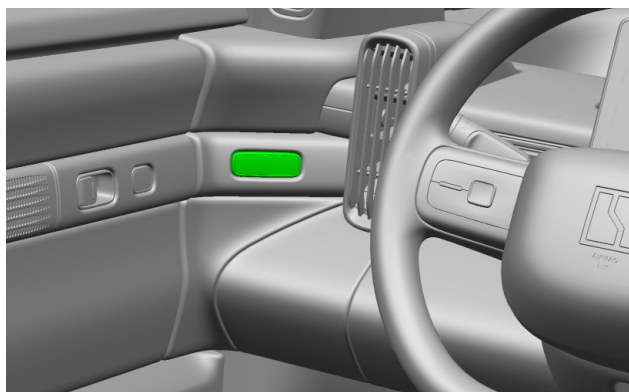


To open or close a front door, press the button on the respective side of the dashboard.




The rear doors have two open and close buttons. To open a rear door, press the rear or front button on the rear door panel.

Opening side doors from inside without power

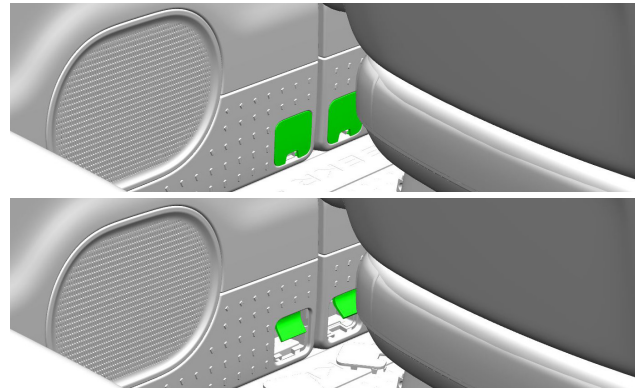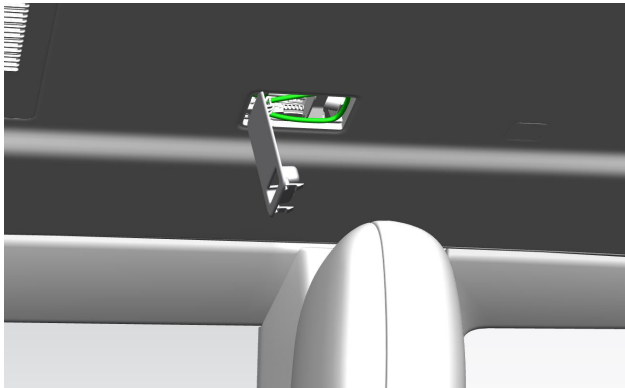

1. Open the lid in the roof lining.
2. Pull the strap until the doors move slightly outwards, indicating that they are unlocked.
3. Open the lid on the front door and pull the latch gently.
4. Push the front door outward and then forward.
5. Open the lid on the rear door and pull the latch gently.
6. Push the rear door outward and then backward.

Opening the hood

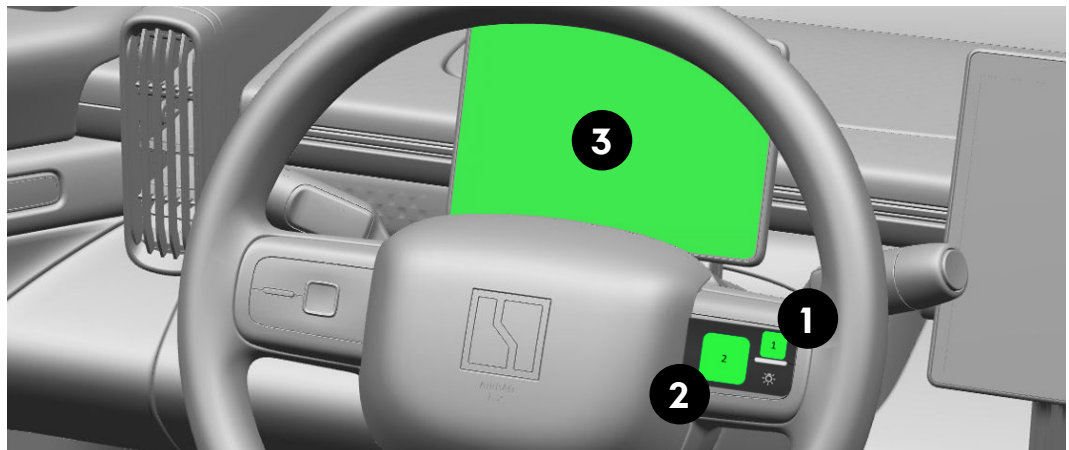

In the driver display, navigate to Settings > Hood

Opening the tailgate from the outside



When the vehicle is unlocked, press the button on the tailgate to automatically open the tailgate.

SEATS ADJUSTMENT

The driver seat can be adjusted by using the seat button on the lower left side of the seat.



- Adjust the seat forward/backward by moving the button forward/backward.
- Adjust the seat recline angle by moving the rear section of the button up and down.
- Adjust the cushion angle by moving the front section of the button up and down.


The front passenger seat can be adjusted by using the seat button on the lower right side of the seat.



- Adjust the seat forward/backward by moving the button forward/backward.
- Adjust the seat recline angle by moving the rear section of the button up and down.

STEERING WHEEL ADJUSTMENT

Adjust the position of the steering wheel if necessary.

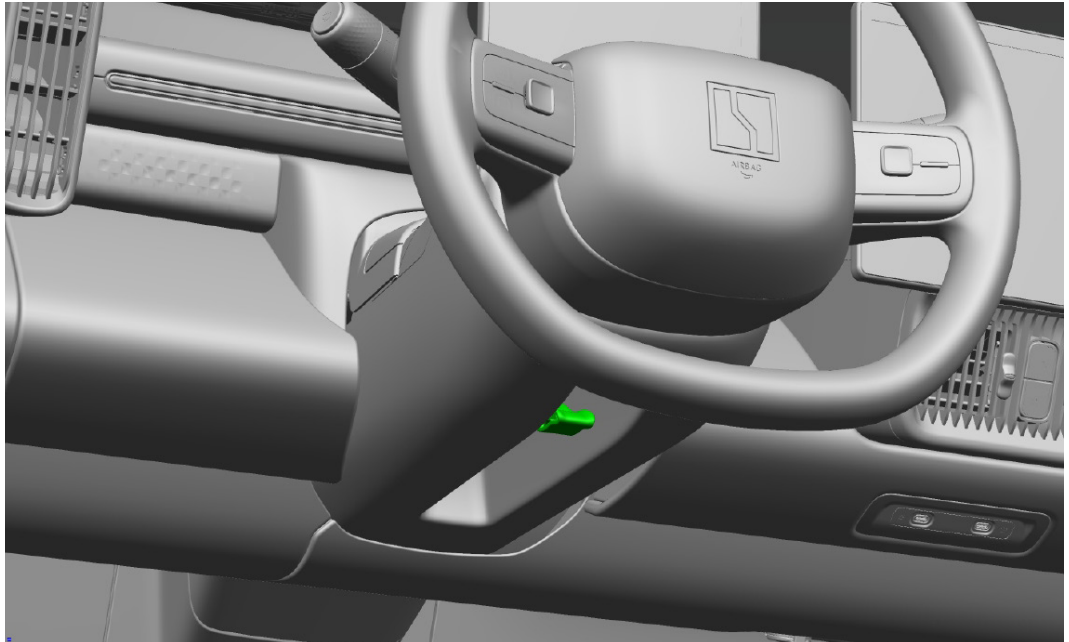


Manual steering wheel

Pull the lock lever down and adjust the steering wheel up or down, forward or rearward to the desired position.

Push the lock lever up securely to lock the steering wheel in place.

5. Stored energy / Liquids / Gases / Solids

FLUIDS AND GASES USED IN THIS VEHICLE

Type	Capacity	Dangers
 Li-ion	387.9 V	     
 2x 12V (Li-ion)	2x 12V (Li-ion)	 
 R-1234yf 825 g	R-1234yf 825 g	   



When conventional coolant leaks (check reservoir) from the high voltage (HV) battery cooling system, HV-battery can become unstable with risk of thermal runaway. An increasing HV-battery temperature might be an indicator of thermal runaway.




LOCATION OF HIGH-VOLTAGE COMPONENTS


If it is necessary to cut the vehicle body or use hydraulic cutters, etc., to rescue occupants, avoid areas near high-voltage cables and lithium-ion batteries on the underside of the vehicle body.




1. Battery pack, high-voltage
2. Electric motor
3. DC/DC converter, 400V/12V
4. High-voltage cable (orange)
5. Charge port
6. HVAC compressor, high-voltage
7. High-voltage coolant heater
8. OBC (On-Board Charger)

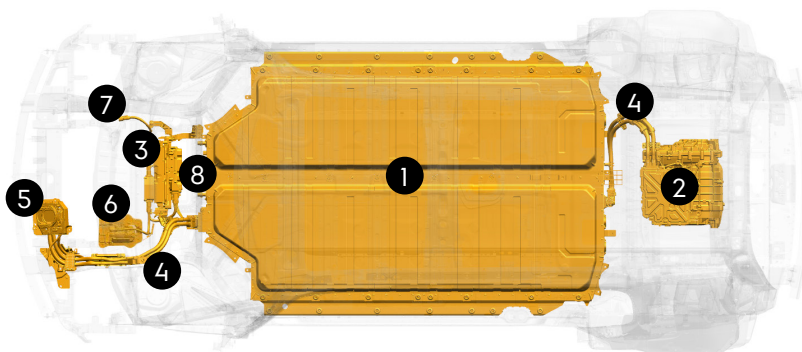

Do not disconnect high-voltage parts. In particular, lithium-ion batteries may cause serious injury or death due to severe burns or electric shock if high voltage parts are exposed by disconnection, even after the high voltage has been interrupted.



HIGH VOLTAGE BATTERY PACK

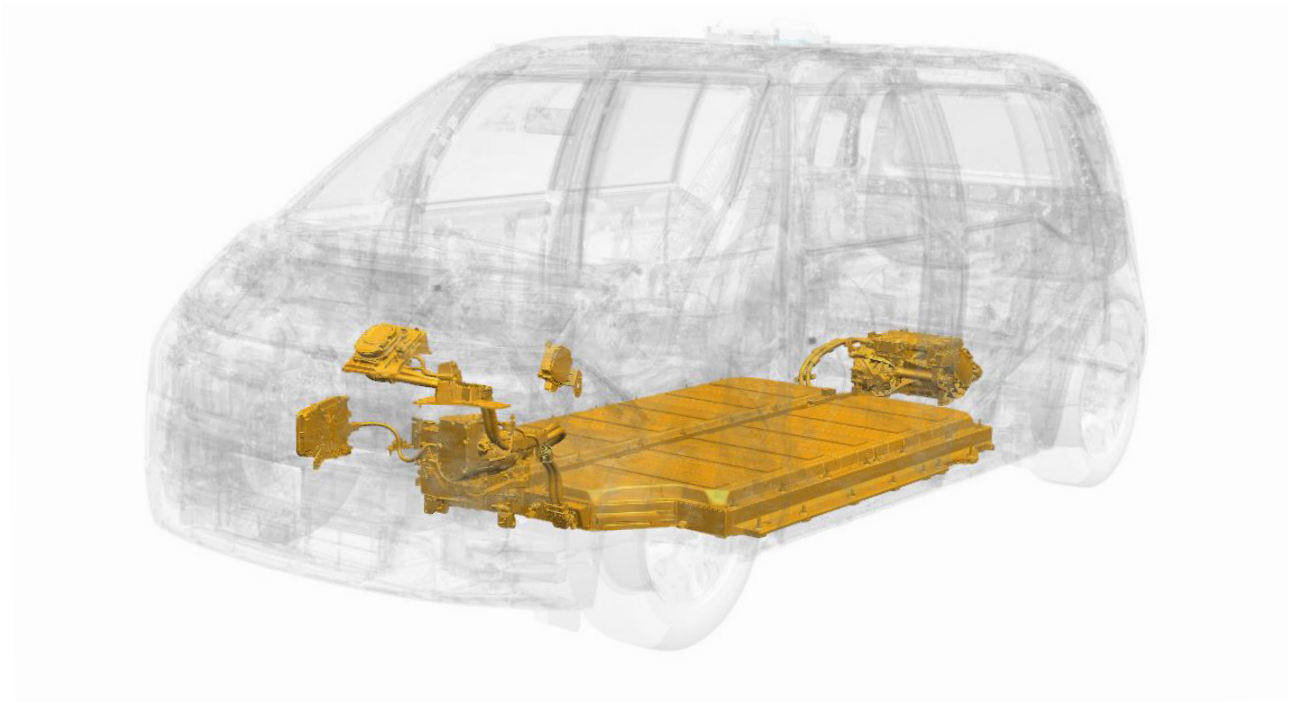

Zeekr RT is equipped with a floor-mounted 400V lithium-ion high voltage battery. The battery is made up of many cells that are liquid cooled with coolant. The coolant will appear blue in color and may leak from the battery pack if the pack has been compromised during a vehicle collision. The battery cells will have stored energy within them. Never breach the high voltage battery when lifting from under the vehicle. When using rescue tools, pay special attention to ensure that you do not breach the floor pan. See chapter 2: Immobilisation / stabilisation / lifting for instructions on how to properly lift the vehicle.



Never touch, cut, or open any orange high voltage power cable or high voltage component; In case of a collision with seat belt pretensioner activation / airbag deployment, the high voltage system will be disabled automatically. The restraint systems are still active. Wear appropriate PPE.



The battery assembly cover should never be breached or removed under any circumstances, including fire. Doing so might result in severe electrical burns, shocks, or electrocution.

6. In case of fire



Responders should always protect themselves with Personal Protective Equipment (PPE), including a Self-Contained Breathing Apparatus (SCBA), and take appropriate measures to protect civilians downwind from the incident.

EXTINGUISHING METHOD FOR THE HIGH VOLTAGE (HV) BATTERY:



LARGE AMOUNTS OF PURE WATER



**POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION /
DELAYED FIRE!**



7. In case of submersion

SUBMERGED VEHICLE

1. There is no increased risk of electric shock in water resulting from the high voltage system.
2. If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3)
3. If water enters the driving battery, hydrogen gas may be generated. When seawater enters, a large amount of hydrogen gas is generated by rapid electrolysis due to salinity, which may cause a fire.



Responders should always protect themselves with Personal Protective Equipment (PPE), including a Self-Contained Breathing Apparatus (SCBA), and take appropriate measures to protect civilians downwind from the incident.



8. Towing / transportation / storage

TOWING GUIDELINES

Towing should be carried out in accordance with the following guidelines.


- Lift all four wheels or the front wheels.
- Tow chains or cables must be attached only to main structural parts of the vehicle.
- Do not use bumpers to lift vehicles.
- Do not tow the vehicle in a way that causes damage to the vehicle.
- If the front and rear wheels are stuck, the four wheels shall be lifted and transported.
- If the N position is not reached, the four wheels shall be lifted and transported.
- Towing according to road traffic laws.

The vehicle must normally only be towed with the rear wheels off the ground.

The following towing methods are acceptable:


- On a flatbed truck
- Lifted front wheels and the rear wheels on a dolly
- Lifted rear wheels and the front wheels on a dolly
- Lifted rear wheels and the front wheels on the ground

During towing, make sure the wheels not touching the ground cannot rotate.

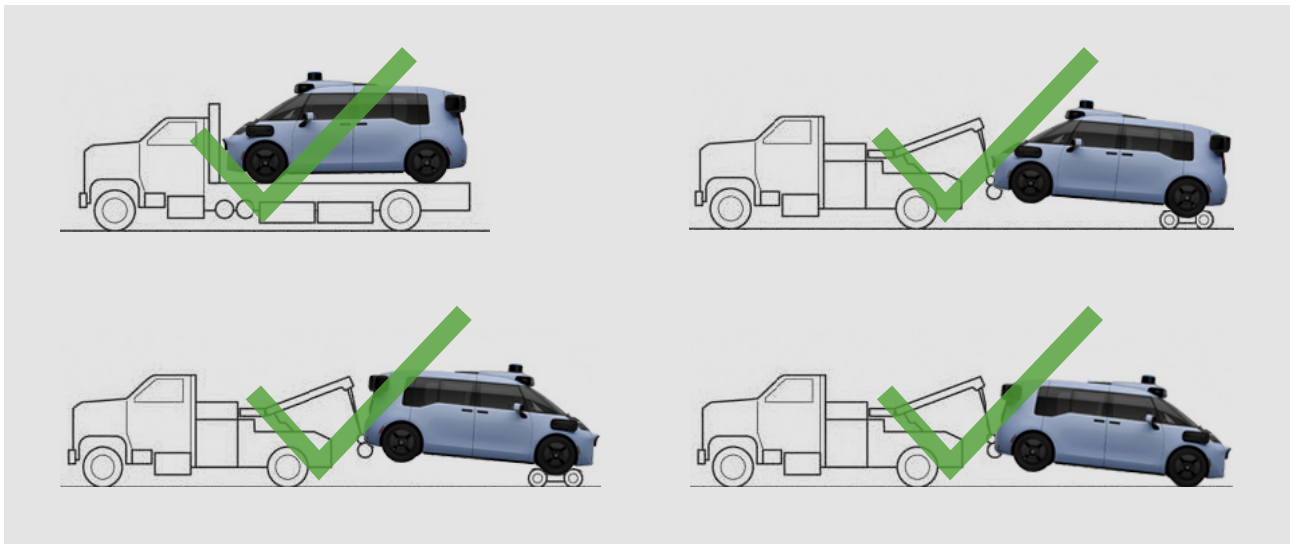

Note If the 12V battery does not have power, the car cannot be put in tow mode or shifted into N. In this case, the 12V battery must be jumpstarted before the car can be towed.

Location front hook

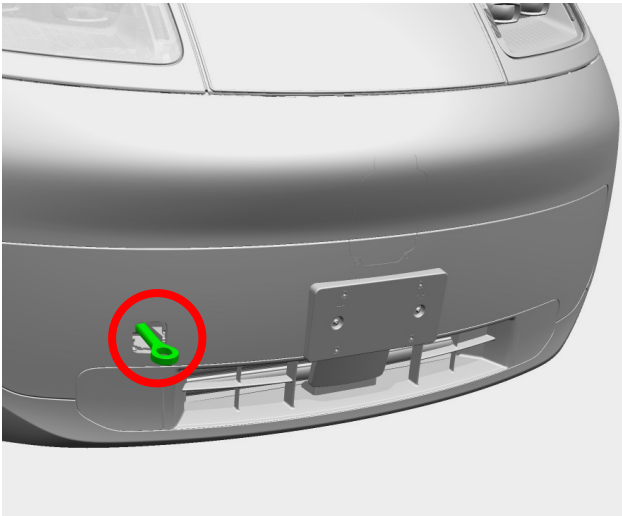

Location rear hook



**STORE VEHICLE IN AN OPEN-AIR PARKING AT A SAFE DISTANCE $\geq 5\text{M}$
FROM OTHER OBJECTS OR VEHICLES!**



**POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION /
DELAYED FIRE!**




9. Important additional information



PASSIVE SAFETY SYSTEM

Passive safety system mainly consists of airbag system and safety belt system. When a vehicle crashes, the passive safety system can effectively reduce the personal injury caused by the collision to the driver and passengers in the vehicle. The SRS Module (SRS) determines the type and severity of the collision based on data sent from the collision sensor and/or the door pressure sensor, and controls the belt retractor to tighten or the airbag to deploy, depending on the collision type and severity.

The airbag's inflator contains a detonator. Airbags work through detonators and gas generators. When the airbag is deployed, the detonating agent burns, and the air pressure increases, causing the gas in the gas generator to enter the airbag, and the airbag is deployed. The retractor with pretightening function activates the retractor and locks the seat belt in the event of a collision, effectively reducing the distance forward movement of the driver or passenger. Driver side seat belt retractor with motor pretightening function.

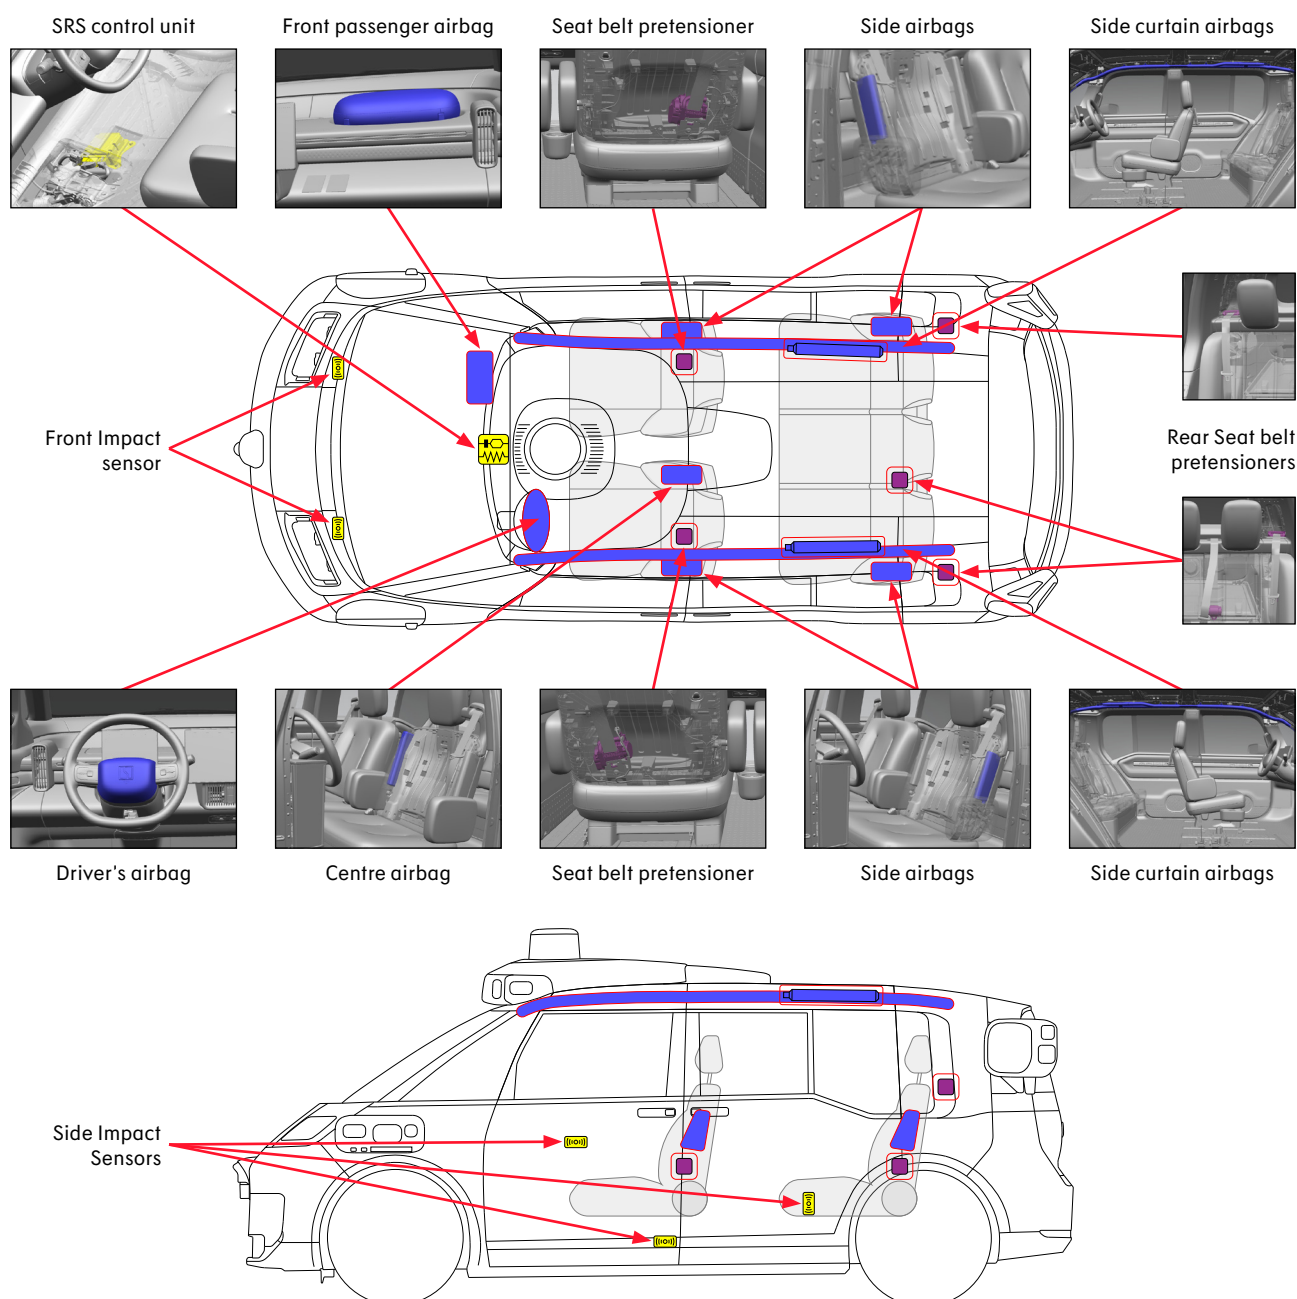

10. Explanation of pictograms used

	Warning, Electricity		Electric vehicle
	General warning sign		Flammable
	Warning; low temperature		Hazardous to the human health
	Air-conditioning component		Acute toxicity
	Use water to extinguish the fire		Explosive
	Use thermal infrared camera		Corrosives
	Hood		Seat height adjustment
	Rear Hatch		Seat adjustment, longitudinal
	Steering wheel, tilt control		Stored gas inflator
	Airbag		Seat belt pretensioner
	SRS control unit		Battery low voltage
	Battery pack, high-voltage		Cable cut

