


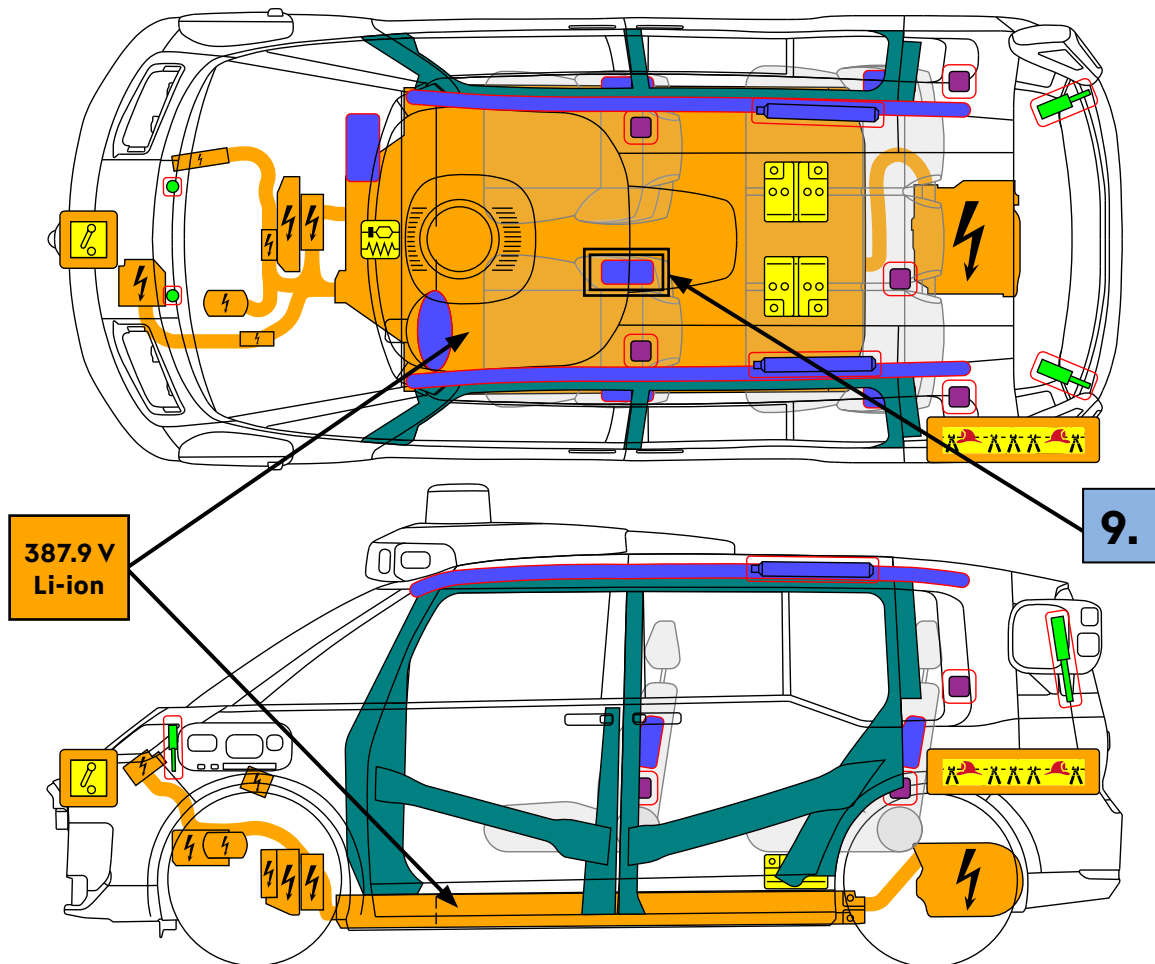

ZEEKR

Zeekr RT
Type: 5dr MPV
(2025 -)



Airbag



Stored gas inflator



Seat belt pretensioner



SRS control unit



Battery low voltage



Gas strut / Preloaded spring



Low voltage device that disconnects high voltage



Cable cut



High voltage component



Battery pack, high-voltage



High voltage power cable



High strength zone



Zone requiring special attention

Internal reference

Version

Creation date

Page

Zeekr_RT_MPV_2025_5d_Electric_EN

01

12/2024

1 / 5



ZEEKR

Zeekr RT
Type: 5dr MPV
(2025 -)




1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS SHUT DOWN. WEAR APPROPRIATE PPE.


Brand name front

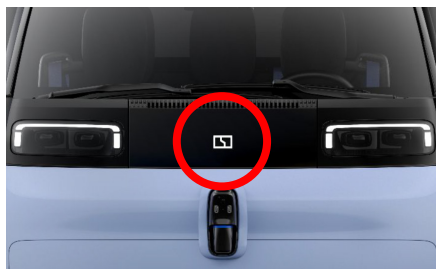

AD Sensors



Charge port

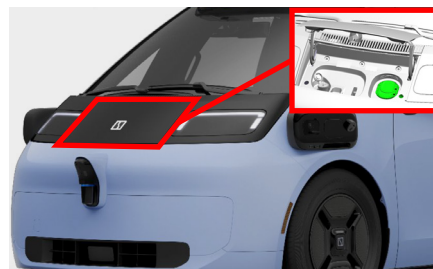

2. Immobilisation / stabilisation / lifting

Immobilise vehicle:

1. Block wheels and set parking brake
2. Push the P (park) button to select the P (park) position




Lifting points:



Appropriate lifting points



High voltage battery



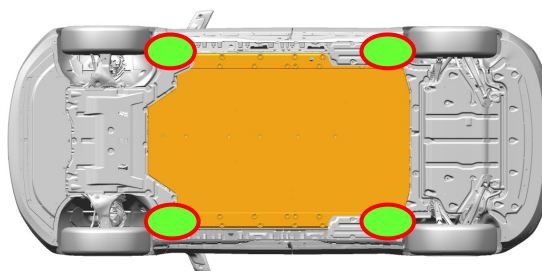


3. Disable direct hazards / safety regulations




Main method:

The propulsion system is disabled when the 'Safety mode See Manual' indicator in the instrument cluster is illuminated.

Alternative method 1:

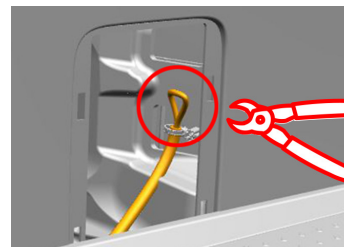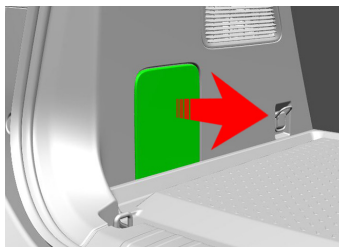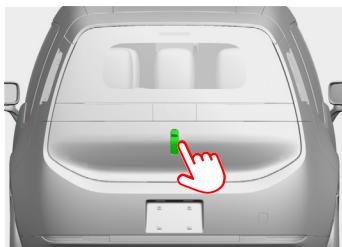

Alternative method 2:

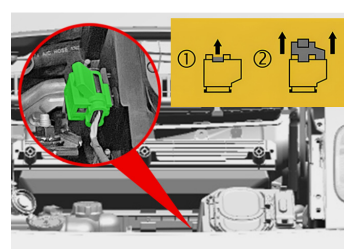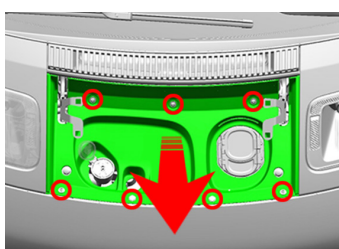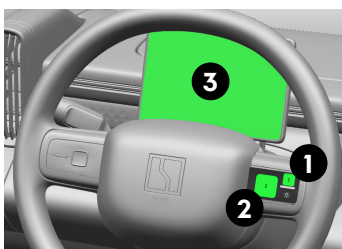

Internal reference

Version

Creation date

Page

Zeekr_RT_MPV_2025_5d_Electric_EN

01

12/2024

2 / 5







ZEEKR

Zeekr RT
Type: 5dr MPV
(2025 -)



Disconnect 12 Volt batteries

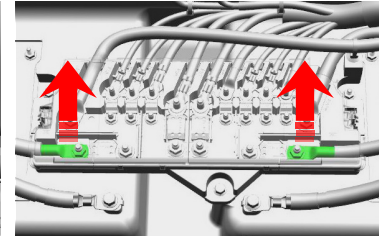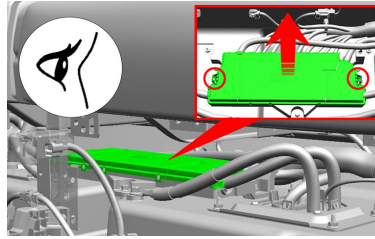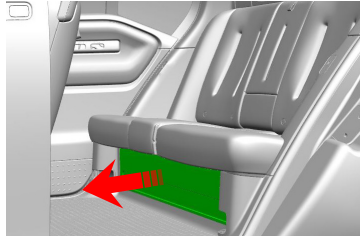


Safety instructions


Always assume the vehicle is powered, even if it is silent!

Make sure that the vehicle is immobilized and the propulsion system is deactivated; Never touch, cut, or open any orange high voltage power cable or high voltage component; In case of a collision with seat belt pretensioner activation / airbag deployment, the high voltage system will be disabled automatically. The restraint systems are still active. Wear appropriate PPE.

4. Access to the occupants


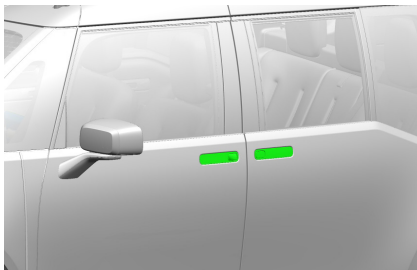


Opening side doors from outside with power

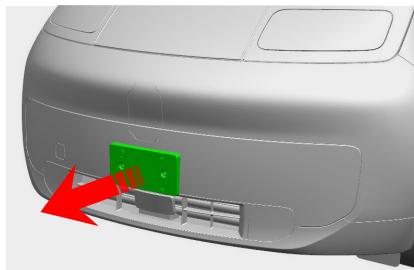


Opening the hood without power


If no- or low battery voltage it is not possible to open the hood. To resolve this, the vehicle must be jumpstarted.

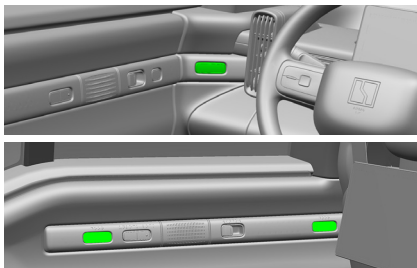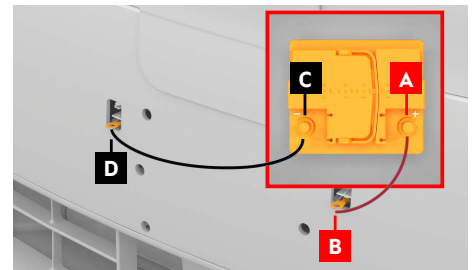

Opening side doors from inside with power

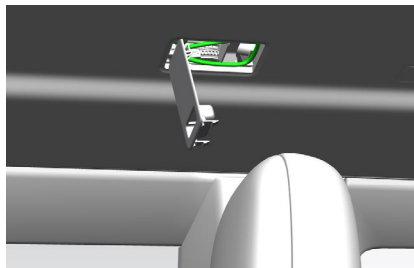


Opening side doors from inside without power

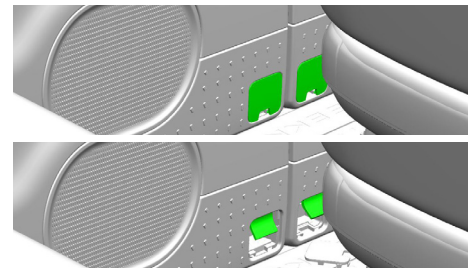

Seat adjustment




High strength zone

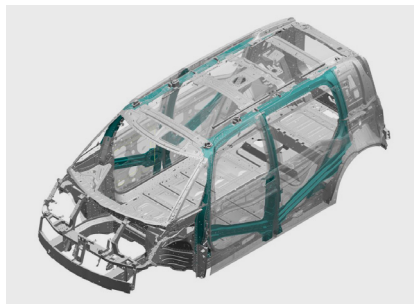

Glass types

A. Laminated glass

B. Tempered glass

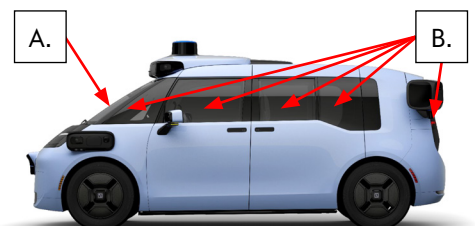

Internal reference

Zeekr_RT_MPV_2025_5d_Electric_EN

Version

01

Creation date

12/2024

Page

3 / 5



ZEEKR

Zeekr RT
Type: 5dr MPV
(2025 -)



5. Stored energy / liquids / gases / solids

	387.9 V	
	2x 12V (Li-ion)	
	R-1234yf 825 g	



When conventional coolant leaks (check reservoir) from the high voltage (HV) battery cooling system, HV-battery can become unstable with risk of thermal runaway. An increasing HV-battery temperature might be an indicator of thermal runaway. Wear appropriate PPE.



6. In case of fire

Extinguishing method for the high voltage (HV) battery:



LARGE AMOUNTS OF PURE WATER



POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE! WEAR APPROPRIATE PPE.




7. In case of submersion

- There is no increased risk of electric shock in water resulting from the high voltage system
- If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3)

8. Towing / transportation / storage

Location front hook

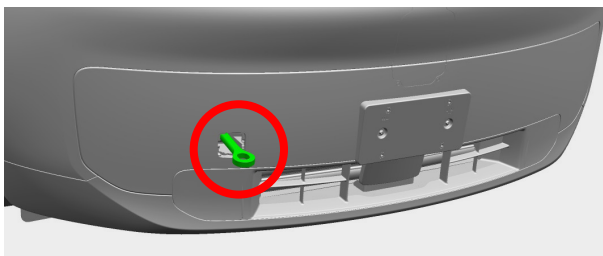

Location rear hook



Towing



STORE VEHICLE IN AN OPEN-AIR PARKING AT A SAFE DISTANCE $\geq 5\text{M}$ FROM OTHER OBJECTS OR VEHICLES!



POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE! WEAR APPROPRIATE PPE.



Internal reference

Version

Creation date

Page

Zeekr_RT_MPV_2025_5d_Electric_EN

01

12/2024

4 / 5





ZEEKR

Zeekr RT
Type: 5dr MPV
(2025 -)



9. Important additional information

Centre airbag

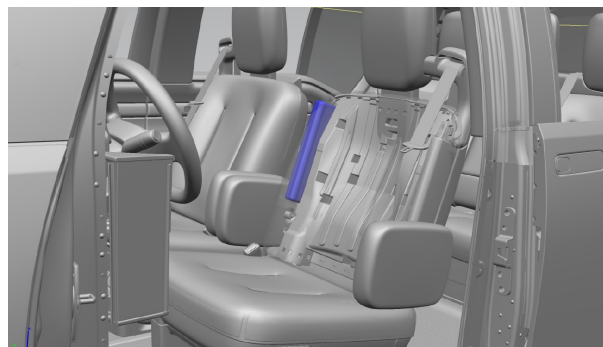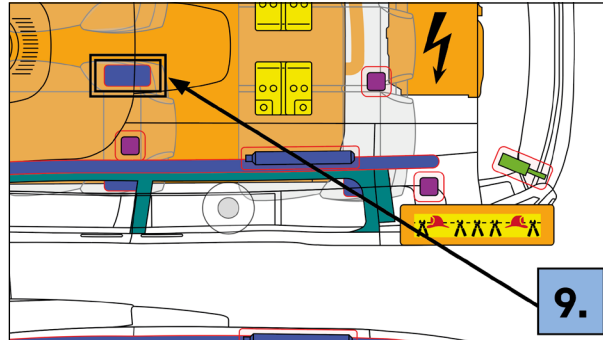

10. Explanation of pictograms used

	Electric Vehicle		Flammable
	Warning, Electricity		Hazardous to the human health
	General warning sign		Acute toxicity
	Warning; low temperature		Corrosives
	Air-conditioning component		Explosive
	Use water to extinguish the fire		Hood
	Use thermal Infrared camera		Rear Hatch