





MAZDA CX-70

Body Type: SUV
(2023-)

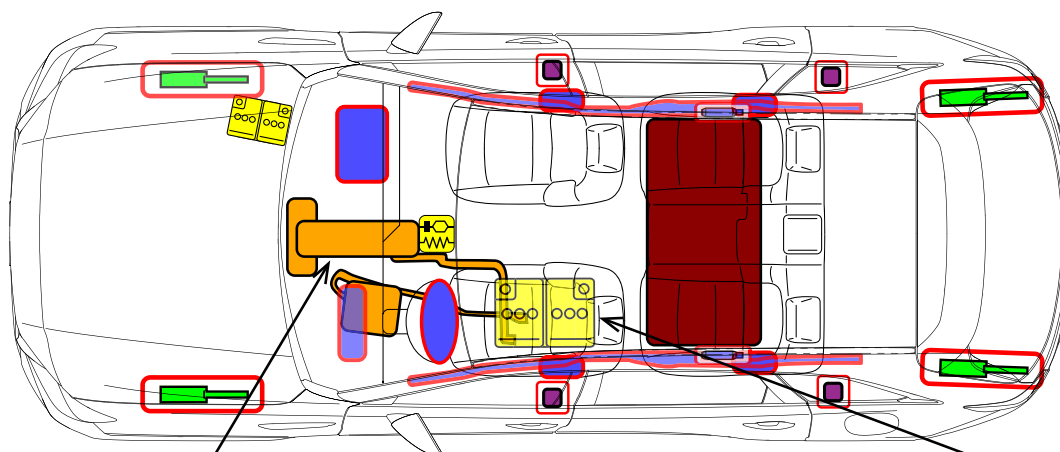

AC 48 V

48 V
Li-ion

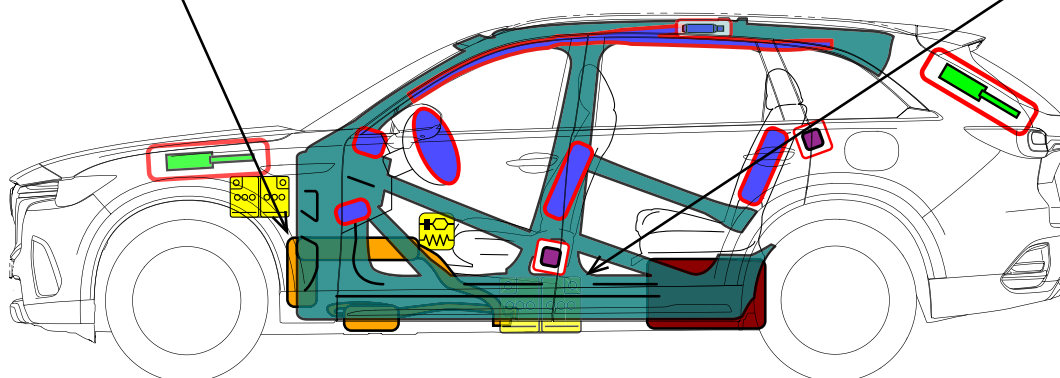

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Gas strut / Preloaded spring
	High strength zone		Battery low voltage		Fuel tank content gasoline / ethanol		High voltage power cable		

1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.




2. Immobilisation / stabilisation / lifting

IMMOBILIZE THE VEHICLE

- Block the wheels.
- Set the parking brake.
- Put the car in P position.



LIFTING POINTS

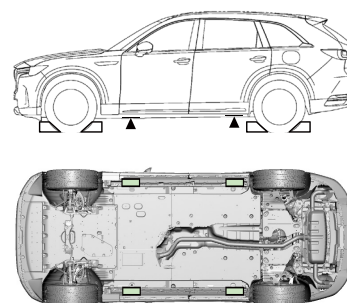

 Appropriate lifting points  High voltage battery

3.Disable direct hazards / safety regulations

Systems that do not operate if power is lost

Door lock



Power window



Power seat



Panorama sunroof/moonroof



Shift-by-wire



Electric parking brake (EPB)



Electric liftgate opener







Tilt and telescopic




Procedure for disabling high voltage system

Main disabling method




4.Access to the occupants


Glass types

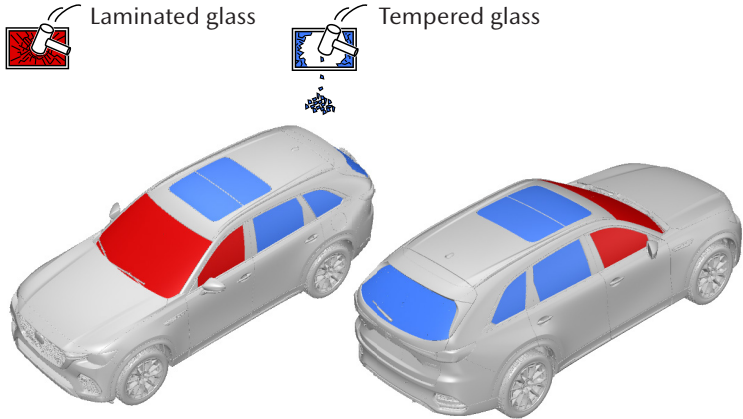


Steering wheel angle adjustment

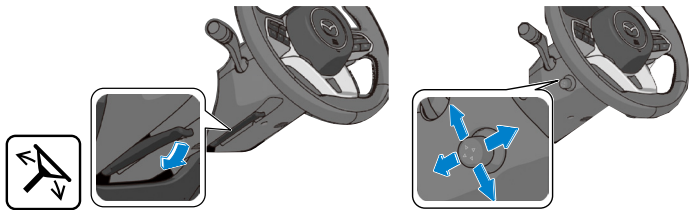

Seat position operation

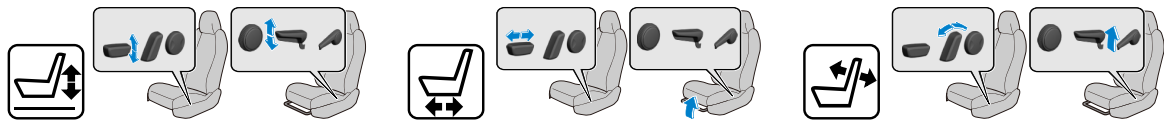

High strength steel in body

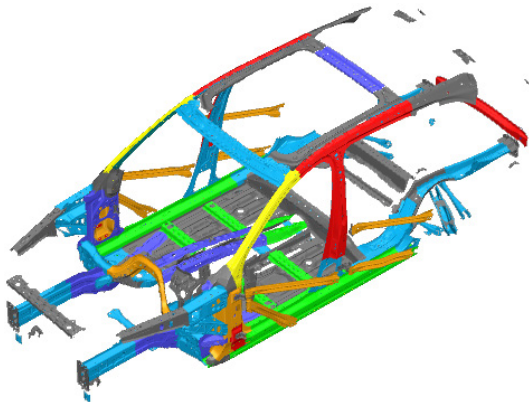

1,800 MPa {18,355 kgf/cm ² , 261,068 psi}
1,500 MPa {15,296 kgf/cm ² , 217,557 psi}
1,470 MPa {14,990 kgf/cm ² , 213,206 psi}
1,310 MPa {13,358 kgf/cm ² , 190,000 psi}
1,180 MPa {12,032 kgf/cm ² , 171,145 psi}
980 MPa {9,993 kgf/cm ² , 142,137 psi}
780 MPa {7,954 kgf/cm ² , 113,130 psi}
590 MPa {6,016 kgf/cm ² , 85,572 psi}

5.Stored energy / liquids / gases / solids

	Li-ion / DC 48V	
	Pb / DC 12V	
	R-1234yf / 960 g {33.9 oz}	
	Gasoline / 74.0 L {19.5 US gal, 16.3 Imp gal}	



THE BATTERY ASSEMBLY COVER SHOULD NEVER BE BREACHED OR REMOVED UNDER ANY CIRCUMSTANCES, INCLUDING FIRE. DOING SO MIGHT RESULT IN SEVERE ELECTRIC BURNS, SHOCKS, OR ELECTROCUTION.

6. In case of fire



EXTINGUISH THE FIRE USING LARGE AMOUNTS OF WATER OR AN ABC FIRE EXTINGUISHER.





BATTERY RE-IGNITION!

7. In case of submersion



- DO NOT TOUCH ANY HIGH VOLTAGE PARTS WHEN THE VEHICLE IS SUBMERGED OR PARTIALLY SUBMERGED IN WATER.
- IF YOU CANNOT CONFIRM THAT THE HYBRID SYSTEM IS SHUT DOWN, PERFORM RESCUE OPERATIONS WHILE WEARING INSULATING PROTECTIVE EQUIPMENT.

8. Towing / transportation / storage

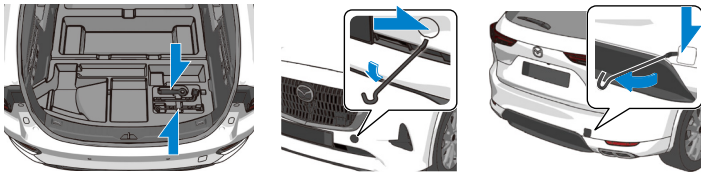

BATTERY RE-IGNITION!



KEEP THE VEHICLE OUTDOORS AWAY FROM FLAMMABLES.

10. Explanation of pictograms used

	Hybrid Electric Vehicle on fuel of liquid group2		General warning sign		Remove smart key
	Left hand drive		Use thermal Infrared camera		Door-lock control
	Bonnet		Use water to extinguish the fire		Window lift (power-operated)
	Steering wheel, tilt control		Use ABC powder to extinguish the fire		Parking brake
	Seat adjustment, longitudinal		Explosive		Laminated glass
	Seat height adjustment		Gases under pressure		Tempered glass
	Seat adjustment, seat back recline		Flammable		
	Lifting point; central support		Corrosives		
	Air conditioning component		Hazardous to the human health		