



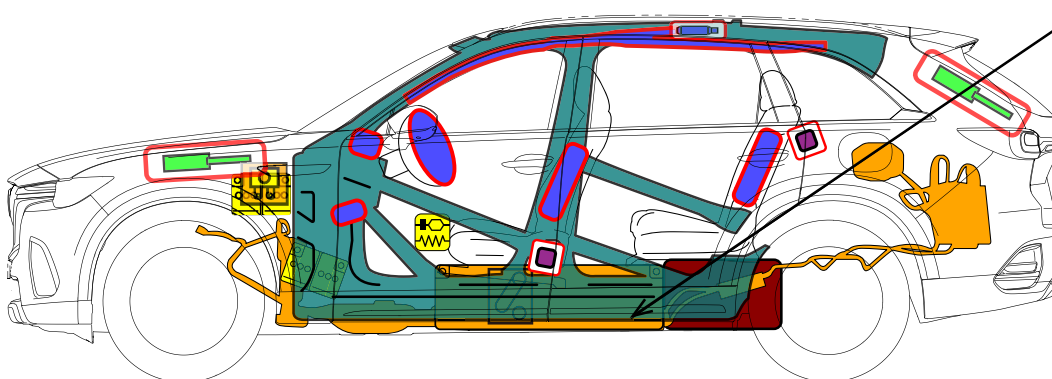

MAZDA CX-70

(2023-)

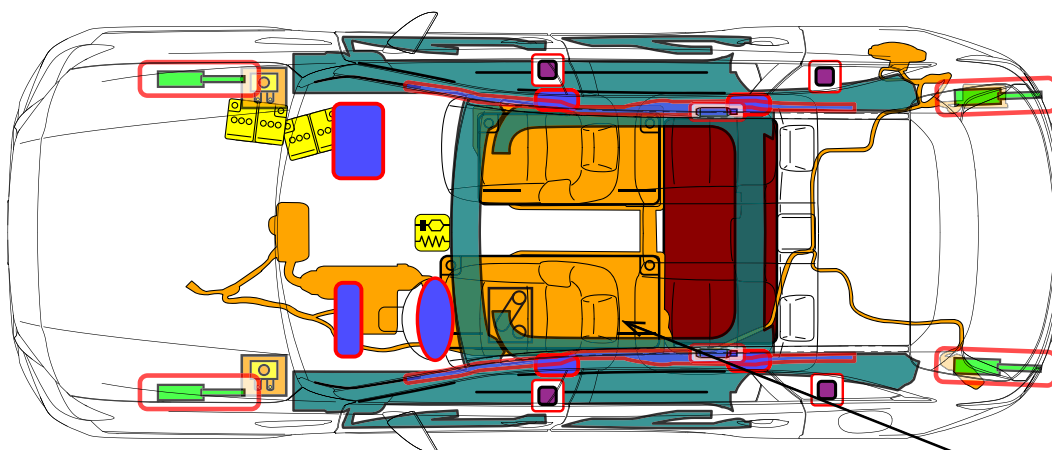

355 V
Li-ion


	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Gas strut / Preloaded spring
	High strength zone		Battery low voltage		Fuel tank content gasoline / ethanol		High voltage battery pack		High voltage power cable / component
	High voltage disconnect		Fuse box disabling high voltage system						

MAZDA CX-70 (2023-)

1. Identification / recognition




LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.

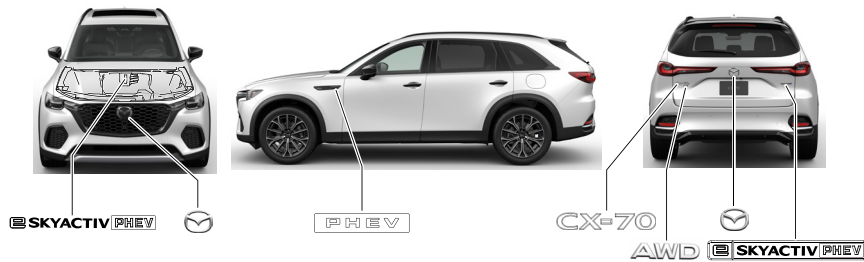



2. Immobilisation / stabilisation / lifting

IMMOBILIZE THE VEHICLE

- Block the wheels.
- Set the parking brake.
- Put the car in P position.

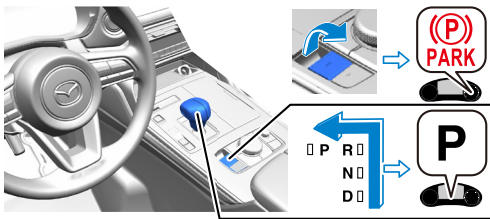

LIFTING POINTS

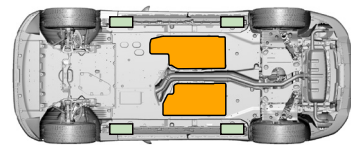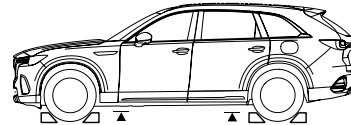

Appropriate lifting points High voltage battery

3. Disable direct hazards / safety regulations

Systems that do not operate if power is lost

Door lock



Power window




Shift-by-wire



Electric parking brake (EPB)




Power seat



Panorama sunroof/moonroof



Electric liftgate opener




Tilt and telescopic



Procedure when EV is connected for charging

Charge connector is unlocked

- Remove the charge connector.




Charge connector is locked

- Remove the luggage board.
- Remove the cargo sub compartment.
- Pull the charge connector lock manual release cable in the release direction shown in the figure.
- Remove the charge connector with the charge connector lock manual release cable pulled.



Procedure for disabling high voltage system


Main disabling method

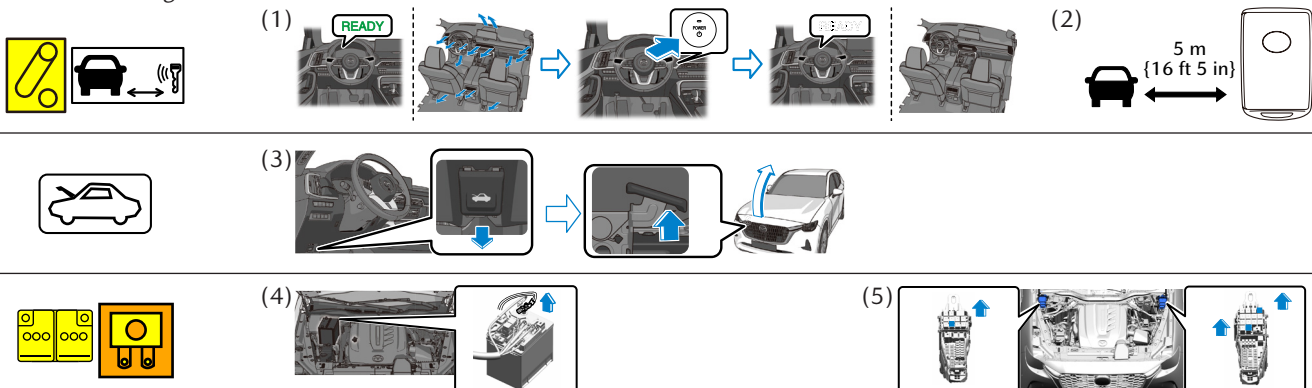

MAZDA CX-70 (2023-)



Alternative disabling method

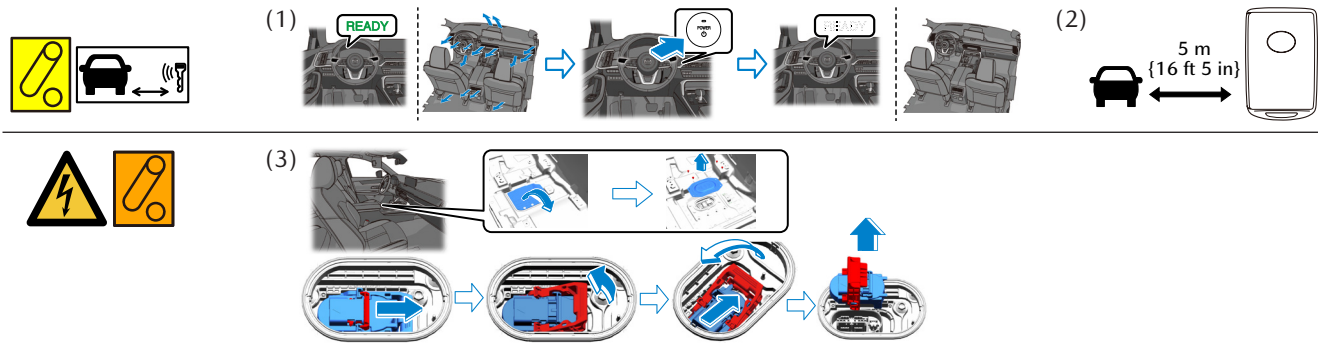

4.Access to the occupants


Glass types




Laminated glass




Tempered glass

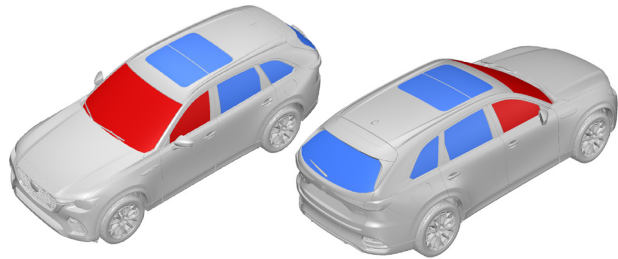


Steering wheel angle adjustment

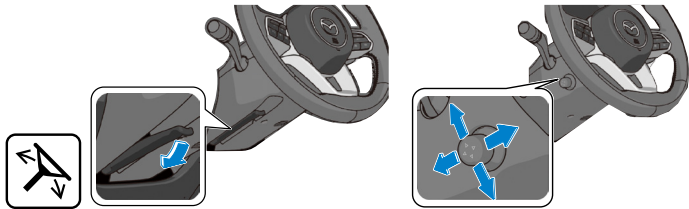

Seat position operation

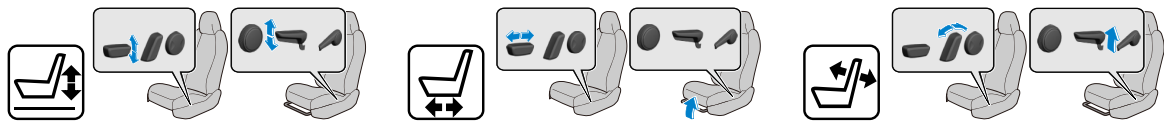

High strength steel in body

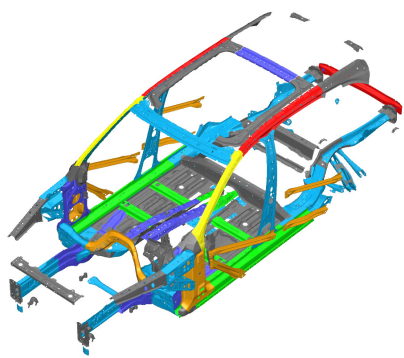

- 1,800 MPa {18,355 kgf/cm², 261,068 psi}
- 1,500 MPa {15,296 kgf/cm², 217,557 psi}
- 1,470 MPa {14,990 kgf/cm², 213,206 psi}
- 1,310 MPa {13,358 kgf/cm², 190,000 psi}
- 1,180 MPa {12,032 kgf/cm², 171,145 psi}
- 980 MPa {9,993 kgf/cm², 142,137 psi}
- 780 MPa {7,954 kgf/cm², 113,130 psi}
- 590 MPa {6,016 kgf/cm², 85,572 psi}

5.Stored energy / liquids / gases / solids

	Li-ion / DC 355V			
	Pb / DC 12V			
	R-1234yf / 960 g {33.9 oz}			
	Gasoline / 70.0 L {18.5 US gal, 15.4 Imp gal}			



THE BATTERY ASSEMBLY COVER SHOULD NEVER BE BREACHED OR REMOVED UNDER ANY CIRCUMSTANCES, INCLUDING FIRE. DOING SO MIGHT RESULT IN SEVERE ELECTRIC BURNS, SHOCKS, OR ELECTROCUTION.

MAZDA CX-70 (2023-)

6.In case of fire



EXTINGUISH THE FIRE USING LARGE AMOUNTS OF WATER OR AN ABC FIRE EXTINGUISHER.




BATTERY RE-IGNITION!

7.In case of submersion



- DO NOT TOUCH ANY HIGH VOLTAGE PARTS WHEN THE VEHICLE IS SUBMERGED OR PARTIALLY SUBMERGED IN WATER.
- IF THE HIGH VOLTAGE BATTERY IS DAMAGED OR YOU ARE UNSURE WHETHER OR NOT IT IS DAMAGED, PERFORM THE RESCUE OPERATION WHILE WEARING THE APPROPRIATE INSULATING PROTECTIVE EQUIPMENT.
- AFTER PULLING THE VEHICLE OUT OF THE WATER, DRAIN THE INTERIOR OF THE VEHICLE AND REMOVE THE SERVICE PLUG.

8.Towing / transportation / storage



BATTERY RE-IGNITION!



KEEP THE VEHICLE OUTDOORS AWAY FROM FLAMMABLES.

10. Explanation of pictograms used

	Hybrid Electric Vehicle on fuel of liquid group2		Air conditioning component		Corrosives
	Left hand drive		General warning sign		Hazardous to the human health
	Bonnet		Warning, Electricity		Remove smart key
	Device to shut down power in vehicle		Use thermal Infrared camera		Door-lock control
	Steering wheel, tilt control		Use water to extinguish the fire		Window lift (power-operated)
	Seat adjustment, longitudinal		Use ABC powder to extinguish the fire		Parking brake
	Seat height adjustment		Explosive		Laminated glass
	Seat adjustment, seat back recline		Gases under pressure		Tempered glass
	Lifting point; central support		Flammable		