



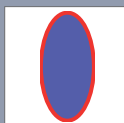


FORD E-Transit

2026

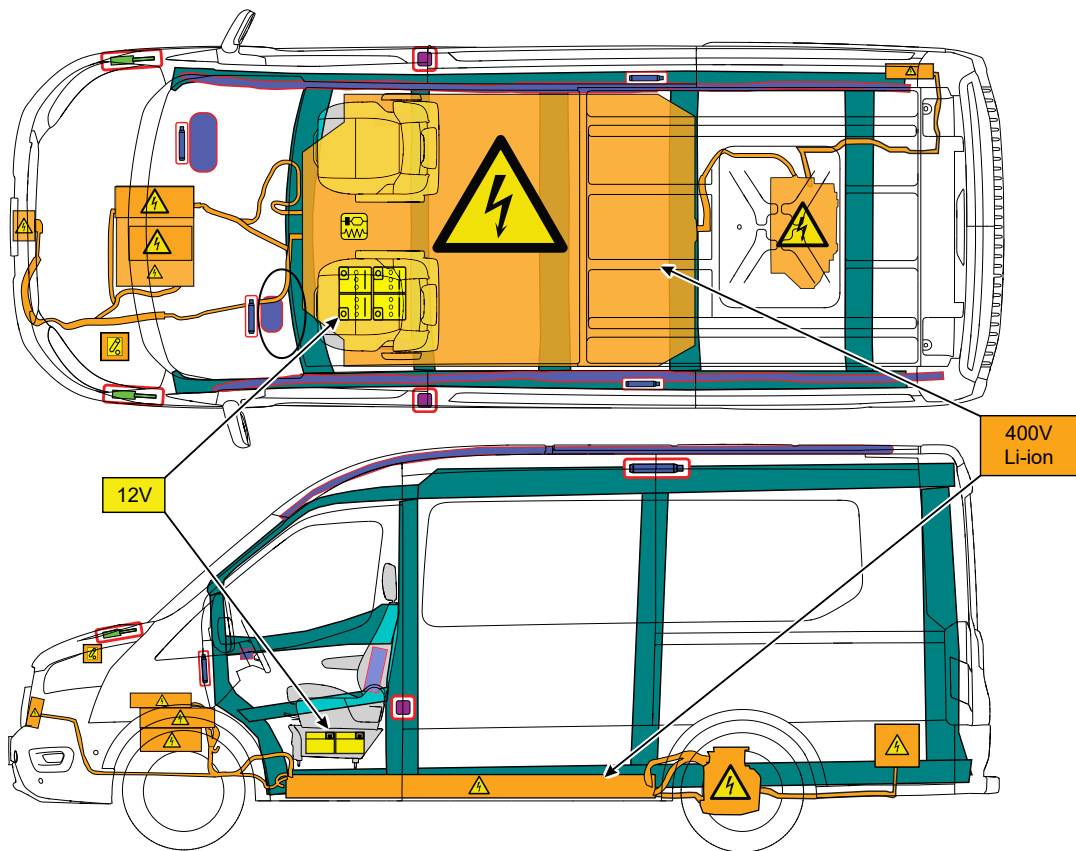


Airbag

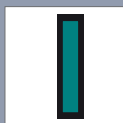

Structural
Reinforce-
ments




Control unit

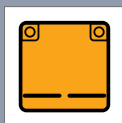


High-voltage
battery




High-voltage
disconnection
point

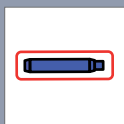

Gas generator

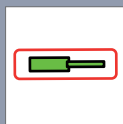

Gas filled
spring device

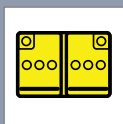

Battery



High-voltage
wire /
components



Seat belt
tensioner



High-Voltage
component





FORD E-Transit

2026



For more detailed information, please refer to the full E-Transit Emergency Response Guide.

1. Identification / recognition



ELECTRIC VEHICLES DO NOT HAVE ENGINE NOISE. LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.



①




②

1. Charging port and blue striping on front grill.
2. E-Transit badging on left rear door.


2. Immobilization / stabilization / lifting

IMMOBILIZATION


1. Position wheel and tire chocks
2. Put vehicle into PARK position (1). Ensure parking brake is engaged (2).

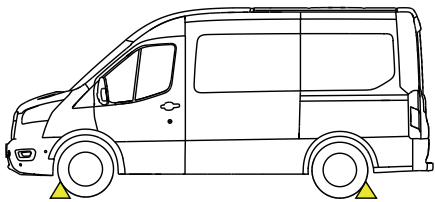




Medium Wheelbase [MWB]
Van, Bus, Kombi

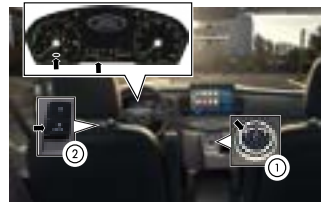

Long Wheelbase [LWB]
Van, Bus, Kombi

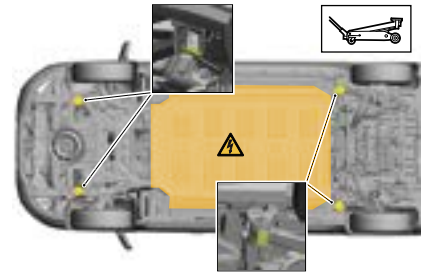

Extra Long Wheelbase [LWB-EL]
Single Chassis Cab and Jumbo

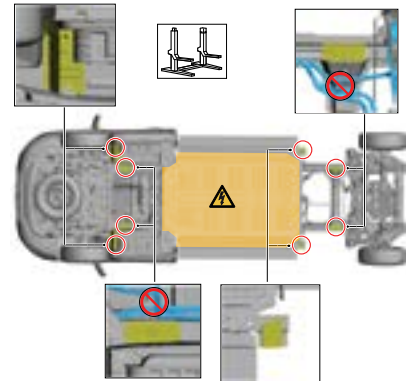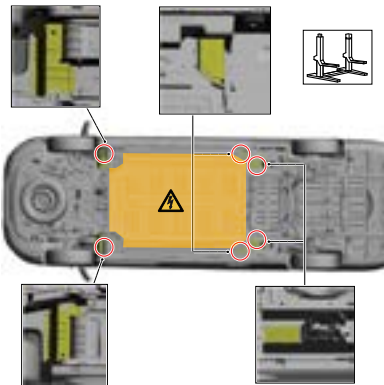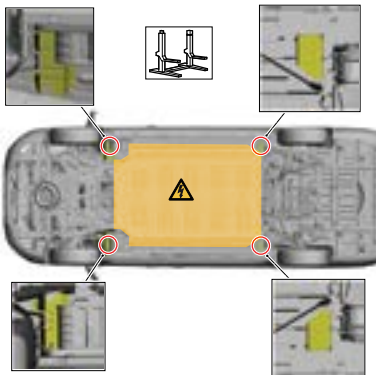

3. Disable direct hazards / safety regulations

Under Non-urgent situations refer to, "Non-urgent situations" in the Emergency Response Guide.

Deactivate the high-voltage system.







FORD E-Transit

2026





1. Cut the wires adjacent to the Low Voltage Service Disconnect. Isolate wires to prevent reconnection.

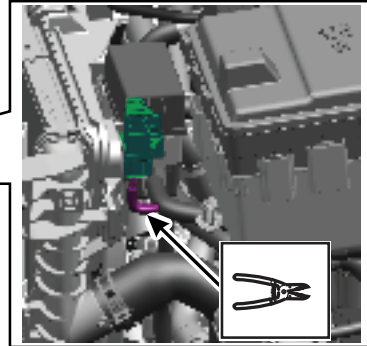
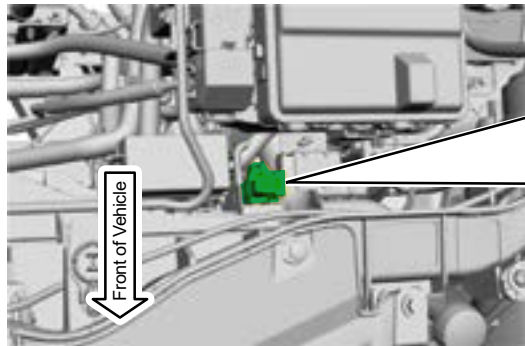


12 Volt and Auxil Battery Disconnect. (Disables Safety Restraint System)

1. Release and position the the LH front seat forward.
2. Release the retainers and remove the LH front seat rear trim panel.
3. Position the LH front seat backrest cover to release retainer (1). Position the LH front seat backrest cover (2).

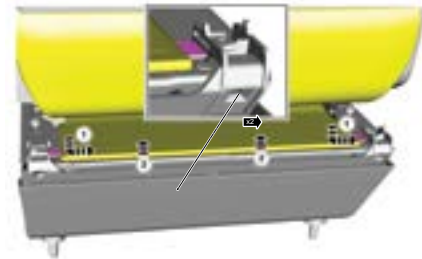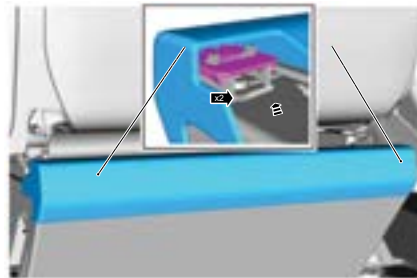

4. Position the battery cover insulator (1). Remove the battery disconnect access cover (2).
5. Locate and cut the negative battery cable to ground at two locations 3 in (7.6 cm) apart from each other. Isolate cable to prevent reconnection.

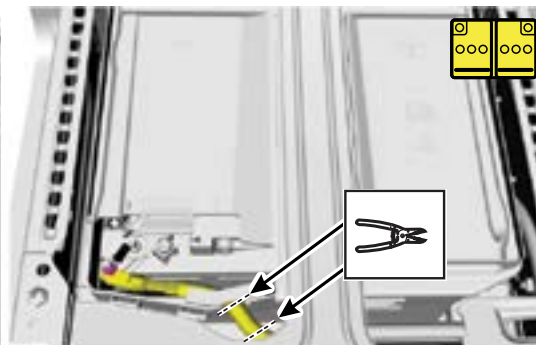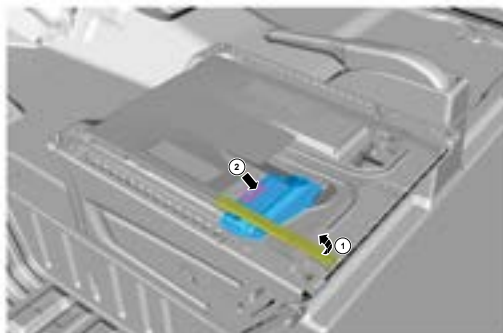




FORD E-Transit

2026



4. Access to the occupants

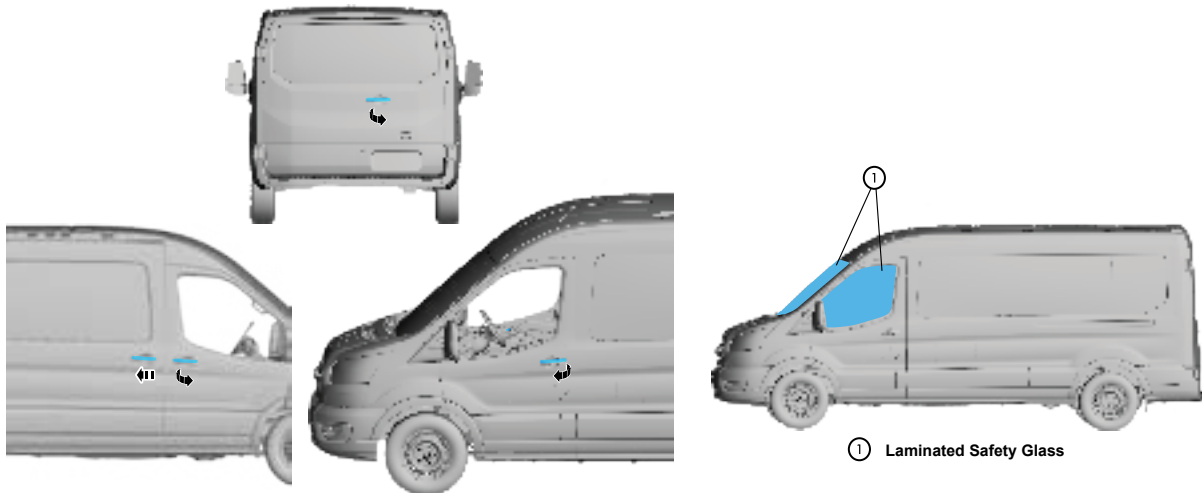

5. Stored energy / liquids / gases / solids



Refer to the vehicle overview illustration on Page 1 for location reference of the high voltage battery, 12-volt battery, gas tank, and other vehicle component locations.

 For more detailed information, please refer to Section 9 to access the full E-Transit Emergency Response Guide.

6. In case of fire



LITHIUM-ION BATTERIES CAN IGNITE SPONTANEOUSLY OR RE-IGNITE AFTER THE FIRE HAS BEEN EXTINGUISHED. WEAR APPROPRIATE PPE.



7. In case of submersion

After removing the vehicle from the water, deactivate the high-voltage system (See Section 3) and allow the water to drain.
Wear appropriate PPE.





FORD E-Transit

2026






8. Towing / transportation / storage



LITHIUM-ION BATTERIES CAN IGNITE SPONTANEOUSLY OR RE-IGNITE AFTER THE FIRE HAS BEEN EXTINGUISHED. WEAR APPROPRIATE PPE.



If the vehicle has been involved in an accident or if the HV battery is damaged or unstable: Deactivate the high-voltage system (See Section 3). Do not store a severely damaged vehicle inside a structure or within 50 ft (15m) of any structure or vehicle.

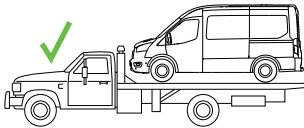

9. Important additional information

For specific information, first responder information and safety preparation regarding the High Voltage system, refer to:

<https://www.motorcraftservice.com>, select Free Resources>Quick Guides>Reference Guides for the appropriate vehicle emergency response guide.

Or refer to <https://www.ford.com/firstresponder/>

© Copyright 2025, Ford Motor Company. All rights reserved. This document may be reproduced in its entirety and distributed for emergency responder use only. It may not be excerpted for any purpose.

10. Explanation of pictograms used



Flammable



Explosive



Corrosives



Hazardous
to the
human health



Environmental
hazard



Electric
vehicle



Left-Hand
Drive



Use water
to extinguish
the fire



General
warning



Warning,
Electricity



Open
Hood/Frunk



Use infrared thermometer /
Thermal Infrared camera

