



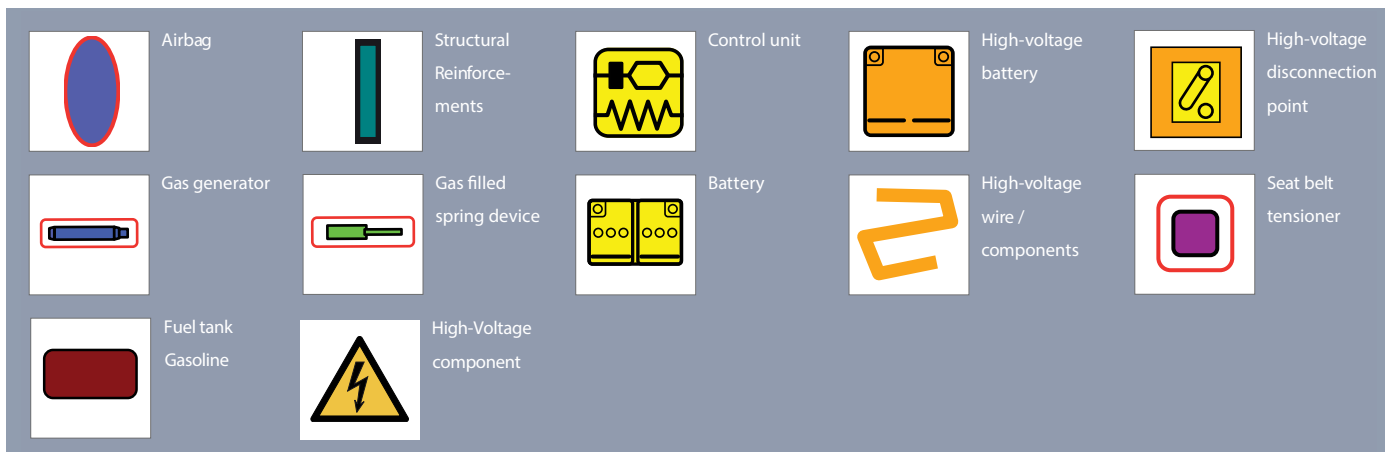

Ford Explorer Hybrid

Police Interceptor

2025

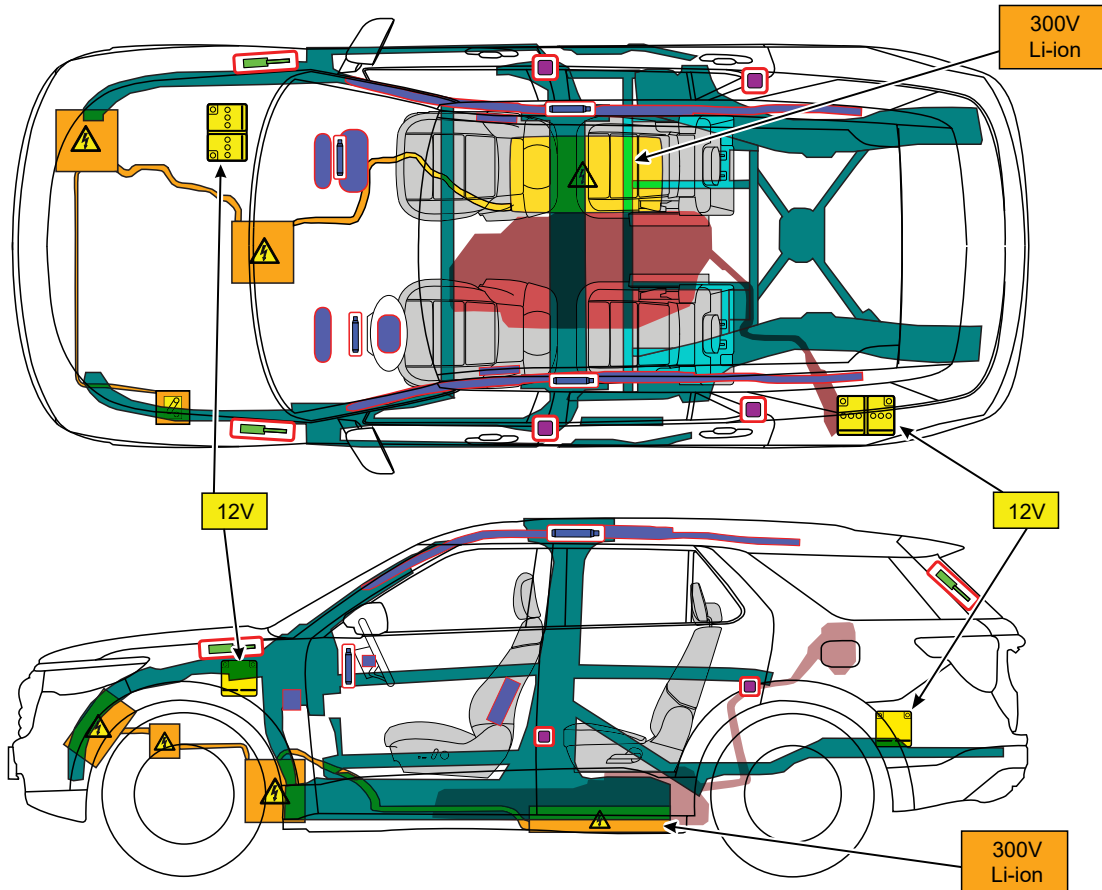



Ford Explorer Hybrid

Police Interceptor

2025



For more detailed information, please refer to the full Explorer Hybrid Emergency Response Guide.

1. Identification / recognition



HYBRID VEHICLES MAY NOT HAVE ENGINE NOISE. LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.




1. Vehicle Identification Number (VIN) 8th position identifies the engine type
 - W - 3.3L TiVCT (Twin Independent Variable Cam Timing), V6, HEV

2. Immobilization / stabilization / lifting

IMMOBILIZATION



1. Position wheel and tire chocks.

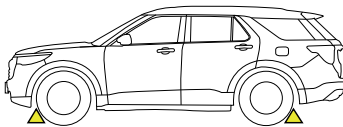

2. Put vehicle into PARK position and ensure parking brake is engaged.



3. Turn the key position to 0.


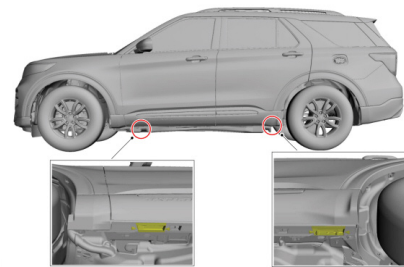
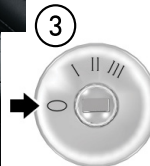


3. Disable direct hazards / safety regulations

Under Non-urgent situations refer to, "Non-urgent situations" in the Emergency Response Guide.

Deactivate the high-voltage system.

1. Cut the wires adjacent to the Low Voltage Service Disconnect. Isolate the wires to prevent reconnection.

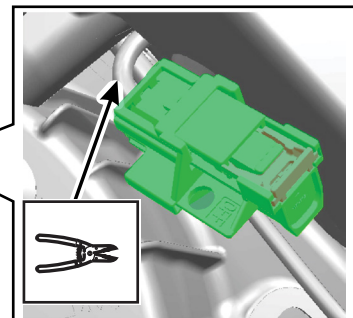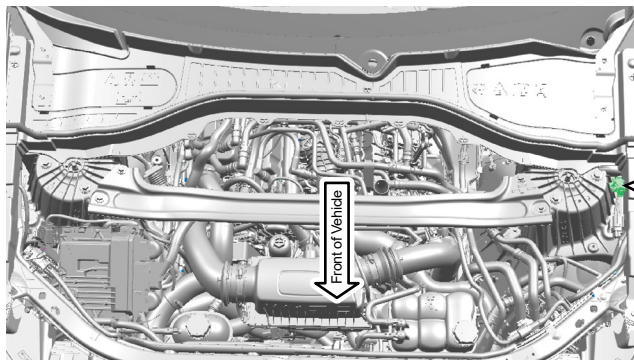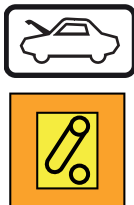



Ford Explorer Hybrid



Police Interceptor

2025





12-Volt Battery Disconnect. (Disables Safety Restraint System)

1. Remove the retainers and pull the grille upwards and remove the RH side cowl panel grille.
2. Locate and cut the negative battery cable to ground at two locations 3 in (7.6 cm) apart from each other. Isolate the cable to prevent reconnection.

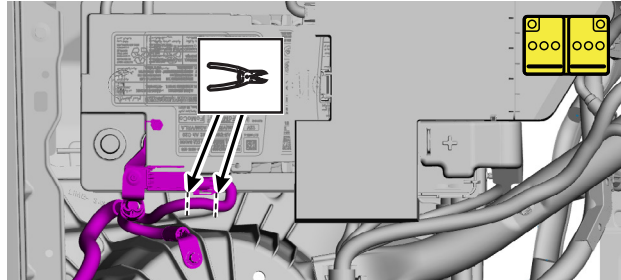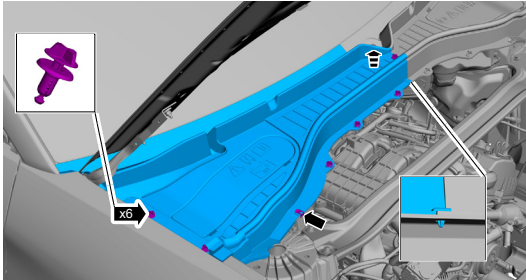


Auxiliary Battery Disconnect.

1. Remove the luggage compartment floor cover
2. Remove the luggage compartment spare tire cover.
3. Release the clips and pin-type retainers and remove the loadspace armrest trim panel.

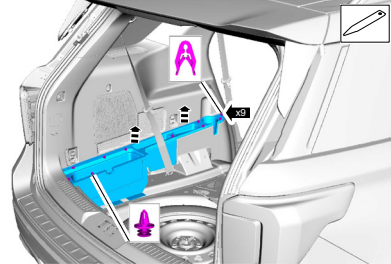
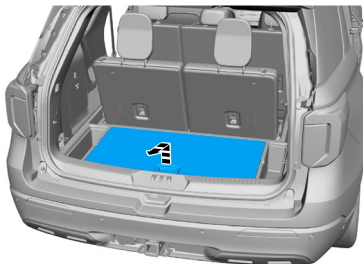


4. Locate and cut the negative battery cable to ground at two locations 3 in (7.6 cm) apart from each other. Isolate cable to prevent reconnection.

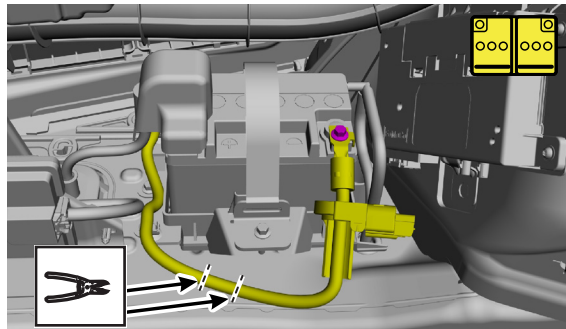

4. Access to the occupants

- ① Laminated Safety Glass
- ② Tempered Safety Glass

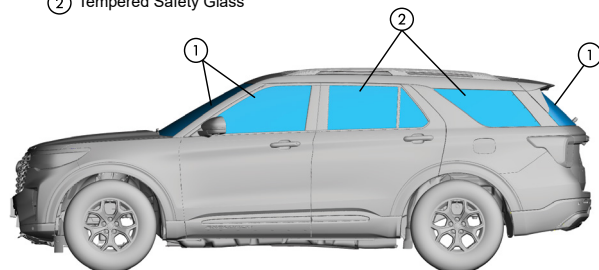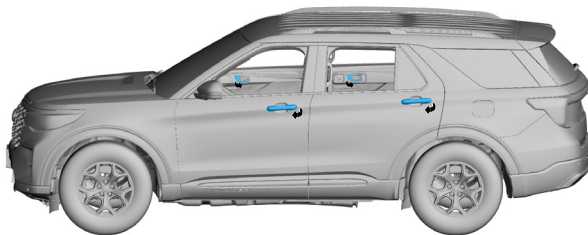




Ford Explorer Hybrid

Police Interceptor

2025



5. Stored energy / liquids / gases / solids



12 V



300 V

Refer to the vehicle overview illustration on Page 1 for location reference of the high voltage battery, 12V battery, gas tank, and other vehicle component locations.

6. In case of fire



LITHIUM-ION BATTERIES CAN IGNITE SPONTANEOUSLY OR RE-IGNITE AFTER THE FIRE HAS BEEN EXTINGUISHED. WEAR APPROPRIATE PPE.



7. In case of submersion

After removing the vehicle from the water, deactivate the high-voltage system (See Section 3) and allow the water to drain.
Wear appropriate PPE.




8. Towing / transportation / storage



LITHIUM-ION BATTERIES CAN IGNITE SPONTANEOUSLY OR RE-IGNITE AFTER THE FIRE HAS BEEN EXTINGUISHED. WEAR APPROPRIATE PPE.



If the vehicle has been involved in an accident or if the HV battery is damaged or unstable: Deactivate the high-voltage system (See Section 3).
Do not store a severely damaged vehicle inside a structure or within 50 ft (15m) of any structure or vehicle.





Ford Explorer Hybrid

Police Interceptor

2025



 For more detailed information, please refer to Section 9 to access the full Explorer Hybrid Emergency Response Guide.

9. Important additional information

For specific information and safety preparation regarding the High Voltage system, refer to: <https://www.motorcraftservice.com>, select Free Resources>Quick Guides>Reference Guides for the appropriate vehicle emergency response guide.

For First Responder Resources, refer to <https://www.ford.com/firstresponder/>

© Copyright 2025, Ford Motor Company. All rights reserved. This document may be reproduced in its entirety and distributed for emergency responder use only. It may not be excerpted for any purpose.

10. Explanation of pictograms used



Flammable



Explosive



Corrosives



Hazardous
to the
human health



Environmental
hazard



Electric
vehicle



Left-Hand
Drive



Use water
to extinguish
the fire



General
warning



Warning,
Electricity



Open
Hood/Frunk



Use infrared thermometer /
Thermal Infrared camera

