


	Polestar 3 Type: 5dr SUV (2024 -)			
				
				
 Airbag  Stored gas inflator  Seat belt pretensioner  SRS control unit  Battery low voltage  Gas strut/preloaded spring  High strength zone  Low voltage device that disconnects high voltage  High voltage component  Battery pack, high-voltage  High voltage power cable  Pedestrian protection active system  Zone requiring special attention				
Document N°		Version N°	Version date	Page N°
Polestar_3__SUV_2024_5d_Electric_EN		01	01/2024	1 / 4

Polestar 3 - 5dr SUV (2024 -) - Additional Pages

1. Identification / recognition

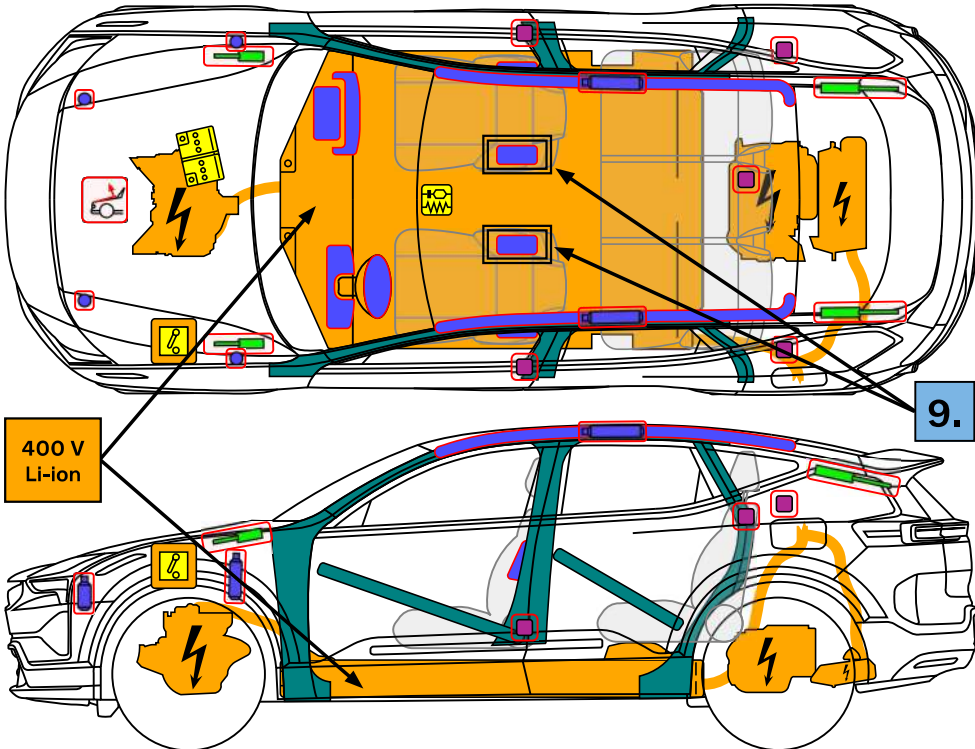

LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS SHUT DOWN. WEAR APPROPRIATE PPE.

Brand name front



Model name rear





Charge port



2. Immobilization / stabilization / lifting

Immobilize vehicle:

1. Block wheels and set parking brake
2. Push the P (park) button to select the P (park) position

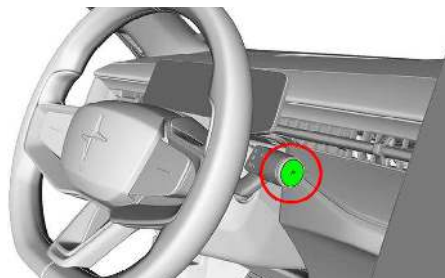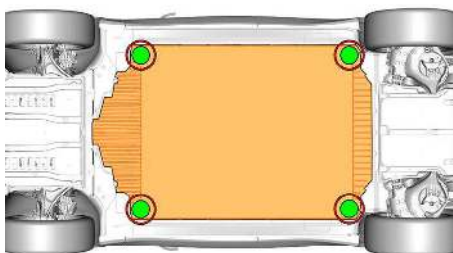

Lifting points:



Appropriate lifting points






High voltage battery

3. Disable direct hazards / Safety regulations

The propulsion system is disabled when the 'Safety mode See Manual' indicator in the instrument cluster is illuminated.



Deactivation of propulsion system, if 'Safety mode See Manual' indicator is not illuminated:

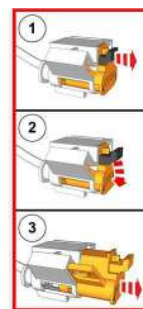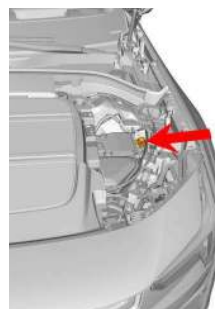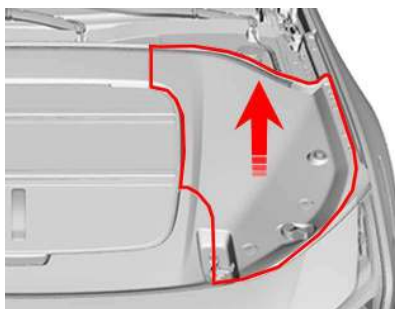

	Document N°	Version N°	Version date	Page N°
	Polestar_3__SUV_2024_5d_Electric_EN	01	01/2024	2 / 4

Polestar 3 - 5dr SUV (2024 -) - Additional Pages

Disconnect 12 Volt battery

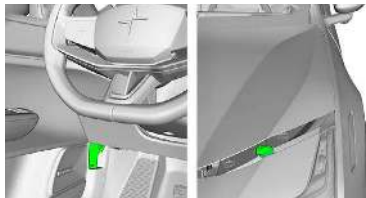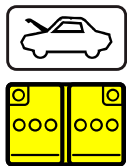

Safety instructions




Always assume the vehicle is powered, even if it is silent!

Make sure that the vehicle is immobilized and the propulsion system is deactivated; Never touch, cut, or open any orange high voltage power cable or high voltage component; In case of a collision with seat belt pretensioner activation / airbag deployment, the high voltage system will be disabled automatically. The restraint systems are still active.

4. Acces to the occupants

Seat adjustment

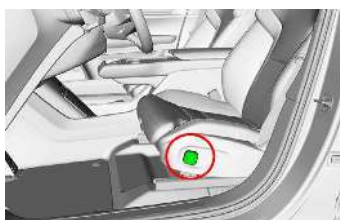

Use the center display to adjust the steering column



Glass types

- A. Laminated glass
- B. Tempered glass



5. Stored energy / Liquids / Gases / Solids

	400V	
	12V	
	R-1234yf 395 g - 445 g	



When conventional coolant leaks (check reservoir) from the high voltage (HV) battery cooling system, HV-battery can become unstable with risk of thermal runaway. An increasing HV-battery temperature might be an indicator of thermal runaway.



6. In case of fire

Extinguishing method for the high voltage (HV) battery:



LARGE AMOUNTS OF PURE WATER



POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE!



Document N°	Version N°	Version date	Page N°
Polestar_3__SUV_2024_5d_Electric_EN	01	01/2024	3 / 4

Polestar 3 - 5dr SUV (2024 -) - Additional Pages

7. In case of submersion

- There is no increased risk of electric shock in water resulting from the high voltage system
- If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3)

8. Towing / transportation / storage

Recovery hook storage



Location front hook



Location rear hook



STORE VEHICLE IN AN OPEN-AIR PARKING AT A SAFE DISTANCE $\geq 5\text{M}$ FROM OTHER OBJECTS OR VEHICLES!

POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE!



Towing

**9. Important additional information**

Centre airbag

**10. Explanation of pictograms used**

	Remove smart key		Electric vehicle
	Warning high voltage		Flammable
	Caution		Hazardous to the human health
	Warning; low temperature		Acute toxicity
	Air-conditioning component		Corrosives
	Use water to extinguish the fire		Explosive
	Use thermal infrared camera		Bonnet

Document N°

Version N°

Version date

Page N°

Polestar_3__SUV_2024_5d_Electric_EN

01

01/2024

4 / 4