




Porsche AG, 918 Spyder (918)
Cabriolet
from Model Year 2014

PORSCHE

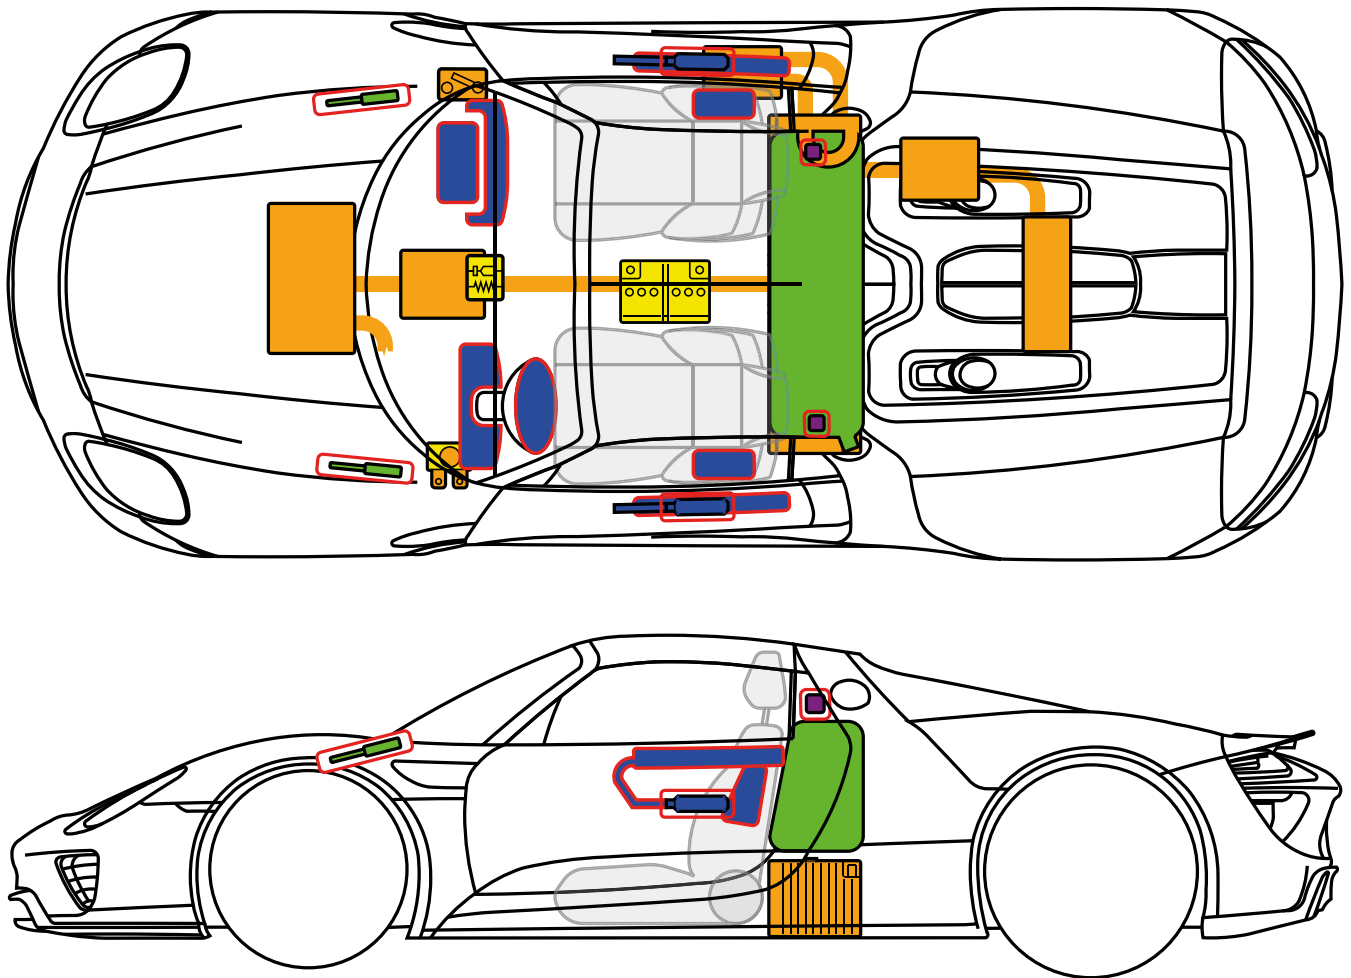


	Airbag		Body reinforcement		SRS-Control unit		High voltage battery
	Gas generator		Gas strut		12-volt Battery		High voltage cable / component
	Seat belt pretensioner		Pedestrian protection system		Fuse box		High voltage cut-off
	Fuel tank		Roll-over protection		Condenser		

- The complete body is made of carbon fiber-reinforced plastic (CFRP).
- No conventional body reinforcements are used.

Vehicle identification and marking

Identifying features of the 918 Spyder - standard equipment

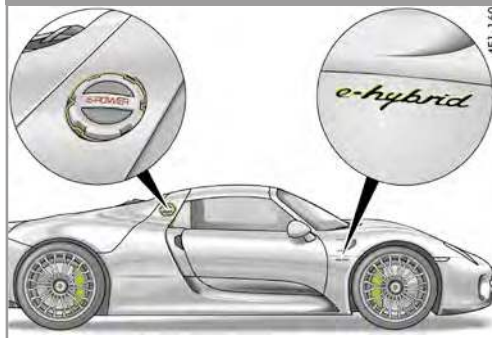


The 918 Spyder is manufactured and supplied exclusively as a plug-in hybrid.

“e-hybrid” logo on the fender at the left and right.

Vehicle charge port with “E-POWER” logo behind the charge port door on the rear right of the vehicle.

Marking of the hybrid components

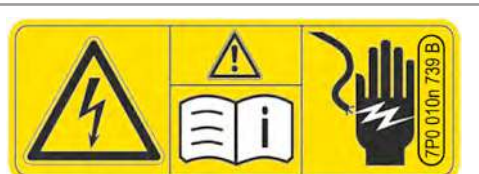

All high-voltage components are clearly marked with warning stickers.

Orange insulation is used on all high-voltage lines.

Safety information about the hybrid system

Undamaged plugs, connectors, cables and sockets in the high-voltage vehicle electrical system are safe to touch.



Risk of serious or fatal injury from electric shock if handled incorrectly!

If high-voltage components are not handled correctly, there is a risk of fatal injury from high voltage and the possible flow of current through the human body.

- ➔ Do not touch high-voltage components that are in operation.
- ➔ Do not damage the orange high-voltage lines in the high-voltage vehicle electrical system.
- ➔ There may still be voltage in the high-voltage battery even after the high-voltage vehicle electrical system has been deactivated. The high-voltage battery must not be damaged or opened.

Deactivating the high-voltage system and passive safety system

WARNING

The electric motor is silent when stationary!

You cannot always tell from the operating noise whether the vehicle is ready to start because the electric motor is silent when stationary.

- The vehicle may be ready to start even when no engine noises can be heard.
- If the ignition is switched on, the combustion engine may start automatically depending on the state of charge of the high-voltage battery.

NOTE

Deactivating the HV system

The high-voltage system switches off automatically in the event of accidents where the airbags or seat-belt pretensioners are triggered.

To make sure that the **high-voltage system** is deactivated, it is recommended – depending on accessibility – to use the **primary or secondary emergency disconnection point as the deactivation method**:

1. Primary emergency disconnection point: Turn ignition key to “OFF” and unplug the 12-volt service plug at the right in the passenger’s footwell.
2. Secondary emergency disconnection point: Turn ignition key to “OFF” and remove fuse number B-6 (7.5 A) “Terminal 30 – HV battery control unit” from the fuse box at the left in the driver’s footwell.

Other deactivation methods as described in the Workshop Manuals may only be performed by appropriately qualified personnel.

NOTE


Deactivating the passive safety systems

The probability of incorrect triggering of the passive safety systems (airbag and seat-belt pretensioner) is reduced by removing fuse C-4 from the fuse box in the passenger’s footwell (fuse for airbag control unit). The waiting time after removing fuse C-4 is 1 minute.

To make sure that the passive safety systems (airbag and seat-belt pretensioner) are **completely** deactivated, the 12-volt battery in the vehicle tunnel must be disconnected. The waiting time after disconnection of the 12-volt battery is 1 minute.


Deactivating the high-voltage system

Switching off the ignition

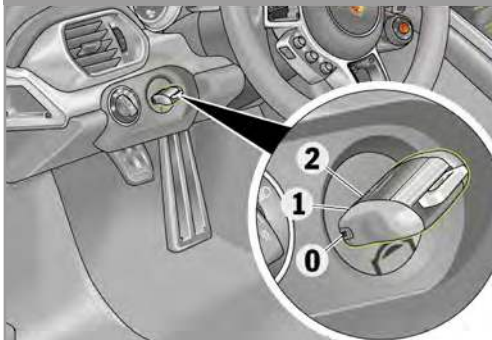

1. Turn the ignition key to “OFF” (position -0-).


Primary emergency disconnection point: Unplugging the 12-volt service plug at the right in the passenger's footwell

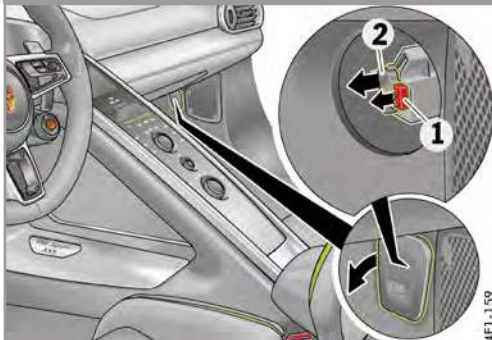

1. Open the cover on the 12-volt service plug at the right in the passenger's footwell.
2. Release service plug “1”.
Press the release hook back slightly and unlock the service plug “2”.

- ➔ There is no voltage in the high-voltage system approx. 20 seconds after it has been deactivated.
- ➔ The passive safety systems, such as airbags and seat-belt pretensioners, are still supplied with voltage from the on-board 12-volt battery.

Secondary emergency disconnection point: Removing fuse B-6 from the fuse box at the left in the driver's footwell

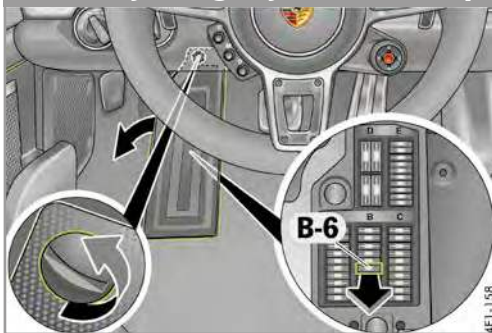


1. Open the cover on the fuse box at the left in the driver's footwell.
2. Pull out fuse number **B-6**.

- ➔ There is no voltage in the high-voltage system approx. 20 seconds after it has been deactivated.
- ➔ The passive safety systems, such as airbags and seat-belt pretensioners, are still supplied with voltage from the on-board 12-volt battery.


Deactivating the passive safety systems

Removing fuse C-4 from the fuse box in the passenger's footwell

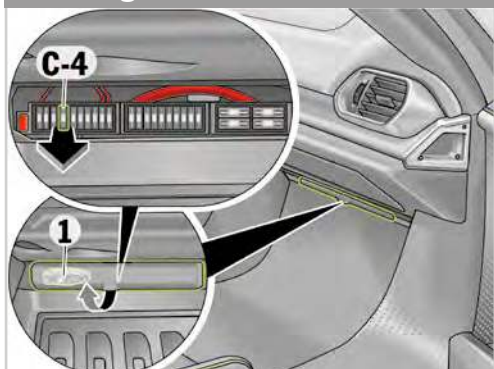

1. Loosen plastic clip “1” and open the cover on the fuse box in the passenger's footwell.
2. Pull out fuse number **C-4**.

Disconnecting the 12-volt battery

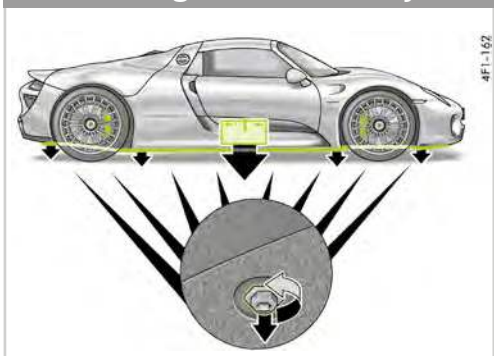

1. Make sure that no jumper cables are connected to the vehicle.
2. Remove underbody paneling and the cover of the 12-volt battery in the vehicle tunnel.
3. Disconnect the negative cable of the 12-volt battery and secure it to prevent accidental contact.

- ➔ There is no voltage in the high-voltage system approx. 20 seconds after it has been deactivated.
- ➔ The passive safety systems, such as airbags and seat-belt pretensioners, are still supplied with voltage from the on-board 12-volt battery.

Other accident situations

Vehicle in water
There is no risk that the vehicle body will be live. Once the vehicle has been recovered: 1. Allow the water to run out of the interior. 2. Start deactivating the high-voltage system.

Vehicle fire	
Suitable extinguishing agent:	water (H ₂ O), larger quantities for cooling lithium ion batteries.

Battery fire	
Alternative extinguishing agents for a battery fire:	dry sand, carbon dioxide (CO ₂)

 **WARNING**

Battery modules explode when hot!

Battery modules might explode if the high-voltage battery becomes too hot.

➔ Observe the required safety distances when fighting the fire.