



2014

MODEL S

EMERGENCY RESPONSE GUIDE

This guide is intended only for use by trained and certified rescuers and first responders. It assumes that readers have a comprehensive understanding of how safety systems work and have completed the appropriate training and certification required to safely handle rescue situations. Therefore, this guide provides only the specific information required to understand and safely handle the fully electric Model S in an emergency situation. It describes how to identify Model S, and provides the locations and descriptions of its high voltage components, airbags, inflation cylinders, seat belt pre-tensioners, and high strength materials used in its body structure. This guide includes the high voltage disabling procedure and any safety considerations specific to Model S. Failure to follow recommended practices or procedures can result in serious injury or death.


The high voltage battery is the main energy source. Model S does not have a traditional gasoline or diesel engine and therefore does not have a fuel tank.



IDENTIFYING MODEL S.....	1	FIREFIGHTING	20
BADGING.....	1	HIGH VOLTAGE BATTERY - FIRE DAMAGE	20
LARGE SCREEN.....	2	LIFTING MODEL S	21
CHARGE PORT.....	2	OPENING MODEL S	22
HIGH VOLTAGE COMPONENTS	3	USING THE KEY	22
OVERVIEW OF HIGH VOLTAGE COMPONENTS.....	3	OPENING DOORS.....	22
HIGH VOLTAGE BATTERY	4	OPENING REAR DOORS WITH NO POWER.....	22
DC-DC CONVERTER AND FRONT JUNCTION BOX.....	5	OPENING THE TRUNK.....	23
HIGH VOLTAGE CABLING.....	6	OPENING THE HOOD (FRONT TRUNK)	23
CHARGERS.....	7	HIGH VOLTAGE LABELS	24
DRIVE UNIT.....	8	INDEX	25
LOW VOLTAGE SYSTEM	9		
12V BATTERY.....	9		
DISABLING HIGH VOLTAGE.....	10		
FIRST RESPONDER CUT LOOP - FRONT TRUNK	10		
CUTTING THE FIRST RESPONDER LOOP - FRONT TRUNK	11		
FIRST RESPONDER DISCONNECT POINT - REAR PILLAR.....	12		
CUTTING THE FIRST RESPONDER DISCONNECT POINT -			
REAR PILLAR.....	13		
STABILIZING MODEL S.....	14		
AIRBAGS AND SUPPLEMENTARY RESTRAINT SYSTEM (SRS)	15		
AIRBAGS.....	15		
AIRBAG INFLATION CYLINDERS.....	15		
SEAT BELT PRE-TENSIONERS	16		
REINFORCEMENTS	17		
NO-CUT ZONES.....	18		
RESCUE OPERATIONS	19		
FULLY OR PARTIALLY SUBMERGED VEHICLES	19		
PUSHING ON THE FLOOR PAN.....	19		


BADGING

Model S has three main badges to distinguish it.

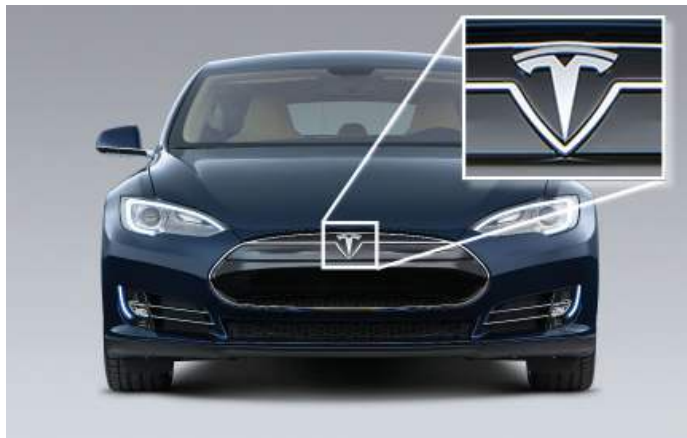


LARGE SCREEN

Model S has a large 17" touchscreen.

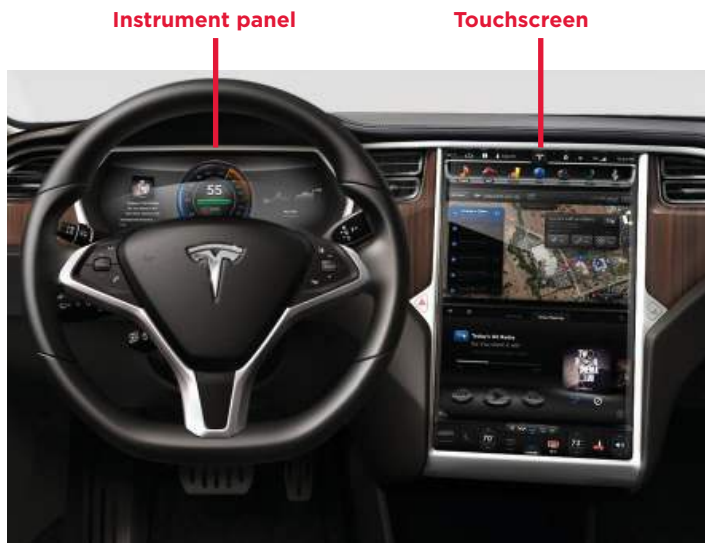


CHARGE PORT

Model S has a charge port that is integrated into the taillight on the rear left side fender.

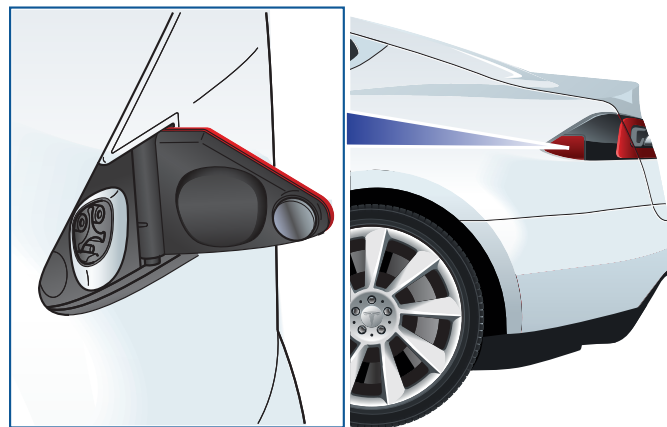

OVERVIEW OF HIGH VOLTAGE COMPONENTS

1. High Voltage Battery
2. DC-DC converter and front junction box
3. High voltage cabling (colored orange)
4. 10 kW on-board master charger
5. OPTIONAL: 10 kW on-board slave charger
6. Charge port
7. Drive unit

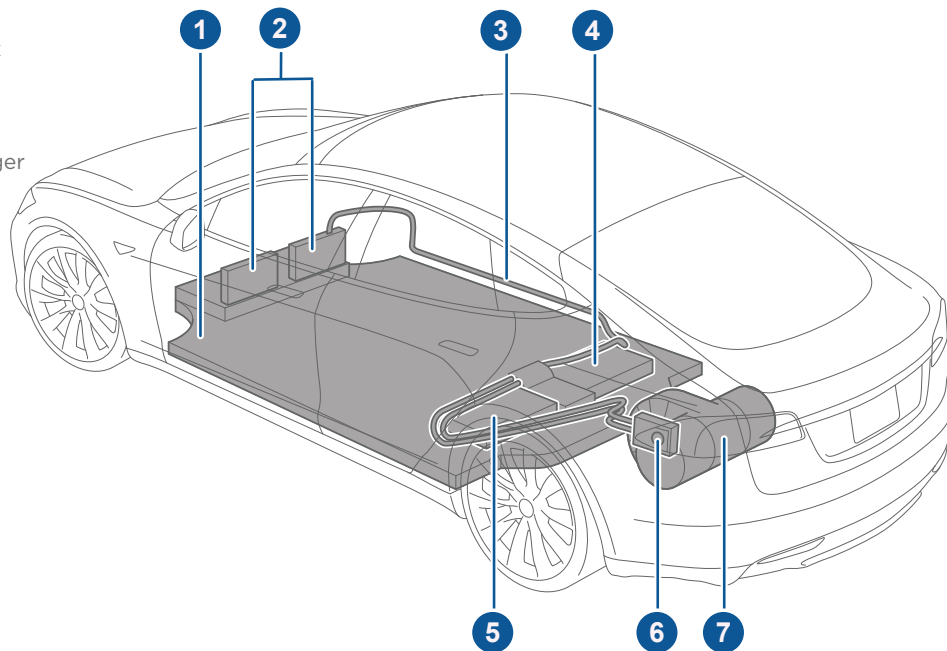

WARNING: After deactivation, the high voltage circuit requires two minutes to deplete.



WARNING: The SRS control unit has a backup power supply with a discharge time of approximately ten seconds.




WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.



HIGH VOLTAGE BATTERY

Model S is equipped with a floor-mounted 400 volt lithium-ion high voltage battery. Never breach the high voltage battery when lifting from under the vehicle. When using rescue tools, pay special attention to ensure that you do not breach the floor pan.

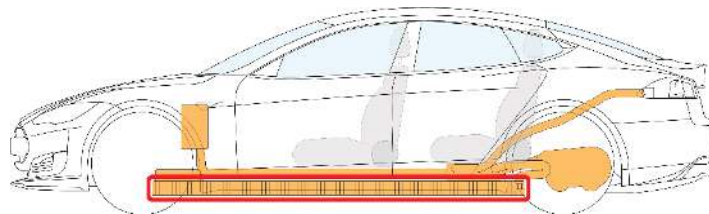


High voltage battery is located below the floor



WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.

DC-DC CONVERTER AND FRONT JUNCTION BOX

High voltage is present at the DC-DC converter and front junction box, located behind the front trunk. The DC-DC converter transforms the high voltage current from the 400 volt battery to low voltage to charge the Model S 12 volt battery. The front junction box provides power to various components, such as the Battery heater, the air conditioning compressor and the cabin heater. Use caution when cutting in this area during a dash lift (dash roll) procedure—use work-around techniques, if necessary.

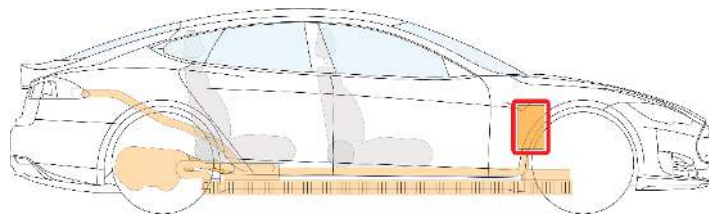

DC-DC converter and front junction box are located behind the front trunk, near the center of the vehicle




WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.



HIGH VOLTAGE CABLING

High voltage cabling is highlighted in dark orange in the following illustration.

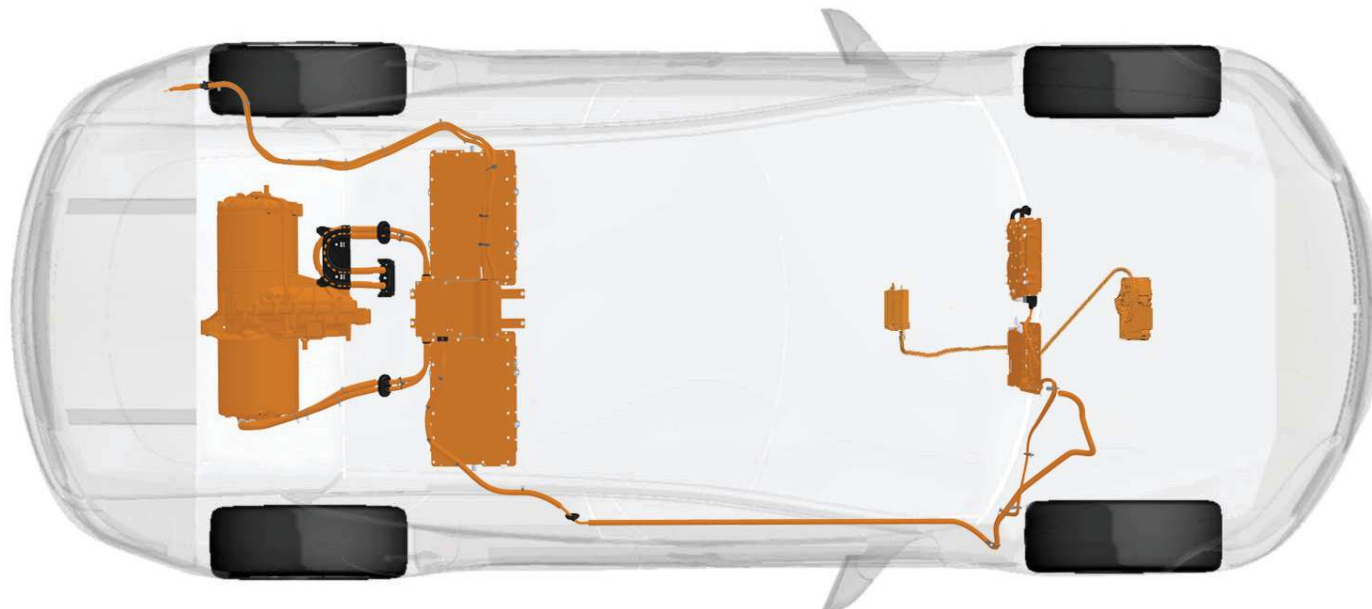


High voltage cabling is routed under the rear seats and inside the rocker panel on the right side front



WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.

CHARGERS


Model S has one (standard) or two (optional) chargers under the rear seat. These chargers convert the AC current from a charging station to DC for charging the high voltage battery. The high voltage junction box, located between the chargers, routes any surplus energy from regenerative braking back to the battery.

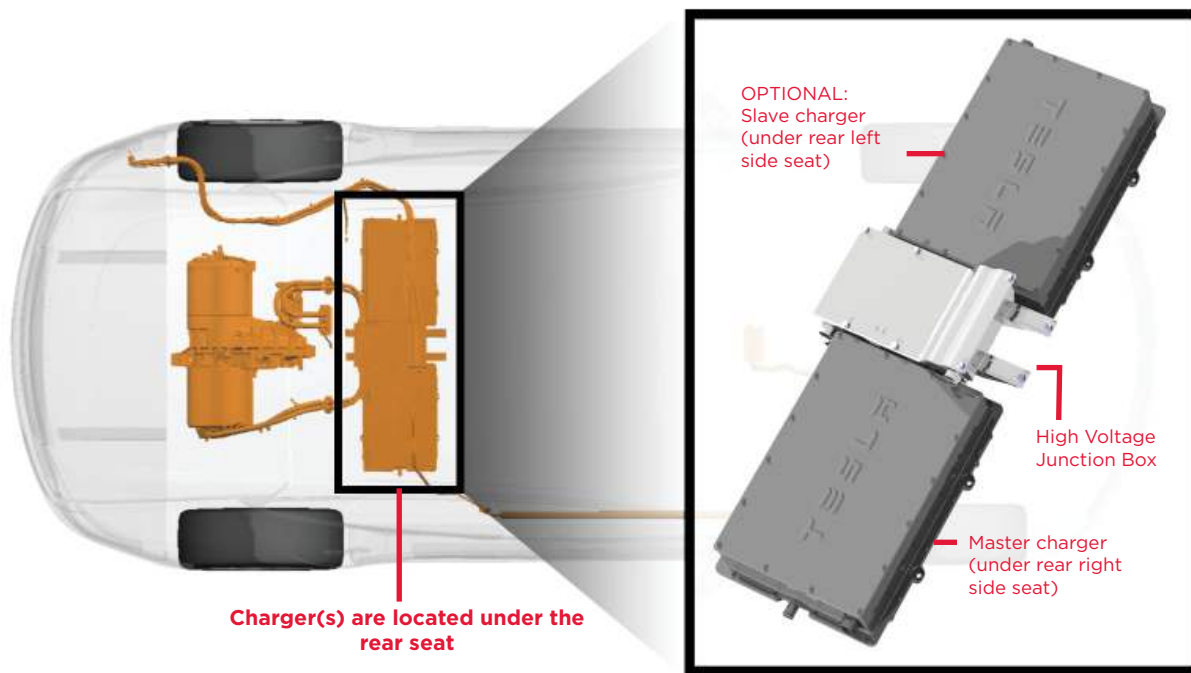

WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.

DRIVE UNIT

The drive unit is located between the rear wheels under the floor pan of the Model S. It converts the DC current from the high voltage battery into the 3-phase AC current that the electric motor uses to power the wheels.

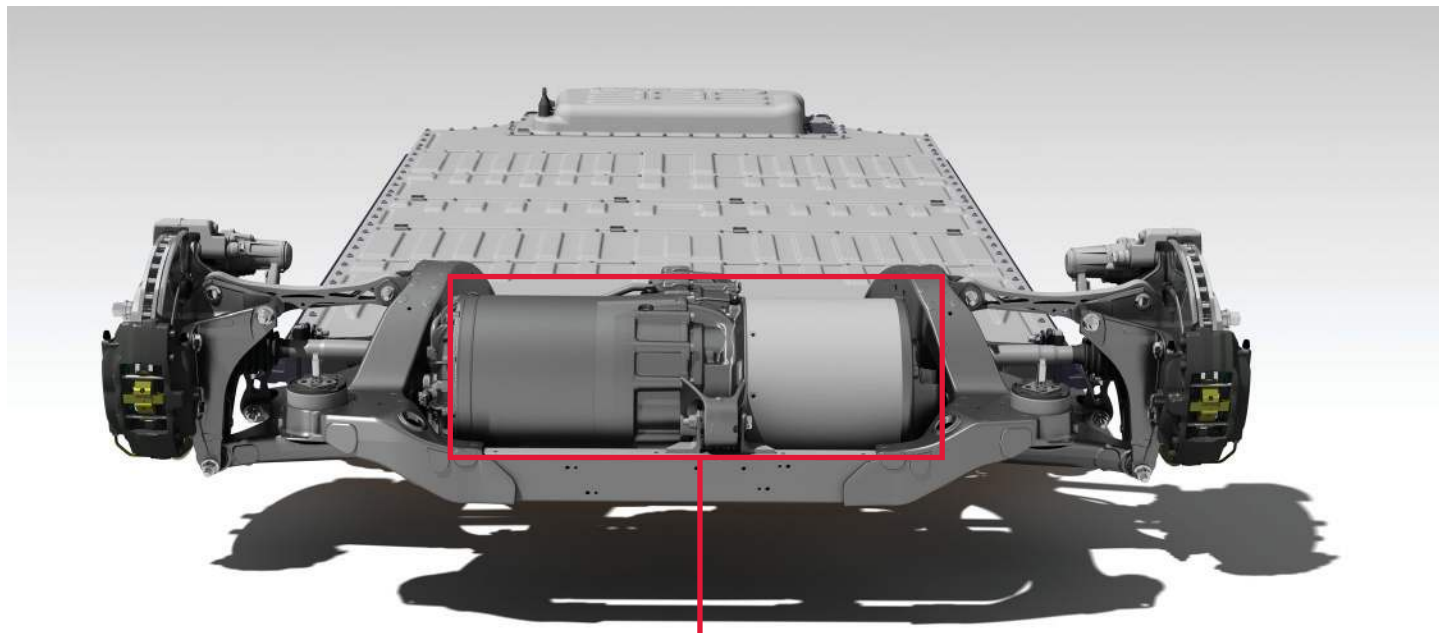

Drive unit is located between the rear wheels




WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.

12V BATTERY

In addition to the high voltage system, Model S has a low voltage system, powered by a traditional 12 volt battery. The low voltage system operates the same electrical components found in conventional vehicles, including the supplementary restraint system (SRS), airbags, ignition, touchscreen, and interior and exterior lights.

The low voltage system interacts with the high voltage system. The DC-DC converter supplies the 12V battery with power to support low voltage functions, and the 12V battery supplies power to the high voltage contacts to allow power to flow out of the high voltage battery.

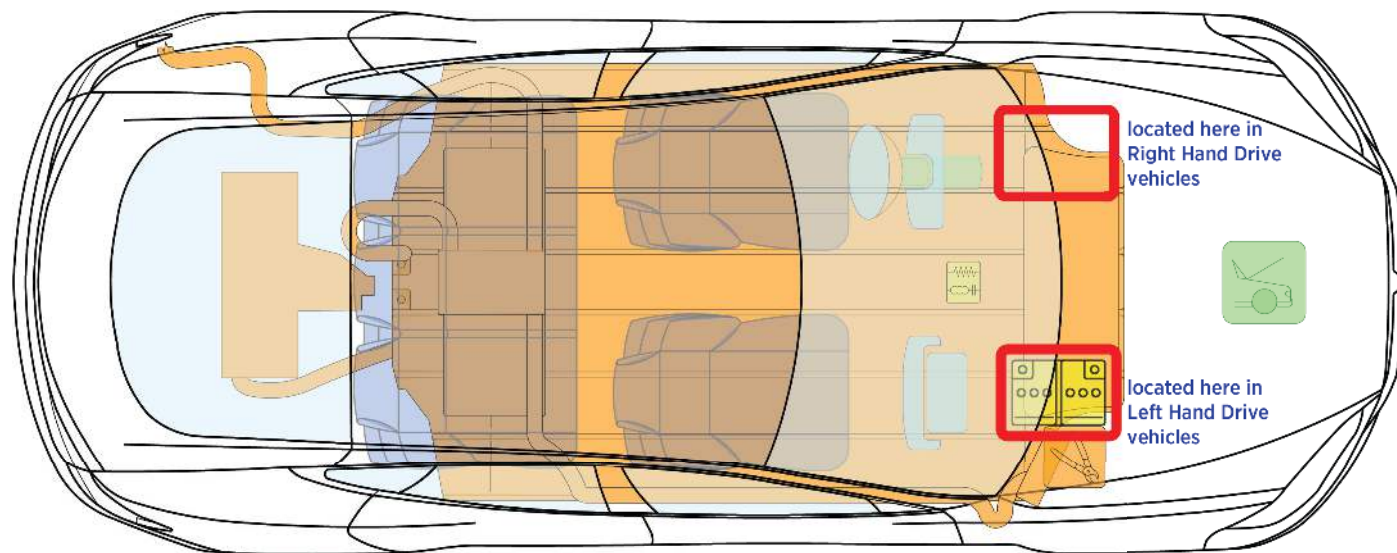

**12V battery is located under the hood
and the plastic access panel**




WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.

FIRST RESPONDER CUT LOOP - FRONT TRUNK

The front trunk first responder cut loop consists of low voltage wires. Cutting this loop shuts down the high voltage system and disables the SRS and airbag components. See cut instructions on page 11.

NOTE: When cutting the loop, double cut to remove an entire section. This eliminates the risk of the cut wires accidentally reconnecting.

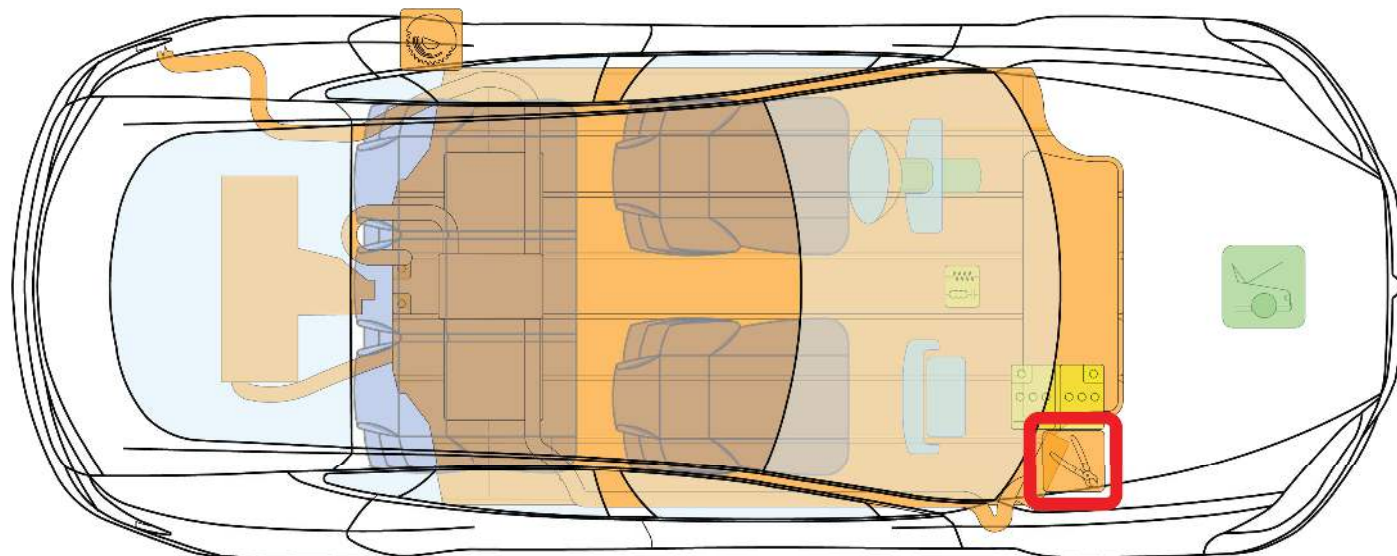

The front trunk cut loop is located on the right side, under the hood and the plastic access panel



WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.

CUTTING THE FIRST RESPONDER CUT LOOP - FRONT TRUNK

STEP 1: Open the hood (also known as the Front Trunk). See page 23 for details.


The cut loop is located on the right side. Its label protrudes from under the plastic access panel.

Cut loop label



STEP 2: Remove the access panel by pulling its rear edge upward to release the five clips that hold it in place. Maneuver it toward the windshield to remove.

Remove access panel

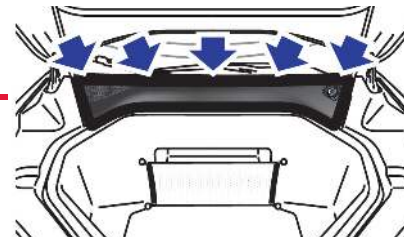

STEP 3: DOUBLE CUT the loop to remove an entire section.

Removing an entire section of the cut loop eliminates the risk of the wires accidentally touching (reconnecting).

Double cut the loop




WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.

FIRST RESPONDER DISCONNECT POINT - REAR PILLAR

If the front trunk cut loop is inaccessible, the rear pillar disconnect point can shut down the high voltage system and disable the SRS and airbag components in the same manner as the front trunk cut loop. See cut instructions on page 13.

NOTE: Only one point needs to be disconnected, not both.

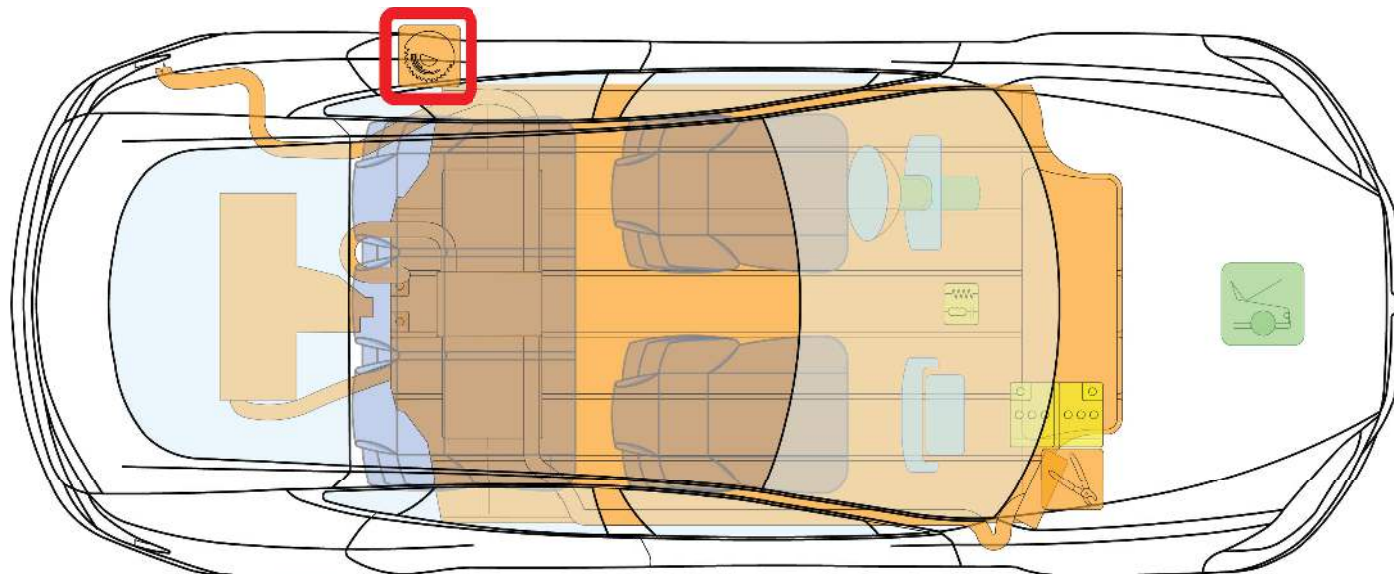

WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.

CUTTING THE FIRST RESPONDER DISCONNECT POINT - REAR PILLAR

STEP 1: Open the rear passenger door closest to the charge port.

The disconnect point is located under the body panel on the outside of the seat. The label indicates where to cut into the body panel.



STEP 2: Use a 12" circular saw to cut 6 in (152 mm) through the label and into the pillar.



Cut loop
label



WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.

STABILIZING MODEL S

CHOCK ALL FOUR WHEELS

Drivers can choose a setting that determines whether or not Model S will “creep” when a driving gear is selected. If this setting is off, Model S does not move unless the accelerator is pressed, even if shifted into Drive or Reverse. However, never assume that Model S will not move. Always chock the wheels.



SHIFT INTO PARK


Model S is silent so never assume it is powered off. Pressing the accelerator pedal even slightly can cause Model S to move quickly if the currently active gear is Drive or Reverse. To ensure that the parking brake is engaged, press the button on the end of the gear selector to shift into Park. Whenever Model S is in Park, the parking brake is automatically engaged so that the vehicle will not move if the accelerator pedal is pressed.



WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.

AIRBAGS


Model S is equipped with six airbags (eight in North America). Responders should de-energize the airbags by cutting the First Responder Cut Loop (see page 11) or Disconnect Point (see page 13). Airbags are shown below in blue.

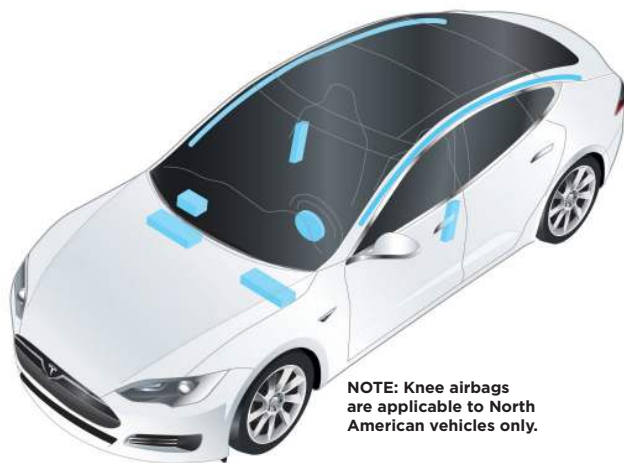

NOTE: Knee airbags are applicable to North American vehicles only.

AIRBAG INFLATION CYLINDERS

Airbag (stored gas) inflation cylinders are located toward the rear of the vehicle, as shown below in red.

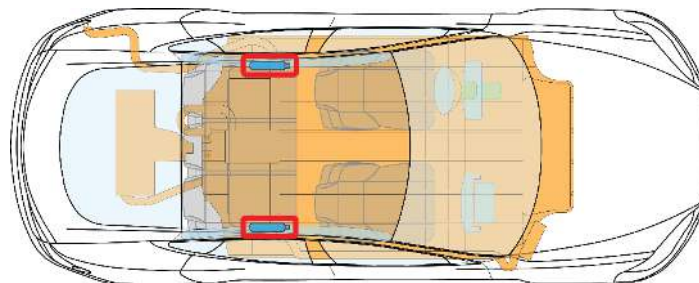


Airbag inflation cylinders are located toward the rear



WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.

SEAT BELT PRE-TENSIONERS

Seat belt pre-tensioners are located by the B-pillars, as shown below in red.

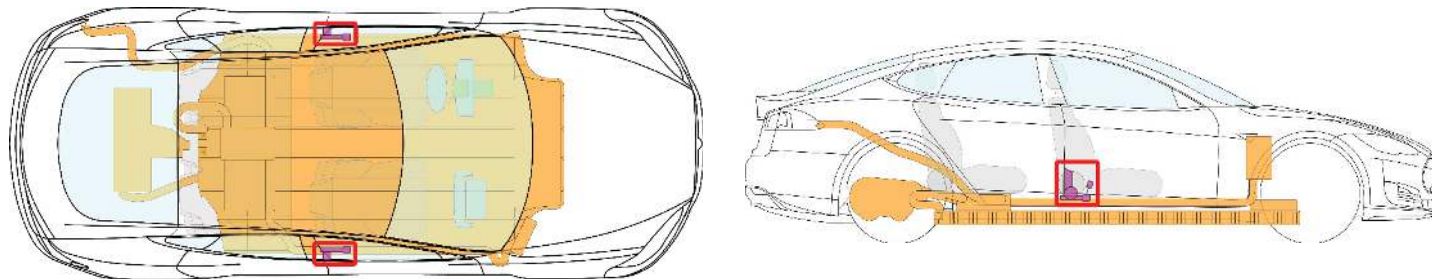

Seat belt pre-tensioners are located by the B-pillars




WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.

LOCATION OF REINFORCEMENTS AND HIGH STRENGTH STEEL

Model S is reinforced to protect occupants in a collision. Reinforcements are shown below in green (high strength steel) and blue (extruded aluminum).

Depending on the tools used, high strength steel can be challenging or impossible to cut. If necessary, use workaround techniques.

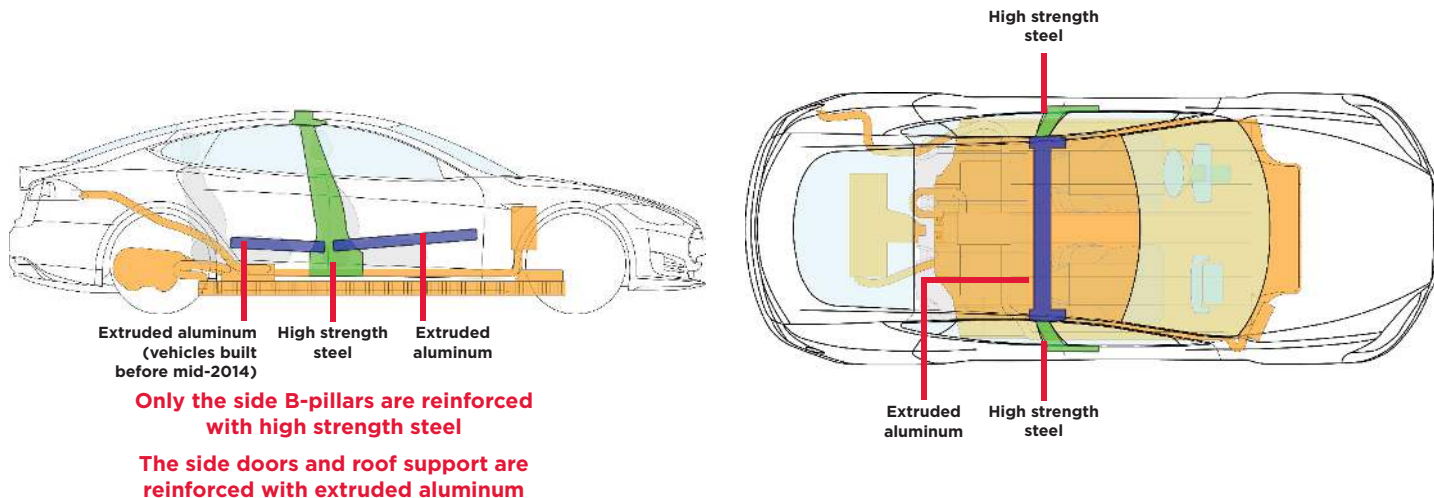

WARNING: Always use appropriate tools (such as a hydraulic cutter), and always wear appropriate personal protective equipment (PPE) when cutting Model S. Failure to follow these instructions can result in serious injury or death.




WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.



NO-CUT ZONES

Model S has areas that are defined as “no-cut zones” due to high voltage, gas struts, and SRS or airbag hazards. Never cut or crush these areas—doing so can result in serious injury or death.

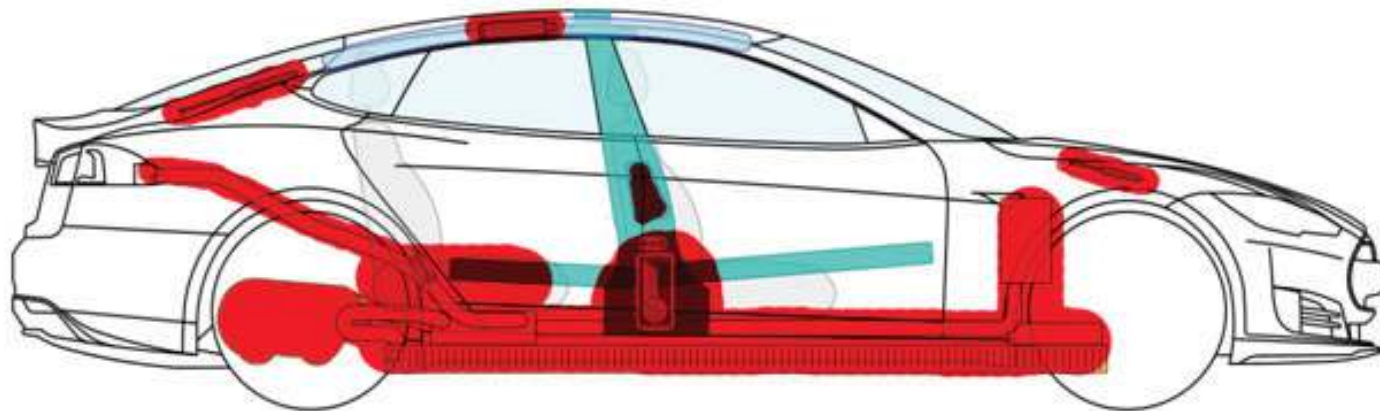

Do not cut through areas shown in red



WARNING: Always use appropriate tools (such as a hydraulic cutter), and always wear appropriate personal protective equipment (PPE) when cutting Model S. Failure to follow these instructions can result in serious injury or death.



WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.




FULLY OR PARTIALLY SUBMERGED VEHICLES

Treat a submerged Model S like any other vehicle. The body of the vehicle does not present a risk of shock in water. However, as a precautionary measure, handle any submerged vehicle while wearing the appropriate personal protective equipment (PPE). Remove the vehicle from the water and continue with normal high voltage disabling.



PUSHING ON THE FLOOR PAN

The high voltage battery is located below the floor pan. Never push down on the floor pan from inside Model S. Doing so can breach the high voltage battery, which can cause serious injury or death.

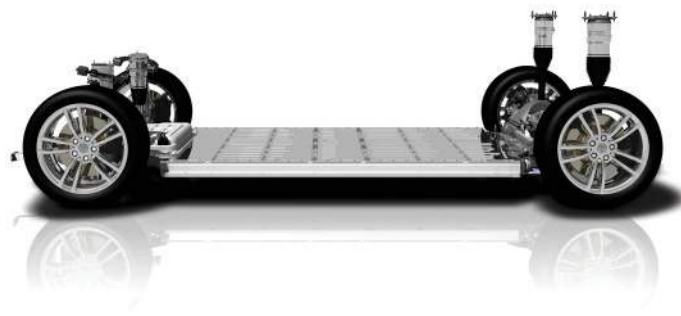

WARNING: Failure to handle a submerged vehicle without appropriate personal protective equipment (PPE) can result in serious injury or death.



WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.

FIREFIGHTING

Extinguish small fires, that do not involve the high voltage battery, using a CO₂ or ABC extinguisher.

During overhaul, do not make contact with any high voltage component. Always use insulated tools for overhaul.

Stored gas inflation cylinders, gas struts, and other components can result in a boiling liquid expanding vapor explosion (BLEVE) in extreme temperatures. Perform an adequate “knock down” on the fire before entering the incident’s “hot zone.”

If the high voltage battery becomes involved in fire or is bent, twisted, damaged, or breached in any way, or if you suspect that the battery is heating, use large amounts of water to cool the battery. DO NOT extinguish fire with a small amount of water. Always establish or request an additional water supply.

Battery fires can take up to 24 hours to fully extinguish. Consider allowing the vehicle to burn while protecting exposures.

Use a thermal imaging camera to ensure the high voltage battery is completely cooled before leaving the incident. If a thermal imaging camera is not available, you must monitor the battery for re-ignition. Smoke indicates that the battery is still heating. Do not release the vehicle to second responders until there has been no sign of smoke from the battery for at least one hour.

Always advise second responders (law enforcement, tow personnel) that there is a risk of the battery re-igniting. After a Model S has been involved in a submersion, fire, or a collision that has compromised the high voltage battery, always store it in an open area with no exposures within 50 feet.



WARNING: When fire is involved, consider the entire vehicle energized and DO NOT TOUCH any part of the vehicle. Always wear full PPE, including SCBA.



WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.

HIGH VOLTAGE BATTERY - FIRE DAMAGE

A burning or heating battery releases toxic vapors. These vapors include sulfuric acid, oxides of carbon, nickel, aluminum, lithium, copper, and cobalt. Responders should wear full personal protective equipment (PPE), including self-contained breathing apparatus (SCBA), and take appropriate measures to protect civilians downwind from the incident. Use fog streams or positive pressure ventilation (PPV) fans to direct vapors.

The high voltage battery consists of lithium-ion cells. These are considered dry cell batteries. If damaged, only a small amount of battery fluid can leak. Lithium-ion battery fluid is clear in color.

The high voltage battery, the drive unit, the charge controllers, and the DC-DC converter are liquid cooled with typical glycol-based coolant. If damaged, blue fluid can leak out of the battery.

A damaged high voltage battery can cause rapid heating of the battery cells. If you notice smoke coming from the battery area, assume the battery is heating and take appropriate action as described under the heading “FIREFIGHTING” on this page.

LIFT AREAS

The high voltage battery is located below the floor, under a floor pan. A large section of the undercarriage houses this battery. When lifting Model S, do not push on the high voltage battery. When lifting or jacking, use only the designated lifting areas.




Appropriate lifting locations

Yellow

Safe stabilization points for a side-resting Model S

Orange


High voltage battery. **DO NOT USE THIS AREA TO LIFT OR STABILIZE MODEL S!**

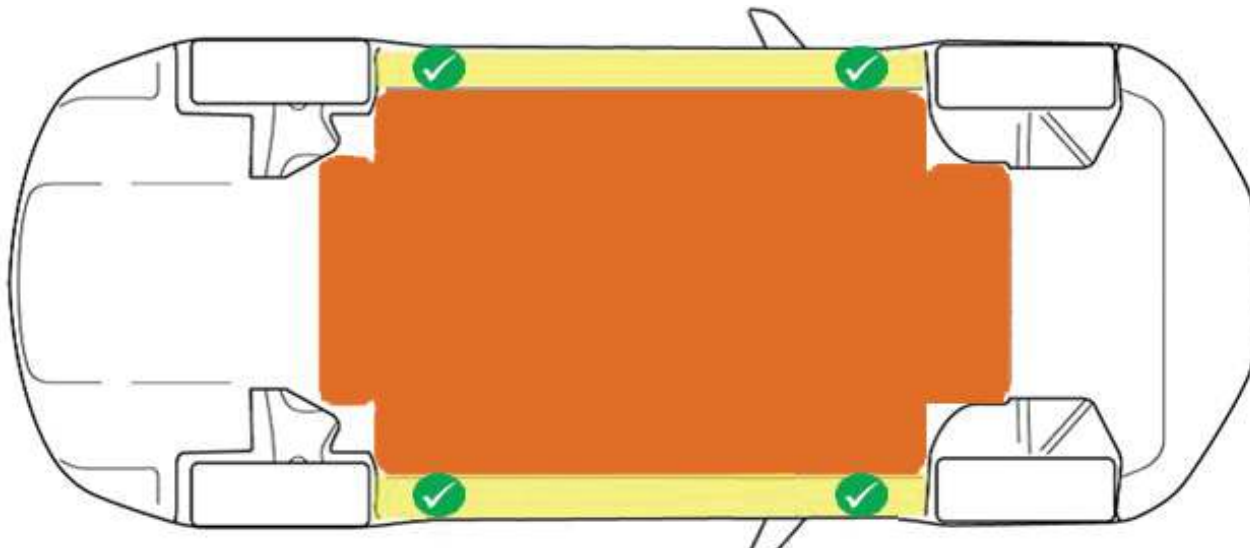

WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.

USING THE KEY

Use the key's buttons as shown below.

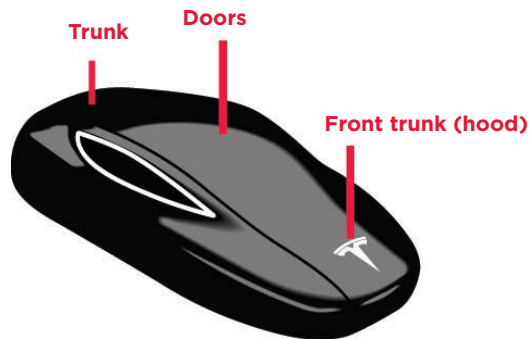

OPENING DOORS


Model S has unique door handles. Under normal conditions, when you press a handle, it extends* to allow you to open the door.

If door handles do not function, open the door manually by reaching inside the window and using the interior handle.



OPENING REAR DOORS WITH NO POWER

Open rear doors from inside by folding back the edge of the carpet below the rear seats to access the mechanical release cable. Pull the mechanical release cable toward the center.


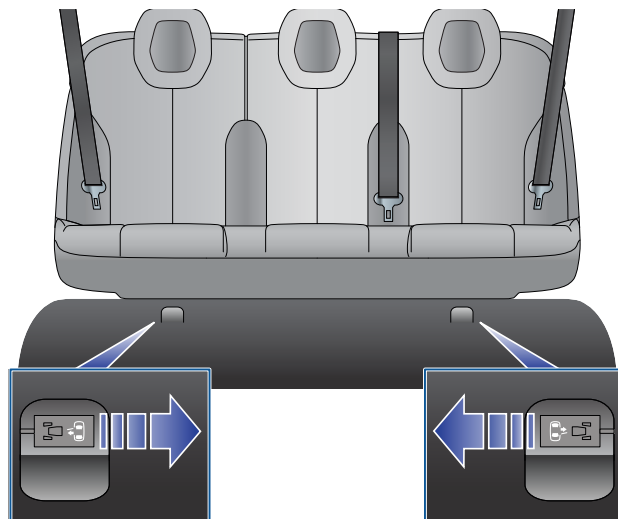


*NOTE: When an airbag inflates, Model S unlocks all doors, unlocks the trunk, and extends all door handles.

OPENING THE TRUNK

Use one of the following methods:

- Press the switch located under the handle.
- Touch Trunk on the touchscreen CONTROLS window.
- Double-click the trunk button on the key.

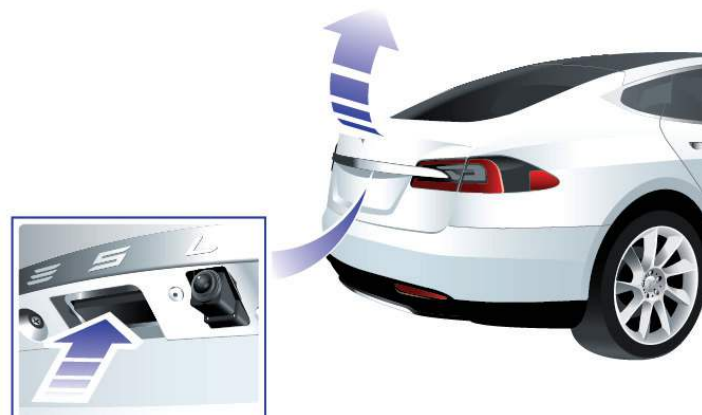
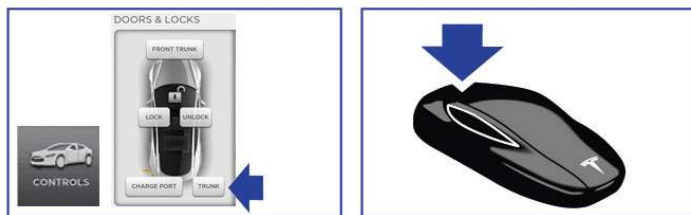


OPENING THE HOOD (FRONT TRUNK)

Model S does not have a traditional engine. Therefore, the area that would normally house the engine is used as additional storage space. Tesla calls this area the “Front Trunk” or “Frunk”.


To open, use one of the following methods:

- Touch Front Trunk on the touchscreen.
- Double-click the Front Trunk (hood) button on the key.
- Pull the release handle located under the glove box, then push down on the secondary catch lever. To release the pressure against the secondary catch, you may need to push the hood down slightly.

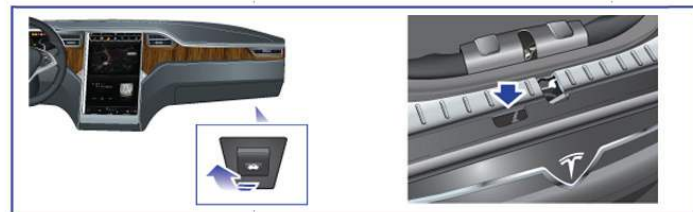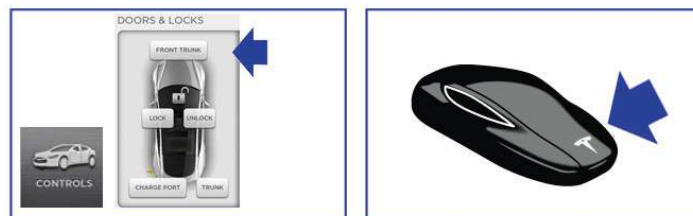

HIGH VOLTAGE LABELS

Vehicle labels associated with high voltage components are shown below. These are examples only. Depending on the region, these labels may be translated into other languages.

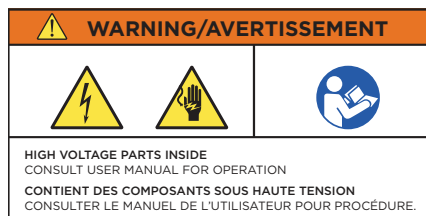

WARNING: Regardless of the disabling procedure you use, ALWAYS ASSUME THAT ALL HIGH VOLTAGE COMPONENTS ARE ENERGIZED! Cutting, crushing or touching high voltage components can result in serious injury or death.



DANGER











HIGH VOLTAGE COMPONENTS

KEEP OUT OF REACH OF CHILDREN

- NEVER ATTEMPT TO REMOVE, DISASSEMBLE, OR MODIFY THIS UNIT OR USE IT FOR OTHER THAN ITS INTENDED PURPOSE. (PLEASE HAVE YOUR TESLA SERVICE CENTER OR A QUALIFIED TECHNICIAN HANDLE THE BATTERY.)
- DO NOT DISPOSE OF THIS UNIT. PLEASE CONTACT YOUR TESLA SERVICE CENTER FOR RECYCLING OR DISPOSAL OF THE BATTERY UNIT.
- DO NOT SUBJECT THIS UNIT TO PHYSICAL IMPACT THAT MAY CAUSE DAMAGE.
- KEEP THIS UNIT AWAY FROM FIRE.
- TRANSPORT THIS UNIT IN ACCORDANCE WITH ALL APPLICABLE LAWS.

TO QUALIFIED ELECTRIC VEHICLE TECHNICIANS

BE SURE TO READ THE SERVICE MANUAL WHEN SERVICING OR REPLACING THIS UNIT.

TO HAULERS AND DISMANTLERS

PLEASE CONSULT WITH YOUR LOCAL TESLA SERVICE CENTER WHEN HAULING OR DISMANTLING THIS UNIT.

HIGH VOLTAGE BATTERY RECYCLING INFORMATION

PLEASE CONTACT YOUR LOCAL TESLA SERVICE CENTER FOR RECYCLING OR DISPOSAL OF THIS BATTERY UNIT.

FAILURE TO OBSERVE THE ABOVE MAY RESULT IN ELECTRICAL SHOCK, FIRE, OR SERIOUS INJURY.

COMPOSANTS HAUTE TENSION

TEINR HORS DE PORTEE DES ENFANTS

- NE TENTEZ JAMAIS D'ENLEVER, DE DEMONTER OU DE MODIFIER CETTE BATTERIE, OU DE L'UTILISER POUR TOUT AUTRE USAGE QUE SON UTILISATION PREVUE. (TOUTE OPERATION SUR LA BATTERIE DOIT ETRE REALISEE PAR UN CENTRE DE SERVICES TESLA OU UN TECHNICIEN QUALIFIE.)
- NE PAS JETER. CONTACTEZ VOTRE CENTRE DE SERVICES TESLA EN VUE DU RECYCLAGE DE CETTE BATTERIE OU DE SON ELIMINATION.
- NE PAS SOUMETTRE CETTE BATTERIE A TOUT CHOC OU CONTACT SUSCEPTIBLE DE L'ENDOMAGER.
- TEINR ELOIGNE DE TOUT FLAMME.
- LE TRANSPORT DE CETTE BATTERIE DOIT SE CONFORMER A TOUTE REGLEMENTATION APPLICABLE.

TOUT MANQUEMENT AU RESPECT DES CONSIGNES C-DESSUS PEUT EXPOSER A DES RISQUES DE CHOC ELECTRIQUE, D'INCENDIE OU DE BLESSURE GRAVE.

À L'ATTENTION DES TECHNCIENS QUALIFIÉS VÉHICULES ÉLECTRIQUES

SE REPORTER AU MANUEL D'ENTRETIEN LORS DE TOUTE OPERATION DE MAINTENANCE OU DE REMPLACEMENT DE CETTE BATTERIE.

À L'ATTENTION DES TRANSPORTEURS ET DÉMANTELEURS

VEUILLEZ CONTACTER LE CENTRE DE SERVICES TESLA LOCAL POUR TOUTE OPÉRATION DE TRANSPORT OU DE DÉMANTELLEMENT DE CETTE BATTERIE.

INFORMATIONS CONCERNANT LE RECYCLAGE DES BATTERIES HAUTE TENSION

VEUILLEZ CONTACTER LE CENTRE DE SERVICES TESLA POUR TOUTE OPÉRATION DE RECYCLAGE OU D'ÉLIMINATION DE CETTE BATTERIE.

For Service and Recycling in US: 1-877-797TESLA (1-877-798-3752)

For Global Tesla Service Contact: <http://www.teslamotors.com/about/contact>



101071340-1A

- A**
aluminum, extruded 17
airbags 15
- B**
badging 1
battery
 12V 9
 fires 20
 fluid 20
 high voltage 4
body components 17
- C**
cabling, high voltage 6
charge controllers, high voltage 7
charge port 2
cut loop for first responders 10
- D**
dash lift caution 5
DC-DC converter 5
disconnect point for first responders 12
door, opening 22
drive inverter, high voltage 8
- F**
fires 20
fluids 20
- H**
high voltage components
 battery 4
 battery fires 20
 cabling 6
 charge controllers 7
 DC-DC converter 5
 drive inverter 8
 junction box, front 5
 junction box, rear 7
 labels 24
 overview of 3
hood, opening 23
- I**
identifying Model S
 badging 1
 charge port 2
 large screen 2
instrument panel 2
- J**
jacking Model S 21
junction box, front 5
junction box, rear 7
- K**
key, using 22
- L**
labels, high voltage 24
lifting Model S 21
lithium-ion cells 20
locking, using key 22
low voltage system 9
- P**
PARK gear 14
pre-tensioners, seat belt 16
- R**
reinforcements, location of 17
rescue operations
 firefighting 20
 floor pan 19
 submerged vehicles 19
- S**
seat belt pre-tensioners 16
second responders 20
side-resting vehicles 21
smoke 20
stabilization points (jacking) 21
stabilizing Model S 14
steel, high strength 17
submerged vehicles 19
- T**
touchscreen 2
toxic vapors 20
trunk, opening 23
- U**
unlocking, using key 22
- V**
vapors 20
- W**
wheels, chocking 14



3500 Deer Creek Road
Palo Alto, CA 94304

© 2013-2014 TESLA MOTORS, INC. All rights reserved.

All information in this document and all MODEL S[®] software is subject to copyright and other intellectual property rights of Tesla Motors, Inc. and its licensors. This material may not be modified, reproduced or copied, in whole or in part, without the prior written permission of Tesla Motors, Inc. and its licensors. Additional information is available upon request. TESLA MOTORS[®], TESLA ROADSTER[®], **T E S L A**[®], [®], [®], and MODEL S[®] are registered trademarks of Tesla Motors, Inc. in the United States. TESLA[™] is a trademark of Tesla Motors, Inc. in the United States and other countries. All other trademarks contained in this document are the property of their respective owners and their use herein does not imply sponsorship or endorsement of their products or services. The unauthorized use of any trademark displayed in this document or on the vehicle is strictly prohibited.