


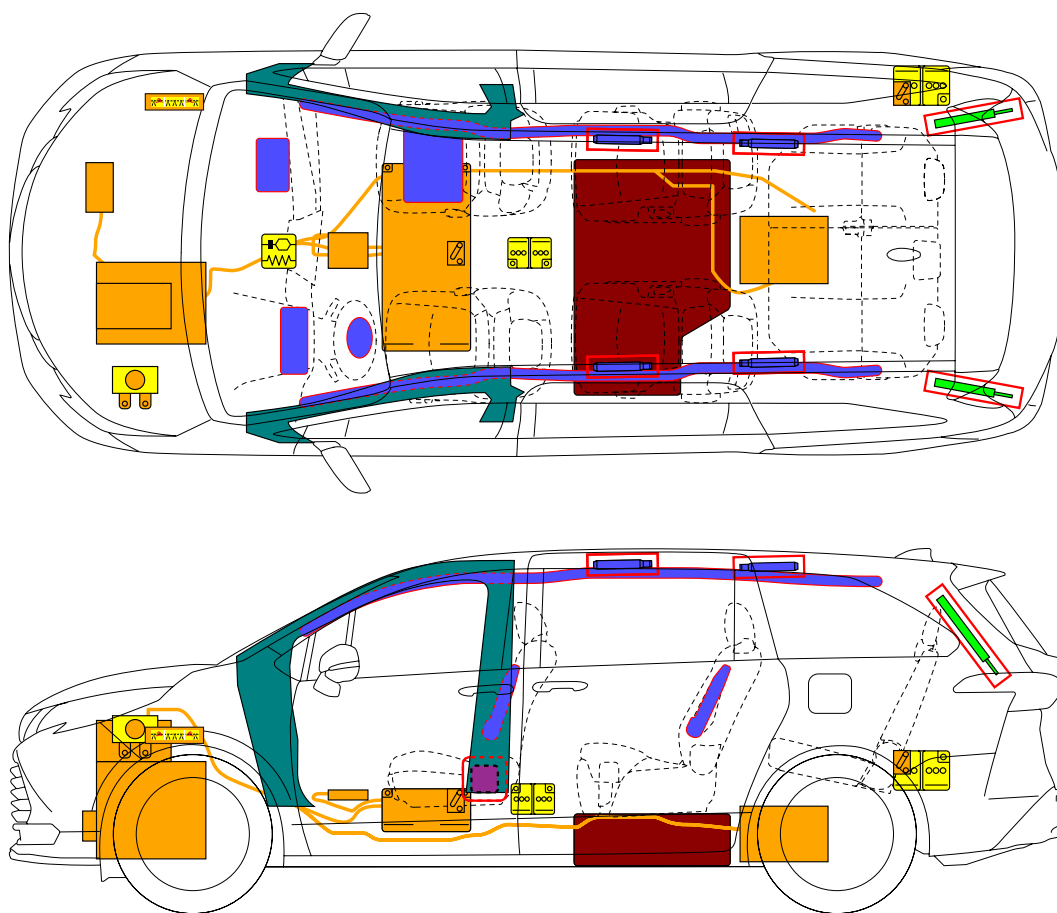

# TOYOTA SIENNA


MY: 2025



|          |                                      |             |                                      |              |                         |       |                                        |  |                                     |
|----------|--------------------------------------|-------------|--------------------------------------|--------------|-------------------------|-------|----------------------------------------|--|-------------------------------------|
|          | Airbag                               |             | Stored gas inflator                  |              | Seat belt pretensioner  |       | SRS control unit                       |  | Pedestrian protection active system |
|          | Automatic rollover protection system |             | Gas strut / Preloaded spring         |              | High strength zone      |       | Zone requiring special attention       |  |                                     |
|          | Battery low voltage                  |             | Ultra capacitor, low voltage         |              | Fuel tank               |       | Gas tank                               |  | Safety valve                        |
|          | High voltage battery pack            |             | High voltage power cable / component |              | High voltage disconnect |       | Fuse box disabling high voltage system |  | Ultra capacitor, high voltage       |
|          | Cable cut                            |             |                                      |              |                         |       |                                        |  |                                     |
| ID No.   |                                      | Version No. |                                      | Version date |                         | Page  |                                        |  |                                     |
| SIENNA40 |                                      | 03          |                                      | 10 / 2024    |                         | 1 / 4 |                                        |  |                                     |

## 1. Identification / Recognition

### ■ Location of vehicle badges

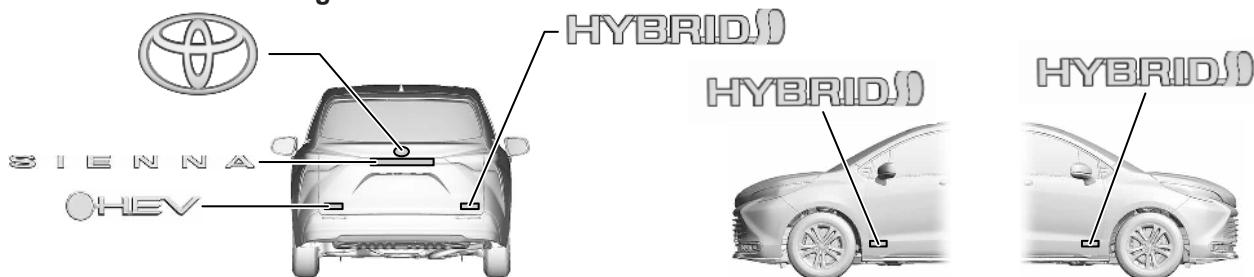


### ■ Energy source: Nickel metal hydride battery





## 2. Immobilisation / Stabilisation / Lifting

### ■ Completely immobilize the vehicle

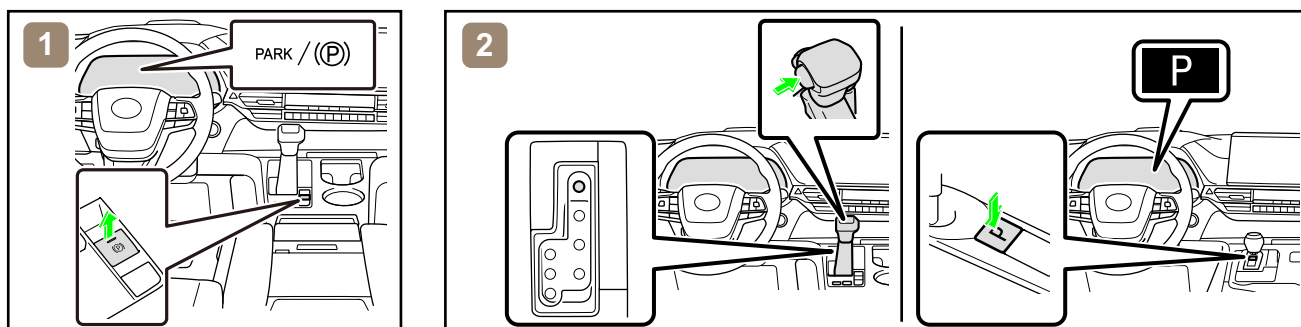

1. Chock the wheels and engage the parking brake.
2. Move the shift lever to the park (P) position.
2. Press the P position switch.

### ■ To stabilize the vehicle, place cribbing such as wooden blocks at the four points under the front and rear pillars.

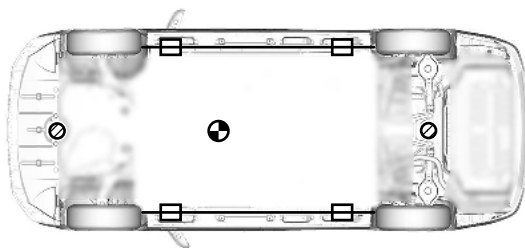

Jack Position



Support Position



Vehicle Center of Gravity



Do not place cribbing such as wooden blocks or rescue air lifting bags under the exhaust system, fuel system or high voltage power cables. Doing so may result in fuel leaks, fire, or electric shock.

## 3. Disable direct hazards / Safety regulations



Even if the engine is stopped, the vehicle may not be shut off. If the vehicle is not completely shut off, the engine may suddenly start or the vehicle may start to move.

### ■ If any of the following systems are required to be operated, operate them **BEFORE** disconnecting the battery.

Power door lock

Power window

Power back door

Moon roof

Power tilt and telescopic steering

Power seat

Electronic shift lever

Electric parking brake








When the 12 V battery is disconnected, electrical components cannot be operated.

| ID No.   | Version No. | Version date | Page  |
|----------|-------------|--------------|-------|
| SIENNA40 | 03          | 10 / 2024    | 2 / 4 |





■ Perform procedure 1 or 2 to completely shut off the vehicle.

<Procedure 1>

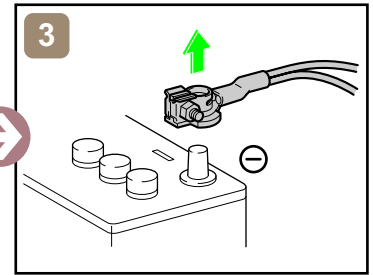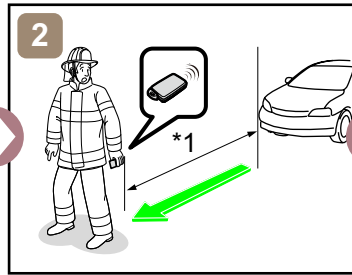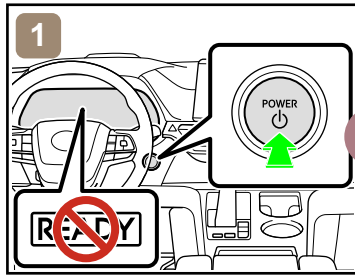





\*1: 5 m (16.4 ft) or more

<Procedure 2>

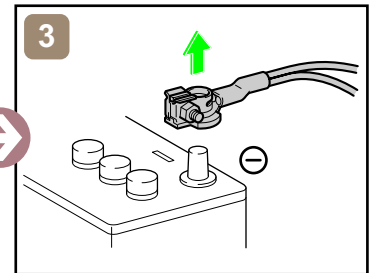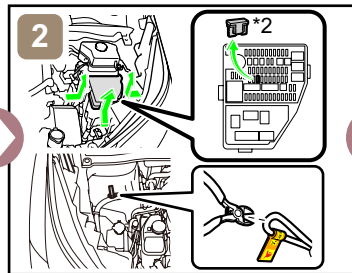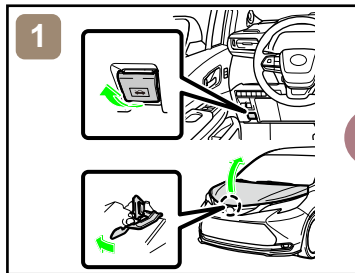



\*2: IGP-MAIN FUSE (30 A GREEN)

■ Access to 12V Battery

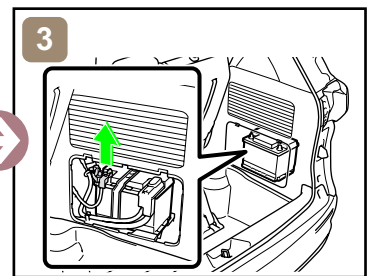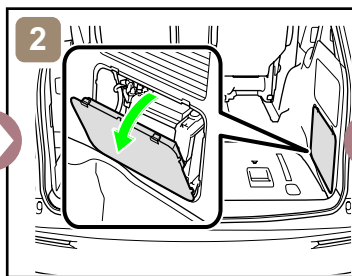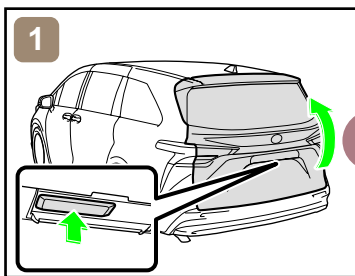

## 4. Access to the occupants

■ Window Glass

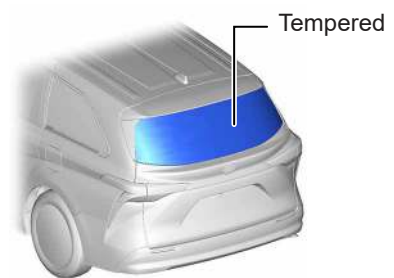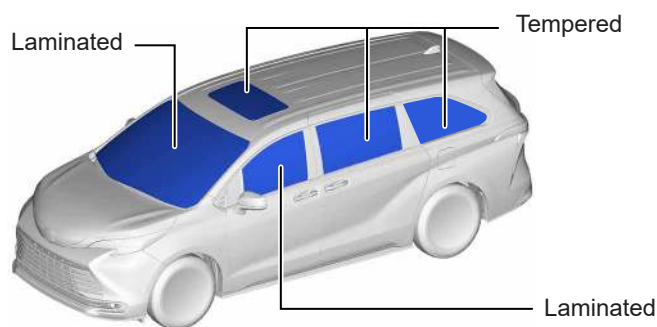

## 5. Stored energy / Liquids / Gases / Solids



High Voltage Ni-MH Battery



• 12 V Battery  
• 12 V Lithium-Ion Battery



Gasoline Tank: 68 L

| ID No.   | Version No. | Version date | Page  |
|----------|-------------|--------------|-------|
| SIENNA40 | 03          | 10 / 2024    | 3 / 4 |



- Always wear appropriate personal protective equipment (PPE) when dealing with any of these items.
- Never breach or remove the battery assembly cover under any circumstances, including fire. Doing so may result in serious injury or death from severe burns or electric shock.

## 6. In case of fire



**USE COPIOUS AMOUNTS OF WATER**

If it is difficult to apply copious amounts of water to the high voltage battery, it is recommended to allow the high voltage battery to burn itself out.



**RE-IGNITION POSSIBLE !**




## 7. In case of submersion



Do not touch any of the high-voltage components or cables, including the service plug, while the vehicle is submerged. Doing so may result in electric shock.  
Work on the vehicle only after the vehicle has been pulled out of the water.

## 8. Towing / Transportation / Storage



**RE-IGNITION POSSIBLE !**

Store the vehicle at a safe distance (15 m (49.2 ft) or more) from other vehicles.

## 9. Important additional information

For more details, please refer to "Emergency Response Guide."

<https://www.techinfo.toyota.com>

|  | ID No.   | Version No. | Version date | Page  |
|--|----------|-------------|--------------|-------|
|  | SIENNA40 | 03          | 10 / 2024    | 4 / 4 |