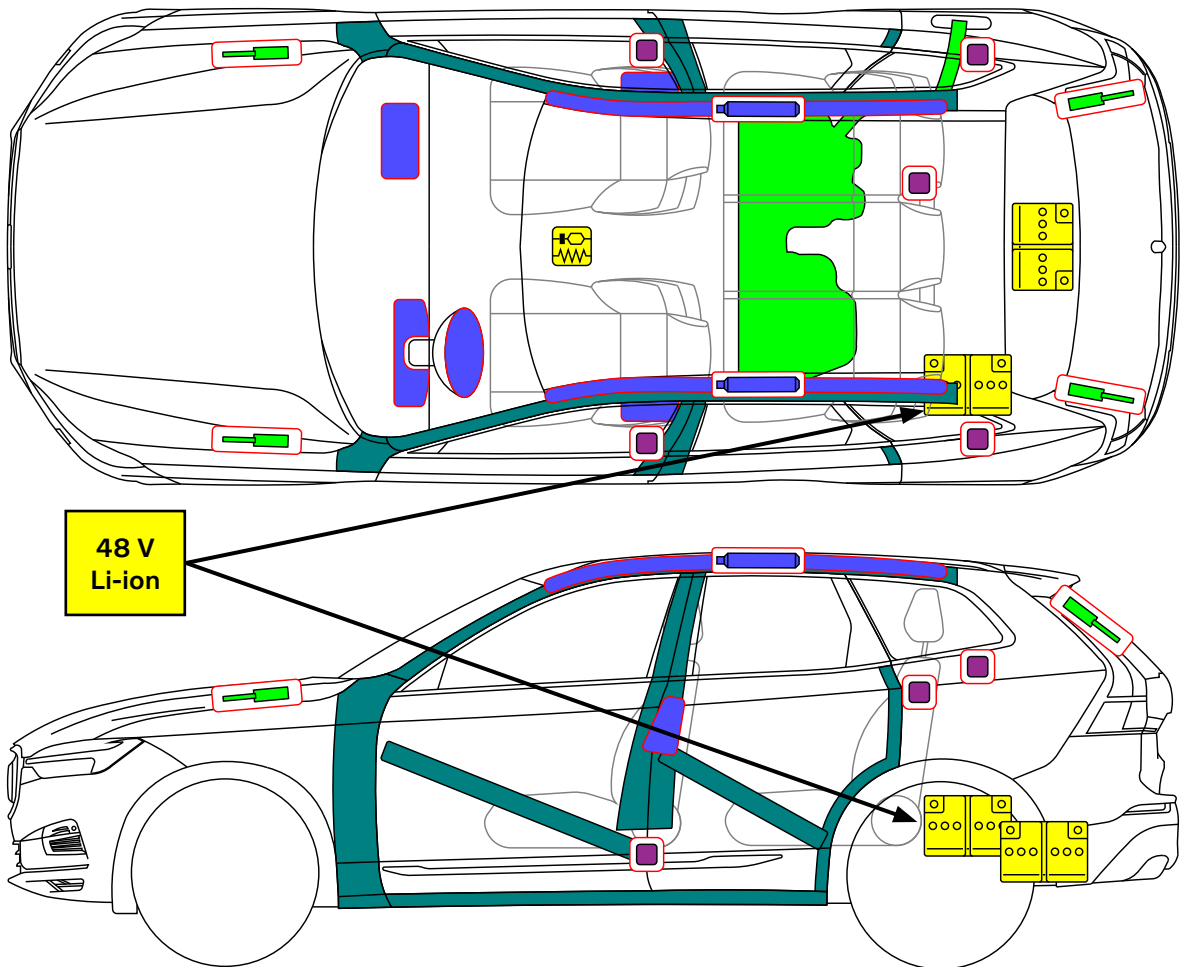




Airbag



Stored gas inflator



Seat belt pretensioner



SRS control unit



Gas strut / Preloaded spring



Battery low voltage



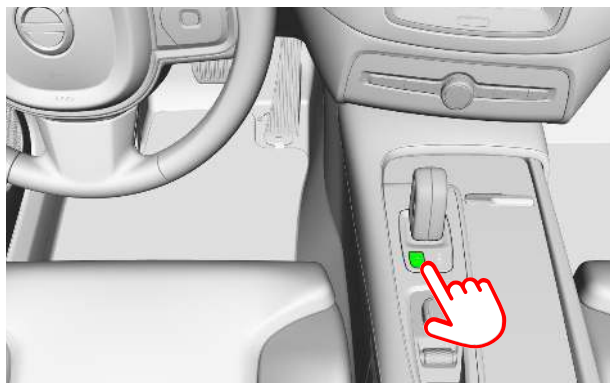
Fuel tank



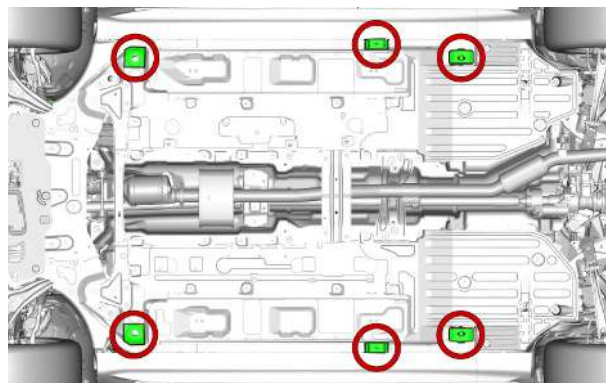
High strength zone

1. Identification / recognition**Brand name front****Model name rear****2. Immobilisation / stabilisation / lifting****Immobilise vehicle:**

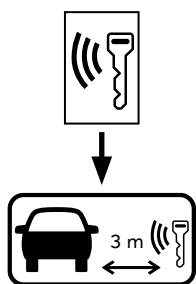
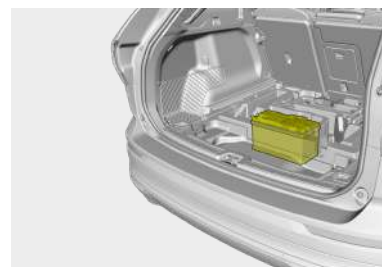

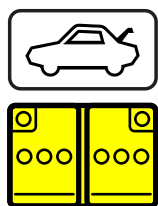
1. Block wheels and set parking brake
2. Push the P (park) button to select the P (park) position


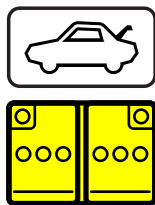
**Lifting points:**

Appropriate lifting points

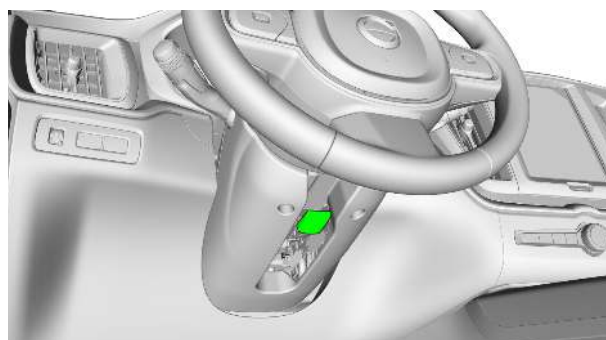
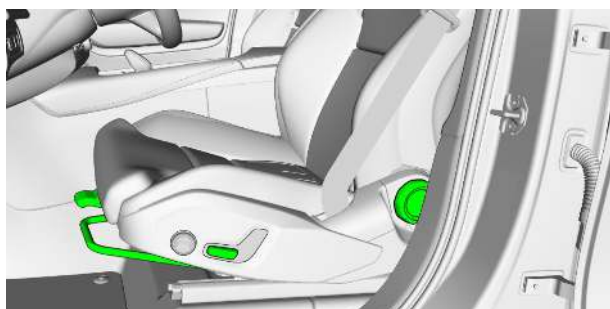
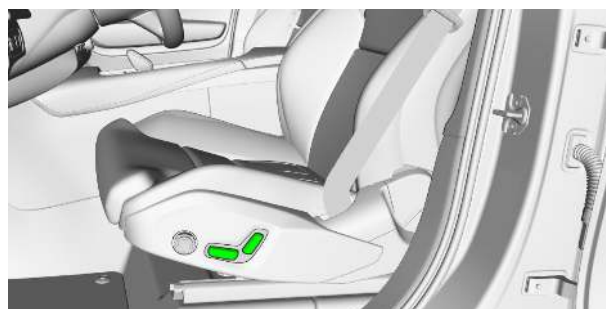
**3. Disable direct hazards / safety regulations**

Press the Start/Stop button to shut off the engine. Then, remove the electronic key and keep at least 10 ft. (3 m) away from the vehicle.

**Disconnect 12 Volt battery:**

Disconnect 48 Volt battery:**4. Access to the occupants****Glass types**

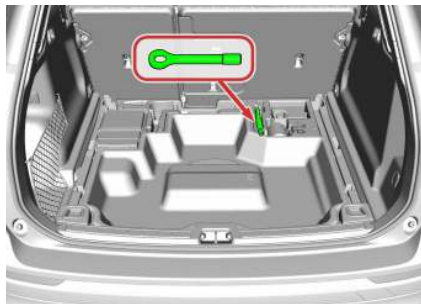
- A. Laminated glass
- B. Tempered glass
- C. Tempered glass with optional laminated glass

**Steering wheel, tilt control****Manual seat adjustment****Electrical seat adjustment****5. Stored energy / liquids / gases / solids**

	12V	
	48V Li-ion	
	R-134a 700 g / R-1234yf 600 g	
	71 L	
	71 L	

8. Towing / transportation / storage

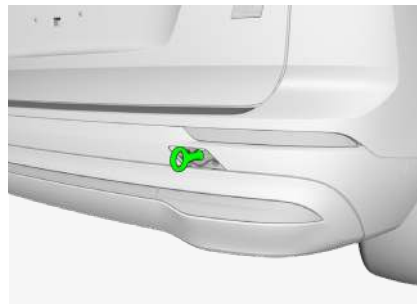
Recovery hook storage



Location front hook



Location rear hook



Towing

10. Explanation of pictograms used

	Remove smart key		Flammable
	Warning, Electricity		Hazardous to the human health
	General warning sign		Explosive
	Warning; low temperature		Corrosives
	Air-conditioning component		Boot
	Vehicle on fuel of liquid group 1		Vehicle on fuel of liquid group 2