







VOLVO TRUCKS

VNR ELECTRIC

PRODUCTION START : 2021

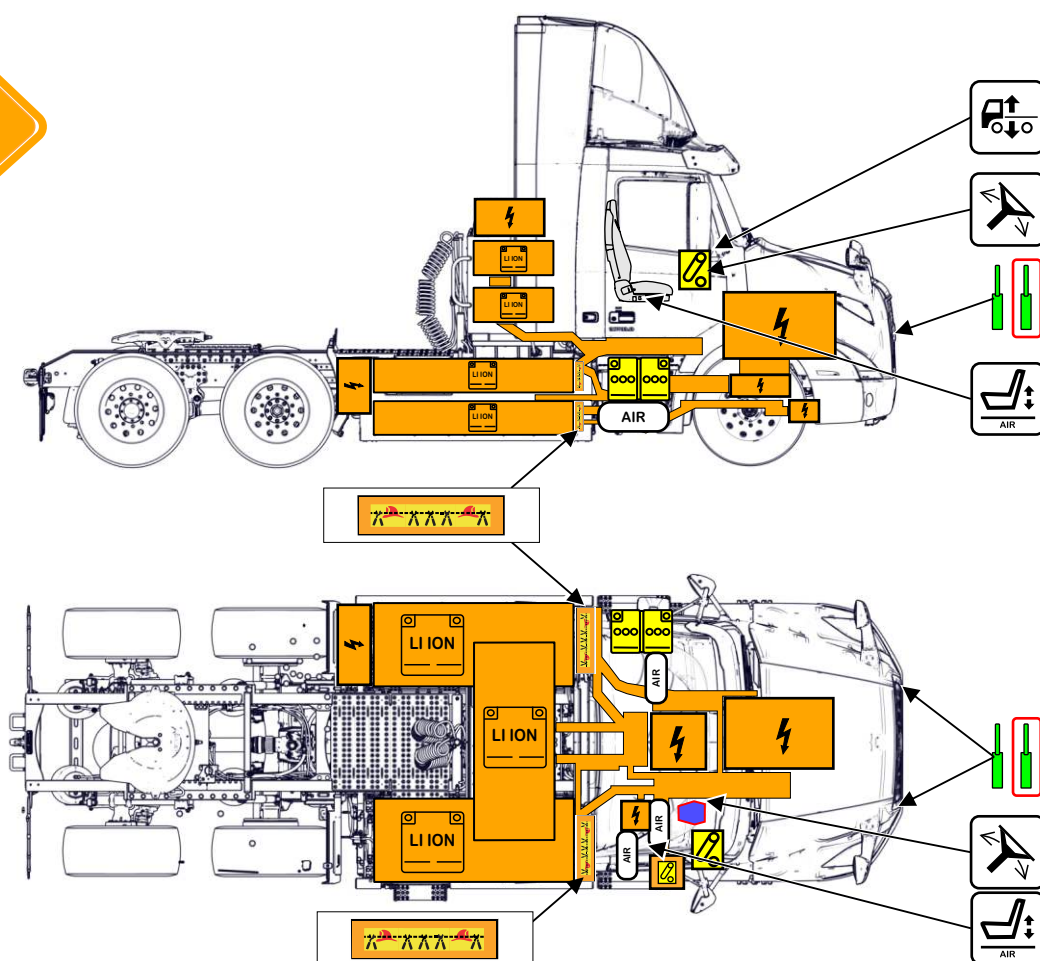

 High voltage lithium-ion battery	 Low voltage device that disconnects the high voltage	 Low voltage battery	 Air tank	 Seat adjustment	 Height control	 Cable to cut that disconnect high voltage components
 Steering wheel tilt control	 High voltage component	 High voltage cable	 Gas strut, pre-loaded spring	 Ignition key	 Airbag	

NOTE

- (a) The above image shows information for one variant of this product. Number of axles, cab structure and number of traction batteries can vary depend on the variant of the product.
- (b) These instructions do not cover the safety aspects of the components and equipments mounted by a third party (example: body builders).



	Identification number	Version number	Page number
	800077265	10/2025	1/3






VOLVO TRUCKS

VNR ELECTRIC

PRODUCTION START : 2021

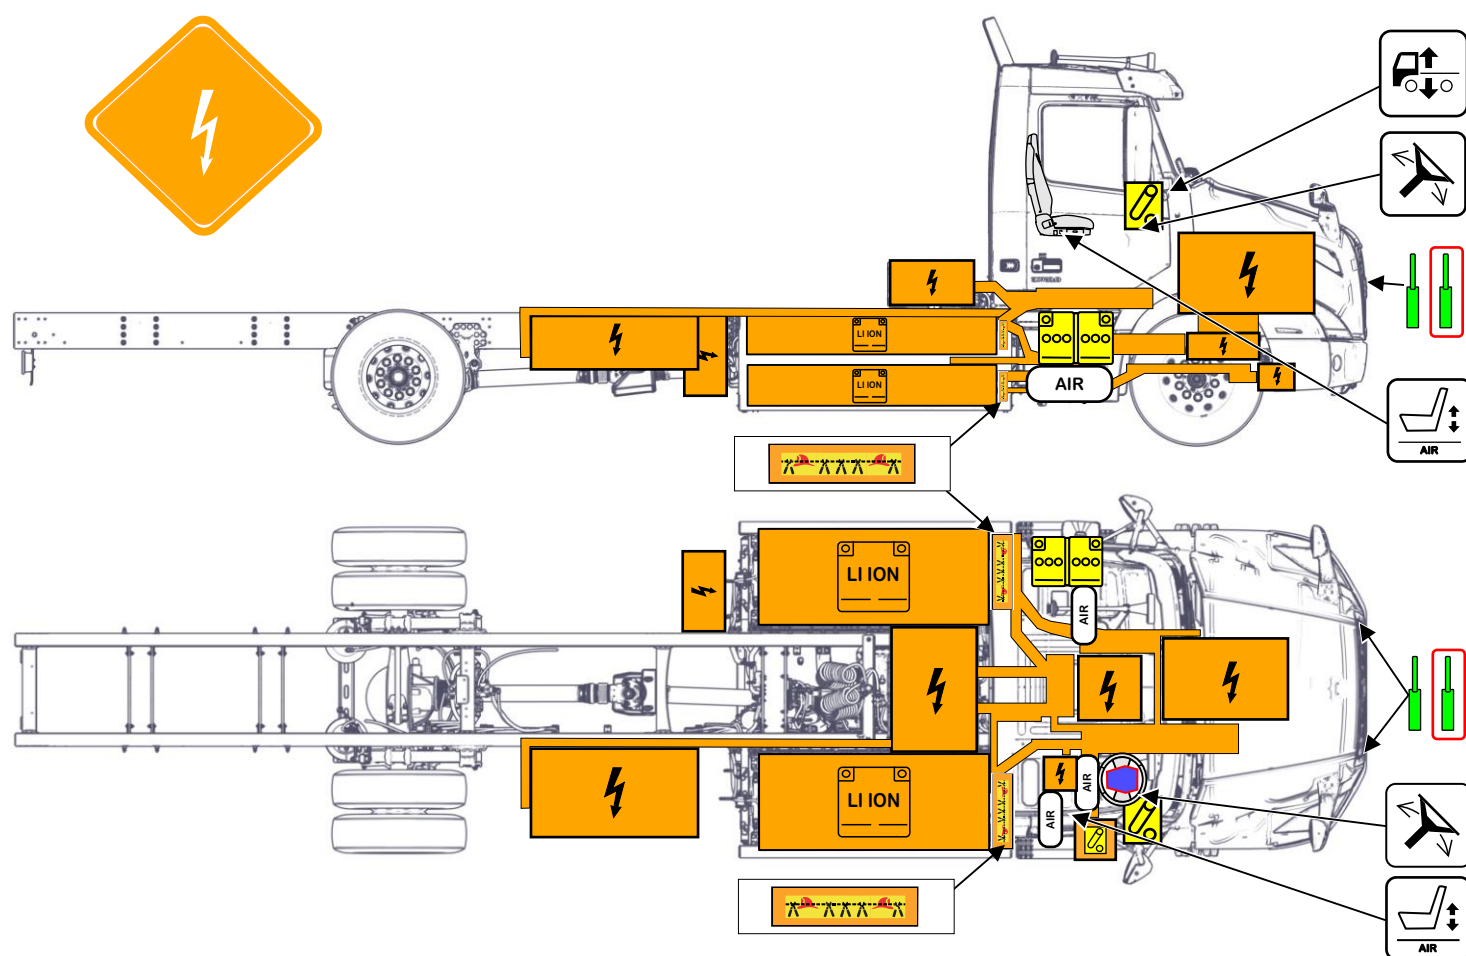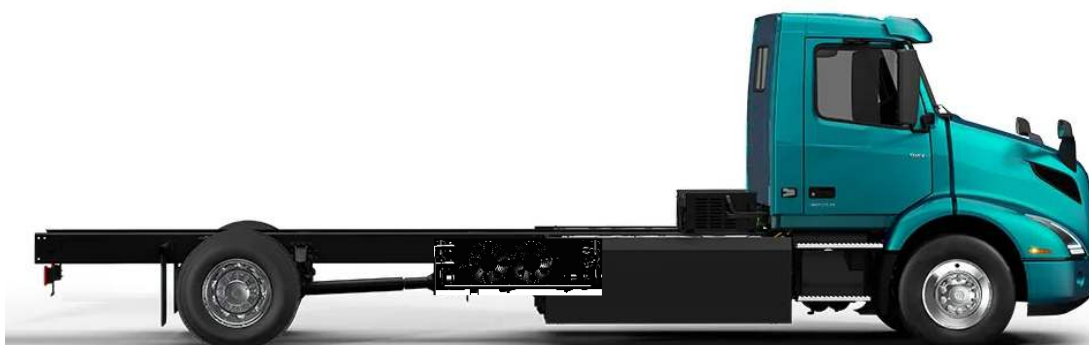

 High voltage lithium-ion battery	 Low voltage device that disconnects the high voltage	 Low voltage battery	 Air tank	 Seat adjustment	 Height control	 Cable to cut that disconnect high voltage components
 Steering wheel tilt control	 High voltage component	 High voltage cable	 Gas strut, pre-loaded spring	 Ignition key	 Airbag	

NOTE

- (a) The above image shows information for one variant of this product. Number of axles, cab structure and number of traction batteries can vary depend on the variant of the product.
- (b) These instructions do not cover the safety aspects of the components and equipments mounted by a third party (example: body builders).

	Identification number	Version number	Page number
	800077265	10/2025	2/3

1. Identification/recognition




Full-electric vehicle

2. Immobilisation/stabilization/lifting



Always approach the vehicle from the sides to stay out of the potential travel path. Due to lack of noise it may be difficult to determine the state of vehicle.

3. Disable direct hazards/safety regulations


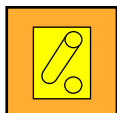


Shut down the high voltage.



Cut the communication loop at any of the two location to shut down the high voltage

5. Stored energy/liquid/gases/solid

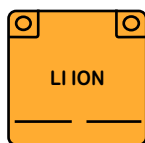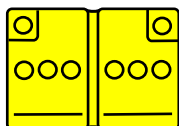

6. In case of fire



7. In case of water submersion



The damage level of a submerged vehicle may not be visible. Handling a submerged truck without appropriate Personal-Protective Equipment (PPE) may result in serious injury or death due to electric shock.

If possible, disable direct hazards (Refer to “3. Disable direct hazards/safety regulations”).

8. Towing/transportation/storage



Disconnect the propeller shaft before towing.

Monitor the battery temperature.