



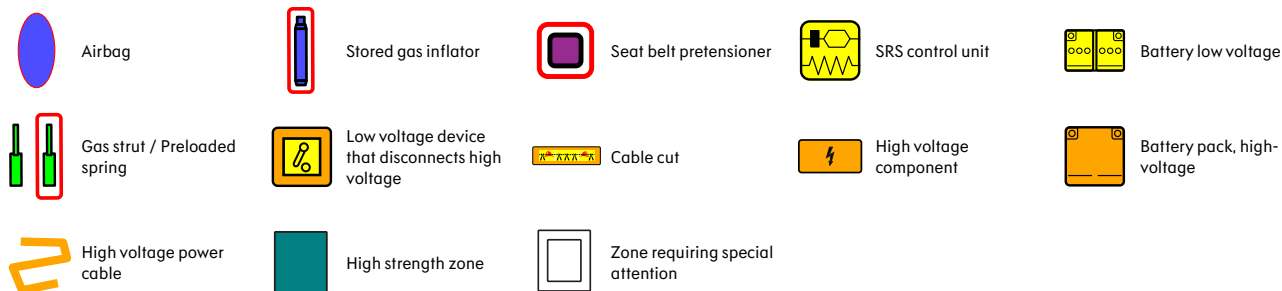

ZEEKR

Zeekr RT
Type: 5dr MPV
(2025 -)

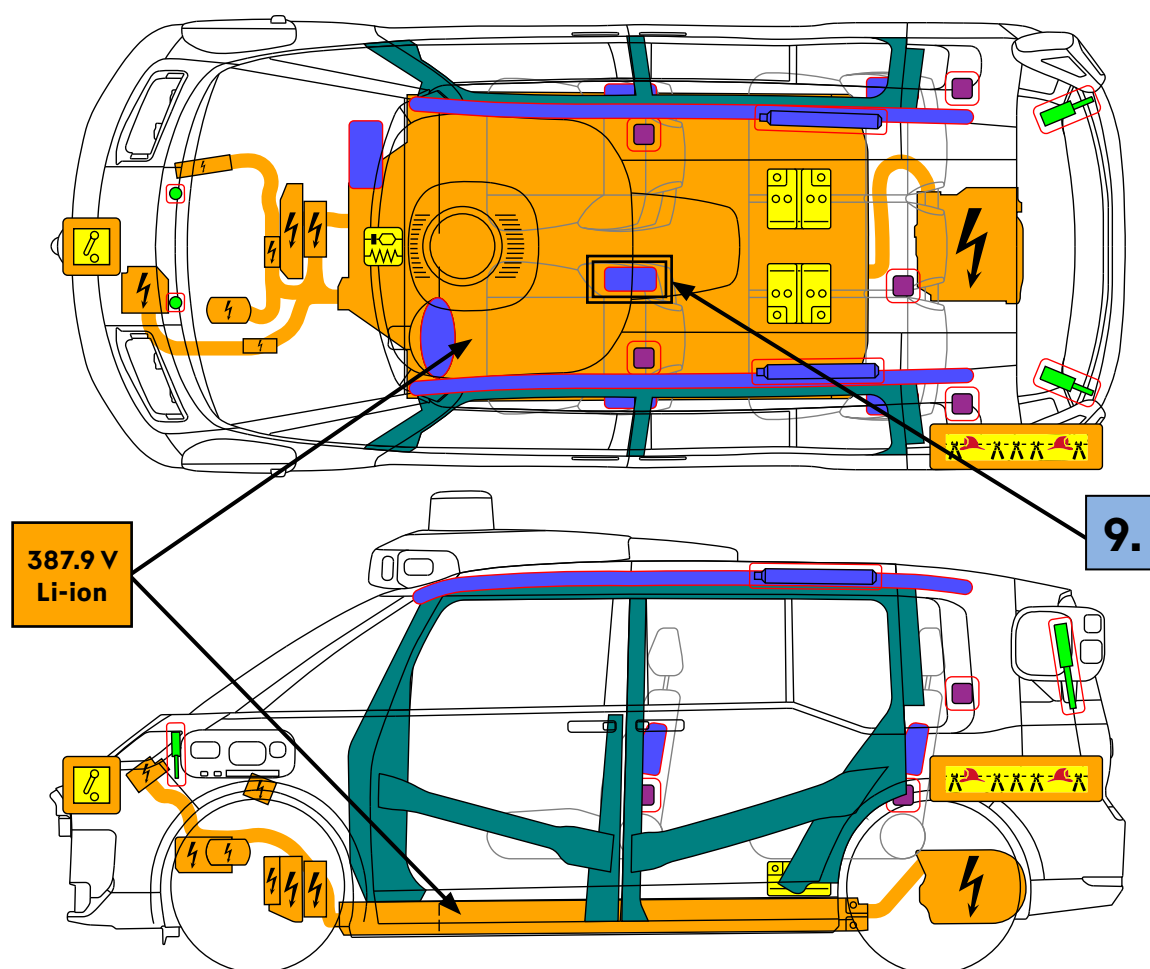

Internal reference

Version

Creation date

Page

Zeekr_RT_MPV_2025_5d_Electric_EN

01

12/2024

1 / 5



ZEEKR

Zeekr RT
Type: 5dr MPV
(2025 -)



1. Identification / recognition




LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS SHUT DOWN. WEAR APPROPRIATE PPE.


Brand name front



AD Sensors

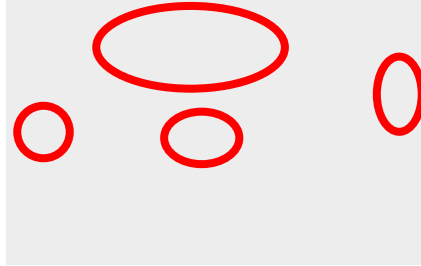

Charge port

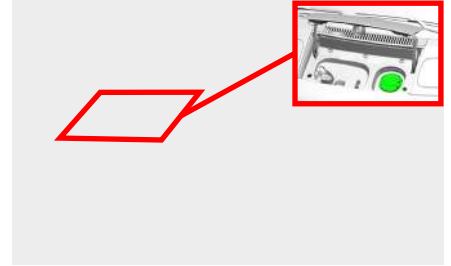

2. Immobilisation / stabilisation / lifting


Immobilise vehicle:

1. Block wheels and set parking brake
2. Push the P (park) button to select the P (park) position



Lifting points:

-  Appropriate lifting points
-  High voltage battery



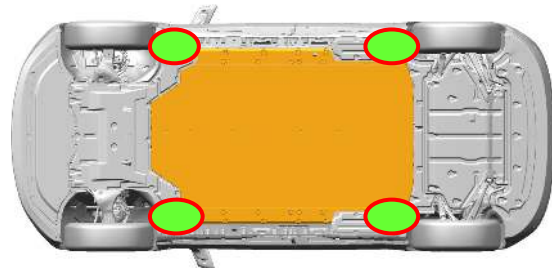


3. Disable direct hazards / safety regulations





Main method:

The propulsion system is disabled when the 'Safety mode See Manual' indicator in the instrument cluster is illuminated.

Alternative method 1:

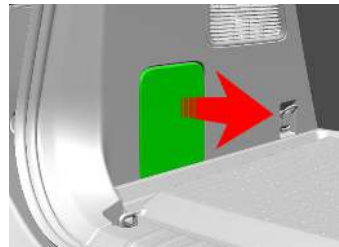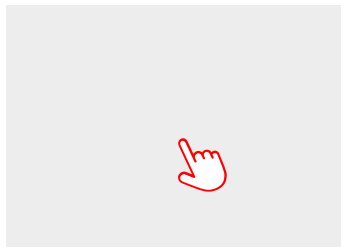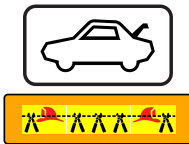

Alternative method 2:

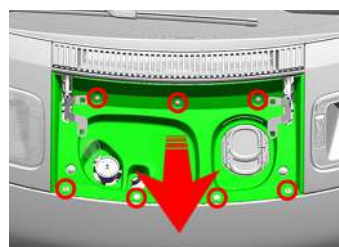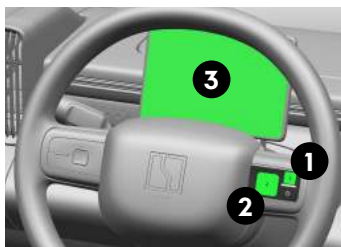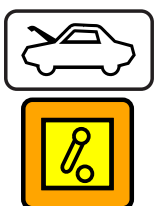

Internal reference

Version

Creation date

Page

Zeekr_RT_MPV_2025_5d_Electric_EN

01

12/2024

2 / 5







ZEKR

Zeekr RT
Type: 5dr MPV
(2025 -)



Disconnect 12 Volt batteries

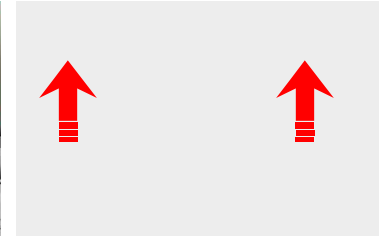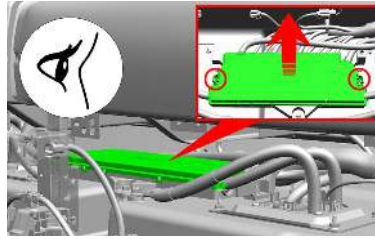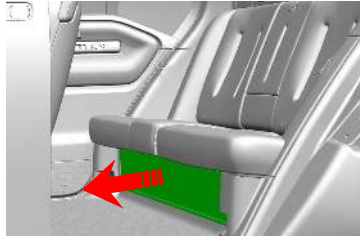


Safety instructions


Always assume the vehicle is powered, even if it is silent!

Make sure that the vehicle is immobilized and the propulsion system is deactivated; Never touch, cut, or open any orange high voltage power cable or high voltage component; In case of a collision with seat belt pretensioner activation / airbag deployment, the high voltage system will be disabled automatically. The restraint systems are still active. Wear appropriate PPE.

4. Access to the occupants

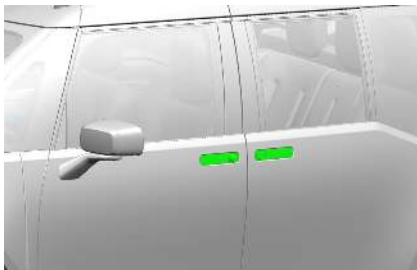


Opening side doors from outside with power

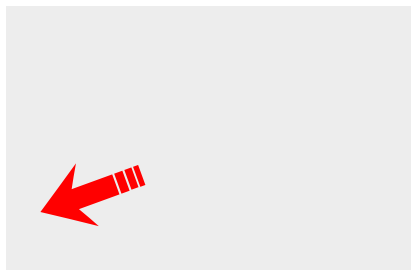


Opening the hood without power


If no- or low battery voltage it is not possible to open the hood. To resolve this, the vehicle must be jumpstarted.

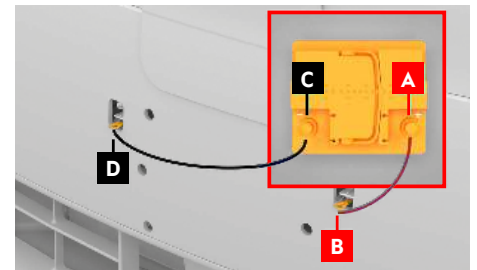

Opening side doors from inside with power

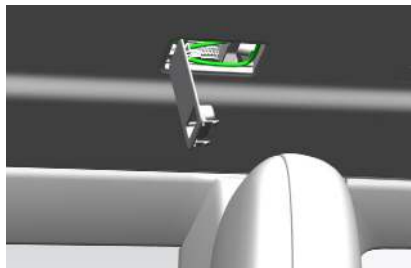


Opening side doors from inside without power

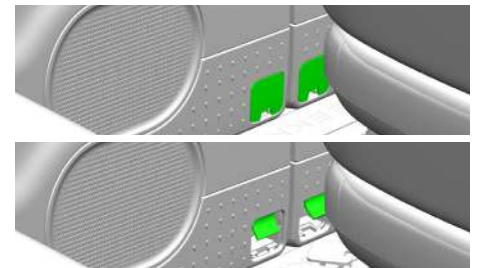

Seat adjustment




High strength zone



Glass types

A. Laminated glass

B. Tempered glass

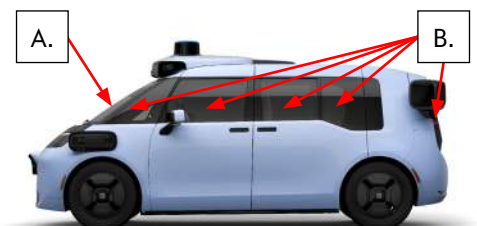

Internal reference

Version

Creation date

Page

Zeekr_RT_MPV_2025_5d_Electric_EN

01

12/2024

3 / 5




ZEEKR

Zeekr RT
Type: 5dr MPV
(2025 -)



5. Stored energy / liquids / gases / solids

 Li-ion	387.9 V	     
 2x 12V (Li-ion)		    
 R-1234yf 825 g		   



When conventional coolant leaks (check reservoir) from the high voltage (HV) battery cooling system, HV-battery can become unstable with risk of thermal runaway. An increasing HV-battery temperature might be an indicator of thermal runaway. Wear appropriate PPE.



6. In case of fire

Extinguishing method for the high voltage (HV) battery:



LARGE AMOUNTS OF PURE WATER



POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE! WEAR APPROPRIATE PPE.




7. In case of submersion


- There is no increased risk of electric shock in water resulting from the high voltage system
- If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3)

8. Towing / transportation / storage

Location front hook

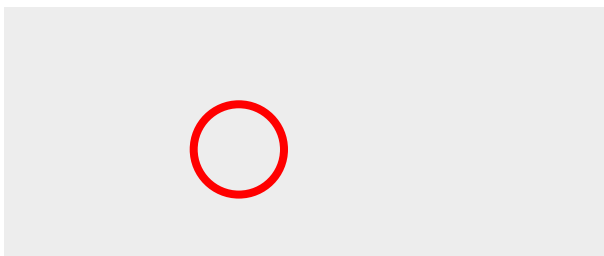

Location rear hook

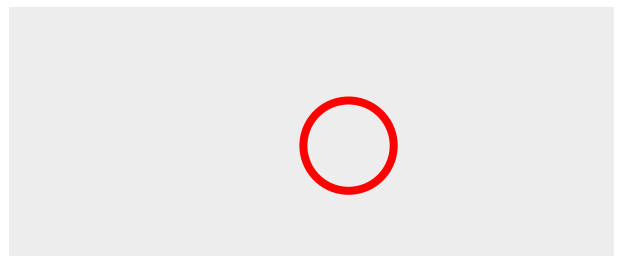

Towing

STORE VEHICLE IN AN OPEN-AIR PARKING AT A SAFE DISTANCE $\geq 5\text{M}$ FROM OTHER OBJECTS OR VEHICLES!



POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE! WEAR APPROPRIATE PPE.



Internal reference

Version

Creation date

Page

Zeekr_RT_MPV_2025_5d_Electric_EN

01

12/2024

4 / 5





ZEEKR

Zeekr RT
Type: 5dr MPV
(2025 -)



9. Important additional information

Centre airbag

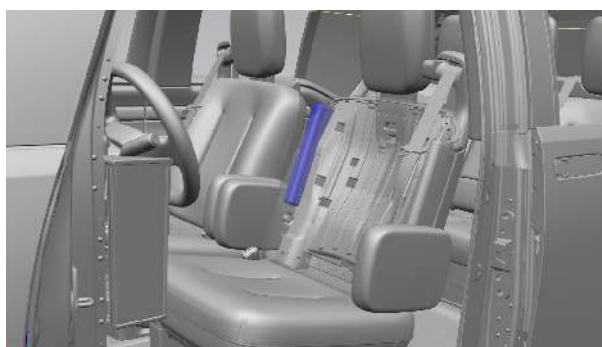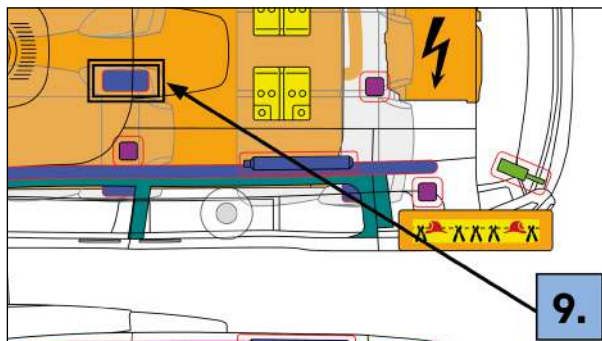

10. Explanation of pictograms used

	Electric Vehicle		Flammable
	Warning, Electricity		Hazardous to the human health
	General warning sign		Acute toxicity
	Warning; low temperature		Corrosives
	Air-conditioning component		Explosive
	Use water to extinguish the fire		Hood
	Use thermal Infrared camera		Rear Hatch