


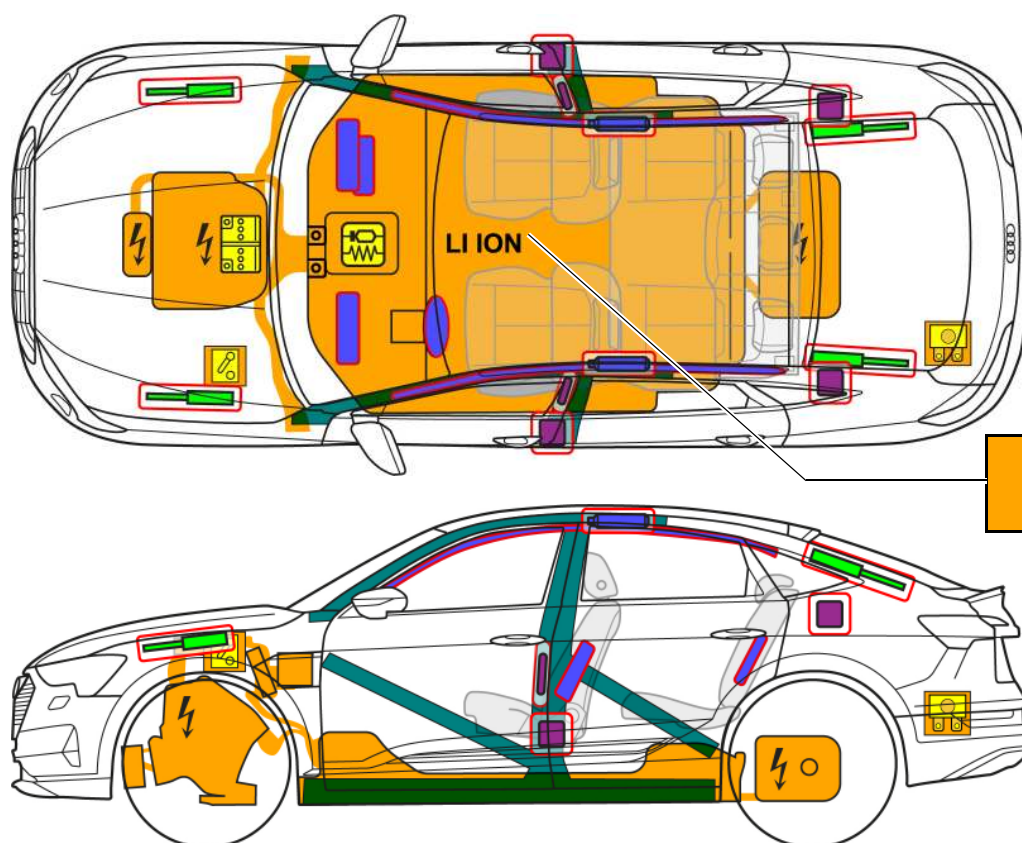

400 V
LI ION

Note: The illustration shows the maximum possible range of equipment.

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic roll-over protection system		Gas strut / preloaded spring		High-strength zones		Special attention		
	Battery, low-voltage		Ultra-capacitor, low-voltage		Fuel tank		Gas tank		Safety valve
	Battery, high-voltage		Power cable, high-voltage		Separator, high-voltage		Fuse box, disabling high-voltage system		Ultra-capacitor, high-voltage
	High-voltage separator to low voltage		Fuse box, disabling high-voltage to low voltage		High-voltage component				



1. Identification / recognition



The electric motor is silent. The display on the left of the instrument cluster (power meter) indicates whether the electric drive is switched “OFF” or “READY” for operation.

Charging port



Logo

e-tron



Engine compartment (orange cable)



e-tron Sportback



e-tron


2. Immobilisation / stabilisation / lifting

Immobilise the vehicle

Press the Park button “P” and apply the parking brake



Lifting points

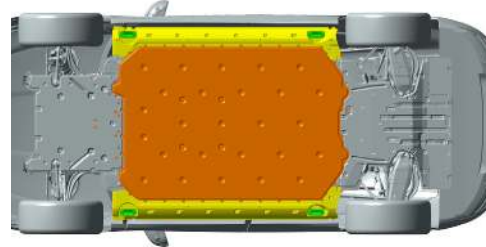


Suitable lifting points

High-voltage battery

Switch ignition off (power meter display “Off”)

Press the START-STOP button without depressing the brake pedal





A key card or a smartphone app can also be used instead of a remote control key.

3. Disable direct hazards / safety regulations

Deactivate the high voltage system




Option 1: (Separation point in engine compartment)

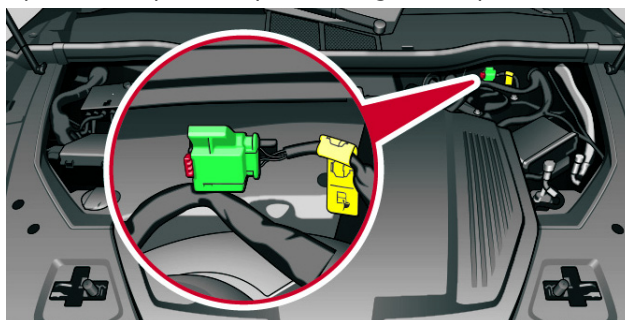

① Pull out red tab

② Pull out black connector







Option 2: (Fuse in boot)

Raise underbody

Remove flap

Pull out fuse

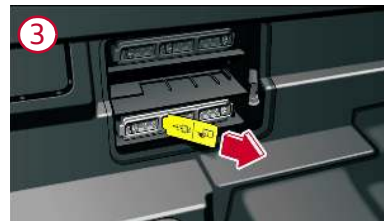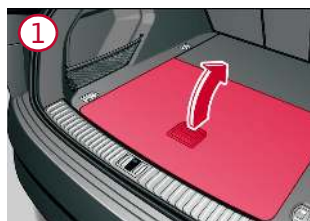

Do not touch, cut or open high voltage components or the high-voltage battery.
Wear suitable safety equipment.

In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated.
The high-voltage system is de-energised approx. 20 seconds after deactivation.

Disconnect the 12-volt battery

The 12-volt battery is located at the front end of the vehicle under the plenum chamber cover.



The black battery earth cable is bolted to the body either at the front plenum chamber wall (1) or at the suspension strut (2).

The earth connection (negative terminal) of the battery can be separated from the body contact point here.


Separate from charging station (emergency release)




Remove the cover

Pull the yellow loop

Disconnect the charging connector

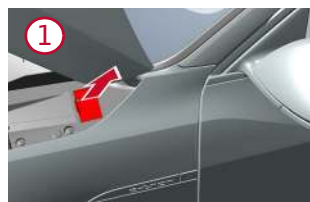

4. Access to the occupants

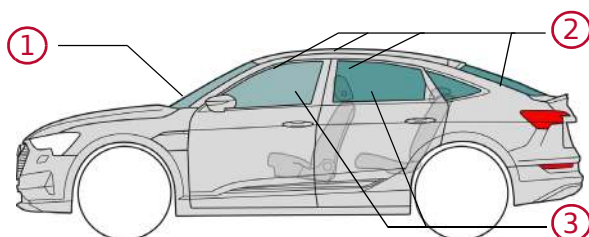

Glass types:

- ① Composite safety glass
- ② Single-layer safety glass
- ③ Side windows, optional Composite safety glass

5. Stored energy / liquids / gases / solids



400 V



12 V




There is a risk of a thermal reaction in the high-voltage battery if coolant escapes from the battery cooling system.
Monitor the temperature of the high-voltage battery.



6. In case of fire



Lithium-ion batteries can self-ignite spontaneously or after a delay in the event of damage or incorrect use, and can re-ignite after a fire has been suppressed.
Wear suitable safety equipment.




7. In case of submersion

After recovering the vehicle from the water, deactivate the high-voltage system (see Section 3) and allow the water to drain off. Wear suitable safety equipment.

8. Towing / transportation / storage



Lithium-ion batteries can self-ignite, or re-ignite after a fire has been extinguished.



If the vehicle has been involved in an accident or if the HV battery is damaged or suspicious:
Deactivate the high-voltage system (see Section 3). Park the vehicle at a safe distance from buildings and other vehicles (quarantine area).



Do not tow a vehicle that has been involved in an accident on its drive axles.



9. Important additional information

10. Explanation of pictograms used



Flammable



Explosive



Caustic, skin irritant



Hazardous to human health



Environmental hazard



Electric vehicle



Warning High voltage



Caution, danger



Use lots of water to extinguish the fire.

LI ION


Lithium-ion battery




Dangerous voltage



Release the bonnet



Unlock luggage compartment



Use thermal infrared camera



Remove smart key