

AUTOCAR E-ACTT™ RESCUE SHEET (FIRST RESPONDERS)

Parsed from: First Responders Manual AWE 00424

1. Identification / Recognition

- BEV (battery electric vehicle); lack of noise does not indicate vehicle is OFF.
- Look for high-voltage warning labels and orange HV cables.

2. Immobilize / Stabilize

- Chock/Block wheels.
- Set air brake.
- Place vehicle into NEUTRAL

3. Disable Direct Hazards (Primary)

- Turn ignition key OFF (if accessible) and remove key.
- If equipped, switch LV battery switch to OFF and lockout.
- Remove top of 12V/24V LV battery box. Locate 24V circuit breaker and press red button.
- If 12V/24V battery switch is not equipped, remove 12V/24V lid and cut the six 12V/24V cables on each side of fuses.
- Remove two MSDs on BMS. Access between cab and decking. Cab does NOT need to be raised for access.
- Wait at least 15 minutes for HV capacitors to discharge.
- Shutdown disables HV output of the BMS (Battery Management System.) High voltage exists in the HV batteries and cables to the S-box

4. Fire / Off-Gassing


- Wear full PPE, CLASS 0 HV gloves and Self Contained Breathing Apparatus; establish a secure perimeter.
- Use large, sustained amounts of water to cool Li-ion batteries
- Do NOT penetrate HV battery/casing to apply water.
- Watch for delayed re-ignition until battery energy is depleted.

5. Water Submersion

- Treat submerged vehicle/water around it as energized.
- Do not contact without proper HV PPE; avoid orange cables/components.
- Water intrusion can damage electrical components even if not obvious.

6. Towing / Transportation / Storage

- Preferred tow method is to tow with rear wheels lifted.
- Emergency extraction acceptable less 3 mph for 98 ft max.
- If towed with wheel on ground, driveshaft must be removed.
- Damaged vehicles: isolate outdoors, 50 ft (15m) from structures/combustibles.

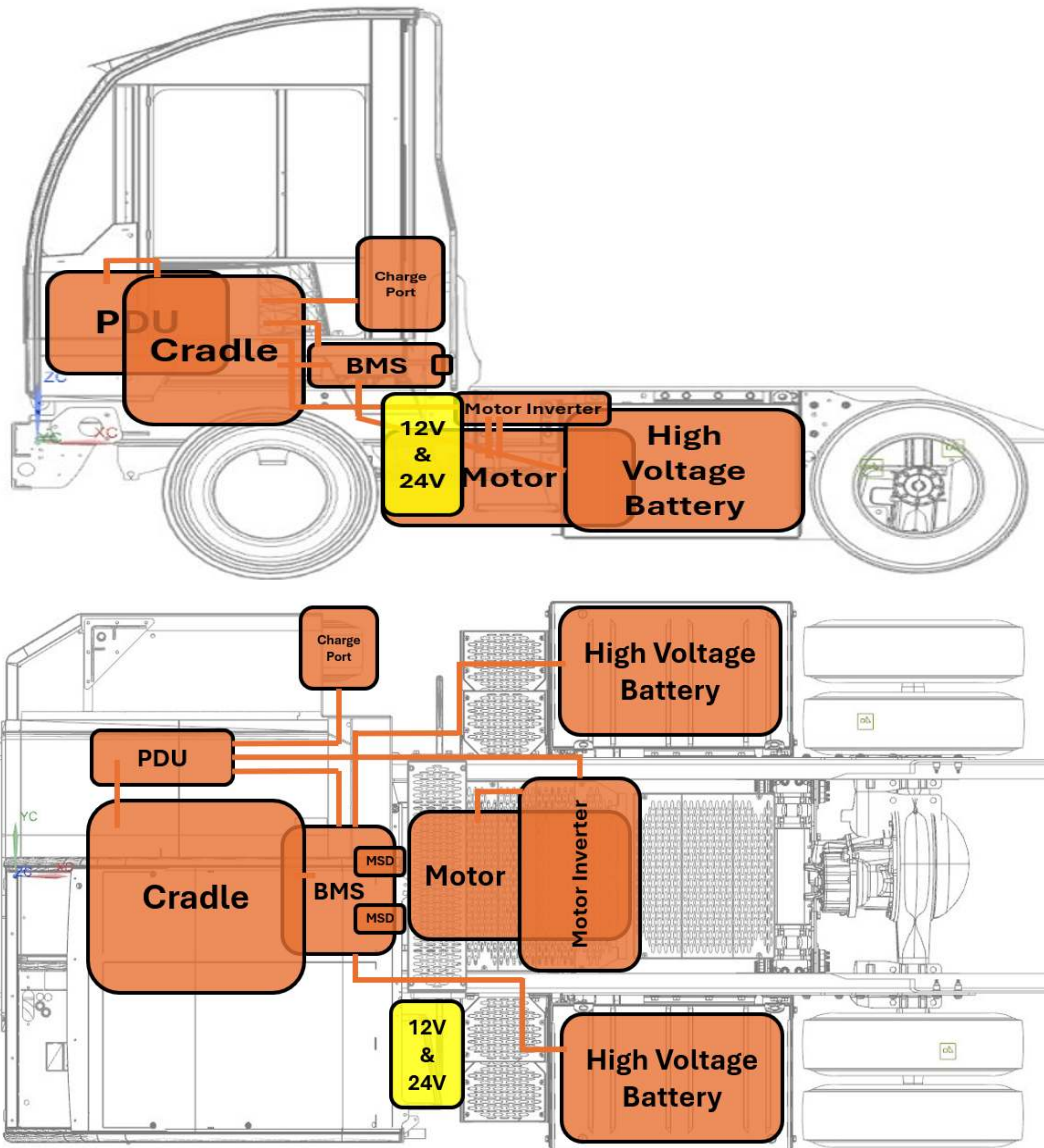

Key identification / component locations

- EV identification: "E-ACTT" model; no fuel tank; no exhaust; unique high-voltage warning labels; VIN has an "N" in the 7th position; large rectangular HV battery boxes on LH and RH sides behind cab.

- High voltage (HV) cabling is **orange**; never cut, breach, or touch HV components/cables.

- HV component overview: LH & RH battery packs; SBOX; MSD plugs; traction motor and motor inverter (see diagrams).

Low-voltage (LV) shutdown: ignition OFF and remove key; if equipped turn LV cutoff OFF. Access LV batteries/circuit breaker—press red button on 24V breaker; alternate: cut three 12V cables if terminals inaccessible.

- HV shutdown caution: wait at least **15 minutes** for capacitor discharge; shutdown disables downstream HV components—**HV batteries remain energized.**

This rescue sheet is a quick-reference aid. Follow local procedures and the Autocar E-ACTT First Responders Manual for full details.