


AUTOCAR E-ACX™ RESCUE SHEET (FIRST RESPONDERS)

Parsed from: First Responders Manual AWE 00464

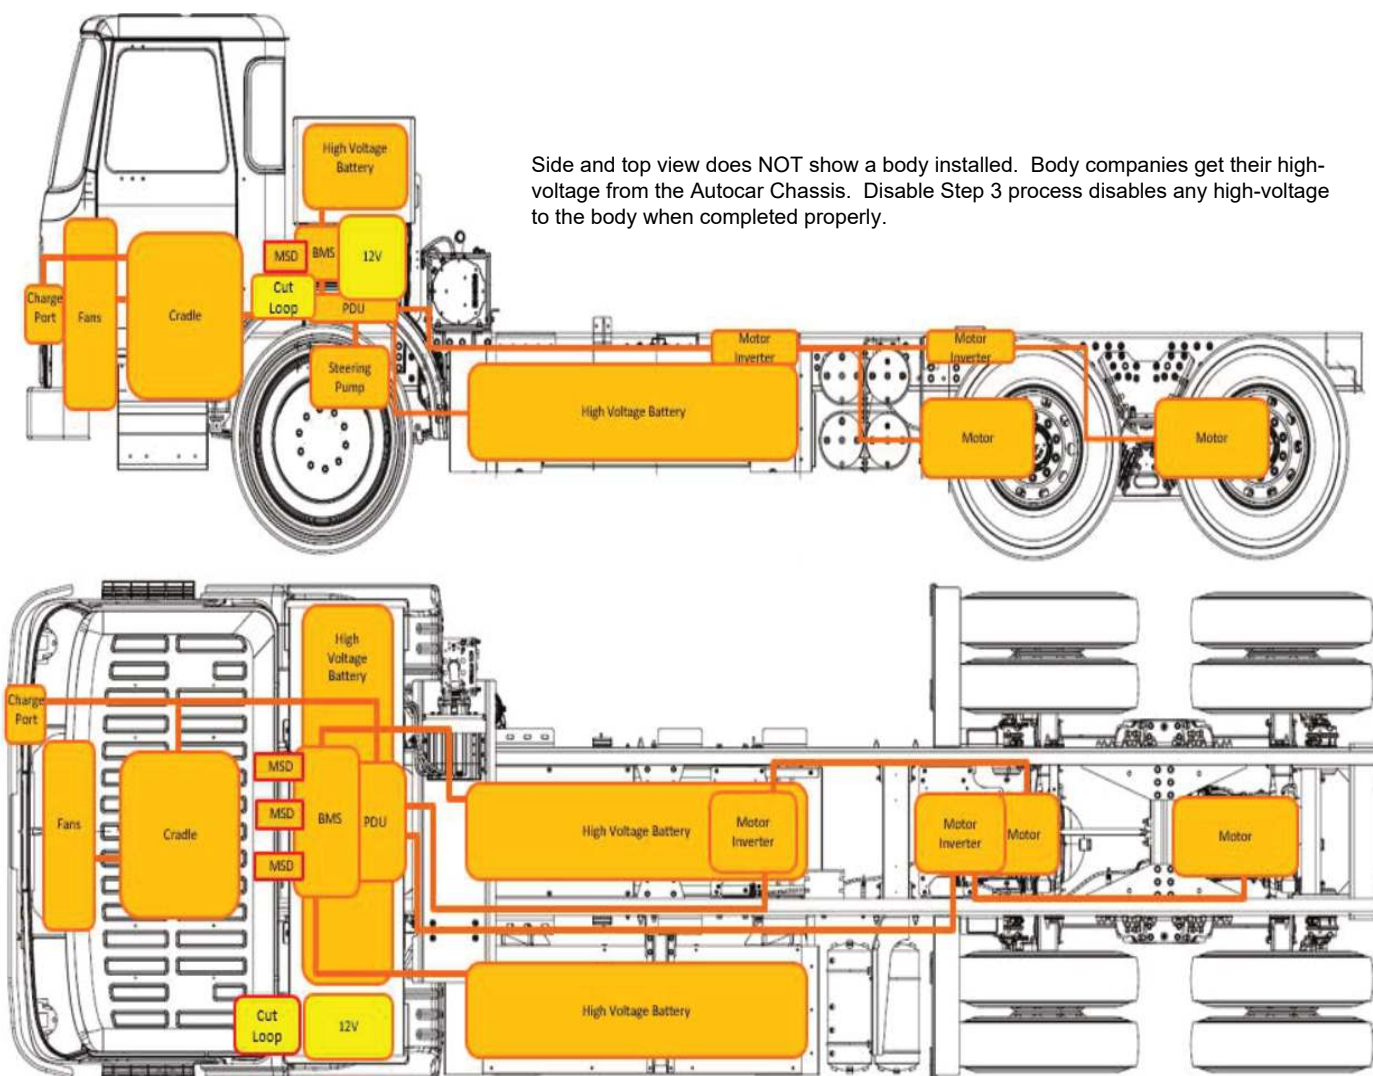

High-voltage components/cables highlighted in orange (diagram from First Responder Manual Figure 6).

Key identification / component locations

- EV identification: "E-ACX" model; no fuel tank; no exhaust; unique high-voltage warning labels; VIN has an "N" in the 7th position; large rectangular HV battery boxes.
- High voltage (HV) cabling is orange; never cut, breach, or touch HV components/cables.
- Example HV battery locations: left frame rail behind front wheel; directly behind cab on back-of-cab upright; between frame rails mid-vehicle (varies by configuration).
- First Responder Cut Loop: back of cab, left side of truck.
- S-Box / BMS and three Maintenance Service Disconnects (MSDs): under cab (tilt cab to access).
- 12V service disconnect switch: roadside behind cab (service/emergency disconnect).

This rescue sheet is a quick-reference aid. Follow local procedures and the Autocar EACX First Responders Manual for full details.

1. Identification / Recognition

- BEV (battery electric vehicle); lack of noise does not mean vehicle is OFF.
- Look for high-voltage warning labels and orange HV cables.

2. Immobilize / Stabilize

- Chock wheels.
- Set parking brake.
- Place vehicle into NEUTRAL.

3. Disable Direct Hazards (Primary)

- 1) Turn ignition key OFF (if accessible) and remove key.
- 2) Disconnect 12V battery ring terminals or Cut First Responder Cut Loop at back of cab (cut leads in 2 places)
- 3) Remove three MSDs on BMS under cab (tilt cab).
- 4) Wait at least 15 minutes for HV capacitors to discharge
- 5) Shutdown disables HV output of BMS (Battery Management System) High voltage exists in the HV batteries and cables to the S-Box

4. Fire / Off Gassing

- Wear full PPE and SCBA. Establish a secure perimeter.
- Use large, sustained amounts of water to cool Li-ion batteries.
- Do NOT penetrate HV battery/casing to apply water.
- Watch for delayed re-ignition until battery energy is depleted.

5. Water Submersion

- Treat submerged vehicle/water around it as energized.
- Do not contact without proper HV PPE; avoid orange cables.
- Water intrusion can damage electrical components even if not obvious.

6. Towing / Transportation / Storage

- E-axle inner axle shafts must be removed before towing.
- Emergency extraction acceptable less 3 mph for 98 ft max.
- If 6x4 truck is equipped with two E-axles; follow tow process for BOTH.
- Damaged vehicles: isolate outdoors, 50 ft (15 m) from structures/combustibles.