



Ford Explorer Hybrid

Police Interceptor

2026-

INFORMATION FOR FIRST AND SECOND RESPONDERS

EMERGENCY RESPONSE GUIDE



FORD EXPLORER HYBRID

POLICE INTERCEPTOR





Ford Explorer Hybrid

Police Interceptor

2026-



CONTENTS

1. Identification / recognition	Page 4
2. Immobilization / stabilization / lifting	Page 7
3. Disable direct hazards / safety regulations	Page 10
4. Access to the occupants	Page 19
5. Stored energy / liquids / gases / solids	Page 29
6. In case of fire	Page 30
7. In case of submersion	Page 34
8. Towing / transportation / storage	Page 37
9. Important additional information	Page 41
10. Explanation of pictograms used	Page 41






Ford Explorer Hybrid Police Interceptor 2026-

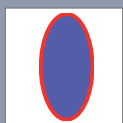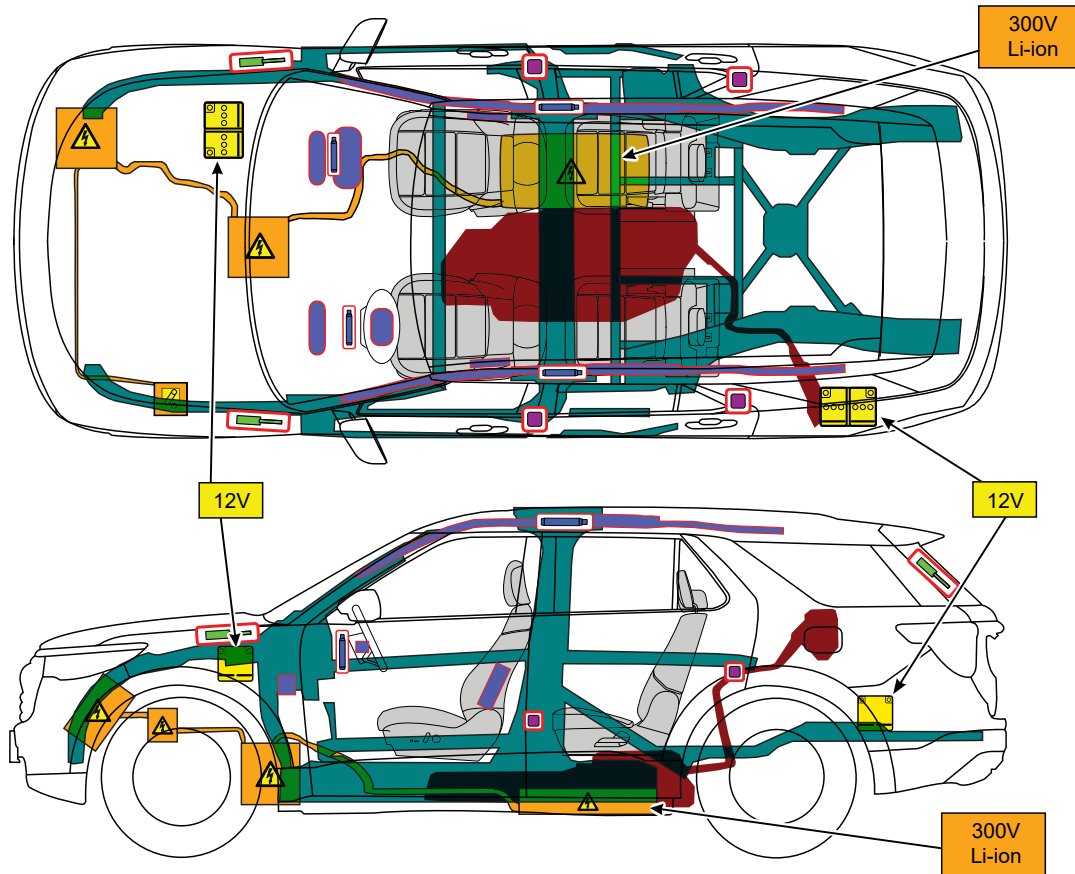


Airbag




Structural
Reinforce-
ments




Control unit




High-voltage
battery




High-voltage
disconnection
point



Gas generator




Gas filled
spring device




Battery



High-voltage
wire /
components



Seat belt
tensioner



Fuel tank
Gasoline



High-Voltage
component





Ford Explorer Hybrid

Police Interceptor

2026-

1. Identification / recognition



HYBRID VEHICLES MAY NOT HAVE ENGINE NOISE. LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.



1. Vehicle Identification Number (VIN)

Vehicle Identification Number (VIN) Layout

The 8th position of the VIN identifies the vehicle's engine type as hybrid.

- W - 3.3L, TiVCT (Twin Independent Variable Cam Timing), V6, HEV






Ford Explorer Hybrid

Police Interceptor

2026-

Keys

Key Fob Police- The key fob can be used to access various vehicle systems. The key fob buttons should be used as shown below.

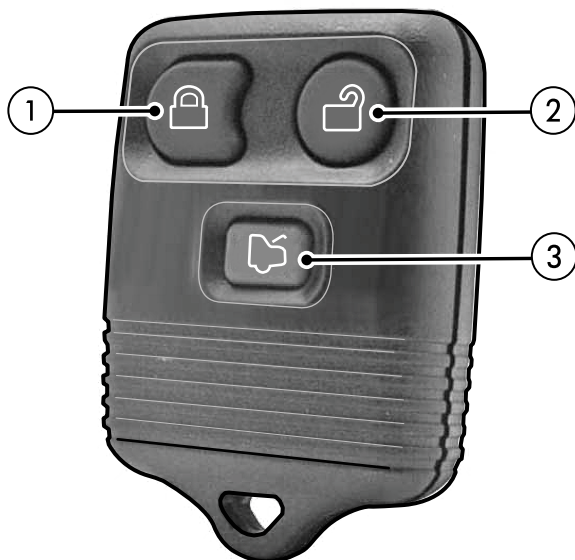

1. Lock - Press the button to lock all doors.

2. Unlock - Press the button to unlock all doors.


3. Releasing the Liftgate - Press the button once to release lock.





Ford Explorer Hybrid Police Interceptor 2026-

Instrument Cluster

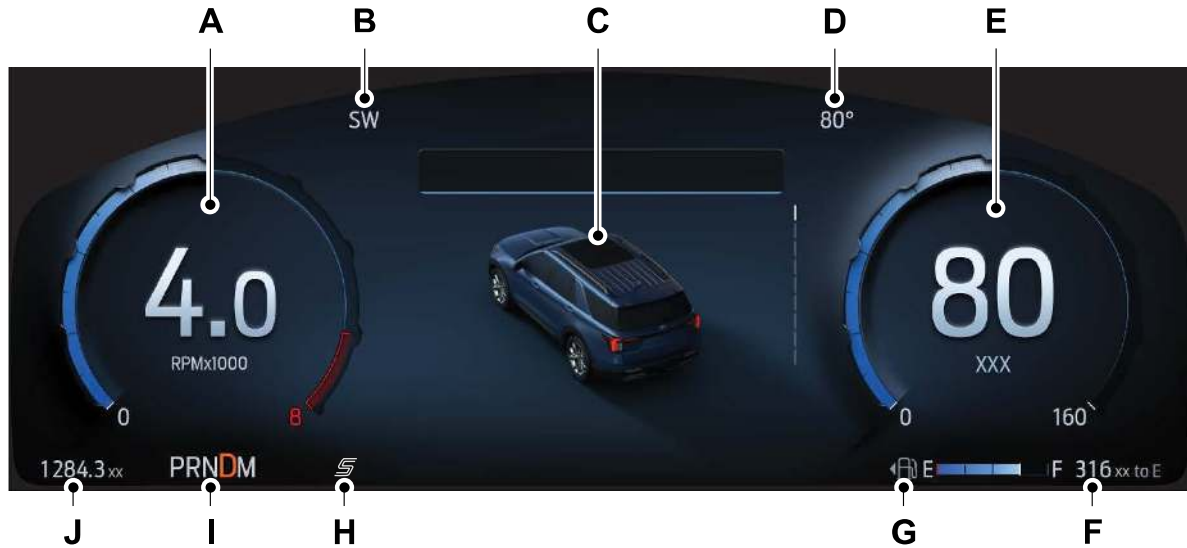

A - Tachometer

B - Compass

C - Information on demand area

D - Outside air temperature

E - Speedometer

F - Distance to empty

G - Fuel gauge

H - Drive mode indicator

I - Transmission position indicator

J - Odometer





Ford Explorer Hybrid

Police Interceptor

2026-

2. Immobilization / stabilization / lifting



DO NOT JACK ON THE BATTERY CRADLE OR HV BATTERY TRAY. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN DAMAGE AND SERIOUS PERSONAL INJURY.




The High Voltage battery may not be used for lifting or stabilization. Damage to the battery pack may occur



Service of the high voltage system on this vehicle is restricted to qualified personnel. The required qualifications vary by region. Always observe local laws and legislative directives regarding electric vehicle service. Failure to follow this instruction may result in serious personal injury or death.



Use caution to ensure you never come into contact with the high voltage battery or other high voltage components while lifting or manipulating the vehicle.

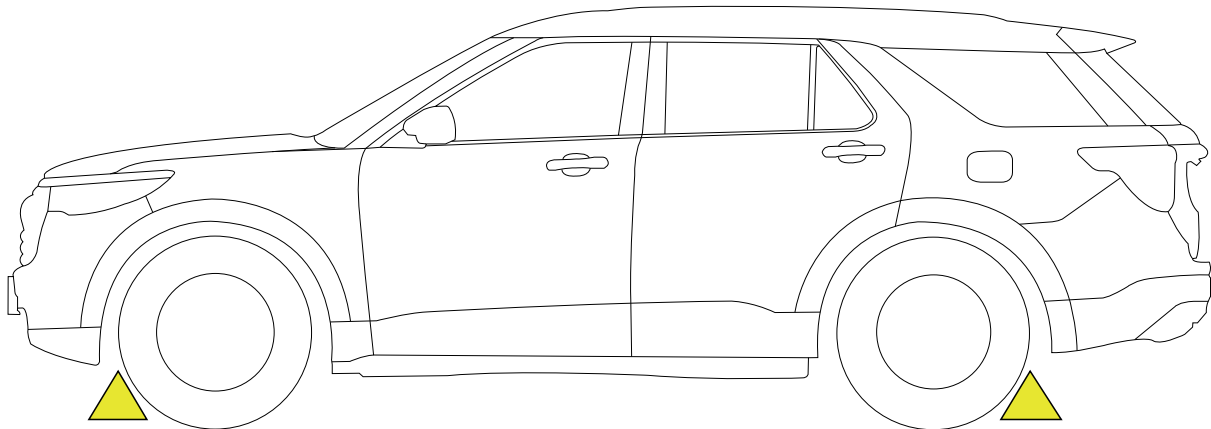

1. Position Wheel And Tire Chocks to prevent vehicle movement.





Ford Explorer Hybrid Police Interceptor 2026-

NOTICE: The electric parking brake does not operate if the vehicle battery has run out of charge.

NOTE: The red warning lamp flashes during operation and illuminates when the parking brake is applied.

NOTE: You can apply the electric parking brake when the power is off.

NOTE: The electric parking brake could apply when you shift into park (P).

2. Put vehicle into Park position (1), ensure that the parking brake is engaged (2).
3. Shut vehicle off by turning the key to Position 0.
4. Approach vehicle from the side to avoid the potential travel path.






Ford Explorer Hybrid

Police Interceptor

2026-

STABILIZATION / LIFTING POINTS

Only the specified stabilization points may be used for jacking and supporting the vehicle.

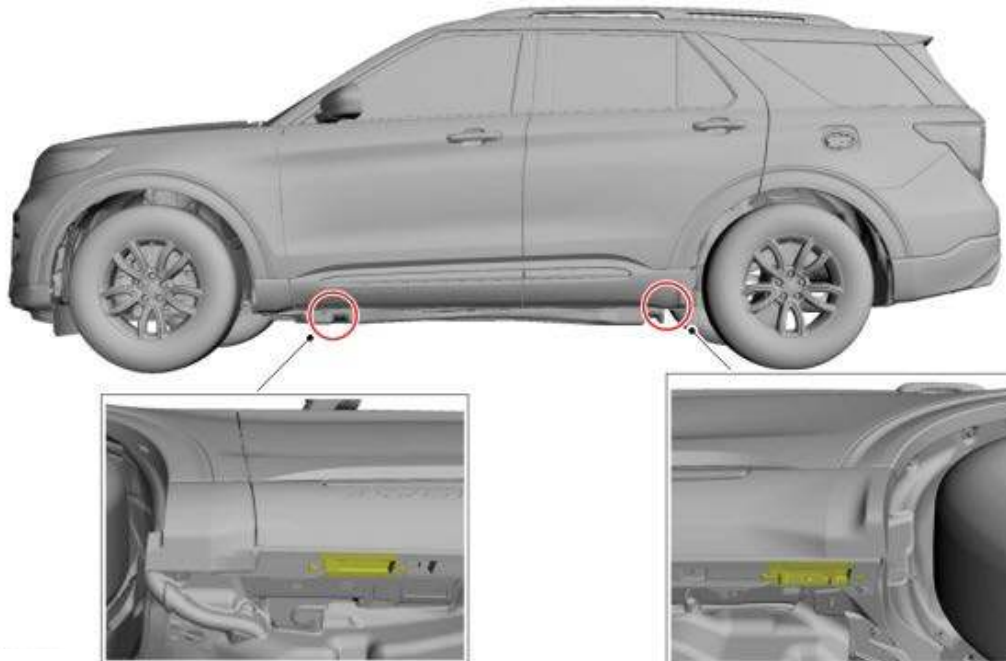



Ford Explorer Hybrid

Police Interceptor

2026-

3. Disable direct hazards / safety regulations



To prevent the risk of high-voltage shock, always follow precisely all warnings and service instructions to depower the system. The high-voltage system utilizes high-voltage cables to its components and modules. The high-voltage cables and wiring are identified by orange harness tape or orange wire covering. All high-voltage components are marked with high-voltage warning labels with a high-voltage symbol. Failure to follow these instructions may result in serious personal injury or death.



DEPOWERING THE HIGH VOLTAGE SYSTEM DOES NOT DISSIPATE VOLTAGE INSIDE THE BATTERY, THE BATTERY PACK REMAINS LIVE AND DANGEROUS. CONTACT WITH THE HIGH VOLTAGE BATTERY PACK INTERNALS MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.



Make sure to use any low voltage item before cutting or disconnecting the 12-volt battery, **ONLY** if it is safe to do so and may aid in access to the victim(s). This includes, but is not limited to, emergency brake, power seats and windows.




HIGH VOLTAGE SYSTEM DISABLE PROCEDURE

IMPORTANT:

- Under urgent situations perform Option 1.
- Under non-urgent situations perform Option 2.

OPTION 1 - Under urgent situations ONLY

1. Open the hood and locate the Low Voltage Service Disconnect. Cut the wires adjacent to the Low Voltage Service Disconnect. Isolate the wires to prevent reconnection.

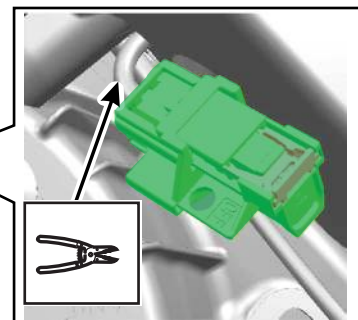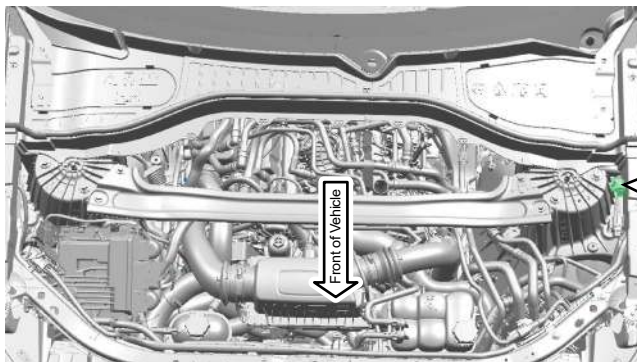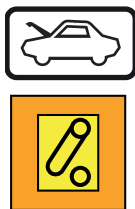





Ford Explorer Hybrid Police Interceptor 2026-

12 Volt Battery Disconnect - Disables Safety Restraint System (SRS)

1. Remove the retainers and pull the grille upwards. Remove the RH side cowl panel grille.

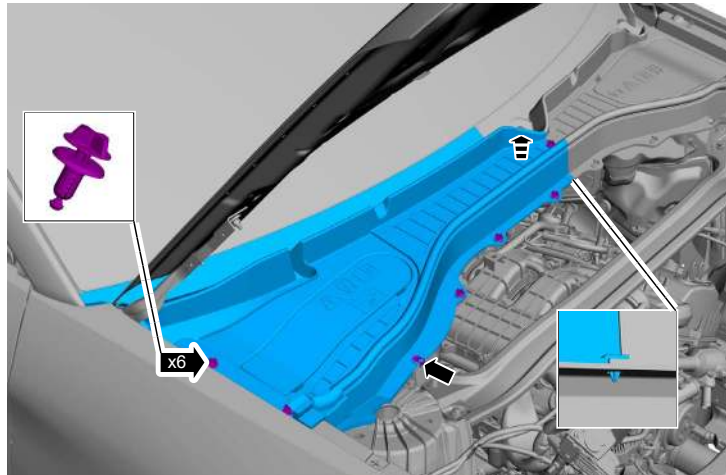


2. Locate and cut the negative battery cable to ground at two locations 3 in. (7.6 cm) apart from each other. Isolate the cable to prevent reconnection.

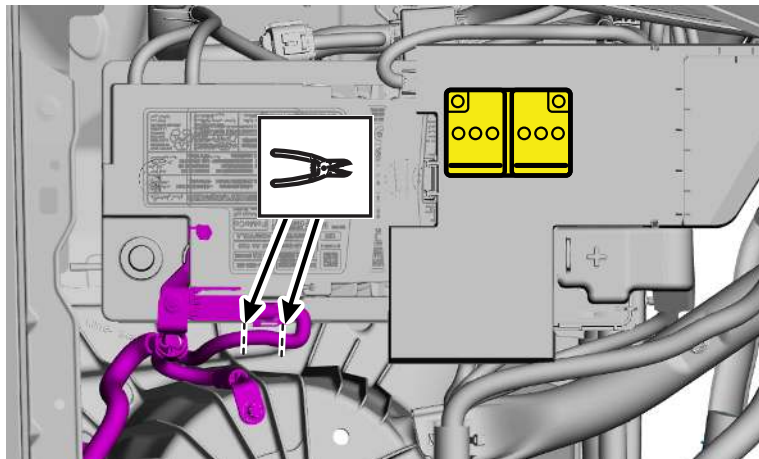

Auxiliary Battery

3. Remove the luggage compartment floor cover.

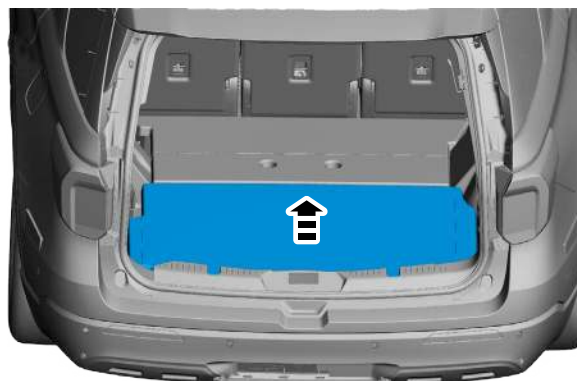




Ford Explorer Hybrid Police Interceptor 2026-


4. Remove the luggage compartment spare tire cover.



5. Release the clips and pin-type retainers and remove the loadspace armrest trim panel.

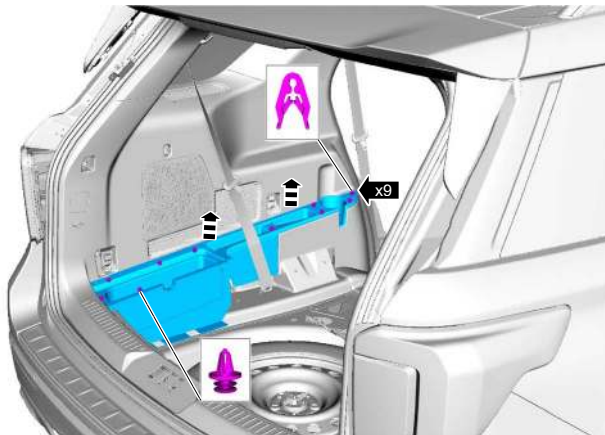

6. Locate and cut the negative battery cable to ground at two locations 3 in (7.6 cm) apart from each other. Isolate cable to prevent reconnection.

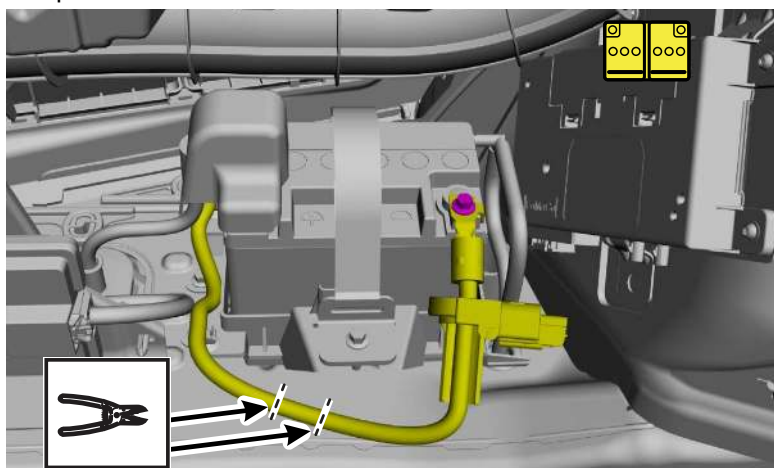



Ford Explorer Hybrid Police Interceptor 2026-


OPTION 2 - Under non-urgent situations

1. Put vehicle into PARK position and ensure parking brake is engaged. Turn the key position to 0.




Low Voltage Service Disconnect (Disables High Voltage System)

2. Detach the pin-type retainer and position the electrical connector and wiring harness aside.

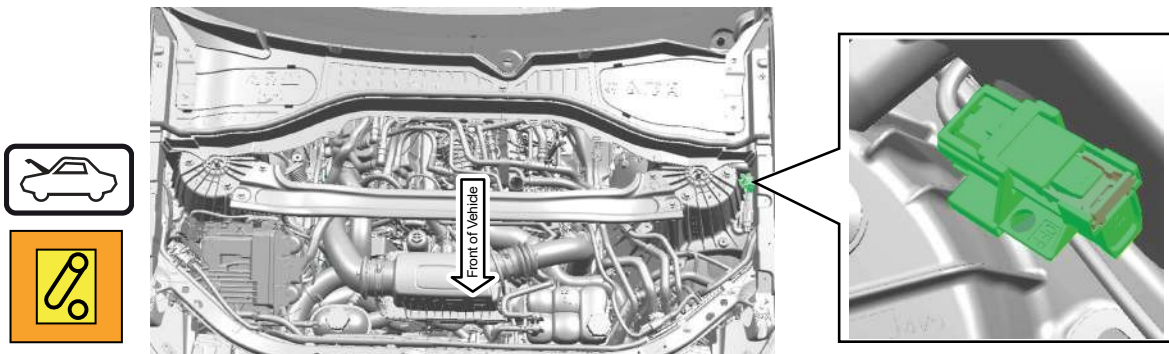

NOTE: The tab must be depressed prior to pushing the connector back in or damage to the connector may result.

3. Depress the tab while pulling the connector until the hole is completely visible on the top of the connector.

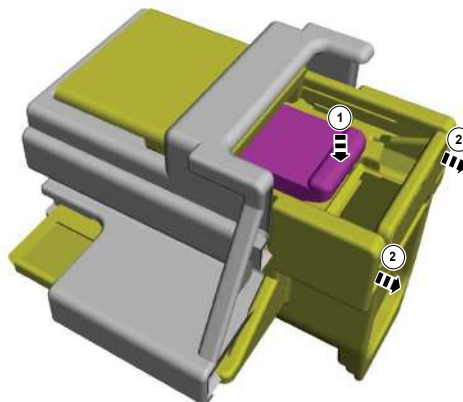



Ford Explorer Hybrid Police Interceptor 2026-


4. Insert a suitable tool inside the connector hole to prevent the connector from closing.



5. Wait a minimum of 5 minutes.

12 Volt Battery Disconnect - Disables Safety Restraint System (SRS)


6. Release the clips and remove the battery access cover.

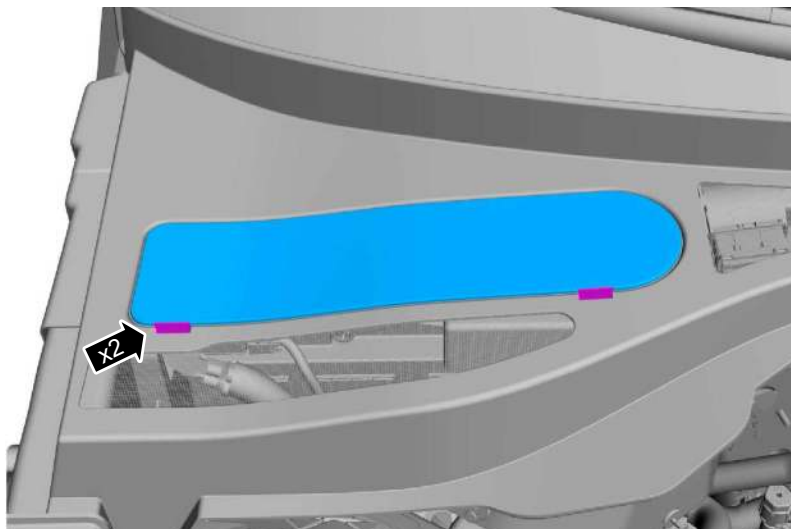




Ford Explorer Hybrid Police Interceptor 2026-


7. Loosen, but do not remove the nut, and position the negative battery cable aside.

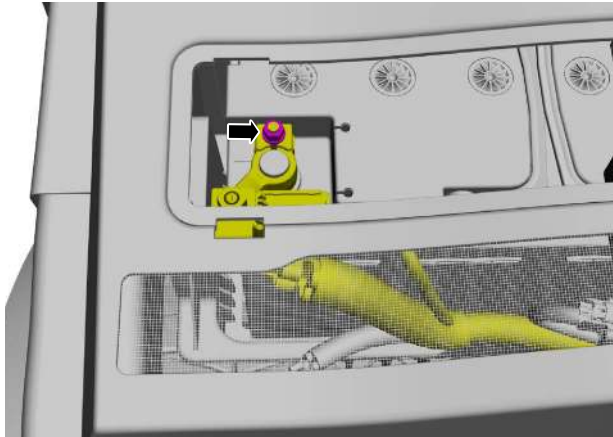

8. Remove the retainers and the RH side engine compartment cover. (If equipped)

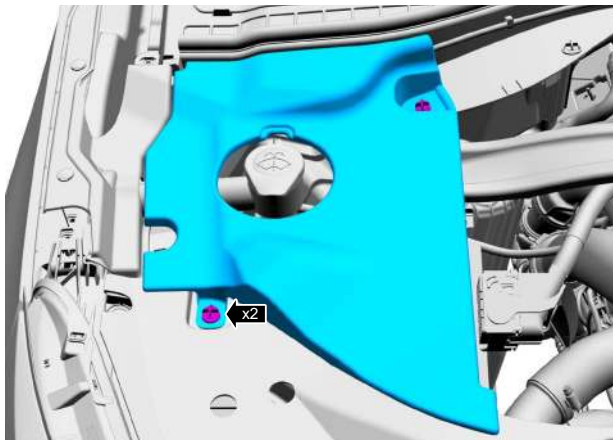


9. Remove the retainers. Detach the wiper fluid hose coupling and position aside the wiper hose. (If equipped)

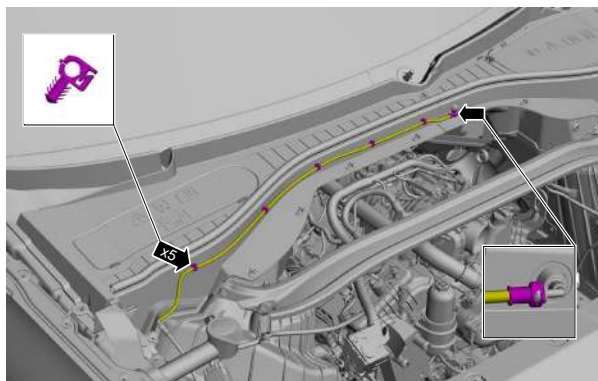




Ford Explorer Hybrid Police Interceptor 2026-

10. Remove the retainers and the RH side cowl panel grille.

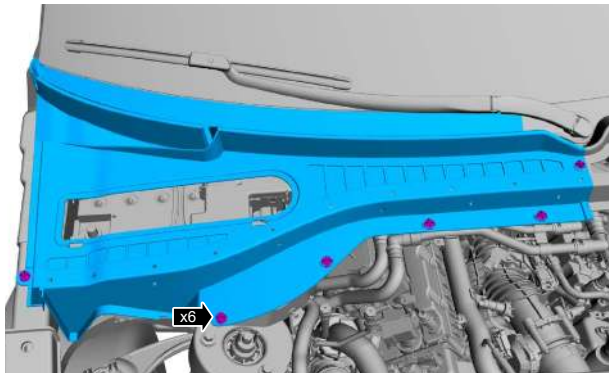


11. Loosen, but do not remove the nut. Release the clips and position the positive battery cable aside.

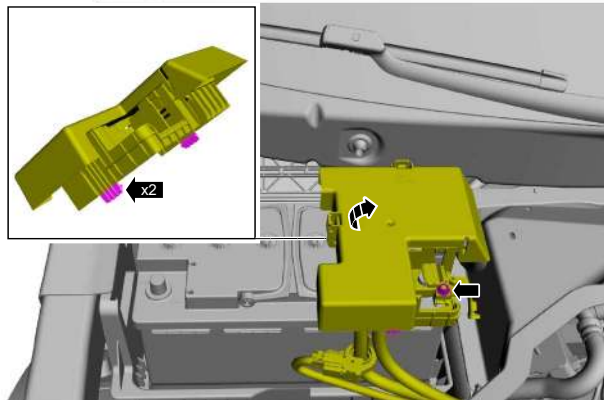

Auxiliary Battery

12. Remove the luggage compartment floor cover.

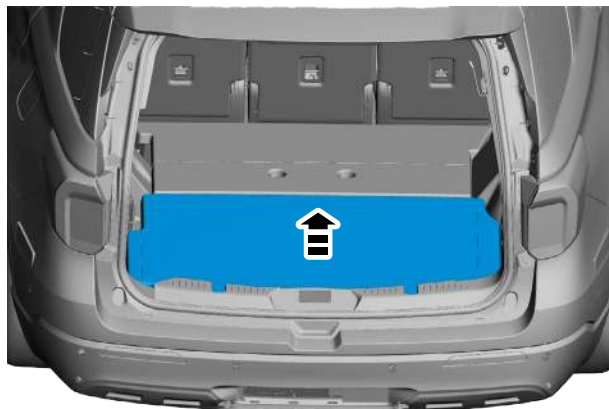




Ford Explorer Hybrid Police Interceptor 2026-


13. Remove the luggage compartment spare tire cover.



14. Release the clips and pin-type retainers and remove the loadspace armrest trim panel.

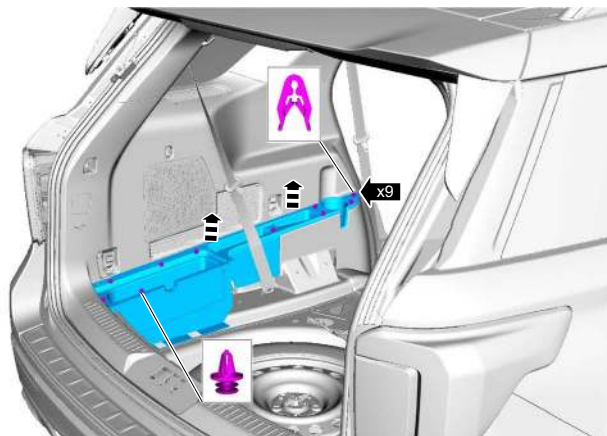


15. Remove the bolt and position the negative battery cable aside.

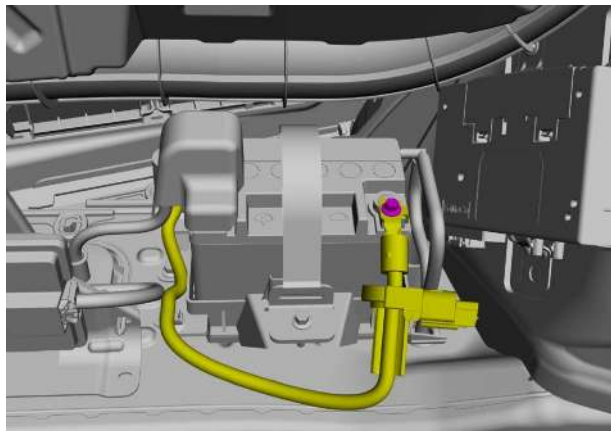



Ford Explorer Hybrid Police Intercept 2026-

16. Position the battery terminal cover aside. Remove the bolt and position the positive battery cable aside.

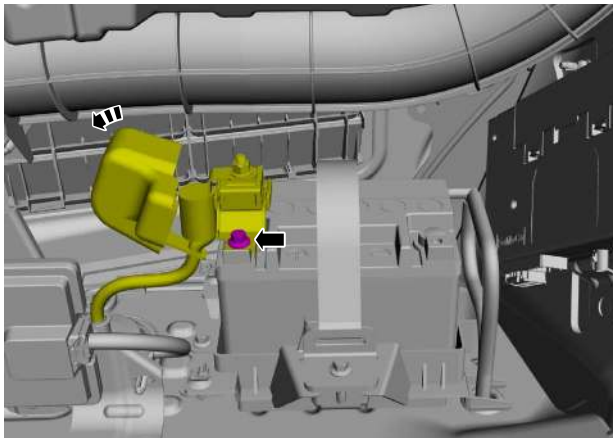



Ford Explorer Hybrid

Police Interceptor

2026-

4. Access to the occupants



WARNINGS:

DEPOWERING THE HIGH VOLTAGE SYSTEM DOES NOT DISSIPATE VOLTAGE INSIDE THE HIGH VOLTAGE BATTERY PACK, WHICH REMAINS LIVE AND DANGEROUS. IT IS CRITICAL TO UNDERSTAND THAT HIGH VOLTAGE CAN ALSO REMAIN PRESENT IN OTHER HIGH VOLTAGE COMPONENTS THROUGHOUT THE VEHICLE. DIRECT CONTACT WITH THE HIGH VOLTAGE BATTERY PACK INTERNALS OR INTERNALS OF ANY OTHER HIGH VOLTAGE COMPONENT MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.

HYBRID VEHICLES DAMAGED BY A CRASH MAY HAVE COMPROMISED HIGH VOLTAGE SAFETY SYSTEMS AND PRESENT A POTENTIAL HIGH VOLTAGE ELECTRICAL SHOCK HAZARD. REMOVE ALL METALLIC JEWELRY, INCLUDING WATCHES AND RINGS. ISOLATE THE HIGH VOLTAGE SYSTEM AS DIRECTED BY THIS DOCUMENT. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH. ALWAYS ASSUME THE VEHICLE'S HIGH VOLTAGE SYSTEM IS POWERED UP! Cutting, crushing, or touching High Voltage components can result in serious injury or death.

Never disassemble or tamper with seat belt deployable components, including pretensioners, load limiters and inflators. Tampering may cause an accidental deployment and result in personal injury or death.

Do not handle, move or change the original horizontal mounting position of the restraints control module (RCM) while the RCM is connected and the ignition switch is ON. Also, do not at any time, physically damage or impinge the RCM with a cutting or crushing operation while the 12-volt battery is connected. Failure to follow these instructions may result in the accidental deployment of the Safety Canopy or other undeployed inflatable restraints and cause serious personal injury or death.

Service and handling of Pyrotechnic Components is restricted to qualified personnel. The required qualifications vary by region. Always observe local laws and legislative directives regarding Pyrotechnic Components service and handling. Failure to follow this instruction may result in serious personal injury or death.

If occupant removal is necessary, always use caution when cutting near the vehicle High Voltage system components. Do not cut any of the High Voltage under vehicle or under hood cabling (all High Voltage cabling is orange). High voltage cabling runs underneath the vehicle, from the High Voltage battery under the left hand side of the vehicle to the underhood compartments. Refer to the diagram on page 22 for no cut zones.

NOTE: After a collision vehicle components may not function properly such as the steering wheel, power seats, and other electrical and mechanical components. If these components are not functioning properly and prevent access to occupants extraction may be required.





Ford Explorer Hybrid

Police Interceptor


2026-

Vehicle Body

The vehicle body is comprised of various strengths of aluminum.

High Strength Zones

The door beams as shown below are made of high strength steel.

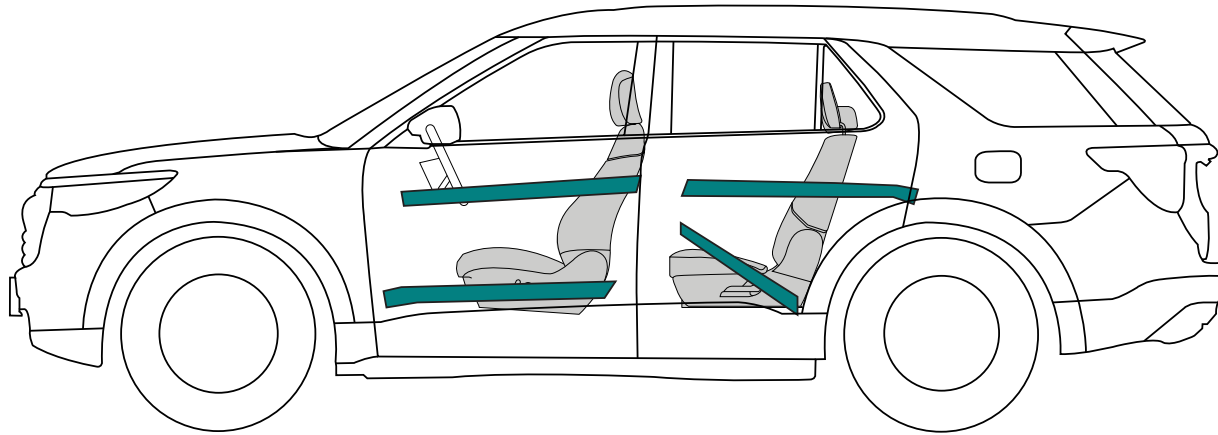





Ford Explorer Hybrid

Police Interceptor

2026-

High Strength Zones (continued)

The B and C pillars, as well as the roof bow are made of stronger aluminum. The rear has enhanced high strength zones as necessary for police units.

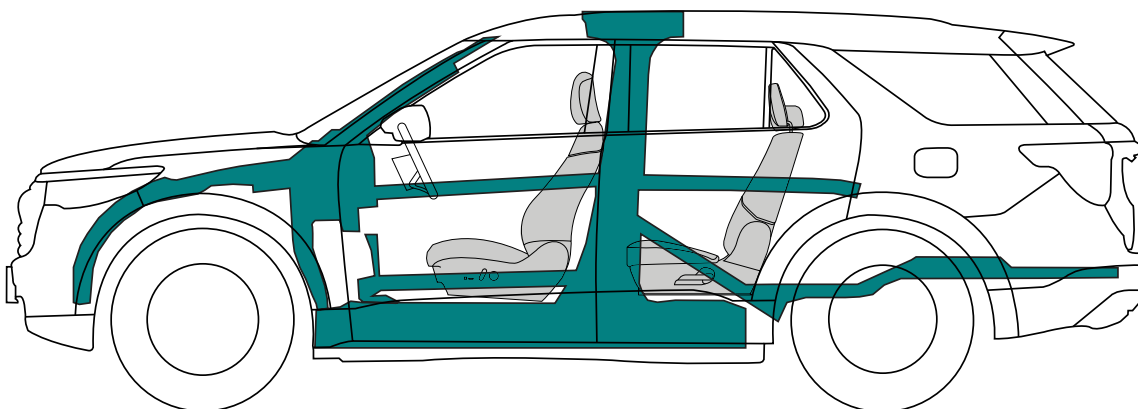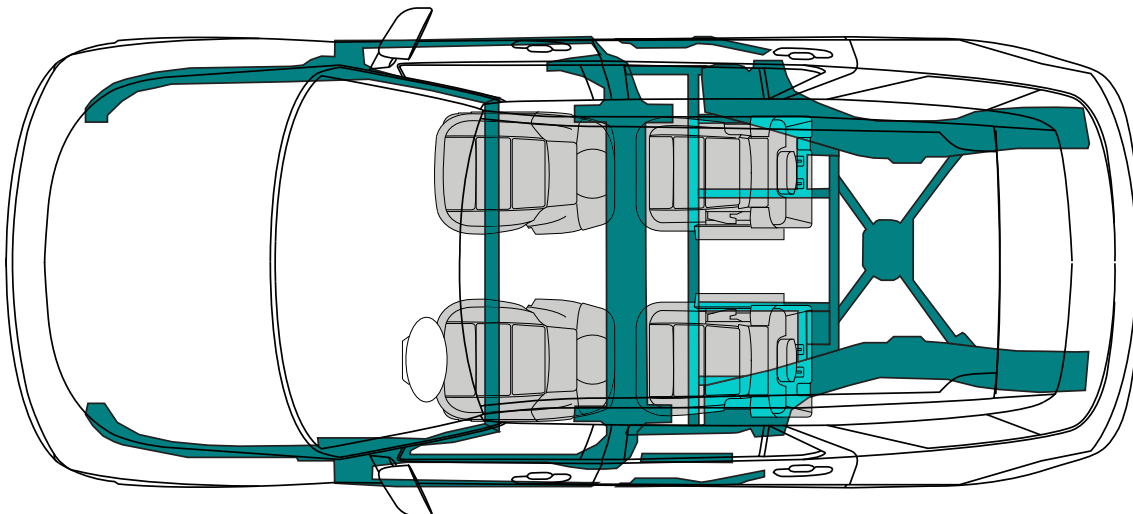



Ford Explorer Hybrid

Police Interceptor

2026-

NO Cut Zones

WARNING:




HYBRID VEHICLES DAMAGED BY A CRASH MAY HAVE COMPROMISED HIGH VOLTAGE SAFETY SYSTEMS AND PRESENT A POTENTIAL HIGH VOLTAGE ELECTRICAL SHOCK HAZARD. REMOVE ALL METALLIC JEWELRY, INCLUDING WATCHES AND RINGS. ISOLATE THE HIGH VOLTAGE SYSTEM AS DIRECTED BY THIS DOCUMENT. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH. ALWAYS ASSUME THE VEHICLE'S HIGH VOLTAGE SYSTEM IS POWERED UP! Cutting, crushing, or touching High Voltage components can result in serious injury or death.

WARNING:



Always use appropriate tools, such as a hydraulic cutter, and always wear appropriate personal protective equipment (PPE) when cutting. Failure to follow these instructions can result in serious injury or death.

Due to the presence of High Voltage, pyrotechnic components and safety restraint components the identified areas should not be cut. Doing so could result in serious injury or death.

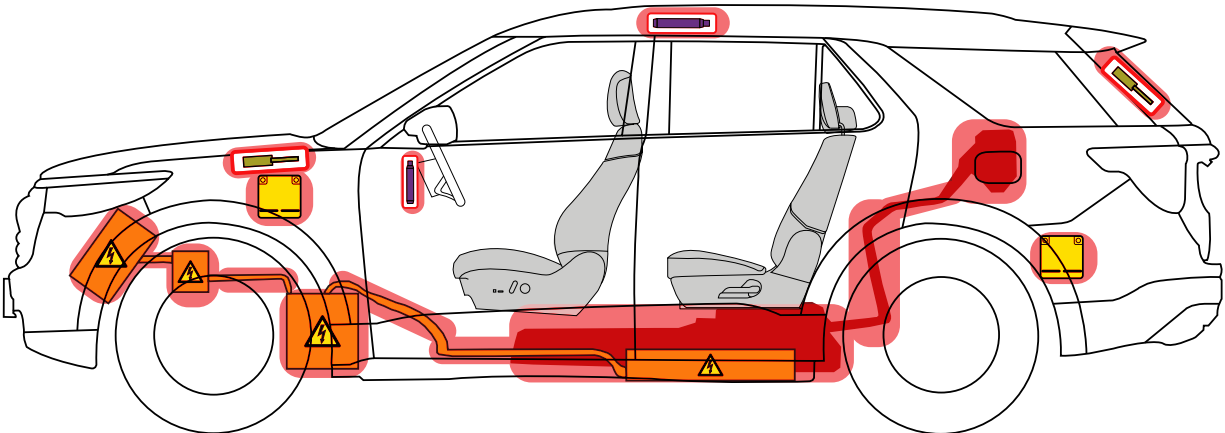




Ford Explorer Hybrid Police Interceptor 2026-

Windows - Identification


The windshield is made of acoustic laminated safety glass. The side windows and rear window are made of tempered glass.

- ① Laminated Glass
- ② Tempered Glass

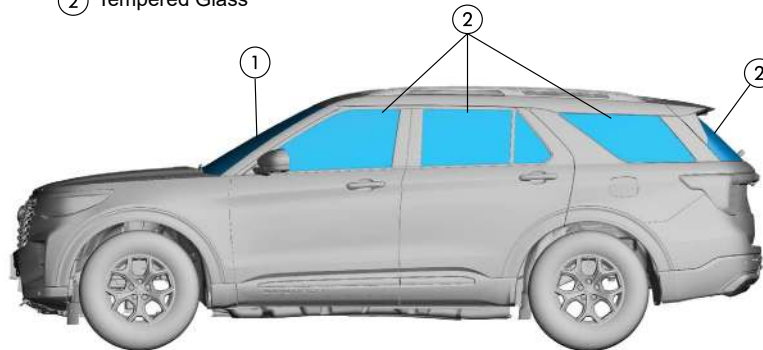

Doors and Door Handles

To operate the front doors from inside the vehicle:
Pull the interior door handle.

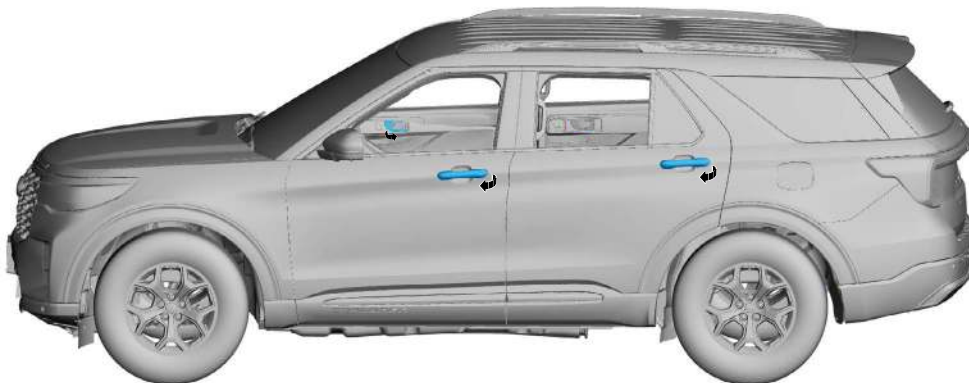




Ford Explorer Hybrid Police Interceptor 2026-

Front Seat Adjustments

See the image below for adjusting the seat backward and forward as well as up and down.

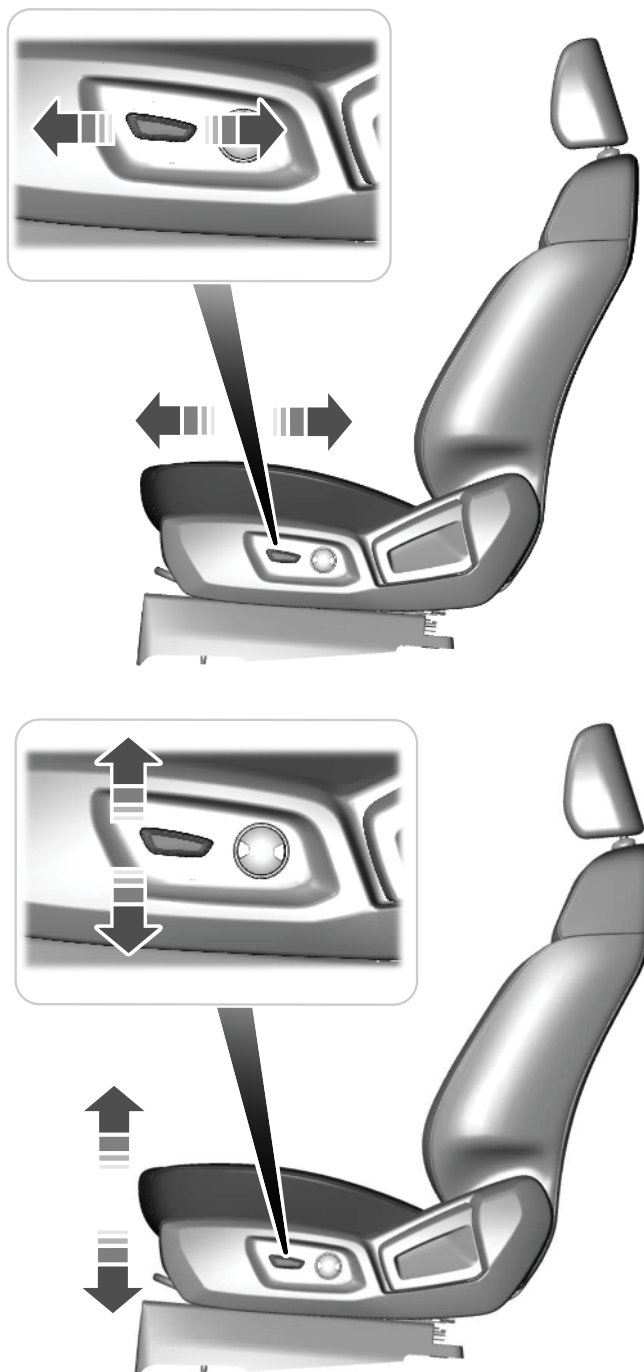



Ford Explorer Hybrid Police Interceptor 2026-

Front Seat Adjustments

See the image below for adjusting the seat backrest.






Ford Explorer Hybrid Police Interceptor 2026-

Steering Wheel Adjustments

1. Unlock the steering column.
2. Adjust the steering wheel to the position you prefer.
3. Lock the steering column.

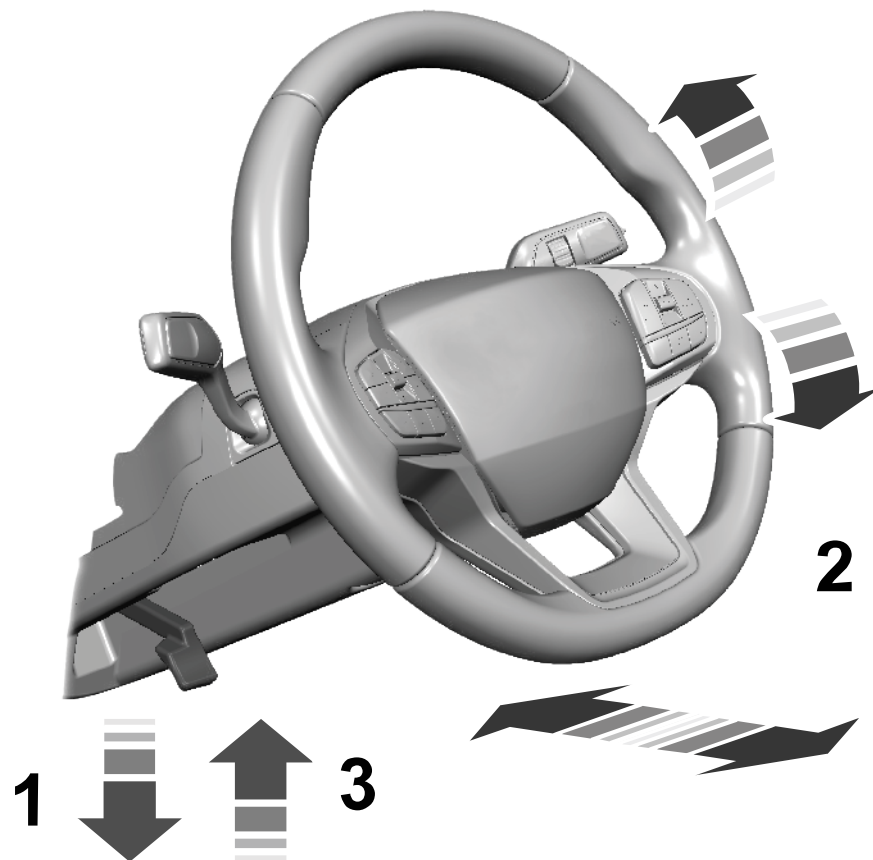



Ford Explorer Hybrid Police Interceptor 2026-


Occupant Restraint Systems



Airbags

The airbags are approximately located in the areas shown. Airbag information can be found on the sun visors as well.

When the RCM has deployed the safety restraint system component(s), the high-voltage system may be deactivated.

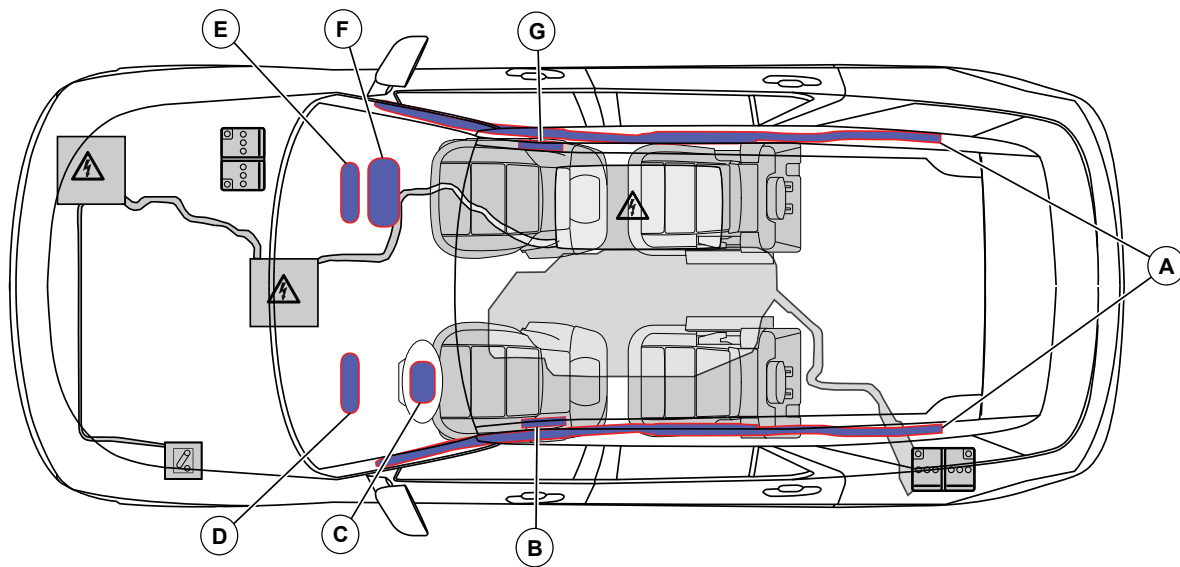

- A - Driver and passenger side curtain airbag
- B - Driver side airbag
- C - Driver airbag
- D - Driver knee airbag
- E - Passenger knee airbag
- F - Passenger airbag and canister vent
- G - Passenger side airbag






Ford Explorer Hybrid Police Interceptor 2026-


Stored Gas Inflators

The stored gas inflators are located in the B-pillar on the driver and passenger side as well as with the driver and passenger airbags.

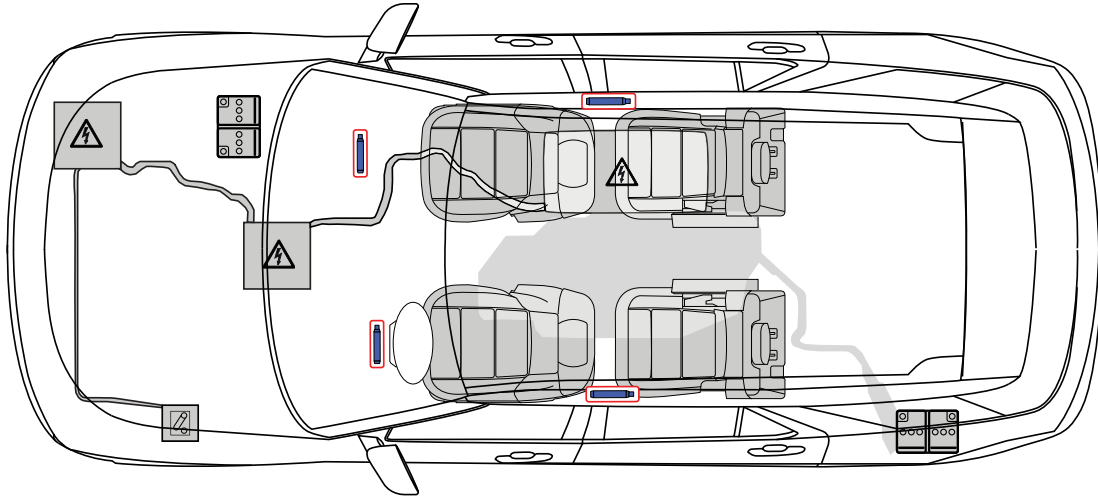

Seatbelt Pretensioners

The seatbelt pretensioners are part of the restraint system.

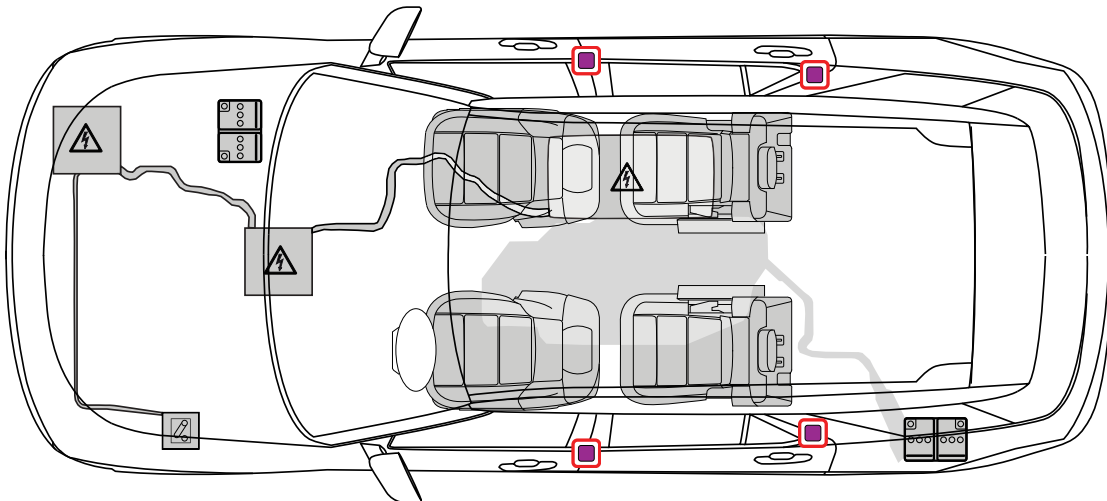



Ford Explorer Hybrid

Police Interceptor

2026-

5. Stored energy / liquids / gases / solids



Refer to the vehicle overview illustration on Page 3, for location reference of the high voltage battery, 12-volt battery, and other vehicle component locations.





Ford Explorer Hybrid

Police Interceptor

2026-

6. In case of fire



LITHIUM-ION BATTERIES CAN IGNITE SPONTANEOUSLY OR RE-IGNITE AFTER THE FIRE HAS BEEN EXTINGUISHED. WEAR APPROPRIATE PPE.



Follow Existing Training and Incident Commander Direction



WARNINGS:

HYBRID VEHICLES WITH DAMAGED HIGH VOLTAGE BATTERIES REQUIRE SPECIAL HANDLING PRECAUTIONS. INSPECT THE VEHICLE CAREFULLY FOR LEAKING BATTERY FLUIDS, SPARKS, FLAMES, AND GURGLING OR BUBBLING SOUNDS. CONTACT EMERGENCY SERVICES IMMEDIATELY IF ANY OF THESE PROBLEMS ARE OBSERVED. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN A VEHICLE FIRE AND PERSONAL INJURY OR DEATH.

FIRES IN CRASH-DAMAGED HYBRID VEHICLES MAY EMIT TOXIC OR COMBUSTIBLE GASSES. SMALL AMOUNTS OF EYE, SKIN OR LUNG IRRITANTS MAY BE PRESENT. WEAR PERSONAL PROTECTIVE EQUIPMENT (PPE) AND SELF-CONTAINED BREATHING APPARATUS WHEN WORKING IN CLOSE PROXIMITY OR IN A CONFINED AREA, SUCH AS A TUNNEL OR GARAGE. VENTILATE THE VEHICLE INTERIOR BY OPENING VEHICLE WINDOWS OR DOORS. VENTILATE THE WORKING AREA. FAILURE TO FOLLOW THIS INSTRUCTION MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.

DO NOT ATTEMPT TO DISCHARGE THE HV BATTERY.

White/light gray smoke from a HV battery contains chemicals which can be:

- Combustible where the smoke is exiting the battery vent location
- Explosive in a confined space environment (such as a small garage) with the correct mixture of air
- Toxic in short exposure durations

Forcing water into a HV battery which is NOT directly involved in a fire, or experiencing thermal runaway, may cause electrical shorting, electrical arcing, and initiate thermal runaway and fire within the battery.

HV battery thermal runaway events are VERY hot internally ($>200^{\circ}\text{C}/392^{\circ}\text{F}$) and may remain hot for hours or DAYS if left uninterrupted, possibly leading to:

- Continued thermal propagation and intensity increase.
- Active fire outside of the HV battery.

HV battery fire and thermal runaway often occur together. Both fire and temperature of the HV battery must be brought under control. If only the fire is extinguished but high temperatures persist, then thermal runaway may continue, and fire may resume.





Ford Explorer Hybrid

Police Interceptor

2026-

The below sub-sections outline precautions and actions required in the event of a HV battery fire or thermal event.

1. Assess the Situation - Is the HV battery in a fire or experiencing thermal runaway?

When arriving on the scene of an electrified vehicle incident, first determine whether any observed fire or thermal runaway involves the HV battery via the following guidance:

Assessment of Flames -

If flames are coming from the bottom of the vehicle and/or the sides of the vehicle below the doors:

Then the HV battery IS likely involved.

If flames are not coming from the HV battery location, but are coming from the wheel wells:

Then the HV battery MAY BE involved. Seek additional information (assessment of smoke, sounds and temperatures).

If flames are not coming from the HV Battery location or wheel wells, but are coming from other such areas as the occupant compartment interior:

The HV battery is NOT likely involved.

Assessment of Smoke -

If there is jetting smoke lasting more than a few seconds and it is coming from the battery vicinity:

Then the HV Battery IS likely experiencing thermal runaway.

If substantial white/light gray smoke is seen:

Then the HV Battery IS likely experiencing thermal runaway.

If substantial dark gray/black smoke is seen:

Then the HV Battery MAY BE experiencing thermal runaway. Seek additional information (Assessment of sounds and temperature).

Assessment of Sounds -

If you hear several repetitive explosive, popping, percussive type sounds (possibly intermittent) then the HV Battery is likely experiencing thermal runaway.

NOTE: Other components with compressed gas or pyrotechnics such as gas struts and airbags may produce singular explosive sounds but will not cause several repetitive sounds.

Assessment of Temperatures -

If the HV Battery surface temperatures (or materials immediately covering the HV Battery) exceed 149°C (300°F) and there is not an external heat source near the HV Battery causing this then the HV Battery IS likely experiencing thermal runaway.

WARNING: A HV Battery with surface temperatures above 71°C (160°F) may remain at risk of resuming thermal runaway and a fire event.





Ford Explorer Hybrid

Police Interceptor

2026-

NOTES:

- Thermal imaging cameras with target temperature measurement capability are well suited for surface temperature measurements from a distance with acceptable accuracy.
- Measurements of multiple surface locations are recommended to determine a HV battery is not at thermal risk to resume thermal runaway or fire.
- Tilting the vehicle may enable better measurements of the HV battery.

Assessment of the HV battery -

If the HV Battery IS likely involved in a fire or experiencing thermal runaway proceed to sub-section 2.

If the HV Battery MAY BE involved in a fire or experiencing thermal runaway then address the incident according to standard procedures, while continuing to monitor for indications of a HV Battery fire or thermal runaway.

If the HV Battery IS NOT likely involved in a fire or experiencing thermal runaway, then address the incident according to standard procedures.

2. Contain any active HV battery Fire and Thermal Runaway - ONLY if the HV battery is likely involved NOTES:

- HV batteries may be difficult to apply water to and cool and require several times more water than a conventional vehicle fire. Consider additional resources to establish a continuous, sustainable water supply.
- Thermal imaging cameras with target temperature measurement capability are well suited for surface temperature measurements from a distance with acceptable accuracy.
- Always use appropriate Firefighting Personal Protection Equipment (PPE) and/or Self-Contained Breathing Apparatus (SCBA) for protection from flames and toxic chemicals.





Ford Explorer Hybrid Police Interceptor

2026-

Once the HV Battery has been assessed as involved in fire or thermal runaway, the OIC should determine one of two strategies to address the situation.

1. Engage the HV Battery to extinguish any flames and cool all accessible surfaces

- a. Apply water onto the HV Battery
 - i. Direct application of water is best
 - ii. Tilting the vehicle may improve HV Battery access to apply water. Follow the precautions in Section 2 for Stabilization and Lifting Points.
- b. Continue to apply water for several minutes after any visible flames have been extinguished and the HV Battery surface has cooled below 66°C (150°F).
- c. Monitor HV battery case temperature with a thermal imager and alternate with water cooling if the temperature rebounds to above 66°C (150°F) in 20-minute intervals.
 - i. To assist in getting water into the HV Battery the frunk should be opened and the liner should be removed. The transmission tunnel is directly behind the 12-volt battery location. Water applied in this area can get down to the HV battery.
- d. Ventilate the vehicle interior: Open/remove doors, open/remove windows.

2. Allow the battery to burn itself out

- a. Alternatively, the incident may be quarantined and left to consume the battery rather than attempting to actively fight the fire.
 - i. This determination should be made by the OIC considering possible life, property, infrastructure and environmental exposures from heat OR byproducts of combustion.
 - ii. Water supply and application may still be necessary to protect exposures such as property or infrastructure.
 - iii. This method can reduce the possibility of a repeat incident with the same vehicle.





Ford Explorer Hybrid

Police Interceptor

2026-

7. In case of submersion




WARNING:

DAMAGED ELECTRIC VEHICLES SUBMERGED IN WATER PRESENT A POTENTIAL HIGH VOLTAGE ELECTRICAL SHOCK HAZARD. EXERCISE CAUTION AND WEAR APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT (PPE).

Ford vehicles do not have high voltage (HV) components electrically connected to the vehicle's body or frame. It is safe to touch the vehicle's body or frame for purposes of accessing the passenger compartment in a rescue situation.

DO NOT TOUCH HV COMPONENTS OR HV CABLING (ORANGE).

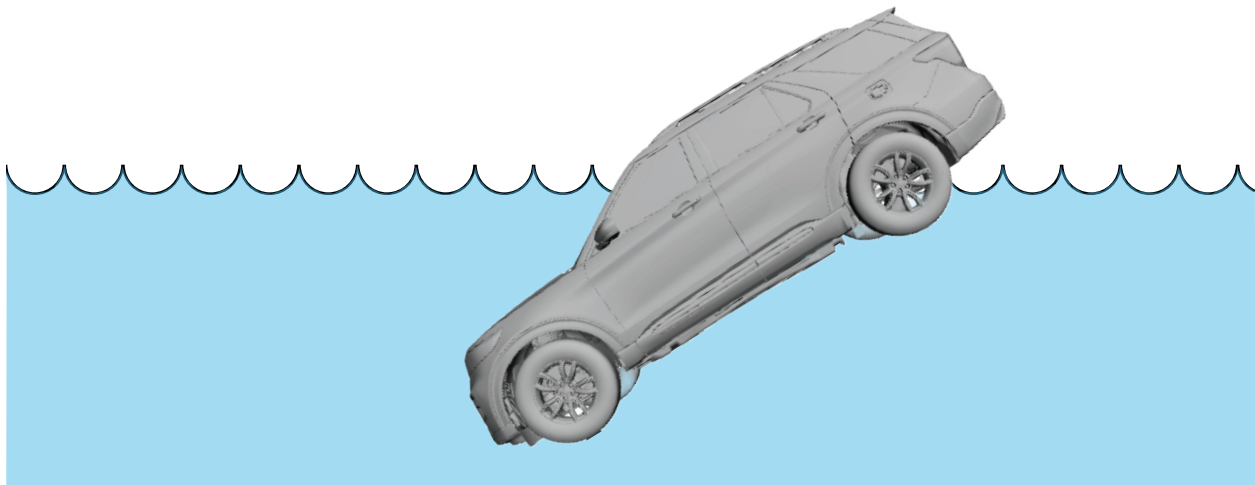



Ford Explorer Hybrid

Police Interceptor

2026-

1. Observe

- A submerged HV battery may produce a fizzing or bubbling reaction to the water.
- Always assume that the HV Battery has HV energy, even after the fizzing or bubbling has stopped.
- Responders should take appropriate precautions to avoid contact with exposed conductors. DO NOT touch components inside the battery housing.

2. Prepare for vehicle removal from water only after Officer in Command (OIC)/Electric Vehicle (EV) specialist confirmation

A. Rigging and extraction precautions (once removal is authorized)

- i. Prefer non-conductive lifting/attachment methods (polyester straps, nylon slings) routed to attachment points identified in the Wrecker Towing Manual (Select Model Year and Model at this link: <https://www.motorcraftservice.com/ServiceTip?category=TnL>
If metal rigging is used, ensure it does not contact HV components.
- ii. Do not pass straps, chains, or hooks directly over or under HV battery packs or HV components or HV cabling (orange).
- iii. Ensure vehicle body or frame members used for rigging are structurally sound and not compromised by impact, corrosion, or other damage.

B. First Responder Precautions

- i. Refer to Section 6 "In case of fire" subsection 1. Assess the Situation - Is the HV battery in a fire or experiencing thermal runaway?" to determine if the vehicle is experiencing thermal runaway. If thermal runaway is present or if you observe the vehicle bubbling under water, do not proceed to remove the vehicle until any reaction has settled.

3. Remove the Vehicle from the water

- Follow the OIC guidance in extracting the vehicle from the water.
- Keep clear of the vehicle when possible.
- Use a Thermal Imaging camera to check and not the temperature of the HV battery.
- Wait 20 minutes and check with a Thermal Imaging camera again for increasing temperature of the HV Battery. If a temperature rise of ~3°C (5°F) or more is observed, refer to Section 6 "In case of fire" for other signs of thermal runaway and how to proceed.

4. Disable HV

- Refer to Section 3 "Disable Direct Hazards / Safety Regulations" to disable the HV.

5. Drain the water from the vehicle

- If water remains in the vehicle after extraction from the water, open the doors and, if possible, tilt the vehicle to try to remove the remaining water.
 - Alternatively, remove carpet and pull out drain plug.

6. Assess for Electrical Hazards

- Damaged HV components with exposed internal conductors are hazardous to touch. Responders should take appropriate precautions to inspect for and avoid contact with exposed conductors. DO NOT touch components inside the battery housing.





Ford Explorer Hybrid

Police Interceptor

2026-

7. Inspect for Fire Potential Hazards

- See Section 6 "In Case of Fire" subsection 1, Assess the Situation - is the HV battery in a fire or experiencing thermal runaway.

8. Notify the Tow Operator and storage personnel that the vehicle has been submerged so that they can take proper precautions.

- See Section 8 "Towing/transportation/storage"
- Advise the Tow Operator that the vehicle was submerged and there is a greater risk of subsequent thermal runaway.
- The vehicle should not be stored inside a structure of within 50 ft (15m) of any structure or vehicle.





Ford Explorer Hybrid Police Interceptor 2026-




8. Towing / transportation / storage



LITHIUM-ION BATTERIES CAN IGNITE SPONTANEOUSLY OR RE-IGNITE AFTER THE FIRE HAS BEEN EXTINGUISHED. WEAR APPROPRIATE PPE.



If the vehicle has been involved in an accident or if the HV battery is damaged or unstable: Deactivate the high-voltage system (See Section 3). Do not store a severely damaged vehicle inside a structure or within 50 ft (15m) of any structure or vehicle.

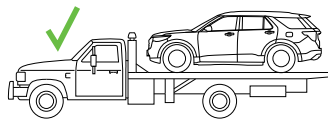

Moving Damaged Vehicles - Tow Truck Drivers

IMPORTANT! Be alert. There is a potential for delayed fire with damaged lithium-ion batteries.

NOTICE: Do not attempt to pull / tow vehicle with wheels on the ground as this may cause the vehicle to generate electricity and can cause potential damage.

Confirm that the HV System is disabled. Refer to Section 3 Disable Direct Hazards/Safety Regulations.

Follow the guidelines in the Wrecker Towing Guide



WARNING: DO NOT contact or apply loads to HV components. HV components on the vehicle are identified on Page 3.

In the event of damage to or fire involving an electric vehicle:

- Always assume the High Voltage battery and associated components are energized and fully charged.
- Exposed electrical components, wires, and High Voltage batteries present potential HV shock hazards.
- Venting/off-gassing High Voltage battery vapors are potentially toxic and flammable.
- Physical damage to the vehicle or High Voltage battery may result in immediate or delayed release of toxic and/or flammable gases and fire.





Ford Explorer Hybrid

Police Interceptor

2026-

Notes for Transport Personnel:

- If you detect leaking fluids, sparks, smoke, flames, increased temperature, gurgling, popping or hissing noises from the High Voltage Battery compartment, call 911.
- The HV components equipped on this vehicle include protective designs and packaging to substantially reduce the risk of an electrical shock hazard. This remains true even if water is present on or near the vehicle and ground.
- Place vehicle into park (P), set the parking brake, turn off the vehicle, activate hazard lights, and remove the keys to a distance of at least 5m (16 ft) from the vehicle until loading.
- Prior to transporting a vehicle with a HV battery that has been involved in a fire, ensure that the vehicle interior has been ventilated by opening or removing doors and/or windows.
- Assess the vehicle structure (sheet metal body, chassis, driveline) to ensure it is safe and structurally capable of receiving rigging. Only use safe, capable structures for securing the vehicle. Do not place load on HV components.
- Rigging must not contact or apply force to HV components. Avoid winching or placing straps over or near HV components. Use non-conductive materials as needed.
- Refer to the vehicle owner manual or recovery guide to locate proper attachment and connection points and recommended transport methods.

1. Vehicle preparation for transport:

Drain residual water from the battery

If the vehicle is tilted at the conclusion of the fire containment activities, allow the vehicle to rest approximately level on the ground until the following two conditions are met:

5 minutes time on level ground have passed

Water is dripping from the battery bottom at no more than 1 drop per second

Once the water has drained on level ground, the towing personnel should prepare to winch the vehicle onto the truck/trolley.


Begin winching the vehicle onto the truck/trolley, but stop when the vehicle is near the steepest slope it will achieve. See the Figure below.

Allow the vehicle to drain until the following two conditions are met:

5 minutes time while inclined have passed

Water is dripping from the battery bottom at no more than 1 drop per second

Complete the winching activity and secure the vehicle to the tow truck.

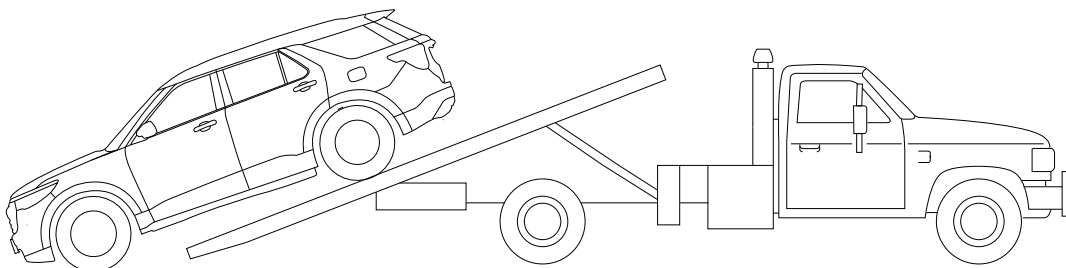



Ford Explorer Hybrid

Police Interceptor

2026-

2. Vehicle transport:

Select a drive route for towing the vehicle from the incident scene to the location that meets the following criteria in the order presented:

- Avoid high traffic density
- Avoid the use of highway tunnels
- Reduce the degree of steep roads during transportation
- Reduce the transportation distance

Drive with gentle accelerations, decelerations and turns.

Vehicle Storage

Contact an authorized Ford or Lincoln Dealer as soon as possible as there may be additional steps necessary to secure, handle, and/or store the High Voltage battery and vehicle.

Do not store a severely damaged vehicle with a lithium-ion battery inside a structure, any enclosed container or within 15 m (50 ft) of any structure or vehicle.

Make sure the passenger and cargo compartments remain ventilated.

Prior to placing vehicle in storage, and while located in storage area/tow lot, continue to inspect vehicle for leaking fluids, sparks, smoke, flames, gurgling or bubbling sounds from the High Voltage battery and call 911 if any of these are detected.

Maintain clear access to stored vehicles for monitoring and emergency response if needed.

Do not place load on HV components. DO NOT ATTEMPT TO DISCHARGE THE HV BATTERY.

Securing straps must not contact or apply force to HV components. Avoid winching or placing straps over or near HV components. Use non-conductive materials as needed.






Ford Explorer Hybrid

Police Interceptor

2026-

If the vehicle and/or battery High Voltage system is damaged, place a sign indicating that it is a battery electric vehicle with potentially dangerous High Voltage. See example below:

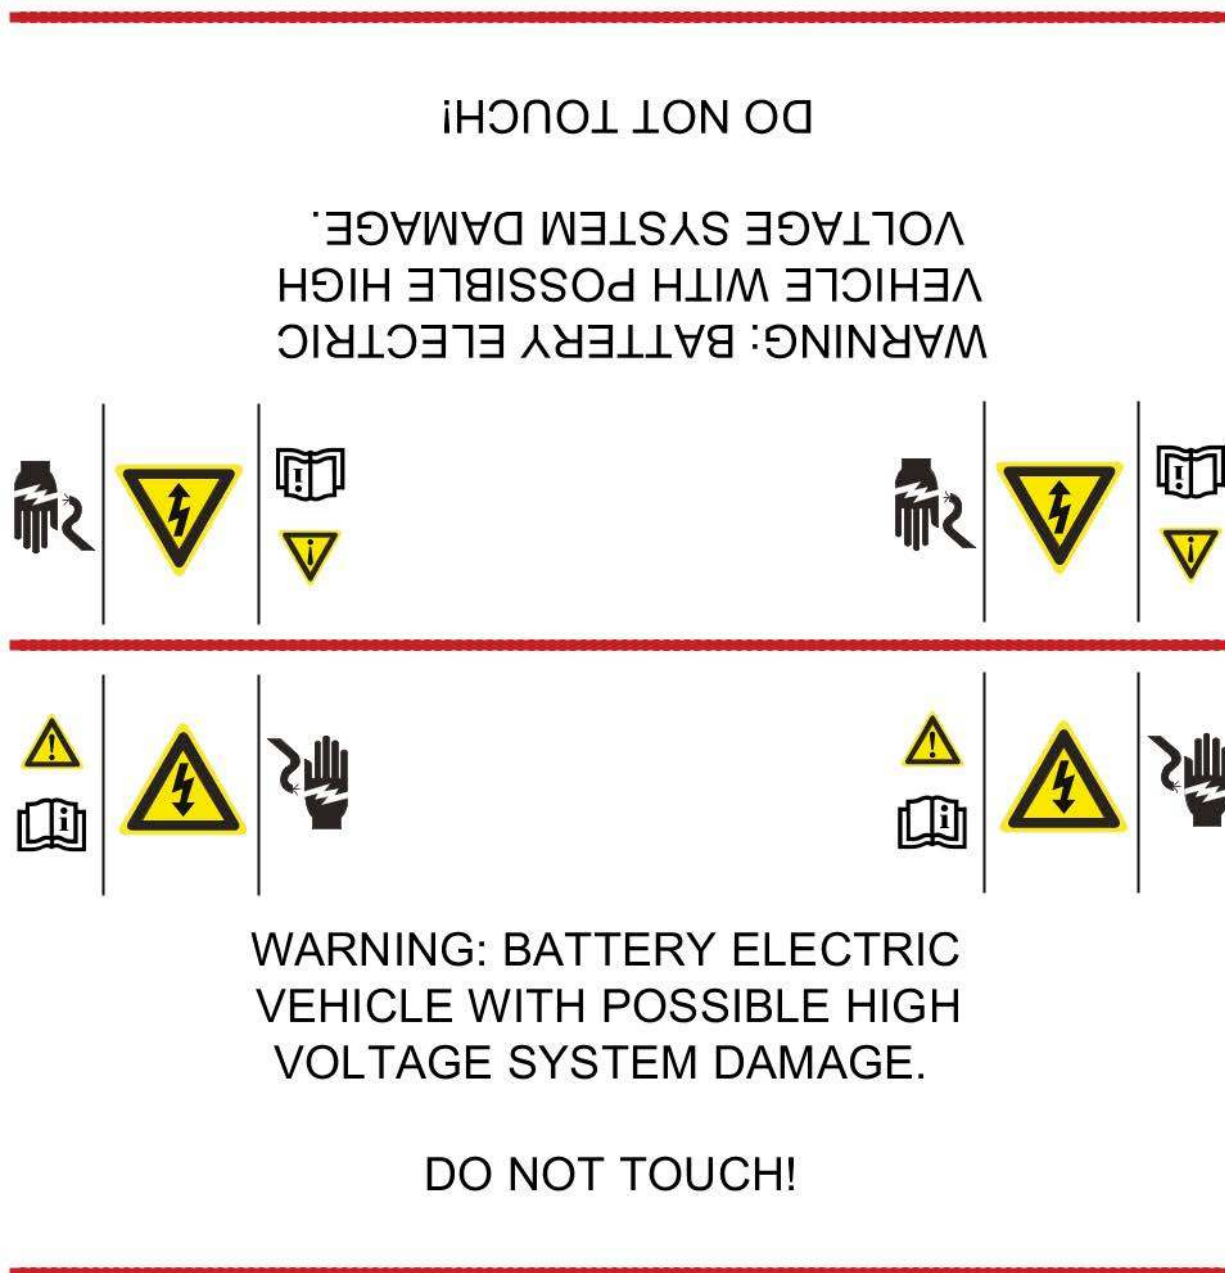



Ford Explorer Hybrid

Police Interceptor

2026-

9. Important additional information

HV Battery transport:

DDR (Damaged, Defective, Recalled) HV batteries must satisfy special shipping regulations per Department of Transportation (DOT) and Transportation of Dangerous Goods (TDG) in the US and Canada markets.

DDR HV batteries must be transported in metal containers which have been certified for that purpose.

HV Battery storage:

DDR HV batteries should be shipped to recyclers for disposal as soon as possible. Consult with relevant authorities and fire safety experts to ensure compliance with regulations and the effectiveness of any fire suppression systems in place when HV batteries will be stored for a significant amount of time.

For First Responder Resources, refer to <https://www.ford.com/firstresponder/>

© Copyright 2026, Ford Motor Company. All rights reserved. This document may be reproduced in its entirety and distributed for emergency responder use only. It may not be excerpted for any purpose.

10. Explanation of pictograms used



Flammable



Explosive



Corrosives



Hazardous
to the
human health



Environmental
hazard



Electric
vehicle



Left-Hand
Drive



Use water
to extinguish
the fire



General
warning



Warning,
Electricity



Open
Hood/Frunk



Use infrared thermometer /
Thermal Infrared camera

