




GreenPower Motor Co. - BEAST - Electric School Bus

Model Year 2021– 2026

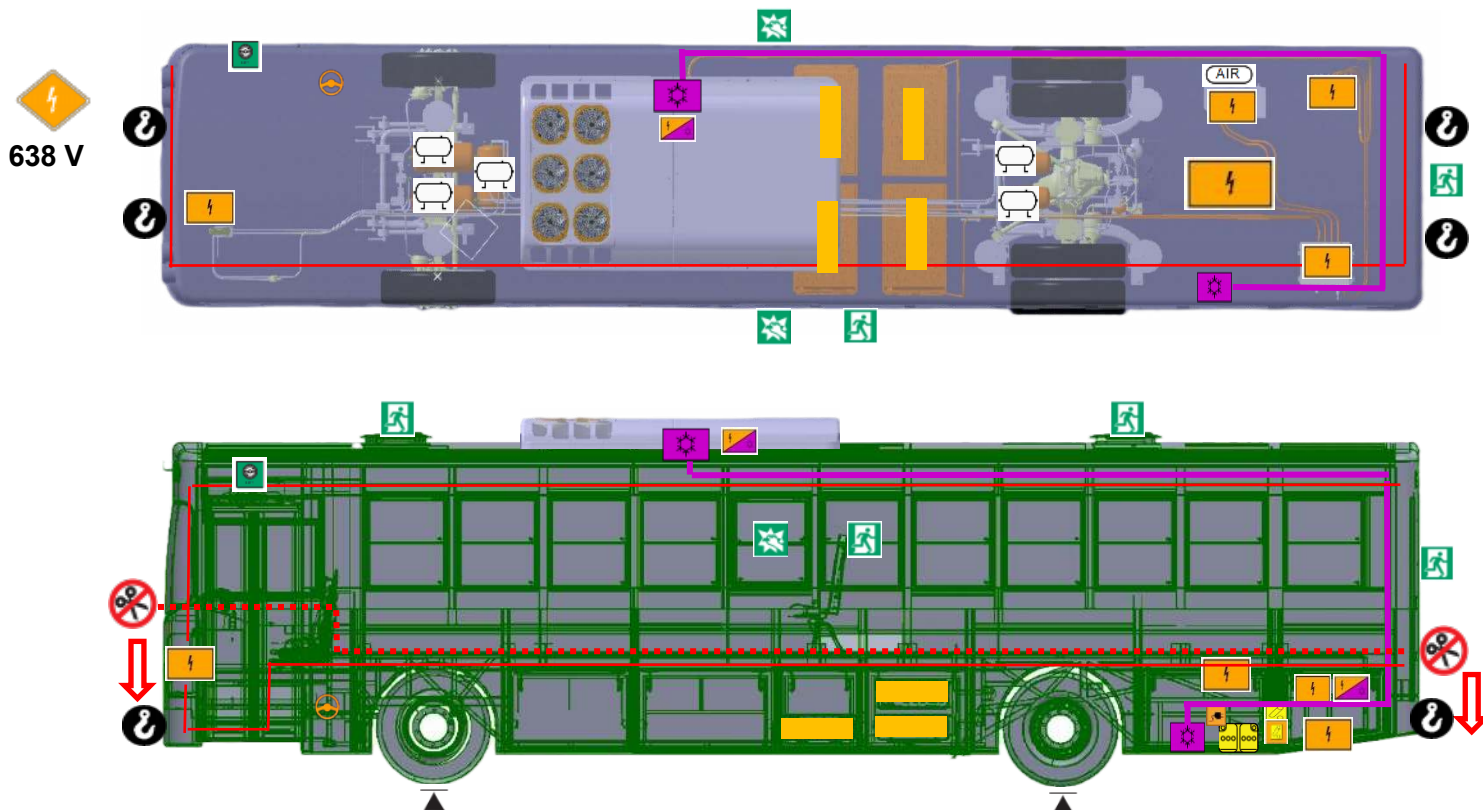

WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, NEVER CUT OR ATTEMPT TO BREACH HIGH-VOLTAGE BATTERIES, HIGH-VOLTAGE COMPONENTS, OR HIGH-VOLTAGE WIRING.

	Low-Voltage Battery		High-Voltage Battery		High-Voltage Component		High-Voltage Charge Port		Battery Thermal Management System
	Low-Voltage Disconnect		12V Shutoff for High-Voltage		High-Voltage Disconnect		Tow Hook		Air Conditioning Component
	High-Voltage Power Cable		Low-Voltage Power Cable		Air Condition Line		Lift Point		Air Compressor
	Emergency Exit		Break For Access		Emergency Door Release		High Strength Structure		Hood Release
	Electric Propulsion		No Cut Below Line		Air Reservoir		Hydraulic Steering Reservoir		

1. Identification / Recognition



Figure 1. Exterior Badge

Exterior Identification

GreenPower Motor logo is located on the front compartment door.



Figure 2. Instrument Cluster & VIN Decal

Interior Identification

1. GreenPower Motor logo on the cluster.
2. GreenPower Motor logo on the VIN decal above the driver's head.

High-Voltage Cable and Component Identification

High-voltage cables and components can be identified by the following:

- A triangle with a lightning bolt
- ORANGE in color and / or ORANGE with stripes



Figure 3. High-Voltage Cable and Component Labels



Figure 4. High-Voltage Cables

2. Immobilization / Stabilization / Lifting



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, OR DAMAGE TO PROPERTY, DRAIN ALL AIR FROM THE SUSPENSION SYSTEM PRIOR TO MOVING A COMPROMISED VEHICLE WHENEVER POSSIBLE. FAILURE TO DO SO COULD RESULT IN THE VEHICLE UNCONTROLLABLY SHIFTING OR MOVING DUE TO AIR BEING RELEASED.



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, OR DAMAGE TO PROPERTY, DO NOT LIFT OR APPLY FORCE UNDER HIGH-VOLTAGE BATTERIES, COMPONENTS, OR CABLES. WHEEL LIFTS OR PLATFORM LIFTS ARE RECOMMENDED.



Figure 5. Wheel Chocks

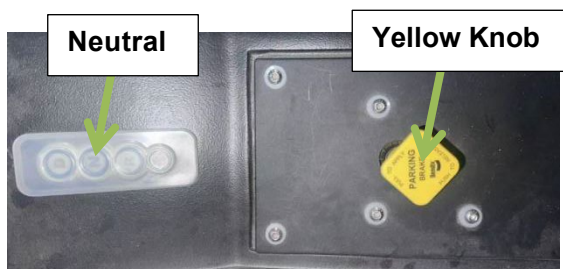


Figure 6. Yellow Knob and Neutral



Figure 7. Ignition Key OFF




Figure 8. Depress for Off Position

1. Chock the wheels.
2. Set parking brake by pulling the **Yellow Knob** on the driver's lower left panel and place the vehicle into **Neutral**.
3. Turn the ignition key to the OFF position.
4. Remove key from the ignition.
5. Open the second compartment door counting from the rear of the vehicle at the roadside, and turn off the 12/24V master switch by depressing the red button.

2. Immobilization / Stabilization / Lifting

	Raise the vehicle under the axles at the lifting points shown. Install support stands under the axles and side members for stability.
	Only use tow hooks to lift or recover the vehicle short distances.

3. Disable Direct Hazards / Safety Regulations

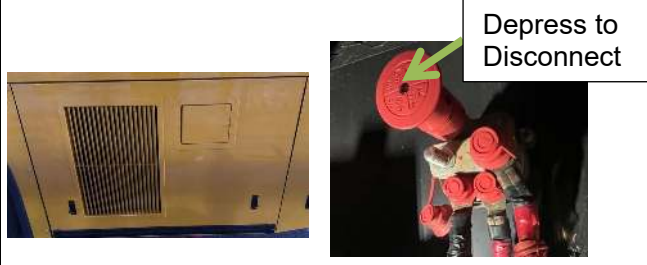
	WARNING: To prevent personal injury and / or death, ALWAYS REMEMBER to turn OFF the 12V/24V disconnect switch and Remove the high-voltage Manual Service Disconnect (MSD) when interacting with a damaged electric vehicle. 1. There is still high voltage potential in the HV component compartment. 2. Never touch ORANGE cables without wearing appropriate High-Voltage Personal Protective Equipment (PPE).	
	1. Chock the wheels. 2. Set parking brake by pulling the Yellow Knob on the driver's lower left panel and place the vehicle into Neutral. 3. Turn the ignition key to the OFF position. 4. Remove key from the ignition. 5. Open the second compartment door counting from the rear of the vehicle at the roadside, and turn off the 12/24V master switch by depressing the red button	
	 Figure 9. 12V/24V Disconnect Switch	The only 12V/24V disconnect switch for shutting down low voltage is located inside the rear driver-side compartment.
	Wait 1 minutes for high-voltage energy to dissipate.	

3. Disable Direct Hazards / Safety Regulations



TO PREVENT PERSONAL INJURY AND / OR DEATH, HIGH-VOLTAGE COMPONENTS REMAIN LIVE AFTER THE 12/24V DISCONNECT SWITCH IS TURNED OFF. THESE COMPONENTS ARE LOCATED PRIMARILY BETWEEN THE FRAME RAILS ON THE UNDERSIDE OF THE VEHICLE.

Driver Side

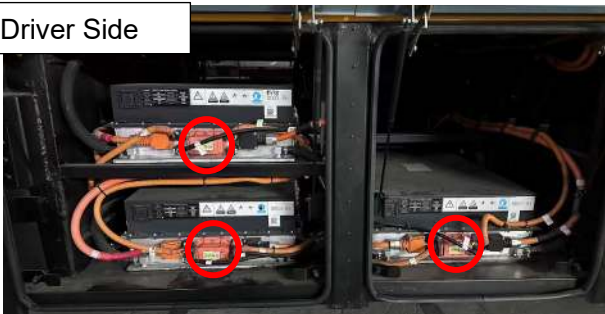

Passenger Side



Rear Driver Side

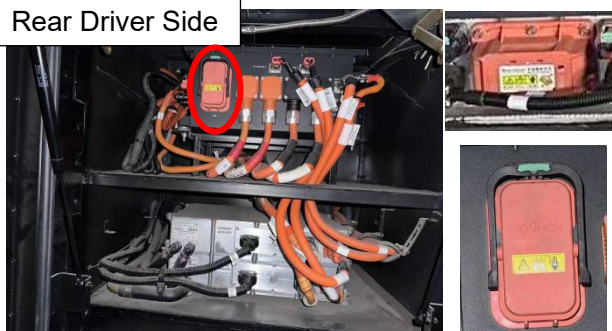


Figure 10. Manual Service Disconnects (MSDs)

High-voltage components can be shut down via Manual Service Disconnects (MSDs) located at frame level on the vehicle's underside:

- **HV Battery Compartment:** Three on the driver side and three on the passenger side (mid-section).
- **Rear Compartment:** One located on the driver side.

MSD Removal Procedure:



Pull the green tab to release the black handle partway



4. Access to the Occupants

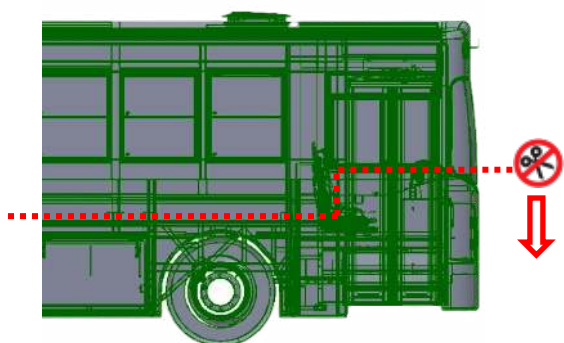


Figure 11. Do Not Cut Below Line

Do not cut below the red dotted line.

Be aware of the high-strength body structure as shown.



Middle Inside



Middle Outside



Rear Inside

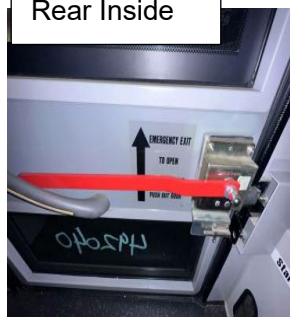


Figure 12. Emergency Door Exit

EMERGENCY DOOR EXIT (Middle Driver Side & Rear)

From Inside:

1. Open interlock latch.
2. Rotate the red door handle towards upside.
3. Push the door outward.

From Outside:

Follow the arrow direction to rotate the black handle and pull open the emergency exit.



Figure 13. Entrance Door Release (Inside)

ENTRANCE DOOR MANUAL RELEASE (Inside)

The red handle is located above the entrance door.

Rotate the handle counterclockwise and push the entrance door towards outside.



Figure 14. Entrance Door Release (Outside)

ENTRANCE DOOR MANUAL RELEASE (Outside)

A key lock is located on the right side of the entrance door. Rotate the key counterclockwise to release the entrance door.

From Outside: Pull the entrance door by grabbing the handle or the rubber trim.

From Inside: Push the entrance door towards outside.



Figure 15. Emergency Window

EMERGENCY WINDOW EXIT (Opens from inside only)

1. Follow the decal instruction to lift red handle up.
2. Push the window outwards.

Break the glass if accessing from outside.



Figure 16. Emergency Roof Hatch Exit

EMERGENCY ROOF HATCH EXIT

From inside:

1. Rotate handle to the EXIT.
2. Push from interior.

From outside:

1. Follow the decal instruction to rotate the knob to the open.
2. Then pull knob to open the hatch

4. Access to the Occupants



Figure 17. Driver Seat Controls

Adjust the driver's seat via air-operated switches and a manual metal lever for fore-and-aft positioning.



Left-hand
Up and Down

Right-hand
Back and Forth



Figure 18. Steering Column Control

Left-hand knob: Loosen to adjust steering column height (up/down).

Right-hand knob: Loosen to adjust steering column reach (forward/backward)

5. Stored Energy / Liquids / Gases / Solids




WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, ALWAYS WEAR FULL PERSONAL PROTECTION EQUIPMENT (PPE), INCLUDING SELF-CONTAINED BREATHING APPARATUS (SCBA), WHENEVER FIRE IS INVOLVED.

Battery Pack



- Green glycol-based automotive coolant

5. Stored Energy / Liquids / Gases / Solids

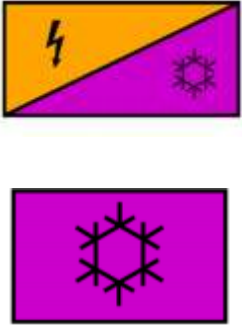		
	 - Green glycol-based automotive coolant - R134a refrigerant	
	 Red Mineral-based Automatic Transmission Fluid	
	 Air pressure of 80–140 psi (690–965 kPa)	

6. In Case of Fire



Establish a 20-foot radius “safety zone” around the vehicle.

- Use abundant amounts of water to extinguish a battery fire. Do not use ABC fire extinguishers to put out a battery fire.
- DO NOT extinguish battery fires with a small amount of water. Establish an additional water source as battery fires can take up to 24-hours to burn out.
- Use a thermal imaging camera to ensure all heat sources are extinguished.
- Standard firefighting practices can be applied to other portions of the vehicle to prevent the fire from spreading.



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, PAY ATTENTION TO SECONDARY FIRE EVENTS. THERE IS A HIGH RISK OF REIGNITION AFTER FIRE IS EXTINGUISHED.

7. In Case of Submersion



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, PAY ATTENTION TO SECONDARY FIRE EVENTS. THERE IS A HIGH RISK OF REIGNITION DUE TO DAMAGE AND CORROSION. SALTWATER INCREASES THIS RISK FOR ELECTRICAL SHORTS POST INCIDENT. KEEP FULL PERSONAL PROTECTION EQUIPMENT (PPE) READY, INCLUDING SELF-CONTAINED BREATHING APPARATUS (SCBA).



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, HANDLE A SUBMERGED VEHICLE WITH APPROPRIATE PERSONAL PROTECTION EQUIPMENT (PPE). CONSIDER THE ENTIRE VEHICLE AS ENERGIZED.



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, AVOID ANY CONTACT WITH A SUBMERGED HIGH-VOLTAGE SYSTEM. DO NOT ATTEMPT TO DISABLE THE MSD WHILE THE VEHICLE IS SUBMERGED.



Follow Section 2 – Immobilization / Stabilization / Lifting and Section 3 – Disable Direct Hazards / Safety Regulations.

8. Towing / Transportation / Storage



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, PAY ATTENTION TO SECONDARY FIRE EVENTS. EVEN DAYS LATER SECONDARY FIRE EVENTS CANNOT BE EXCLUDED.



- Check battery temperature.