



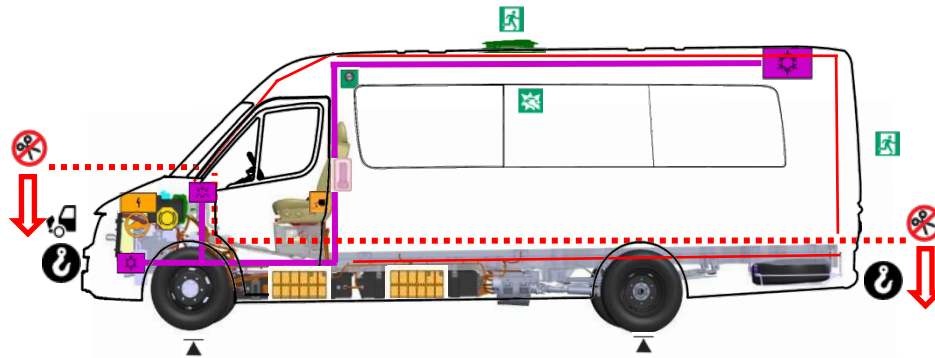


570V

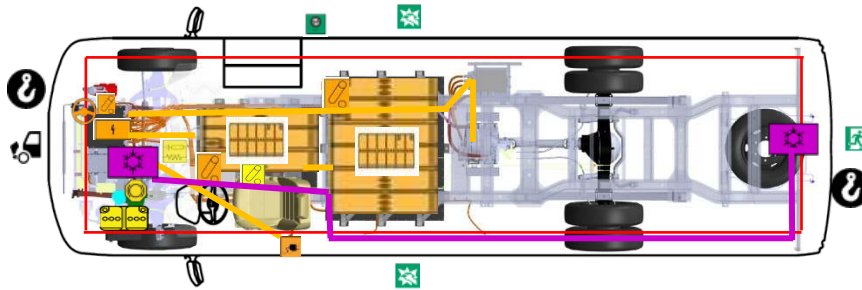

WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, NEVER CUT OR ATTEMPT TO BREACH HIGH-VOLTAGE BATTERIES, HIGH-VOLTAGE COMPONENTS, OR HIGH-VOLTAGE WIRING.

	Low-Voltage Battery		High-Voltage Battery		High-Voltage Component		High-Voltage Charge Port		Battery Thermal Management System
	Low-Voltage Disconnect		SRS Control Unit		High-Voltage Disconnect		Tow Hook		Air Conditioning Component
	High-Voltage Power Cable		Low-Voltage Power Cable		Air Condition Line		Lift Point		No Cut Below Line
	Emergency Exit		Break For Access		Emergency Door Opener		Seat Belt Pretension		Hood Release
	Electric Propulsion		High Strength Structure		Hydraulic Steering Reservoir		Hydraulic Brake Reservoir		

1. Identification / Recognition



Figure 1. Exterior Badge

Exterior Identification

1. GreenPower Motor Electric logo is located on the front grill.
2. GreenPower Motor Electric logo is located on the back door



Figure 2. Interior Identification

Interior Identification

1. GreenPower Motor logo in the cluster.
2. GreenPower Motor logo is located on the VIN decal which is installed on the driver door jamb
3. GP badge is located on the steering wheel

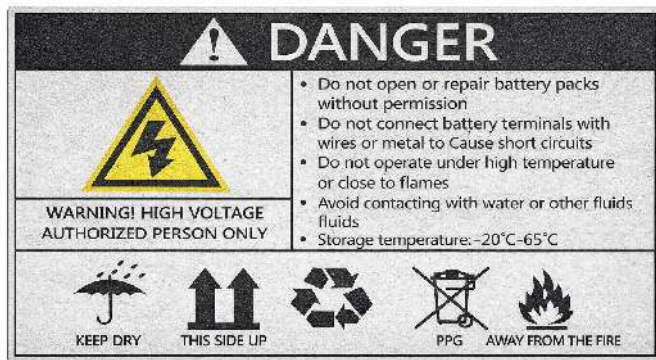


Figure 3. High-Voltage Cable and Component Labels

High-Voltage Cable and Component Identification

High-voltage cables and components can be identified by the following:

- A triangle with a lightning bolt
- ORANGE in color and / or ORANGE with stripes



Figure 4. High-Voltage Cables

2. Immobilization / Stabilization / Lifting



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, OR DAMAGE TO PROPERTY, DO NOT LIFT OR APPLY FORCE UNDER HIGH-VOLTAGE BATTERIES, COMPONENTS, OR CABLES. WHEEL LIFTS OR PLATFORM LIFTS ARE RECOMMENDED.



Figure 5. Wheel Chocks



Figure 6. Parking brake and Neutral



Figure 7. Ignition Key OFF



12V Switch OFF

12V Switch ON

Figure 8. 12V Switch Position

1. Chock the wheels.
2. Set parking brake by pulling the lever upward and place the vehicle into Neutral (gear selector).
3. Turn the ignition key to the OFF position.
4. Remove key from the ignition.
5. Turn the 12V switch off. The switch is located below the driver's seat, on the right-hand side.

2. Immobilization / Stabilization / Lifting

	Raise the vehicle under the axles at the lifting points shown. Install support stands under the axles and side members for stability.
	Only use tow hooks to lift or recover the vehicle short distances.

3. Disable Direct Hazards / Safety Regulations

	WARNING: To prevent personal injury and / or death, ALWAYS REMEMBER to turn OFF the 12V disconnect switch and Remove the high-voltage disconnect switch (MSD) when interacting with a damaged electric vehicle. 1. Even after disconnecting MSD, a potential for high voltage remains within the HV component compartment 2. Never touch ORANGE cables without wearing appropriate High-Voltage Personal Protective Equipment (PPE).	
	1. Chock the wheels. 2. Set parking brake by pulling the handbrake upward and place the vehicle into Neutral (gear selector). 3. Turn the ignition key to the OFF position. 4. Remove key from the ignition. 5. Turn the 12V switch off. The switch is located below the driver's seat, on the right-hand side.	
	 12V Switch OFF 12V Switch ON Figure 9. 12V Disconnect Switch	The only 12V circuit breaker used to cut off low voltage is located below the driver's seat, on the right-hand side.
	Wait 1 minute for high-voltage energy to dissipate.	

3. Disable Direct Hazards / Safety Regulations



TO PREVENT PERSONAL INJURY AND / OR DEATH, HIGH-VOLTAGE COMPONENTS REMAIN LIVE AFTER THE 12V DISCONNECT SWITCH IS TURNED OFF. THESE COMPONENTS ARE LOCATED PRIMARILY UNDER THE HOOD AND UNDERNEATH THE CHASSIS OF THE VEHICLE.

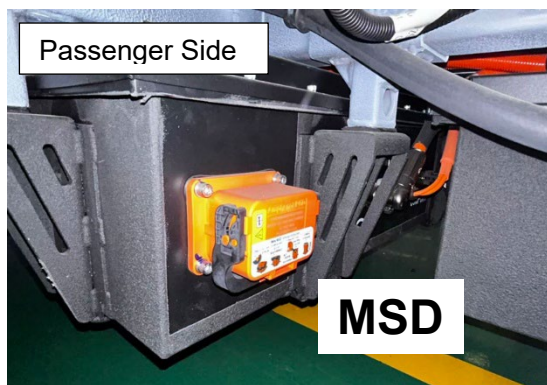


Figure 10. Manual Service Disconnect

High-voltage components can be shut down via Manual Service Disconnects (MSDs) located at below specified locations:

Large Battery Pack:

- The MSD is located on the rear side at the Passenger Side

Small Battery Pack:

- The MSD is located on the side of the pack at the Driver Side.

Power Distribution Unit (PDU):

- The MSD is located on the side of the box at the Passenger Side under the hood

MSD Remove procedure:



a. MSD switch in ON position



b. Pull out first stage fuse switch



c. Flip black lever to 60°



d. Press down second stage fuse



e. Synchronously flip lever out to 90°



f. Pull black lever out

4. Access to the Occupants

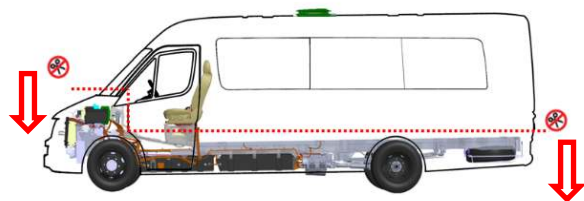


Figure 11. Do Not Cut Below Line

Do not cut below the red dotted line.

Be aware of the high-strength body structure as shown.



Figure 12. Entrance Door Release (Outside)

ENTRANCE DOOR MANUAL RELEASE (Outside)

The entrance door manual release is located at the body skirting right behind the front entrance door.

Once Released,

From Outside: Press the red button to release the protective cover, pull the red handle, and then pull the entrance door towards outside.

From Inside: Push the entrance door towards outside.



Figure 13. Entrance Door Release (Inside)

ENTRANCE DOOR MANUAL RELEASE (Inside)

The red handle is located next to the front entrance door on the B-pillar at passenger side.

Once Released,

From Inside: Open the outer protective cover and pull red handle down to release the entrance door. Then, push the entrance door towards outside.

From Outside: Pull the entrance door towards outside.



Figure 14. Emergency Window

EMERGENCY WINDOW EXIT (Middle Driver Side & Passenger Side)

1. Follow the decal instruction to lift red handles up.
2. Push the window outward.



Passenger Side



Driver Side



Figure 15. Rear Emergency Door Exit (Inside)

REAR EMERGENCY DOOR EXIT (Rear Inside)

1. There are two latches on the rear door. Follow the decal instruction to open the latch on each side
2. For the passenger side door, open the latch outside, and push the door outside. For the driver side door, push the latch outside, and push the door outside.
3. Push the door outward.

If accessing from outside, break the glass and unlock the door. Open the door using the outside door handle.



Figure 16. Rear Emergency Door Exit (Outside)

REAR EMERGENCY DOOR EXIT (Rear Outside)

1. Insert the car key into the lock and turn clockwise.
2. Pull the handle towards outside.

4. Access to the Occupants



Figure 17. Emergency Roof Hatch Exit

EMERGENCY ROOF HATCH EXIT

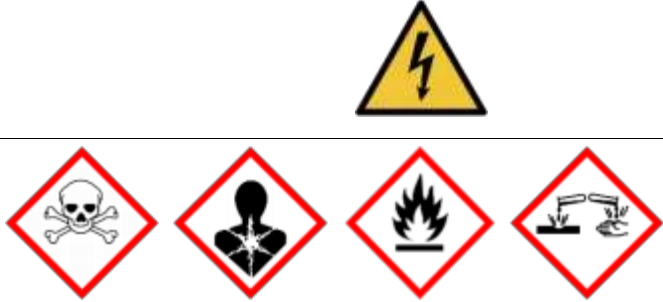
1. Rotate red handle counterclockwise.
2. Push the roof hatch outside to EXIT.
3. If opening from outside, turn the red knob counter-clockwise until it reaches its stop, and then pull the red knob to open the hatch.

	 Figure 18. Driver Seat Controls	The driver seat can be side handles and front steel rod.
	 Figure 19. Steering Column Control	The steering column will move up and down by loosening the hand knob.

5. Stored Energy / Liquids / Gases / Solids



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, ALWAYS WEAR FULL PERSONAL PROTECTION EQUIPMENT (PPE), INCLUDING SELF-CONTAINED BREATHING APPARATUS (SCBA), WHENEVER FIRE IS INVOLVED.

	 Green glycol-based automotive coolant
	 Red Mineral-based Automatic Transmission Fluid

 			
	   		
	• RED glycol-based automotive coolant • R134a Refrigerant		

6. In Case of Fire



- Establish a 20-foot radius “safety zone” around the vehicle.**
- Use abundant amounts of water to extinguish a battery fire. Do not use ABC fire extinguishers to put out a battery fire.
 - DO NOT extinguish battery fires with a small amount of water. Establish an additional water source as battery fires can take up to 24-hours to burn out.
 - Use a thermal imaging camera to ensure all heat sources are extinguished.
 - Standard firefighting practices can be applied to other portions of the vehicle to prevent the fire from spreading.



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, PAY ATTENTION TO SECONDARY FIRE EVENTS. THERE IS A HIGH RISK OF REIGNITION AFTER FIRE IS EXTINGUISHED.

7. In Case of Submersion



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, PAY ATTENTION TO SECONDARY FIRE EVENTS. THERE IS A HIGH RISK OF REIGNITION DUE TO DAMAGE AND CORROSION. SALTWATER INCREASES THIS RISK FOR ELECTRICAL SHORTS POST INCIDENT. KEEP FULL PERSONAL PROTECTION EQUIPMENT (PPE) READY, INCLUDING SELF-CONTAINED BREATHING APPARATUS (SCBA).



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, HANDLE A SUBMERGED VEHICLE WITH APPROPRIATE PERSONAL PROTECTION EQUIPMENT (PPE). CONSIDER THE ENTIRE VEHICLE AS ENERGIZED.



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, AVOID ANY CONTACT WITH A SUBMERGED HIGH-VOLTAGE SYSTEM. DO NOT ATTEMPT TO DISABLE THE MSD WHILE THE VEHICLE IS SUBMERGED.



Follow Section 2 – Immobilization / Stabilization / Lifting and Section 3 – Disable Direct Hazards / Safety Regulations.

8. Towing / Transportation / Storage



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, PAY ATTENTION TO SECONDARY FIRE EVENTS. EVEN DAYS LATER SECONDARY FIRE EVENTS CANNOT BE EXCLUDED.



- Check battery temperature.