

INFORMATION FOR FIRST AND SECOND RESPONDERS

EMERGENCY RESPONSE GUIDE



Kia TELLURIDE HEV

Li-ion Battery

Li-ion



Introduction

The ERG (Emergency Response Guide) provided by Kia describes emergency response operations, warnings and precautions related to the vehicle. This publication is intended to provide necessary information for vehicle accident rescue operations and for the training and further education of first and second responders.

It is not intended for retailers, end consumers, or any other readers not mentioned in the preceding sentence. Please note that the guide may be updated by Kia on an ongoing basis. The provided guide applies only to the Kia Telluride HEV and includes information about the location and description of the high-voltage parts and the vehicle's structure. However, it does not cover every scenario in emergencies. Failure to follow the recommended procedures during emergency response may result in death or other serious injuries. It is important to read the guide in advance as it contains necessary information about the vehicle's features and other contents in the event of an accident.

IMPORTANT INFORMATION



WARNING

“A WARNING” indicates a situation in which harm, serious injury, or death could happen if the warning is ignored.

Contents

0. Rescue sheet(s)	1
1. Identification / recognition	2-4
2. Immobilization / stabilization / lifting	5-6
3. Disable direct hazards / safety regulations	7-9
4. Access to the occupants	10-12
5. Stored energy / liquids / gases / solids	13-15
6. In case of fire	16-20
7. In case of submersion	21
8. Towing / transportation / storage	22-24
9. Important additional information	25-28
10. Explanation of pictograms used	29

0. Rescue sheet(s)




KIA TELLURIDE HYBRID
SUV, 5 doors
FROM 2026










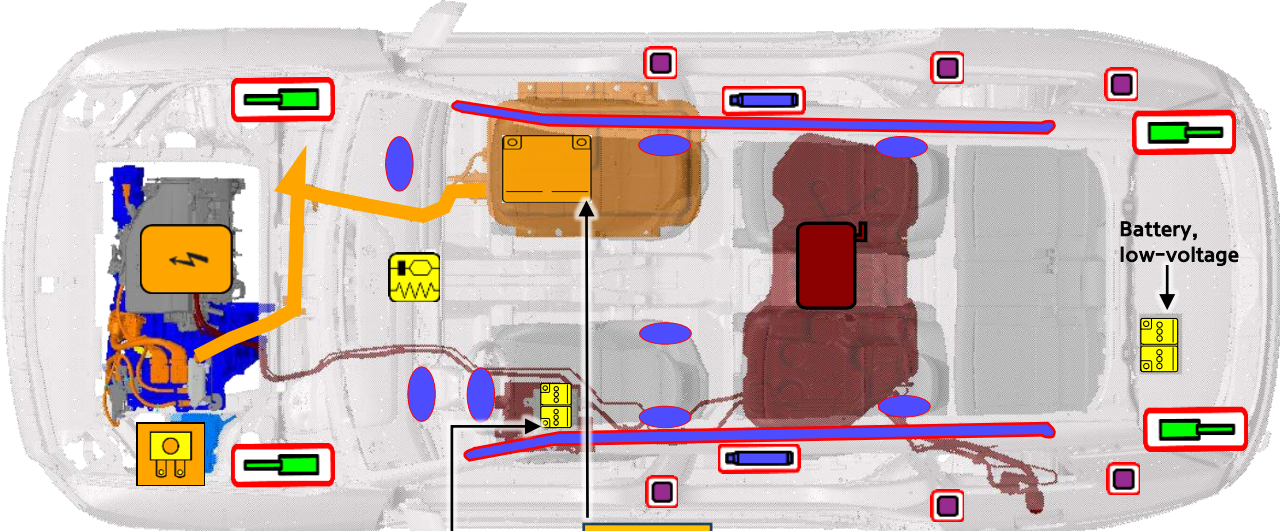

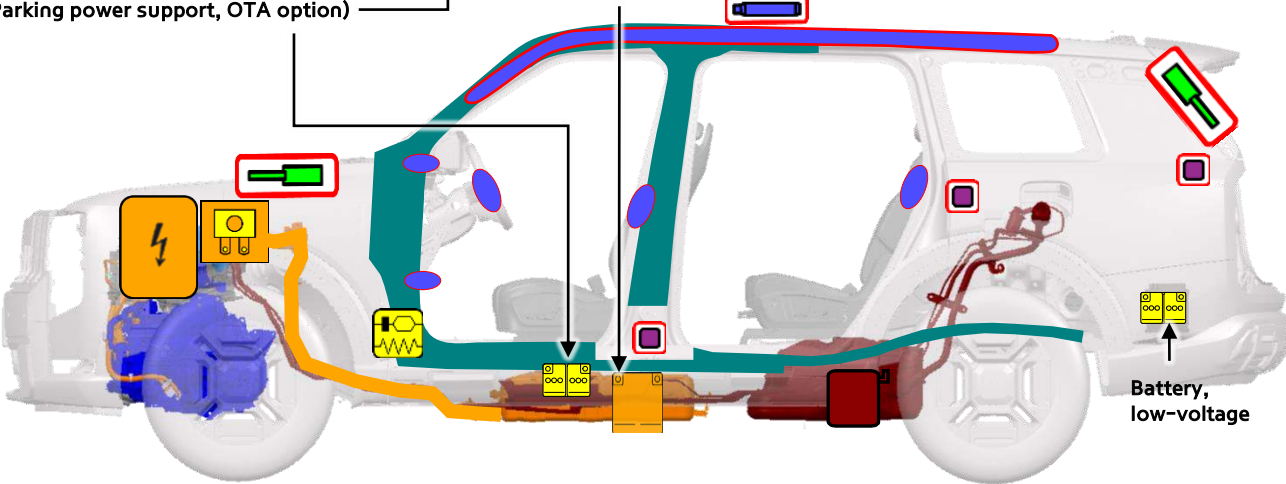

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Battery, low-voltage		Gas strut / Preloaded spring		High strength zone		Fuel tank content gasoline / ethanol
	Battery pack, high-voltage		High voltage power cable		High voltage component		Fuse box disabling high voltage

1. Identification / recognition

Purpose


The ERG (Emergency Response Guide) provides the towing, emergency response industry, and responders with the proper way to handle the Telluride HEV in an emergency. It provides a basic description of the vehicle's major system and offers guidance for rescue responders to deal with various situations that may happen. The emergency response procedures for this vehicle are similar to the those for vehicles without high-voltage system, and additional information is included for handling high-voltage system.

Description of the Vehicle

Like other hybrid vehicles, Telluride HEV is powered by a conventional gasoline-powered internal combustion engine and a high-voltage electric motor to propel the vehicle. Unlike hybrid vehicles from rival companies, the Telluride HEV does not require charging from an external power source, such as a charging port at a charging station. The battery pack, high-voltage can be charged while the vehicle is in motion. This charging method is available through a hybrid-specific generator that makes electricity during driving and braking.

Dimensions

Items		mm
l	Overall length	5,060
w	Overall width	1,990
h	Overall height	Roof : 1,765 Roof Rack : 1,775

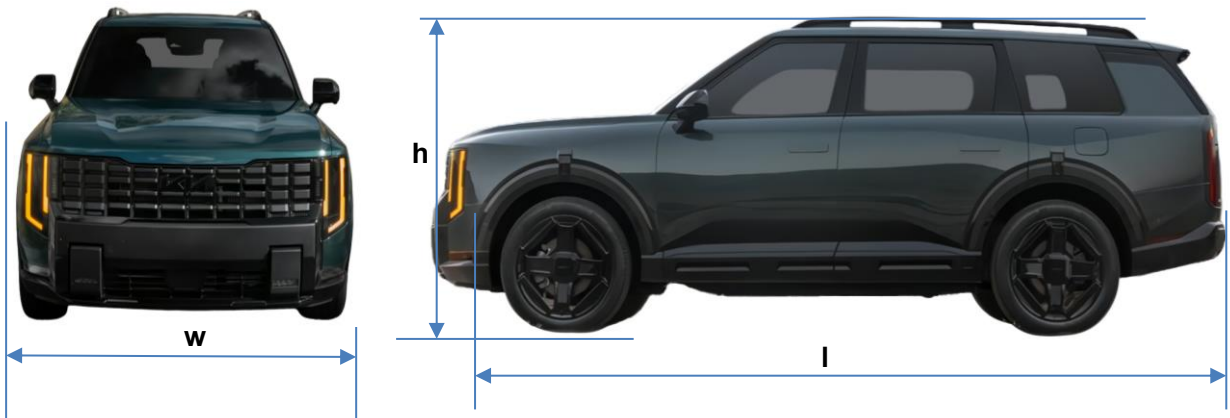

1. Identification / recognition

Description

When handling Telluride HEV, the safest identification method is to assume that the vehicle contains high-voltage system.


Telluride HEV can be identified by using the identification information listed below.

Identifying a KIA Telluride HEV

Brand Logo



Hybrid Emblem

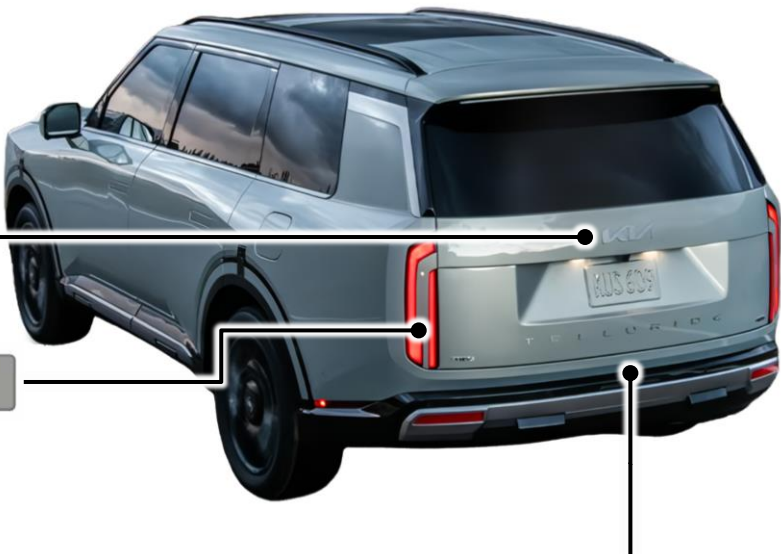

Model Name

TELLURIDE

1. Identification / recognition

Vehicle Identification Number (VIN)

XXXXXXXX**A**XXXXXXXXXX




You can identify the vehicle as an hybrid vehicle by checking the 8th character of the Vehicle Identification Number (VIN).


As shown in the illustration, the VIN is punched into the floor underneath the passenger seat, and is also displayed on the vehicle's exterior windshield.

For example, “**A**” of the VIN's 8th letter indicates that the vehicle is equipped with a 2.5 gasoline engine HEV.

Engine Room and Lower Part of the Vehicle

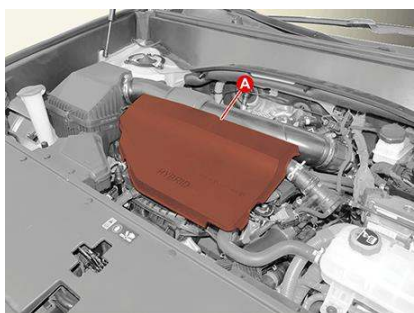

The Telluride HEV has “HYBRID” clearly marked on the top of the engine cover.

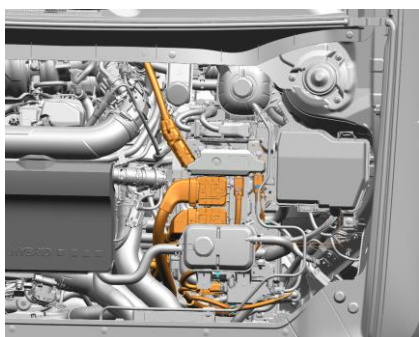

Also, the orange high-voltage power cable can be identified.


※ The battery pack, high-voltage (Li-ion pack, 60 V or higher) is installed under the vehicle floor (exterior), and the high-voltage wiring harness is colored orange.

2. Immobilization / stabilization / lifting

Immobilization

The next step is to immobilize the vehicle to prevent accidental movement that can endanger rescue responders or civilians. Because the Telluride HEV shuts off the gasoline engine when it is not required, the vehicle may appear to be shut off due to no engine sounds even when it is actually not.


When the “READY” mode, the vehicle can move silently by only using the electric motor. Rescue responders should approach the vehicle from the sides and stay away from the front or rear as they are potential paths for vehicle movement. Be sure to immobilize the vehicle in the following manner.

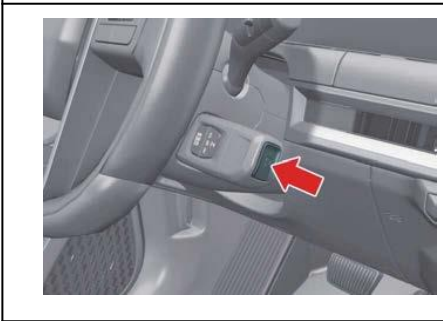	Pull the EPB switch located on the left side of the steering wheel.
	While depressing the brake pedal, press the side parking button to engage Park mode.
	Press the Start/Stop button to turn off the engine.
	Chock the wheels.


2. Immobilization / stabilization / lifting

Vehicle Lift

Use the standard support area () of the vehicle's lower member all the time as shown in the picture.
Do not use high-voltage power cables or other areas that are not considered normal.

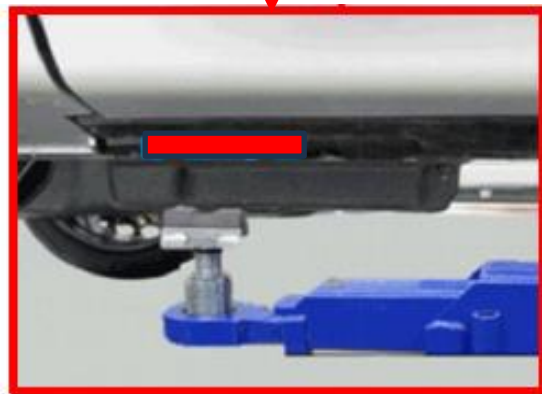

※ Actual images of the vehicle may differ from those shown.

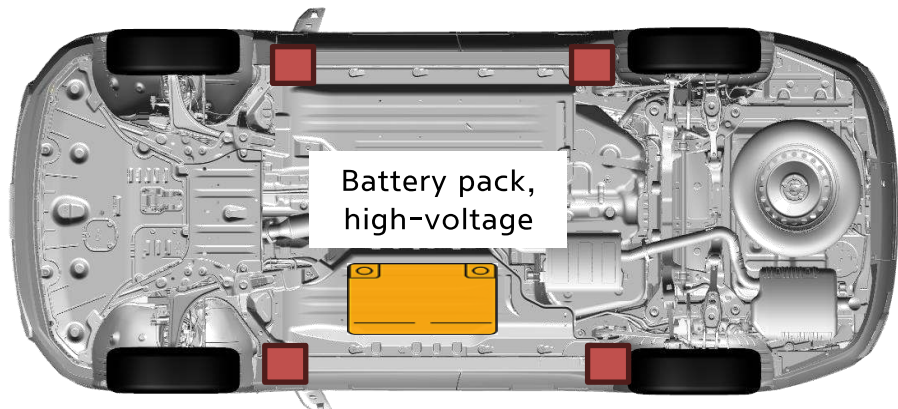

※ Caution : Do not use the battery pack, high-voltage as a lifting or support point for the vehicle.


3. Disable direct hazards / safety regulations

Disabling the System



The final step in the initial response process, after immobilizing the vehicle to prevent movements, is to disable the vehicle. Disabling the high-voltage system is available through the following process.

Smart Key System / Start/Stop Button / Battery, Low-Voltage

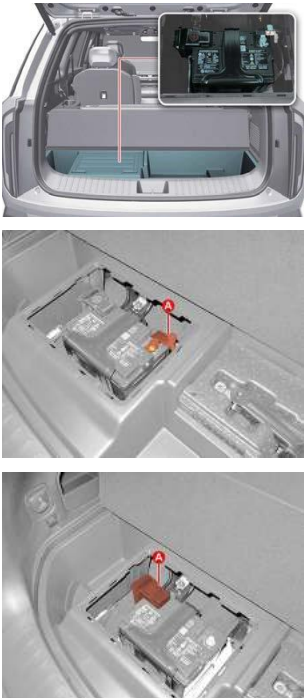Refueling (HEV)	※ If the vehicle is refueling, disconnect the fuel nozzle from the vehicle and stop fueling.
 HEV Start/Stop Button (Positioned within the shift lever)	※ Check for the drivable lamp on the instrument panel. When the lamp is ON, the vehicle is ON. a) When the lamp is OFF, the vehicle is OFF. Do not press the start/stop button as the vehicle is turned ON and can move. b) To disable the system, press the P (Park) button, then press the start/stop button to turn the vehicle OFF.
	Until disconnecting the battery, low-voltage, remove the smart key at least 2 meters (7 feet) away from the vehicle to prevent accidental restart.
	1. Open the liftgate. 2. Open the luggage board and remove the 12 V battery service cover. 3. Disconnect the 12 V battery negative (-) terminal (A) after loosening the nut. 4. Disconnect the 12 V battery positive (+) terminal (A) after loosening the nut.


3. Disable direct hazards / safety regulations

NOTICE

Before disconnecting the battery, low-voltage, lower the windows, unlock the doors, and open the liftgate if necessary.

Disconnecting the battery, low-voltage disables the window and door power control.

Disabling High Voltage System

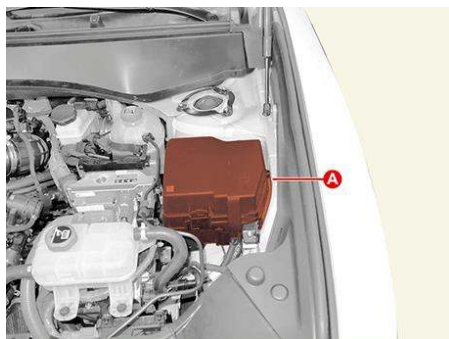

※ Remove the engine room fuse box cover (A).



Disconnect the service interlock connector shown below.

① : Pull the switch label.

※ It is normal for the switch label not to detach completely.



※ Service Interlock Connector
(Detailed View of Component)

If the above measures cannot be conducted, be aware that the high-voltage system may not be shut off, in addition to the possibility of sudden activation of the airbag system.

3. Disable direct hazards / safety regulations

WARNING

Warning for High Voltage!



- Before engaging in any emergency response procedures on the vehicle, shut off the high-voltage system. Wait for 5-10 minutes after shutting off to discharge the high-voltage capacitors sufficiently.
- Exposed cables or wires may be visible from the inside or outside of the vehicle. To avoid serious injuries or death from electric shock, do not touch the cables or wires until the high-voltage system is shut off.
- Failure to follow these procedures properly will lead to serious injuries or death from electric shock.

WARNING

Warning for Explosion!



- Airbag system components may deploy unexpectedly. Do not cut airbag components.
- Airbag components may be energized or activated even after shutting off or disabling 12 V electrical system. Before starting work, disconnect the battery negative (-) cables and wait for at least 3 minutes.
- Failure to follow these procedures properly will lead to serious injuries or death from explosion.

4. Access to the occupants

Initial response



When engaging in initial response on Telluride HEV in an emergency, follow these procedures. Work other than those listed below must be conducted following the standard procedures or guidelines of each institution. If the HEV is damaged by an accident, the high-voltage safety system may be affected and there may be a risk of electric shock. Be sure to sufficiently understand the precautions and wear appropriate personal protective equipment, such as insulated gloves and insulated boots. Remove metal accessories such as watches or rings from body before starting work on it.


Identification

When working on a Telluride HEV in an accident, responders should always assume that the vehicle is equipped with a high-voltage system and identify the vehicle model using the identification features described at the beginning of this ERG. Rescue responders should always inspect all of the vehicle and use the identification markings under the hood and in the vehicle.

4. Access to the occupants



Since the HEV is equipped with high-voltage components, responders should follow the procedures for identification, deactivation/stabilization, and exercise special care when rescuing occupants from the vehicle.

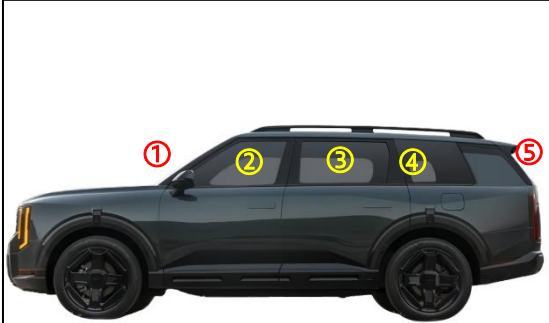


GLASS

- ① :Laminated
- ② :Tempered (OPT:Laminated)
- ③ :Tempered (OPT:Laminated)
- ④ :Tempered
- ⑤ :Tempered (W/Heated)




Emergency liftgate safety release

1. Remove the cover at the bottom of the liftgate.
2. Slide the latch in the direction of the arrow to unlock the liftgate.
3. Push the liftgate to open.

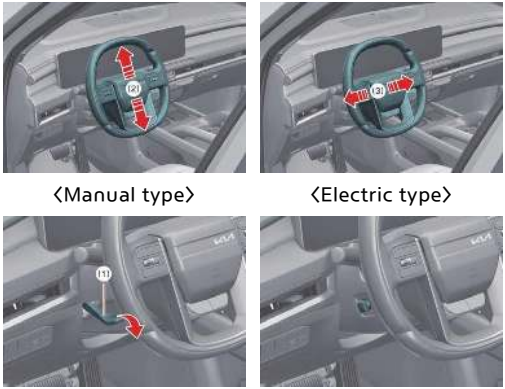

Steering column adjustment

- 〈Manual type〉
- 1) Pull the lock release lever down, then adjust the height and distance.
 - 2) Push the lock release lever up to lock it, and make sure it is securely fixed.
- 〈Electric type〉
- Adjust the steering wheel to the desired angle and distance forward/back with the switch.

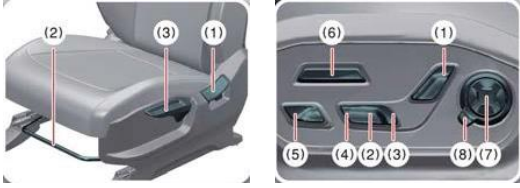

Seat adjustment

Check the specifications to confirm if the seat is manual or power type

Manual seat

- ①:Seatback angle
- ②:Forward and backward
- ③:Seat cushion height

Power seat

- ①:Seatback angle
- ②:Forward and backward
- ③:Seat cushion height
- ④:Seat cushion tilt
- ⑤:Leg support / cushion support
- ⑥:Relaxion comfort seat
- ⑦:Lumbar support
- ⑧:Bolster adjuster

4. Access to the occupants


Precautions when cutting the body

When engaging in rescue operations on Telluride HEV, it is recommended that responders follow the standard operation procedures of their department..

When cutting the vehicle body, areas other than those marked in gray are made of high strength zone, and they cannot be cut or broken with standard tools.

Hardened Zone

※ The green parts are difficult to cut using standard tools.

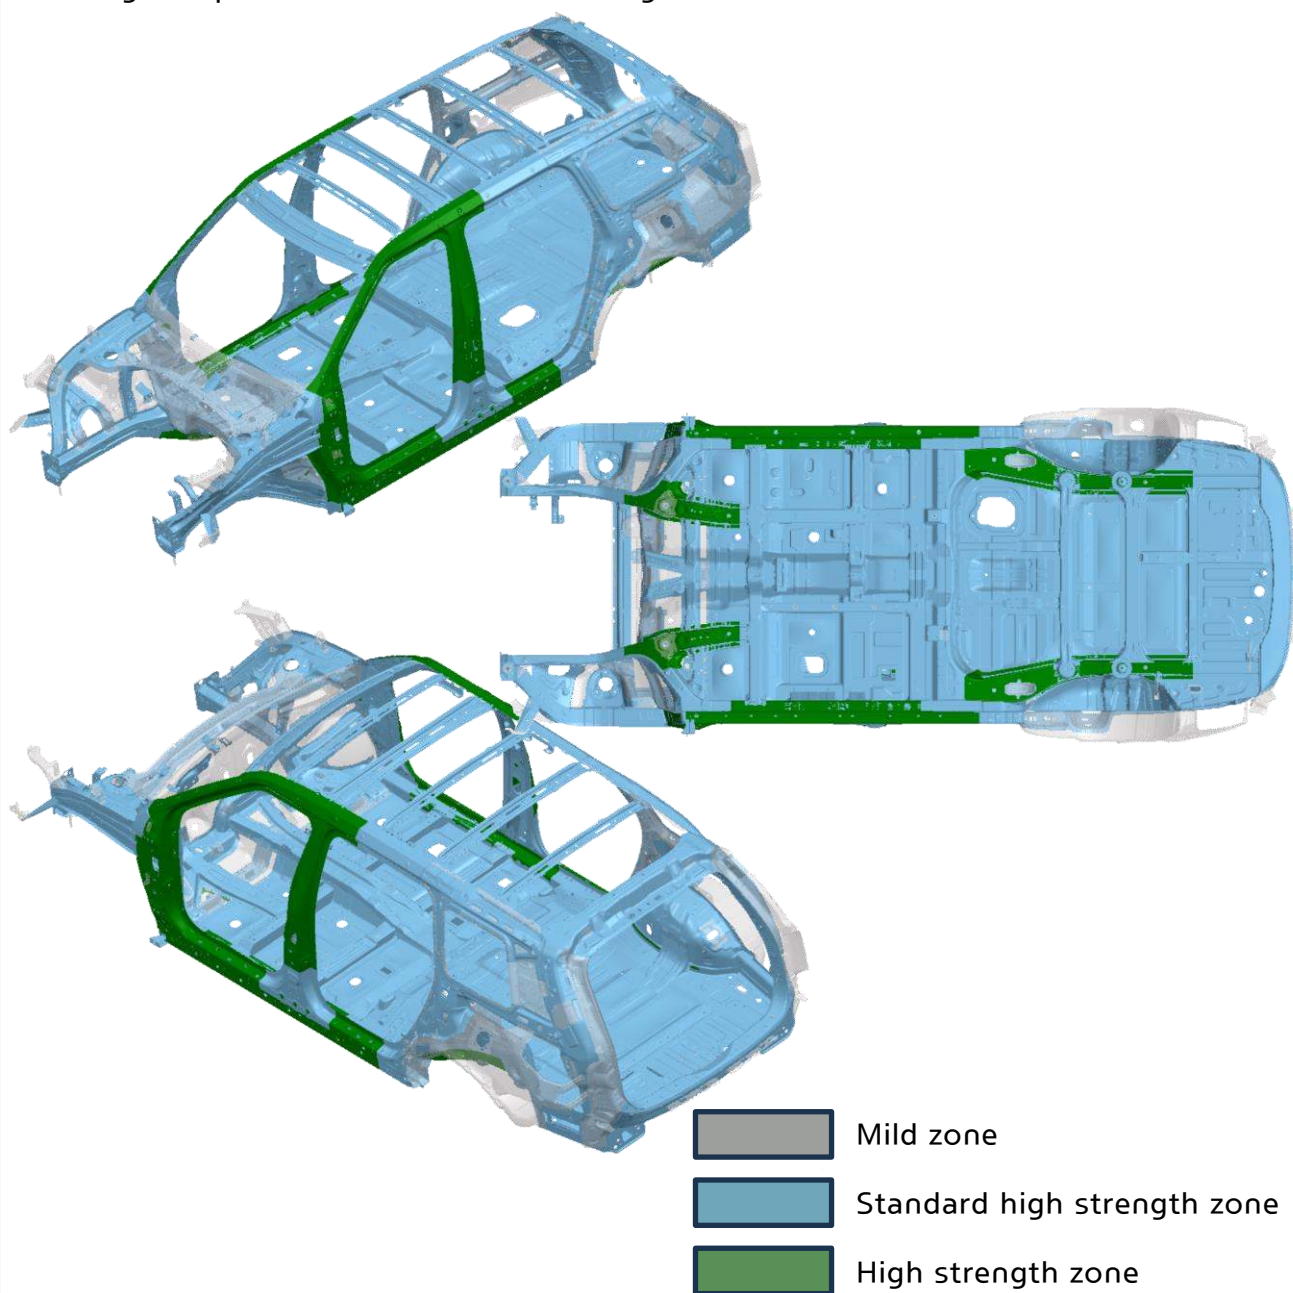


5. Stored energy / liquids / gases / solids

⚠️ **WARNING**

Warning for High Voltage! ⚡

- Never cut or disconnect the high-voltage orange cabling until the high-voltage system is cut off by removing the safety plug.
- Exposed cables or wires may appear from the vehicle’s inside or outside. To avoid serious injuries or death from electric shock, do not touch the cables or wires until the high-voltage system is shut off.
- Failure to follow these instructions will lead to serious injuries or death by electric shock.

Configuration

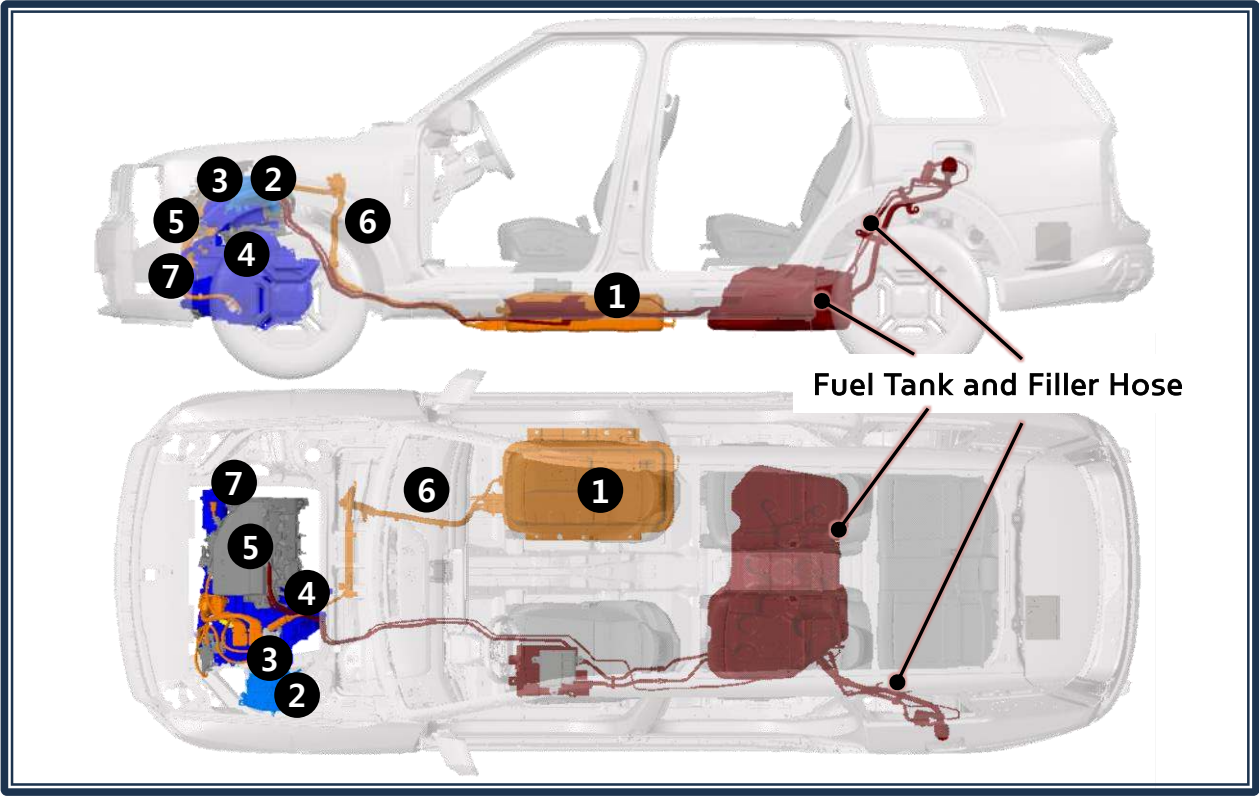

1	High-voltage Battery	Supplies electric current to the electric motor or stores electrical energy generated during operation.
2	High-voltage Junction Block	Supplies current from the battery pack, high-voltage to the inverter, LDC and others
3	HPCU	Hybrid Power Control Unit

5. Stored energy / liquids / gases / solids

4	Hybrid Motor	Rotating the motor and generating torque when current is flowing into coil
5	HSG	Hybrid Starter Generator
6	High-voltage power cable	High-voltage power cables are colored orange in accordance with SAE regulations.
7	Air Conditioning Compressor	Refrigerant type:R-1234yf, amount: $850 \pm 25\text{g}$

5. Stored energy / liquids / gases / solids



Battery Pack, High-Voltage

Lithium-ion battery pack, high-voltage is located under the vehicle floor underbody. It stores electric energy and supplies it to the electric motor.
(This vehicle operates at 300 V.)




Battery, Low-Voltage

Battery, low-voltage is located the luggage board and supplies power to electric systems, such as a radio, headlamps, and windows.



12 V lithium-ion auxiliary battery
(Parking power support)
12V lithium-ion battery is located under the carpet beneath the driver's seat.
※ OTA option

Orange High-voltage Power Cable

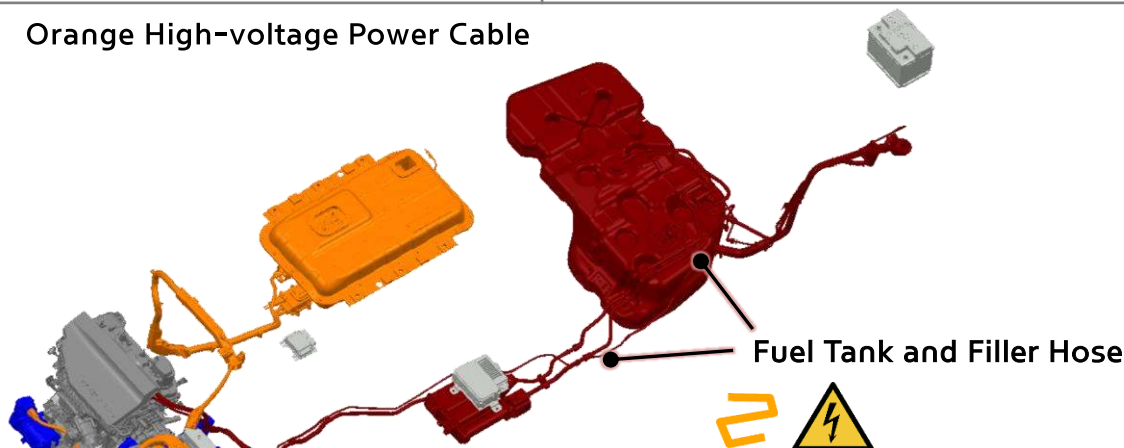

High-voltage Power Cables are orange by SAE standard. The cables pass through the bottom of the vehicle and connect the battery pack, high-voltage with high-voltage components such as HPCU, AC compressor. A vehicle with high-voltage systems can be identified through orange high-voltage power cables that can be seen in the engine room and on the bottom.

Flammable Materials

- Plastics
- Electrolytes
- Resins
- Magnesium
- Gases or other combustible fluid

6. In case of fire

6.1 Fire characteristics and precaution of HEV



Battery fires are different from ICE fires, so special care is needed when extinguishing them. HEV is more dangerous when fires occur and there is a risk of explosion and recurrent fire. Below are the main precautions for HEV fires.

- **High-voltage system**

HEV uses high-voltage battery systems and internal combustion engines, so cut off the high-voltage systems and stop the fuel pump before approaching the fire scene. Identify the high-voltage battery pack, battery, and electric components, and wear insulated gloves and boots when approaching to avoid the risk of electric shock.

- **Risk of battery fire**

The lithium-ion battery in HEV can explode at high temperature if a fire occurs. The lithium-ion battery releases gas due to electrolyte decomposition when exposed to temperature above 300 °F (148 °C) for a long time. If there is ignition source, as a flame or spark, in the gas, it may cause a fire.

- **Parallel use of fossil fuel (gasoline or petroleum)**

HEV uses fossil fuels. To avoid other risk of ignition, check for leakage or ongoing leakage in the fuel transport and storage devices, fuel line connection parts, etc.

- **Use a large amount of water**

When extinguishing a HEV fire, it is important to use a large amount of water to lower the temperature of the high-voltage battery cells. The amount of water for extinguishing a HEV fire may be much greater than for a normal vehicle fire. Extinguishers other than water (e.g. CO₂ extinguisher, dry powder extinguisher, etc.) are not effective in a HEV fire, but are effective in fossil fuels, so appropriate judgement is required.

- **Set a safe zone**

Restrict public access around a hybrid vehicle and set a safe zone around areas with a risk of explosion. In the event of a fire, flooding, or collision involving a high-voltage battery, always store the vehicle in an open space at least 15 meters away from inflammables.

- **Prevent fire recurrence**

Even if a battery pack, high-voltage fire appears to be extinguished, recurrence or delayed ignition can occur. Use a thermal infrared camera to ensure that the battery pack, high-voltage is completely cooled before leaving the fire scene.

- **Caution against toxic gases**

Burning batteries can release toxic gases, including hydrogen fluoride, carbon monoxide, and carbon dioxide. Wear full protective gear and use a full-front self-contained breathing apparatus (SCBA) while extinguishing a fire because this can cause a serious risk to respiratory system and health.

6. In case of fire

6.2 Equipment required before extinguishing a fire

1) Personal Protective Equipment (PPE)

- Chemical and high-temperature protective clothing: Wear gear to protect against chemicals and high temperature.
- Insulated gloves and boots: Wear insulated equipment to protect against high-voltage electrical hazards.
- Safety helmet and goggles: Wear helmet and goggles to protect against falling objects and smoke.
- Respiratory protection equipment (e.g. SCBA, air respirator): Wear respiratory protection equipment to protect against inhalation of toxic gases and smoke.

WARNING

Warning for irritant substance!



- There are stimulants and sensitizers for high-voltage battery. Wear personal protective equipment (PPE) and self-contained breathing apparatus (SCBA) to avoid contact with stimulants and sensitizers.
- The electrolyte is an eye irritant. If it comes into contact with eyes, rinse the eyes **thoroughly** with water.
- The electrolyte is a skin irritant. If it comes into contact with skin, wash the contact part thoroughly with soapy water.
- Electrolyte or fumes **can stimulate** the eyes or skin if exposed to vapor in the air. In this case, rinse the contact part with water and take a medical treatment immediately.
- If smoke is inhaled, it can irritate the respiratory system and cause acute intoxication. Move to a place with fresh air and wash the mouth with water. And then, take a medical treatment immediately.

2) Hybrid Vehicle Fire Extinguishment Equipment

- Smothering extinguishment fire blanket, portable submersion tank: Prepare dedicated equipment for efficient extinguishment of hybrid vehicle fires.
- Thermal infrared camera: Prepare equipment for monitoring the temperature of the battery and the fire area.
- Cutting tools (e.g. cutting machine, electrical circuit breaker): Prepare tools for power cutoff and rescue.

6. In case of fire

6.3 Extinguishing hybrid vehicle fires

Control the scene and restrict public access around the scene by setting a danger zone. In case of a battery pack, high-voltage fire of hybrid vehicle, there is a risk of additional explosion. Conduct fire extinguishment from a sufficient distance. First, use a large amount of water to prevent initial spread, and then use a portable submersion tank to extinguish the fire.

- **Release a large amount of water**

A high-voltage fire of HEV is highly likely to reignite, so it is important to use a large amount of water to extinguish the fire. Use a high-pressure hose to spray a large amount of water directly onto battery pack, especially the area where the flames are rising. Water can penetrate into the battery pack, effectively reducing the heat. Water must be sprayed continuously for at least several tens of minutes to several hours until the battery is cooled completely. Although it is less than the average recommended amount of electric vehicles, 22,340 to 26,200 liters, a large amount of water is needed to extinguish the fire.

- **Use the immersion method**

The fire can be extinguished more effectively by first extinguishing the vehicle fire, then moving the vehicle to a safe location and using a container or tank filled with water. Leave the battery submerged for about 72 hours or more. Depending on the type and size of the immersion tank, 5,000 to 14,300 liters of water (immersion tank size: 500x200x50-650x400x55) may be needed.

6.4 Considerations during fire extinguishment

- **Handling high-voltage battery pack with care**

During the fire extinguishment, be careful to avoid physically touching or impacting the battery pack. This can increase the risk of electric shock and explosion. If there is an opening in the battery due to impact or damage, spraying water on the area is helpful to extinguish the fire effectively. However, never attempt to force a hole in the battery to inject water.

- **Caution against electric shock**

While spraying water on a HEV high-voltage battery, high voltage can cause electric shock, so responders should wear safety equipment and avoid direct contact as much as possible.

- **Avoid using extinguishing substance other than water**

Inert extinguishing substance such as CO₂, dry powder, or foam extinguisher, are not effective to HEV battery pack, high-voltage fire and may actually worsen the fire. Water is the most effective way to extinguish the fire.

6. In case of fire

6.5 Prevention of fire recurrence

HEV fires are different from general vehicle fires in that they have a high risk of reignition even after the fire is extinguished due to the HEV high-voltage battery's characteristics. Therefore, after extinguishing a HEV fire, take follow-up measures to avoid reignition and ensure that it is completely extinguished.

- **Use of thermal infrared camera**



Thermal infrared camera can measure the temperature of the battery cells and surrounding area in a non-contact manner and it is useful for detecting internal heat invisible to the naked eye. Conduct repeated thermal infrared inspections of the entire vehicle and high-voltage pack to ensure that temperatures remain stable. When the fire is completely extinguished, the temperatures in all areas measured by the thermal infrared camera should be uniform and stable.

- **General criteria for complete extinguishment**

Use a immersion tank to submerge the battery for approximately 72 hours or more and measure the battery temperature using a thermal infrared camera. If there is no temperature change for more than 1 hour. There is no possibility of reignition. If it is difficult to use a thermal infrared camera, check that there is no reignition for a certain period of time (at least 2 hours) after submersion.

6.6 Check and Clean up after extinguishing the fire

- **Check the stability of the battery pack, high-voltage status**

After extinguishing the fire, responders must thoroughly check the stability of the battery pack to ensure that the fire is completely extinguished, and check that the battery status is safe. If necessary, have the vehicle inspected by the manufacturer or a specialist.

- **Move to a safe area**

Move the vehicle to a safe area after extinguishing the fire to prevent additional danger.

6. In case of fire

6.7 How to respond to chemical exposure



If electrolyte fumes are inhaled or electrolyte comes into contact with the skin, visit a medical institution and consult a doctor immediately even if the symptoms seem mild.

1) When electrolyte comes into contact with skin

- **Immediately wash with water**

If electrolyte comes into contact with skin, immediately wash thoroughly with clean water for at least 15 minutes. Rinse with water quickly is important because chemicals can penetrate the skin and cause burns.

- **Emergency treatment and visit a medical institution**

If serious irritation or burns occur on the skin, conduct emergency treatment and ask for medical assistance immediately.

2) When electrolyte gets into eyes

- **Immediately wash with water**

If electrolyte gets into eyes, immediately wash thoroughly with clean water for at least 15 minutes. During washing, open the eyes completely and remove the contact lenses immediately.

- **Emergency treatment and visit a medical institution**

If serious irritation or burns on the eyes, take professional treatment at a medical institution immediately.

3) When fumes are inhaled

- **Exposure to fresh air**

Electrolyte fumes (when inhaled) may cause respiratory irritation or acute intoxication. Get out of the fire scene and breathe a fresh air, and then wash the mouth with water. Consult with a doctor immediately.

- **Check respiratory symptoms**

As respiratory symptoms, such as cough, dyspnea, or chest pain, may occur, ask for medical assistance as soon as symptoms appear. When oxygen deficit or inhalation of severe toxic gases is suspected, oxygen supply may be required through oxygen mask according to doctor's instruction.

7. In case of submersion

Submersion

Some emergency responders may have to handle a submerged vehicle. A submerged Telluride HEV does not have high-voltage system in the body. If the vehicle is not damaged, it is safe to contact the vehicle whether in water or on the land. If the vehicle is completely or partially submerged, take out the vehicle from the water before disabling it. Drain the water from the vehicle. Disable the vehicle by using the method described above.

WARNING




- If the high-voltage components are exposed by severe damage, understand guidelines for high-voltage systems fully and wear appropriate insulated personal protective equipment.
- Do not disconnect the safety plug while the vehicle is in water.
- Failure to follow these instructions can lead to serious injuries or death by electric shock.

8. Towing / transportation / storage


Towing

For towing, Telluride HEV is not different from conventional gasoline engine vehicle. If emergency towing is required, we recommend having it done by an authorized Kia dealer or a commercial towing service. To prevent damage to the vehicle, proper lifting or towing is needed. The use of wheel dollies or flatbed is recommended because there is the front-wheel drive powertrain, and detailed instructions for towing are described below.

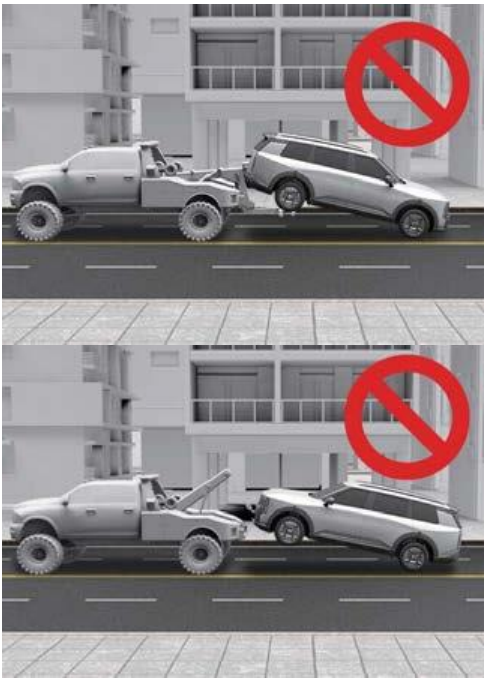


⚠ CAUTION ⚠

- It is not proper to tow the vehicle with the front wheels on the ground.
- To prevent damage to the vehicle, always use a wheel lift or flatbed.
- If proper towing method is not used, it may cause damage to the vehicle or additional accidents.
- For the vehicle equipped with side airbags, always turn off the engine before towing. If the vehicle is tilted with engine ON, it is detected as rollover and side airbags are deployed.

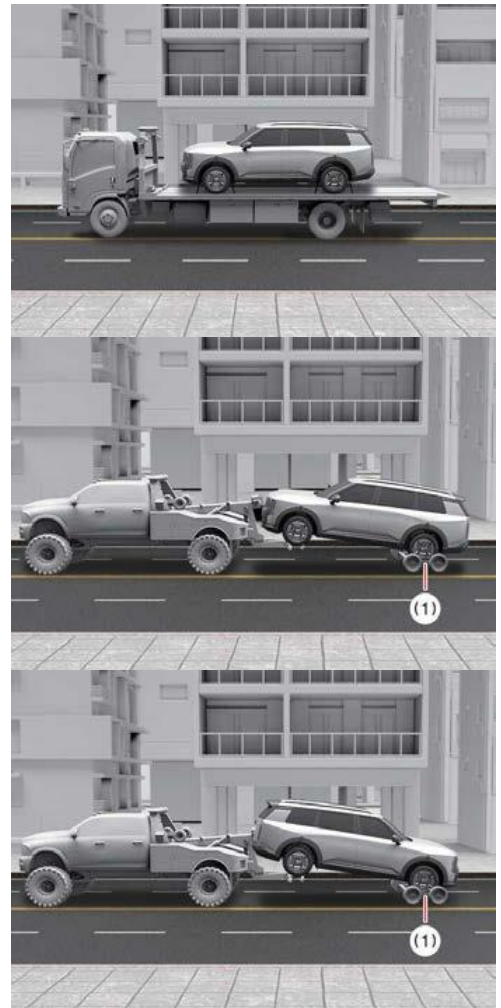

For 2WD

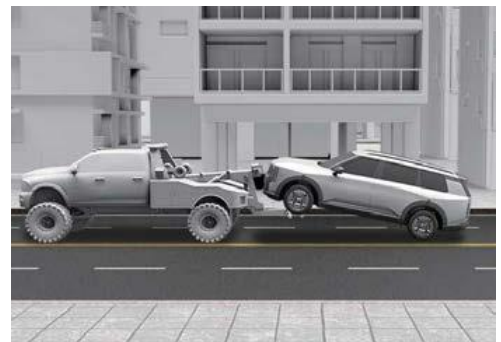

8. Towing / transportation / storage

8.2 Storage of damaged vehicle with the damaged battery

- Completely remove any water from the vehicle and store the vehicle after disconnecting the battery, low-voltage (-) connector.
- Remove any water from the battery or vehicle and disconnect the battery pack, high-voltage cutoff switch.
- Put the vehicle on an open place away from other structures, vehicles and buildings.
- Carefully monitor the vehicle until the battery discharge procedure is completed.
- If the battery can be removed from the vehicle by moving the vehicle to a lift, remove the battery and conduct the discharge procedure.
- If the battery cannot be removed, prepare a tank and fill the tank with water until the battery is fully submerged.

Tank condition: 1% saltwater solution

- Maintain the water level sufficient to fully submerge the battery for at least 40 hours.
- This vehicle does not have a BMU service cover on the battery pack. Tilt the battery and drain the water at a location that allows water to flow out.



Battery discharging

8. Towing / transportation / storage


8.3 Damaged Battery Storage

- The battery should be discharged for safe storage.
- If the battery can be removed from the vehicle, discharge it using salt water.
- Prepare a tank filled with 1% saltwater solution.
- Immerse the battery in the saltwater solution for approximately 40 hours.
- Take out the battery from the tank and dry it.

⚠ WARNING



- Extinguish all smoke, spark, flame around the vehicle.
- Electrolyte solution is a skin irritant.
- Do not touch or step on the spilled electrolyte.
- If electrolyte leak occurs, wear appropriate solvent resistant PPE and use soil, sand, or a dry cloth to clean up the spilled electrolyte. Be sure to adequately ventilate the area.

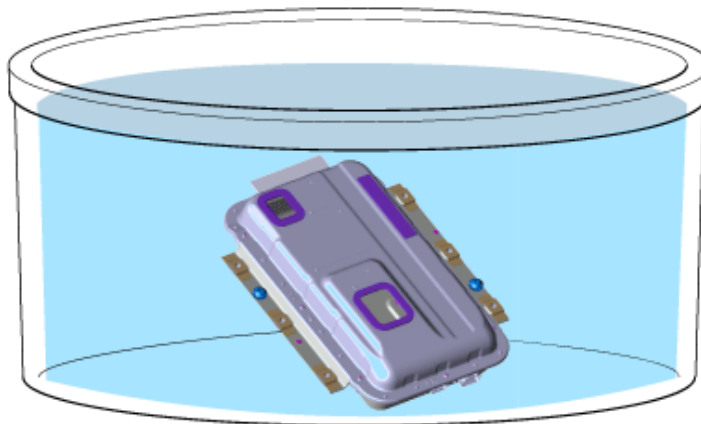

9. Important additional information

9.1 Emergency Starting – Jump Starting

When the vehicle will not start due to low battery power, you may need to jump start the vehicle.

1. Park the vehicle in the place close enough to connect the jump cable, and ensure that the cable do not touch the vehicle.
 2. Do not approach any moving parts in the motor room.
 3. Turn off all electrical systems, such as a radio, headlamps and air conditioner, and then park the vehicle.
 4. Connect one end of a jumper cable to the positive terminal of the discharged battery (3).
 5. Connect the other end of that jumper cable to the positive terminal of the booster battery (1).
 6. Connect one end of the other jumper cable to the negative terminal of the booster battery (2).
 7. Connect the other end of that jumper cable to a ground: a solid, stationary, metallic point (such as the engine lifting bracket) away from the battery (4).
- Do not allow the jumper cables to contact anything except the correct battery terminals or the correct ground. Do not lean over the battery when connecting the jumper cables.



9. Important additional information

8. If you have connected the jumper cables with another vehicle, start the vehicle containing the booster battery first and let it run at 2,000 rpm for several minutes.
 9. Start the vehicle containing the discharged battery.
 10. If the vehicle containing the discharged battery starts, disconnect the end of the jumper cable from the negative terminal of the booster battery (2). Then disconnect the other jumper cable from the positive terminal of the booster battery (1) and the discharged battery (3).
- ※ If it is not obvious why your battery was discharged, have your vehicle checked by an authorized Kia dealer.

CAUTION




- Never jump-start the vehicle using the high-voltage battery.
- When turning on the vehicle, do not let them come into contact and keep cables away from moving parts.
- Do not allow the jump cable to contact any objects other than the correct battery terminals or correct grounding points.
- Do not lean on the battery while the jump cable is connected.
- Correctly install the battery cover in the front trunk. Otherwise, related parts may be damaged, and noise or malfunction may occur.

9. Important additional information

9.2 Airbag system (SRS: Supplemental Restraint System)

Telluride HEV is equipped with five types of airbags (10 locations) as shown in the image below. Before conducting rescue procedures, ensure that the vehicle is powered off and the battery, low-voltage connector is disconnected to prevent airbags deployment.

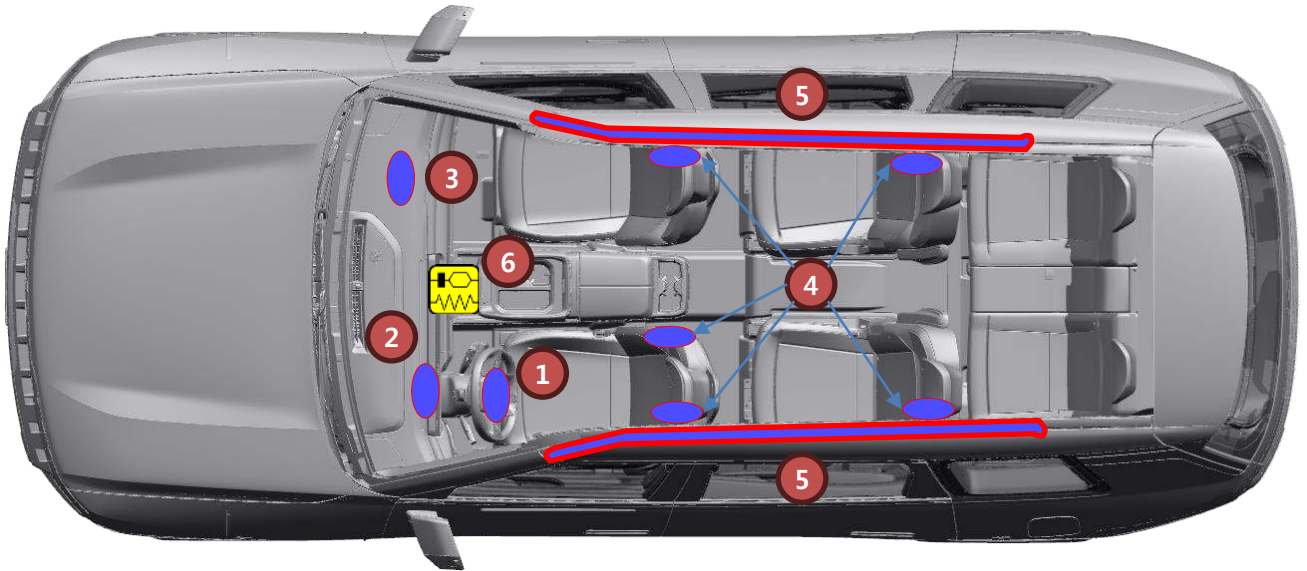

- | | |
|---|---|
| 1. Driver's front air bag | 5. Curtain airbag (Left / Right) |
| 2. Knee airbag (driver seat) | 6. SRSCM (Supplemental Restraint System Control module) |
| 3. Passenger's front air bag | |
| 4. Side Airbags (Driver Left and Right, Passenger Right, Rear Left and Right) | |

WARNING




- Do not cut airbag components.
- Airbag components work for 3 minutes after cutting off or releasing electric system because power remains. Disconnect the battery negative (-) cable and wait for at least 3 minutes before starting work.

Failure to follow these instructions will lead to serious injuries or death due to accidental operation of airbag components.

9. Important additional information

9.3 Seat Belt Pre-tensioner

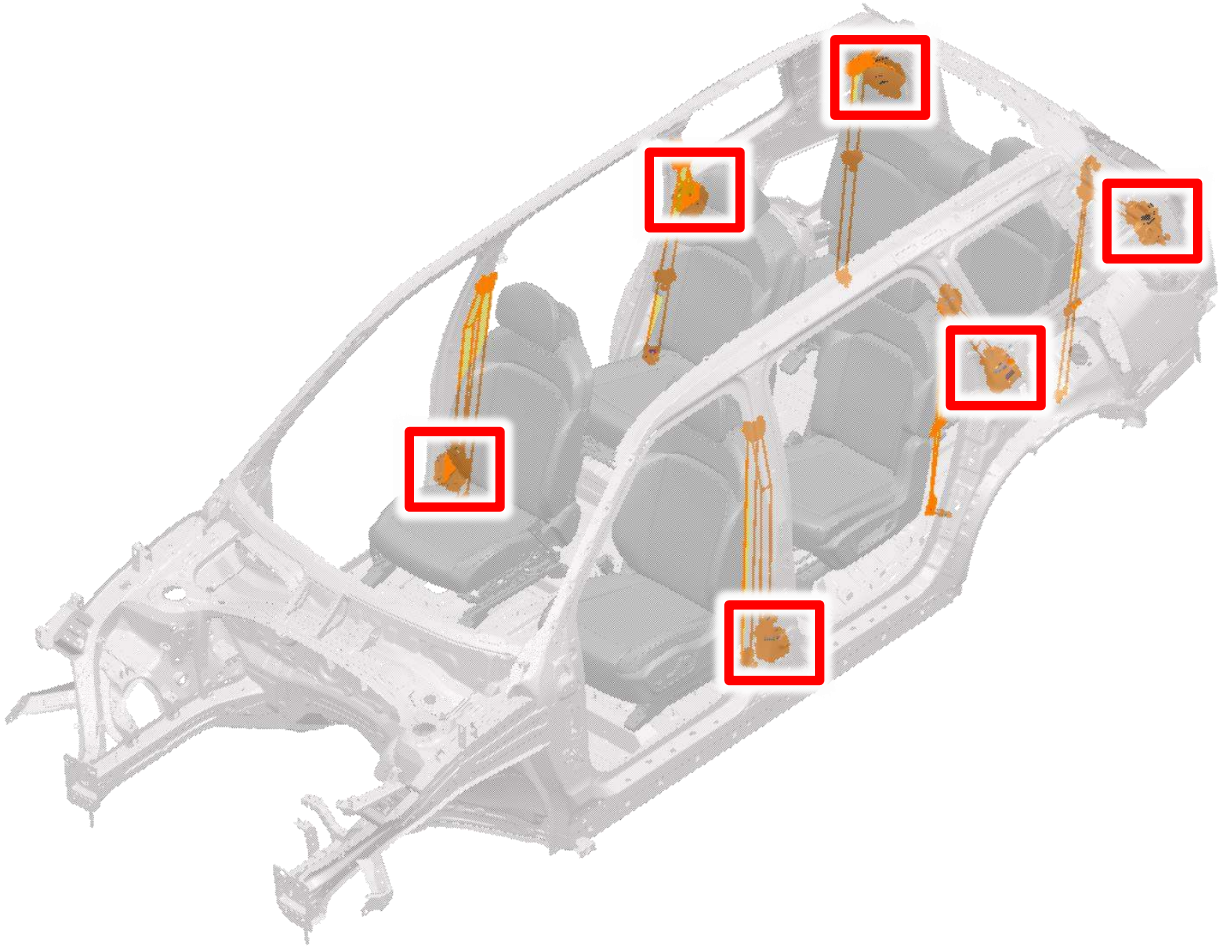


Telluride HEV has seat belt pretensioners for the driver seat, front passenger seat, second-row seats, and third-row seats (left and right).

If the seat belt pre-tensioners activate during a collision, noise may be heard and smoke-like dust may be seen in the vehicle.

This is normal operating condition and is not hazardous. The seat belt pre-tensioners may become hot during operation and may require several minutes to cool down afterward.

10. Explanation of pictograms used

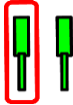	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Battery low-voltage		Gas strut / Preloaded spring		High strength zone		Fuel tank content gasoline / ethanol
	Battery pack, high-voltage		High voltage power cable		High voltage component		Use thermal Infrared camera
	Disconnect high voltage device		Fuse box disabling high voltage		Air-conditioning component		Use water to extinguish the fire
	General warning sign		Warning, Electricity		Environmental hazard		Explosive
	Acute toxicity		Corrosives		Hood		Trunk
	Flammable		Hazardous to the human health				