




Kia EV3
MPV, 5 Doors
From June 2026

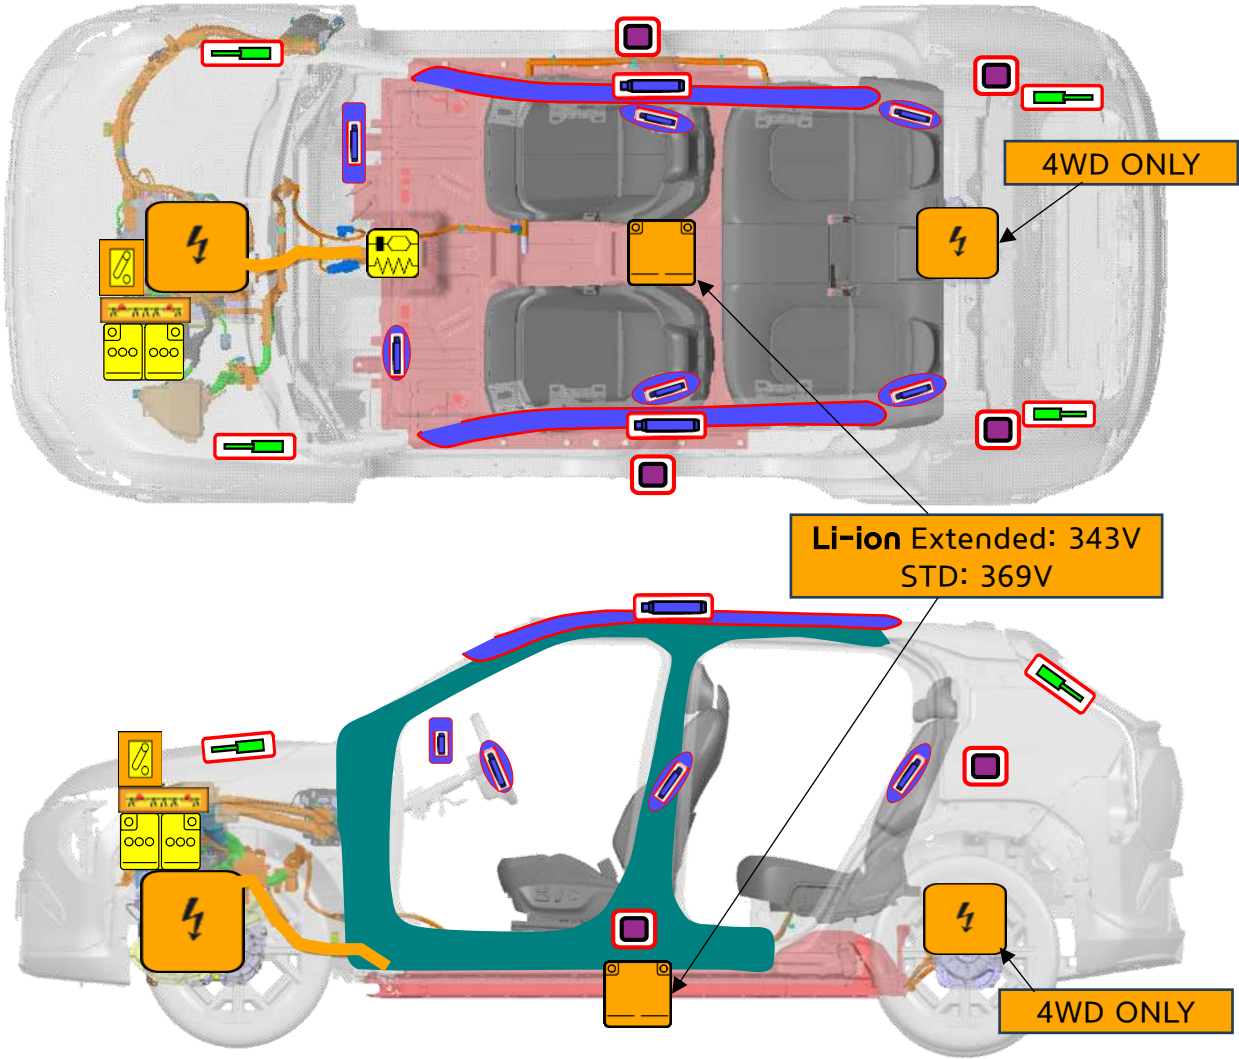

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Battery low-voltage		Gas strut / Preloaded spring		Level 3 (High strength zone)		Device to shut down power in vehicle
	Battery pack, high-voltage		High voltage power cable		High voltage component		Cable cut

1. Identification / recognition




LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.



2. Immobilization / stabilization / lifting

Immobilization:

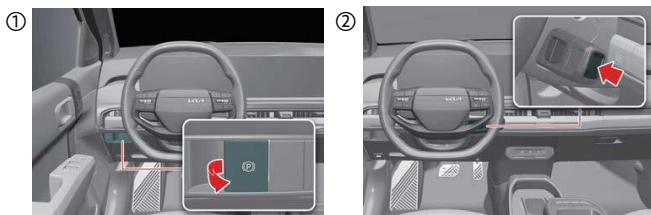


① Chock the wheels and pull the switch to set the parking brake.

② For automatic transmission vehicles, move the shift into park (P) gear.

To stabilize vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects.

Lifting Point

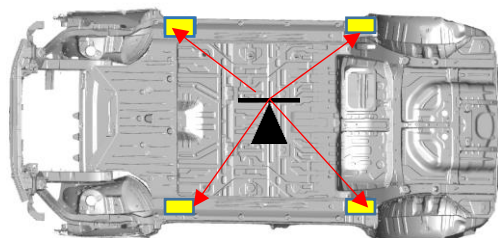


3. Disable direct hazards / safety regulations



IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCHES OFF AUTOMATICALLY. FOR ALL OTHER CASES, USE THE DISABLING METHODS BELOW.



■ Approaching 12V Battery

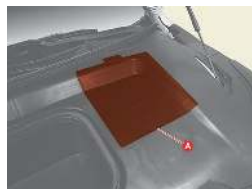


1. Pull the hood release lever to unlatch the hood.

2. Push the secondary hood release lever inside the hood center and lift the hood.

3. Remove Service Cover.

4. Checking 12 Volt Battery location.

■ Disabling High Voltage Battery

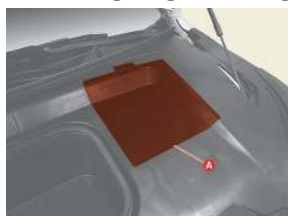


① Remove Service Cover.

② Disconnect 12Volt Battery (-) Cable.


③ Disconnect Service interlock Connector.

4. Access to the occupants


Steering column adjustment:

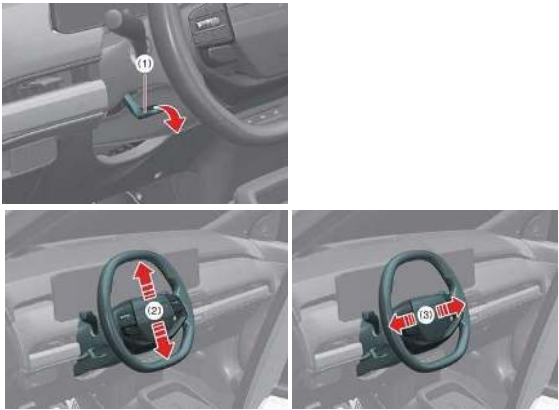

Seat adjustment

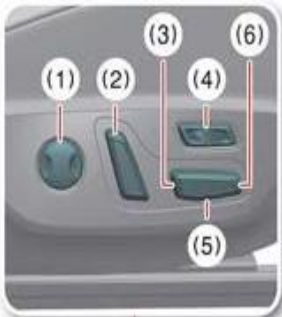


Power seat

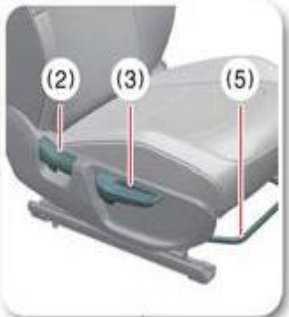


Manual seat

Liftgate:

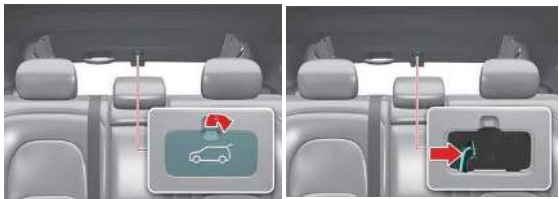


- 1. Remove the cover at the bottom of the liftgate.
- 2. Slide the latch in the direction of the arrow to unlock the liftgate.
- 3. Push the liftgate to open.

Level 3 (High strength zone):

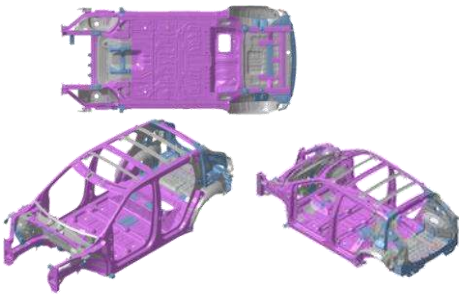

※ The purple part is a high-tensile steel

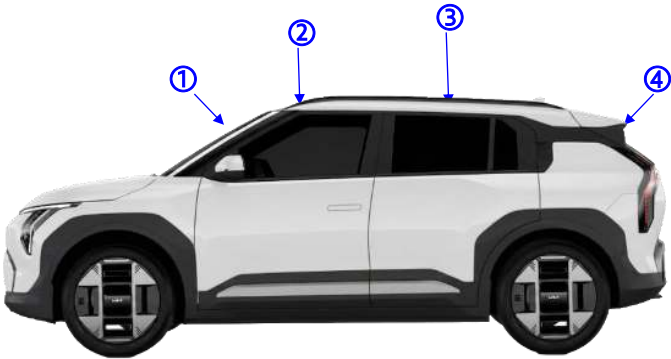

- Glass:**
- ①: Laminated
 - ②: Tempered, Laminated (Opt)
 - ③: Tempered
 - ④: Tempered

5. Stored energy / liquids / gases / solids

	STD: 369 V EXTENDED: 343 V								
	12V								
	Coolant	Usage	OPTION						
	R-1234yf	825 ~ 875 g	Heat Pump						
	R-1234yf	725 ~ 775 g	Non Heat Pump						




WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL INFRARED CAMERA.



6. In case of fire



Use large amount of water

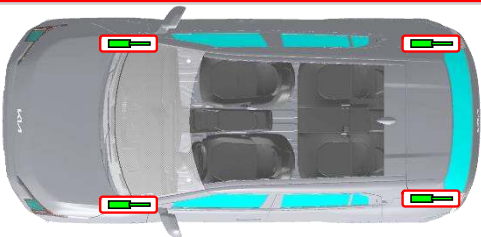

BATTERY RE-IGNITION!



Gas strut!



Risk of missile effect of hood and liftgate.

7. In case of submersion





DO NOT TOUCH ANY OF THE HIGH-VOLTAGE COMPONENTS OR CABLES INCLUDING THE HIGH VOLTAGE CUT-OFF SWITCH. DOING SO POSES THE RISK OF ELECTROCUTION. WORK ON THE VEHICLE ONLY AFTER THE VEHICLE HAS BEEN PULLED OUT OF THE WATER.



8. Towing / transportation / storage

OK

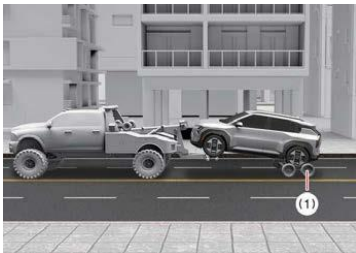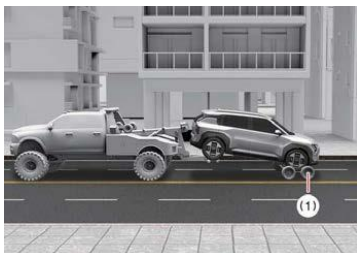

(1) Dollies

Notice: The use of wheel dollies or flatbed is recommended. Use a wheel lift or flatbed equipment.

Not OK

(1)



(2)



Notice: Do not tow with sling-type equipment (1). Do not tow the vehicle with the front wheels on the ground as this may cause damage to the vehicle (2).

9. Important additional information

10. Explanation of pictograms used

	General warning sign		Warning, Electricity		Electric Vehicle
	Air-conditioning component		Use thermal Infrared camera		Use water to extinguish the fire
	Acute toxicity		Corrosives		Environmental hazard
	Explosive		Flammable		Hazardous to the human health
	Hood		Trunk		