





Kia NIRO HYBRID
SUV, 5doors
From 2026

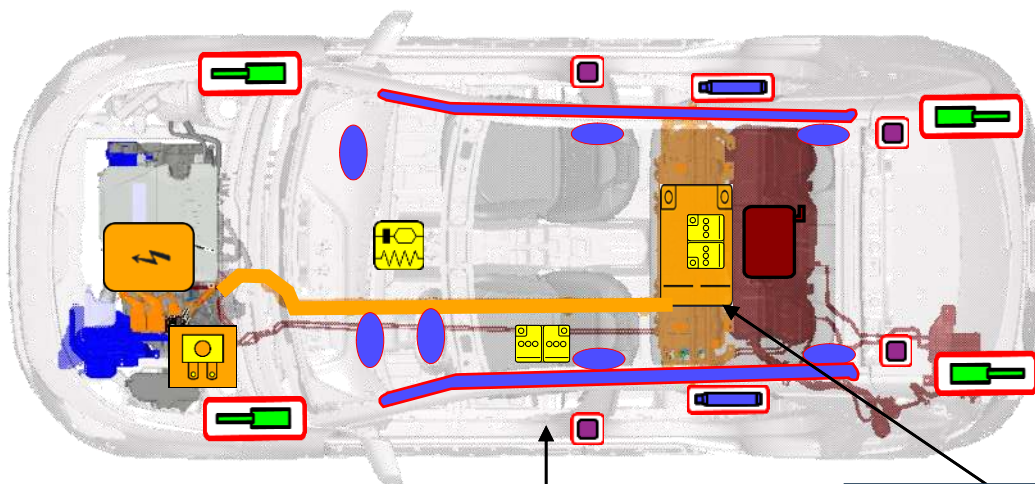

12 V li-ion auxiliary battery
(Only for vehicles with the
Built-in Cam option)

Li-ion: 240 V
(Built-in 12 V
auxiliary battery)

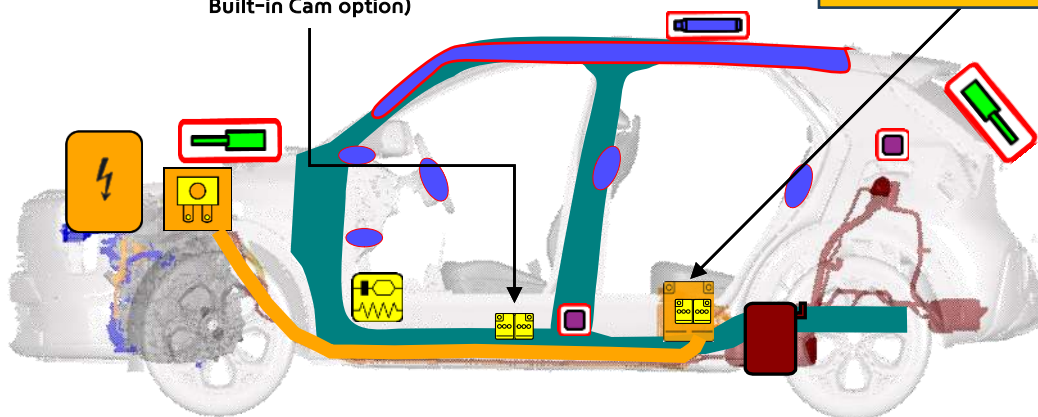


	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		High voltage component
	Battery, low-voltage		Gas strut / Preloaded spring		Level 3 (High strength zone)		Fuel tank content gasoline / ethanol		Fuse box disabling high voltage
	Battery pack, high-voltage		High voltage power cable						

1. Identification / recognition




LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.

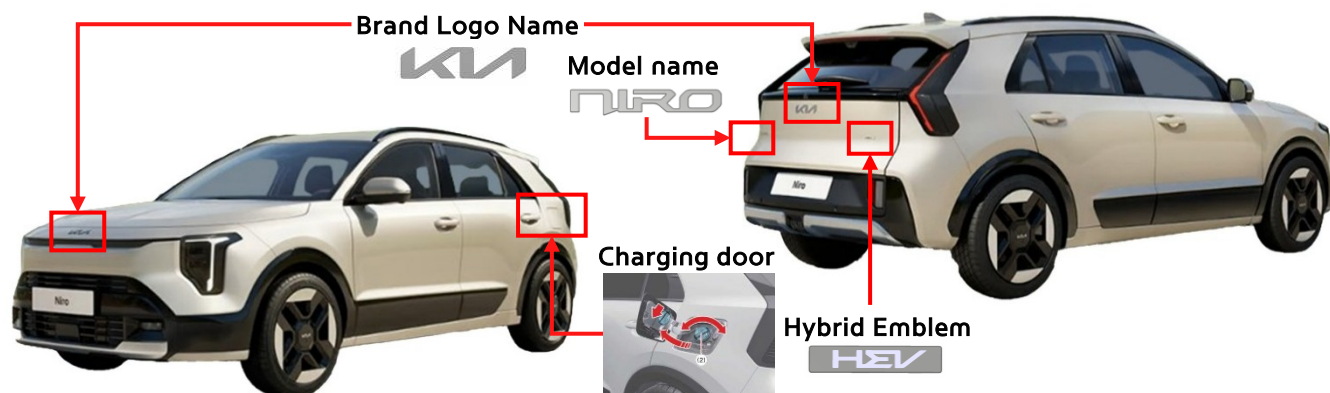

2. Immobilization / stabilization / lifting

Immobilization:

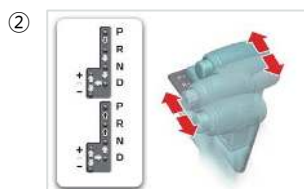

Type A


Type B

1. Chock the wheels and pull the **EPB** switch to set the parking brake.
2. For automatic transmission vehicles, move the shift lever to P (Park) position with the brake pedal depressed, or push the P button ⑥ to put the vehicle in parking mode.

Lifting points under the vehicle:



To stabilize vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects.

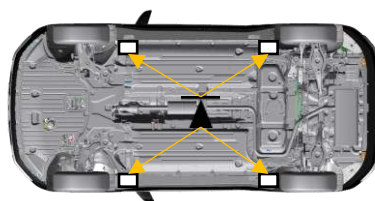

3. Disable direct hazards / safety regulations




IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCHES OFF AUTOMATICALLY. FOR ALL OTHER CASES, USE THE DISABLING METHODS BELOW.



Disabling High Voltage Battery:



Access:

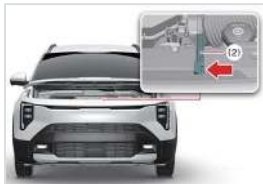

1. Pull the release lever to unlatch the hood (1). The hood will pop open slightly.


2. Raise the hood slightly, push the secondary hood release lever (2) to the left, and lift the hood.

3. Remove the engine room fuse box cover (A).

Disabling:




“Service Interlock” is not completely removable.

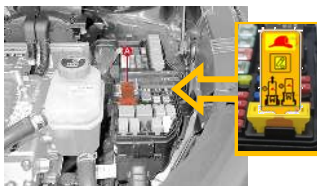


1. Find the “Service Interlock” in the fuse box.

2. Pull up the “Service Interlock”

- ① HV connected
② HV disconnected

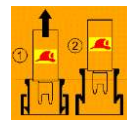

Disabling 12V Battery: Access:

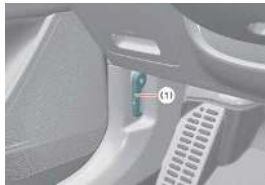

1. Pull the release lever to unlatch the hood (1). The hood will pop open slightly.
2. Raise the hood slightly, push the secondary hood release lever (2) to the left, and lift the hood.
3. Disconnect the 12 V battery (+) connector (A) after turning IG OFF.

Disabling:



Turn the ignition switch off



Access the engine room



Remove the low-voltage plug to cut off the low-voltage power

4. Access to the occupants


Steering column adjustment:



Glass: ①: Laminated
②: Tempered (OPT: Laminated)
③④⑤: Tempered



Seat adjustment:

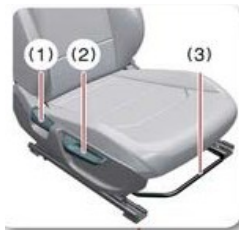

Manual seat
①: Seatback angle
②: Seat cushion height
③: Forward and backward

Emergency liftgate safety release:



1. Insert a long, flat object (such as a key) into the opening at the bottom of the liftgate.
2. Slide the latch in the direction of the arrow to unlock the liftgate.
3. Push the liftgate to open it.




Power seat
①: Seatback angle
②: Seat cushion height
③: Forward and backward
④: Seat cushion tilt
⑤: Lumbar support

Vehicle body → Level 3 (High strength zone)




Side

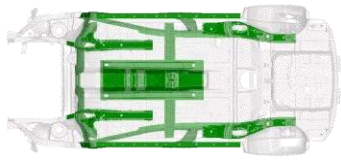

Bottom

5. Stored energy / liquids / gases / solids

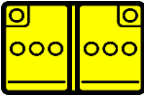	  	42L	
	   	12V	R-1234yf 450±25g
	     	240V	 



WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL INFRARED CAMERA.



6. In case of fire



Use large amount of water



BATTERY RE-IGNITION!



Gas strut!



Risk of missile effect of hood and tailgate.

7. In case of submersion



DO NOT TOUCH ANY OF THE HIGH-VOLTAGE COMPONENTS OR CABLES INCLUDING THE HIGH VOLTAGE CUT-OFF SWITCH. DOING SO POSES THE RISK OF ELECTROCUTION. WORK ON THE VEHICLE ONLY AFTER THE VEHICLE HAS BEEN PULLED OUT OF THE WATER.



8. Towing / transportation / storage

OK



Notice: The use of wheel dollies (1) or flatbed is recommended. Use a wheel lift or flatbed equipment.

(1) Dolly

Not OK




Notice : Do not tow with sling-type equipment (1). Do not tow the vehicle with the front wheels on the ground as this may cause damage to the vehicle (2).

Towing Hook



Front

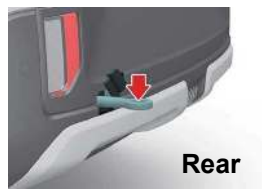

Rear

The towing hook is located in the tool case in the trunk.

9. Important additional information

10. Explanation of pictograms used

	Hybrid Electric Vehicle on fuel of liquid group 2		Fuel tank content gasoline/ethanol		Hood
	General warning sign		Air-conditioning component		Trunk
	Corrosives		Hazardous to the human health		Flammable
	Explosive		Acute toxicity		Environmental hazard
	Use thermal Infrared camera		Use water to extinguish the fire		Warning, Electricity