




Kia TELLURIDE HYBRID SUV, 5doors From 2026

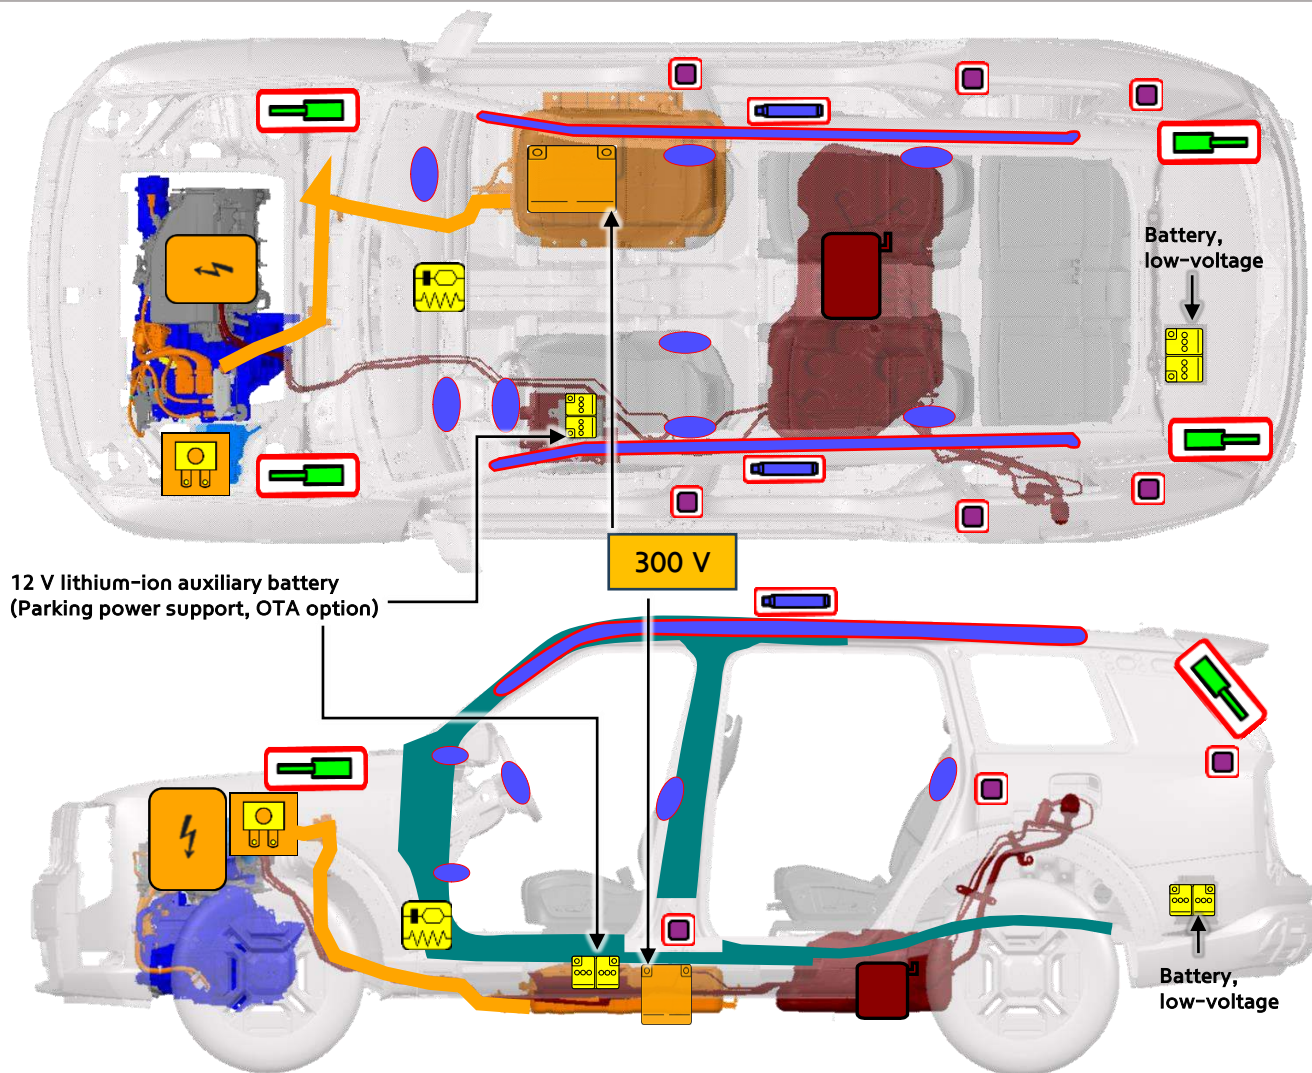


	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		High voltage component
	Battery, low-voltage		Gas strut / Preloaded spring		High strength zone		Fuel tank content gasoline / ethanol		Fuse box disabling high voltage
	Battery pack, high-voltage		High voltage power cable						

1. Identification / recognition




LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.

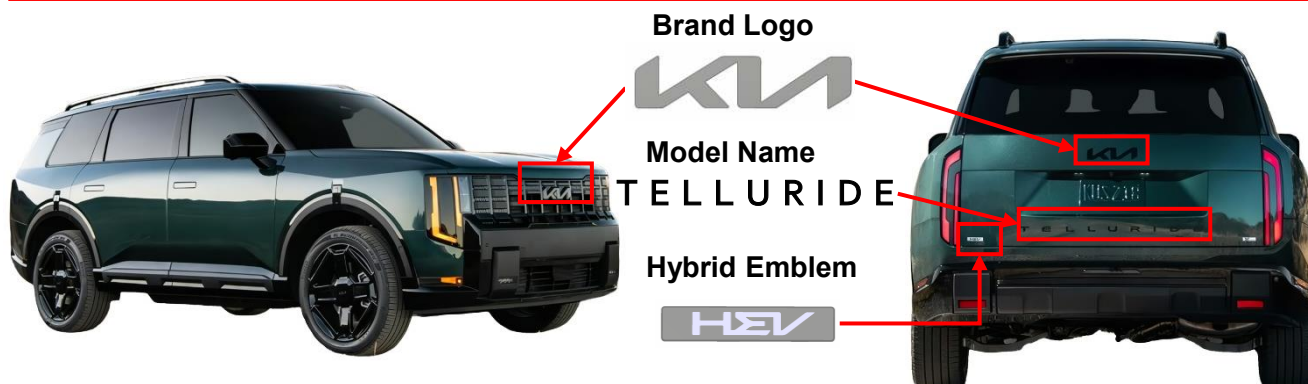

2. Immobilization / stabilization / lifting


Immobilization:

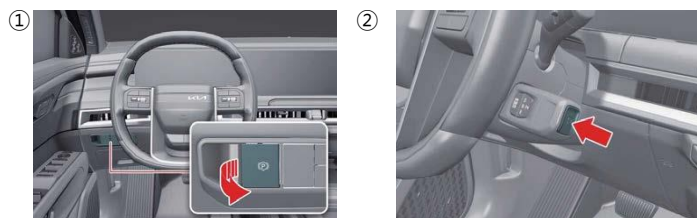

1. Chock the wheels and pull the **EPB** switch to set the parking brake.
2. For automatic vehicles the shift button to the park(P) position.

For stabilize vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects

Lifting points under the vehicle:

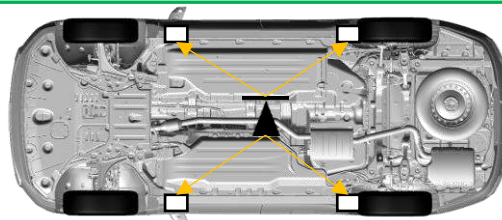

3. Disable direct hazards / safety regulations



IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. FOR ALL OTHER CASES USE THE DISABLING METHODS BELOW



Disabling battery, low-voltage:



Access: →



Press the power liftgate open/close button for 1 second. The liftgate opens or closes with a warning sound.




Press the power liftgate open/close button to open it. If the vehicle is locked, press the power liftgate open/close button with the smart key in your possession.




Check the battery, low-voltage.

Disabling:




Disabling battery pack, high-voltage:

Access:

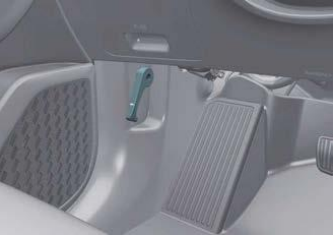

Pull the release lever to unlatch the hood. The hood will pop open slightly.

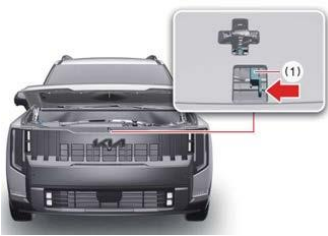


Go to the front of the vehicle, raise the hood slightly, push the secondary hood release lever (1) to the left, and lift the hood.



Disabling:

“Service Interlock” is not completely removable.

Pull up the “Service Interlock”

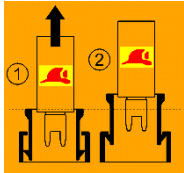

4. Access to the occupants

Steering column adjustment:




<Manual type>



<Electric type>




Seat adjustment:

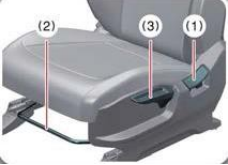

Manual seat

- ①: Seatback angle
- ②: Forward and backward
- ③: Seat cushion height

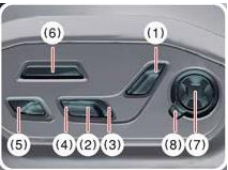


Power seat


- ①: Seatback angle
- ②: Forward and backward
- ③: Seat cushion height
- ④: Seat cushion tilt
- ⑤: Leg support / cushion support
- ⑥: Relaxion comfort seat
- ⑦: Lumbar support
- ⑧: Bolster adjuster

Vehicle body → High strength zone

Side

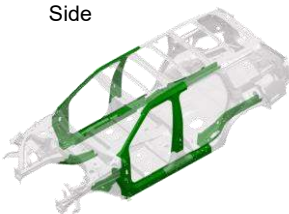

Bottom

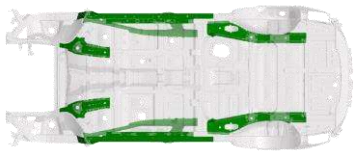

Liftgate:



1. Remove the cover at the bottom of the liftgate.
2. Slide the latch in the direction of the arrow to unlock the liftgate.
3. Push the liftgate to open.

Glass:

- ①: Laminated
- ②, ③: Tempered (OPT: Laminated)
- ④: Tempered
- ⑤: Tempered (W/Heated)



5. Stored energy / liquids / gases / solids


		69L	
		12V	R-1234yf 850±25g
		300V	

WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL INFRARED CAMERA.

6. In case of fire



USE LARGE AMOUNT OF WATER

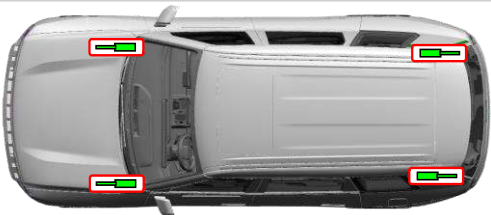

BATTERY RE-IGNITION!



GAS STRUT!

RISK OF MISSILE EFFECT OF HOOD AND LIFTGATE.



7. In case of submersion



DO NOT TOUCH ANY OF THE HIGH-VOLTAGE COMPONENTS OR CABLES INCLUDING THE HIGH VOLTAGE CUT-OFF SWITCH, AS DOING SO POSES AN ELECTROCUTION HAZARD. WORK ON THE VEHICLE ONLY AFTER THE VEHICLE HAS BEEN PULLED OUT OF THE WATER.



8. Towing / transportation / storage

OK



1. Dolly


Notice: The use of wheel dollies (1) or flatbed is recommended. Use a wheel lift or flatbed equipment.

Not OK



Notice : Do not tow with sling-type equipment. Do not tow the vehicle with the driven wheels on the ground as this may cause damage to the vehicle.

Towing - Hook

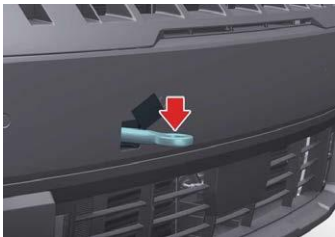

FR Bumper

9. Important additional information

10. Explanation of pictograms used

	Hybrid electric vehicle		Fuel tank content gasoline / ethanol		Hood
	General warning sign		Air-conditioning component		Trunk
	Corrosives		Hazardous to the human health		Flammable
	Explosive		Acute toxicity		Environmental hazard
	Use thermal Infrared camera		Use water to extinguish the fire		Warning, Electricity