



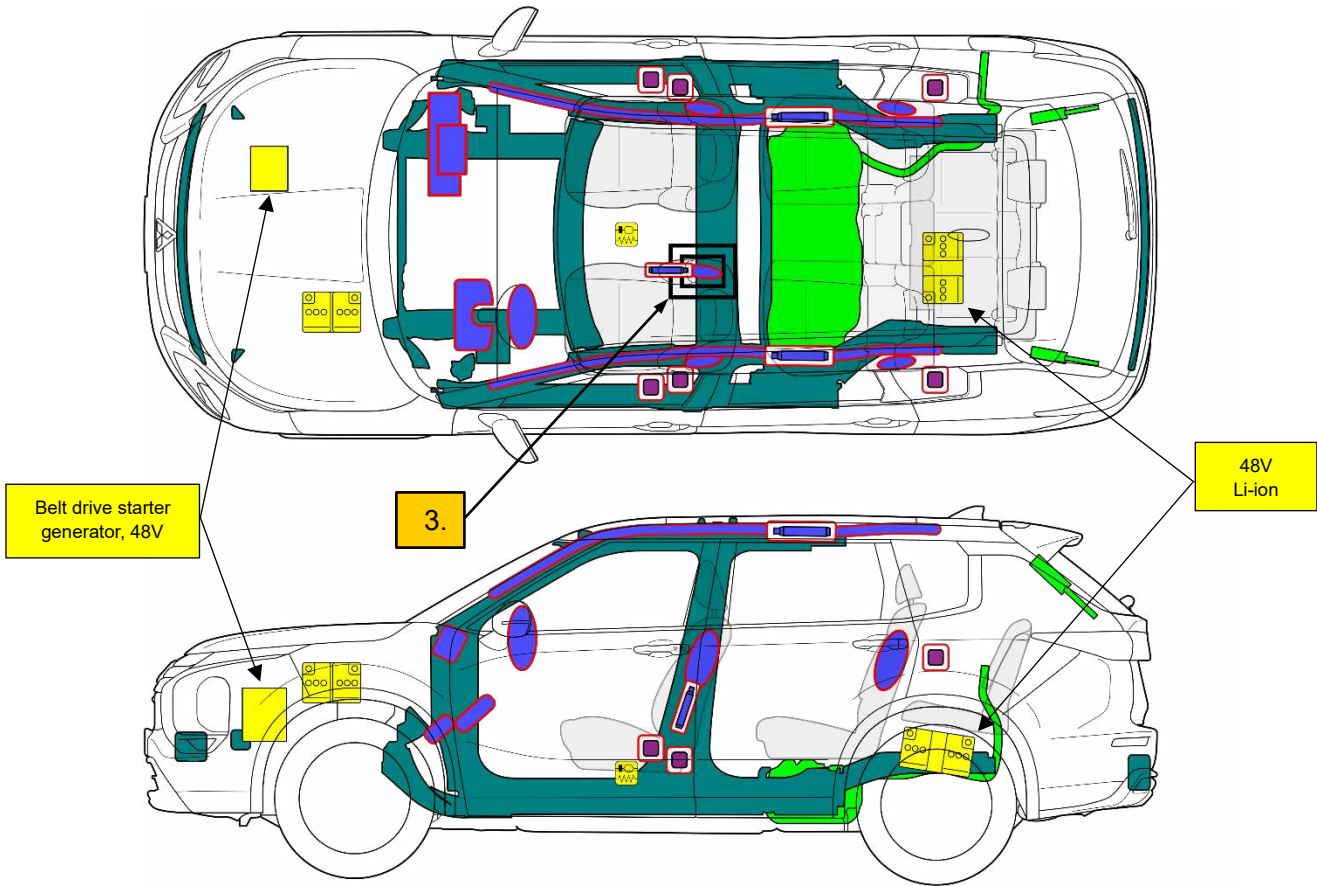

MITSUBISHI OUTLANDER
5 doors / 7 seats / Station wagon
(2026 -)

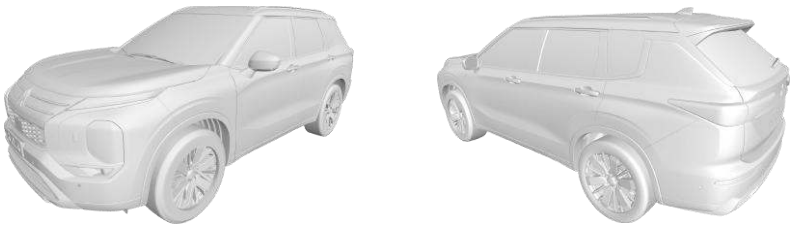


GM2W0001

	Airbag		Stored gas inflator		Seat belt Pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength Zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
ID No.				Version No.		Version Date.		Page	
GMW-NNRS-EN01				01		12/2025		1/4	

1. Identification / recognition

Features on vehicle exterior

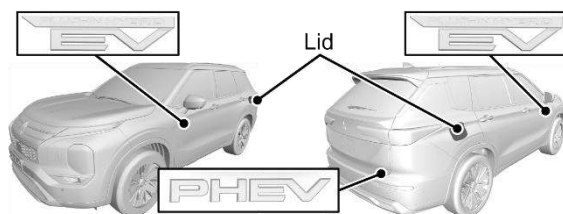


OUTLANDER can be identified by the logo and rear panel lid. Unlike OUTLANDER PHEV, OUTLANDER does not have the "PHEV (PLUG-IN HYBRID EV)" logo.

OUTLANDER has a lid only on the right rear panel, whereas OUTLANDER PHEV has lids on both rear panels.


2. Immobilisation / stabilization / lifting

Immobilize the vehicle

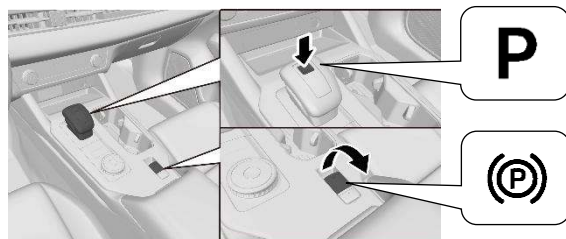

Block the wheels and set the parking brake. Put the car in "P" position.

Support positions for Jack and Lift

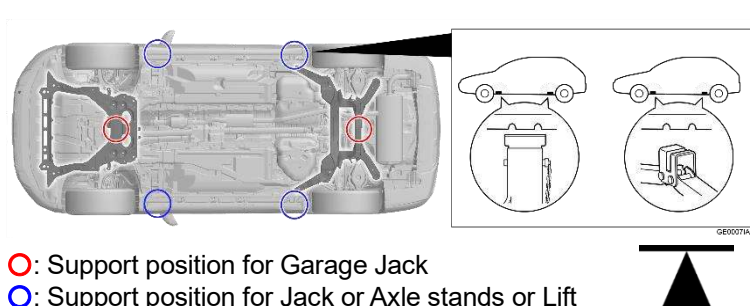


○: Support position for Garage Jack

○: Support position for Jack or Axle stands or Lift

3. Disable direct hazards / safety regulations

How to determine if vehicle is ON / OFF

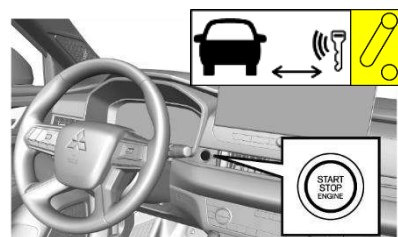


OFF

Check that the illumination of the "engine switch" is off.

ON

When the engine switch is pushed without depressing the brake pedal, the "engine switch" will illuminate.

How to disconnect the 12V battery negative terminal

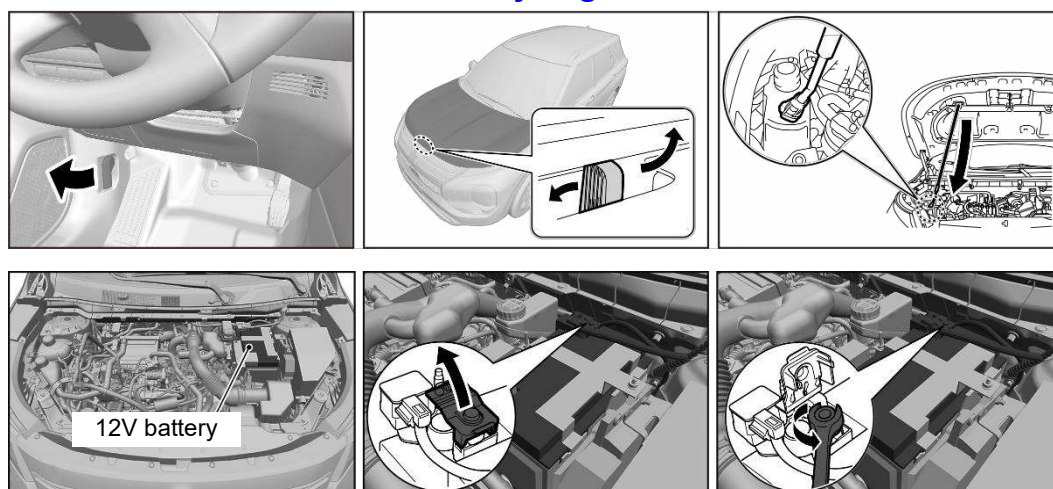

Do not apply excessive force to the airbag installation area.


Driver's seat has a Front seat-mounted SRS centre airbag in addition to the side airbag.

Location of far side airbag is shown in the mark **3** on page 1.




ID No.	Version No.	Version Date.	Page
GMW-NNRS-EN01	01	12/2025	2/4


4. Access to the occupants

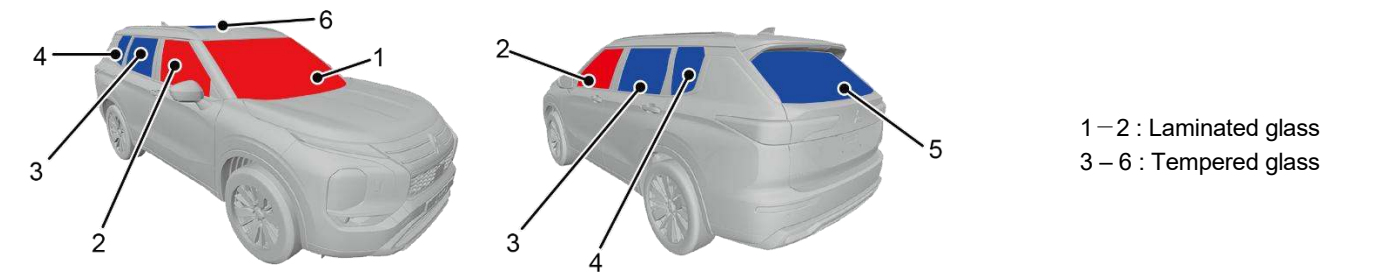


Steering adjustment

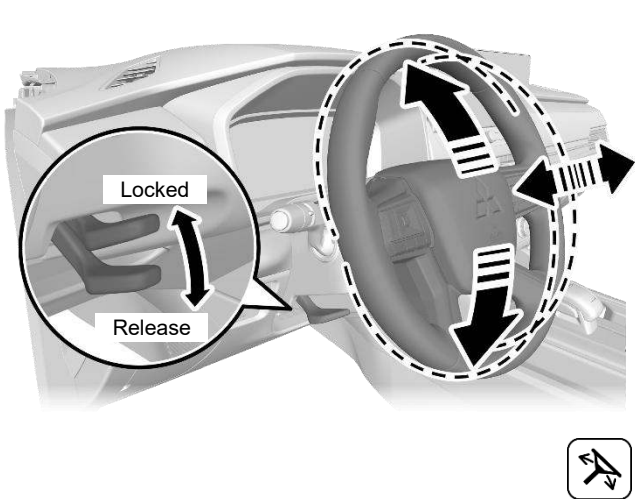

Seat adjustment

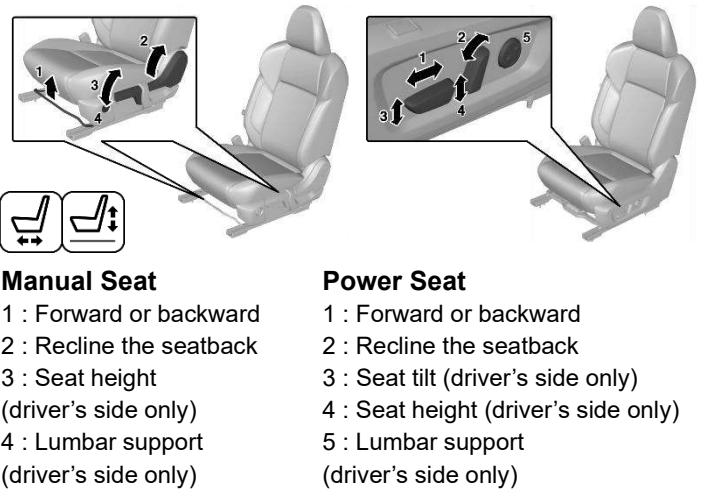

High-tensile and Ultra-high-tensile steel panels location

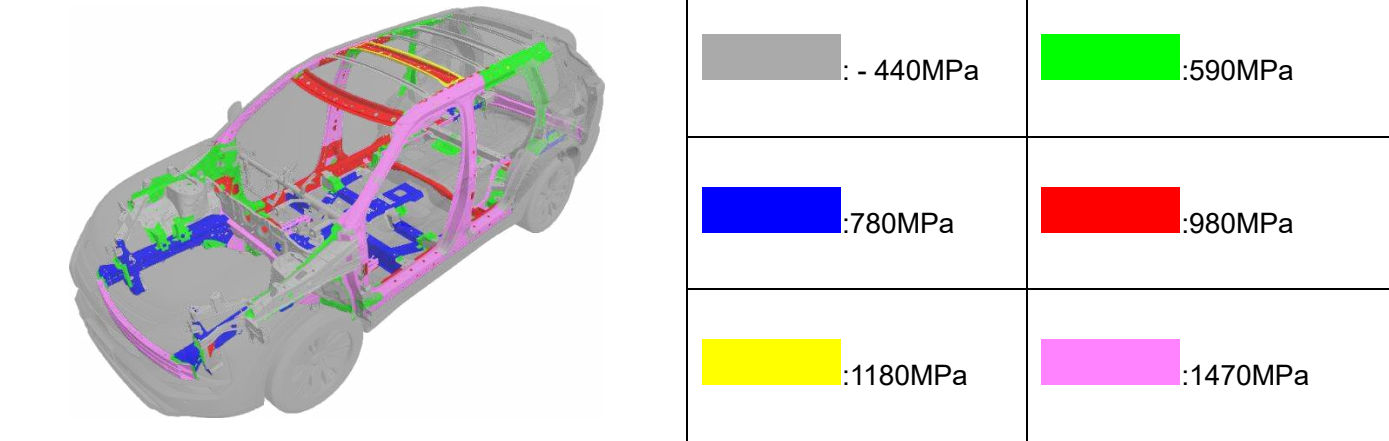

5. Stored energy / liquids / gases / solids

Fluids / gases used in this vehicle

	Fuel tank	55 liters (14.5 gallons)		Refrigerant (air conditioner)	HFO-1234yf: 550 g (19.4 oz)
	12V Battery	L3-EFB 70 Ah / 720 A		48V Battery	44 V / 370 Wh



ID No.	Version No.	Version Date.	Page
GMW-NNRS-EN01	01	12/2025	3/4

6. In case of fire



Use large amount of water



RE-IGNITION POSSIBLE !



Use a thermal infrared camera to detect high-temperature areas of vehicle.



Never use seawater or any water containing salt.

7. In case of submersion

Submerged Vehicle

- If the vehicle is submerged or partially submerged, first pull the occupants out of the vehicle and water.

8. Towing / transportation / storage




How to Transport



Store the vehicle at a safe distance from other vehicles.

9. Important additional information

Supplemental Restraint System (SRS) Location

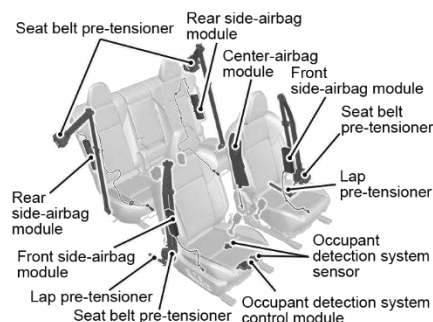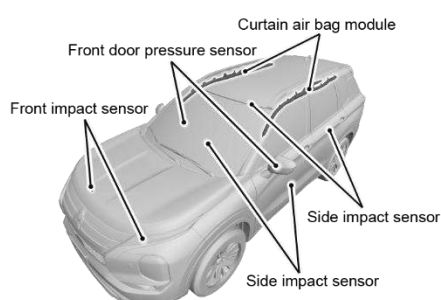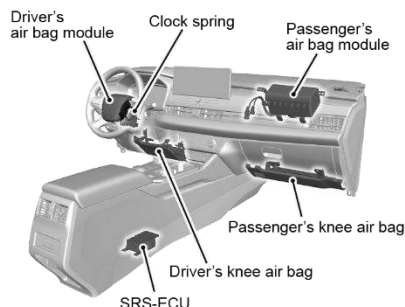

10. Explanation of pictograms used

	Keyless operation key distance		Device to shut down power in vehicle		Risk of damaging human health
	Caution		Warning, low temperature		Risk of flammability
	Open Hood		Air-conditioning component		Risk of an explosion
	Fuel tank		Use water to extinguish the fire		Risk of corrosive material / substances
	Seat height adjustment		Steering wheel, tilt control		Risk of acute toxicity
	Seat adjustment, longitudinal		Left hand drive		Use thermal infrared camera
	Lifting point		Warning, electricity		
		ID No.	Version No.	Version Date.	Page
		GMW-NNRS-EN01	01	12/2025	4/4