

CONTENTS

0.	Rescue sheet	Page 4
1.	Identification/Recognition	Page 8
2.	Immobilization/Stabalization/Lifting	Page 10
3.	Disable Direct Hazards/Safety Regulations	Page 13
4.	Access to the Occupants	Page 15
5.	Stored Energy/Liquid/Gases/Solid	Page 21
6.	In Case of Fire	Page 25
7.	In case of water submersion	Page 28
8.	Towing/Transportation/Storage	Page 29
9.	Important Additional Information	Page 30
10.	Explanation of Pictograms Used	Page 31

**RESCUE SHEETS FOLLOW
ON THE NEXT 3 PAGES**

	ID No.	Version No.	Page No.
	00-00-45	03 (April 2026)	3


NOVABUS

NOVA BUS LFS HEV 32K PRODUCTION START 2009



REAR

FRONT

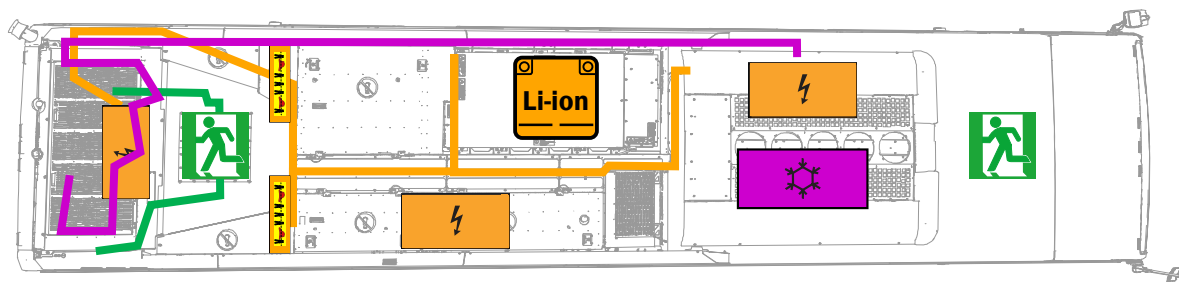


REAR

FRONT



FRONT

REAR

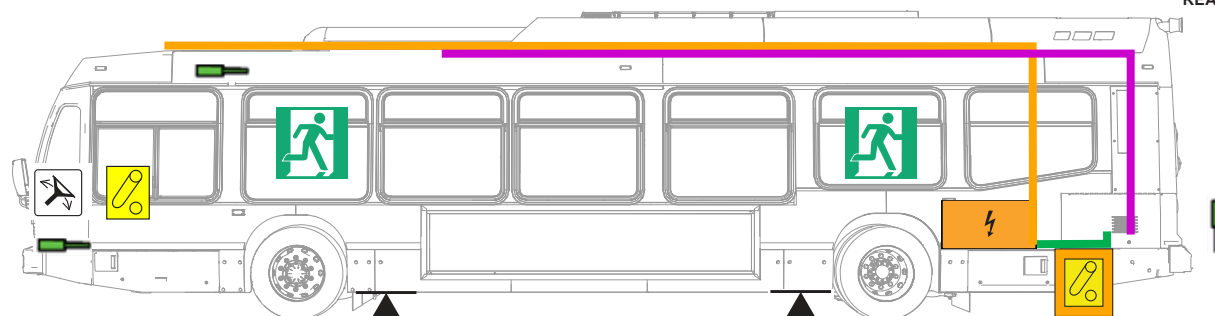

Emergency door opener	Break cover for access	Emergency exits	High-voltage Lithium-ion battery	Low-voltage device that disconnects high voltage	High-voltage power cable	High-voltage components
Location to Cut High-Voltage Interlock Loop	Low-Voltage Battery	Device to Shut Down Power in Vehicle	Lifting Point	Seat Adjustment	Steering Wheel Tilt Control	
Height Control	Air-Conditioning Unit	Air-Conditioning Line	Gas Strut Preloaded Spring	AIR	Diesel fuel	Fuel line

ID No.

00-00-45

Version No.

03 (April 2026)

Page No.


4

1. Identification/Recognition




The Nova Bus LFS Hybrid Electric Vehicle (HEV) has a diesel engine and an electric drive. There are several ways to identify the vehicle as an HEV if branding is not apparent. These include a high-voltage battery on the roof, orange HV cables in the motor compartment and inside roof fairings, high-voltage components with warning labels, etc. The exhaust system indicates the presence of a combustion engine.

2. Immobilization/Stabilization/Lifting



Vehicle height control in driver's compartment.



Seat height and forward/rear adjustment in driver's compartment.



The vehicle is **OFF** if the **MASTER CONTROL SWITCH** is in the **OFF** position.



Use only these lifting points.

IMMOBILIZATION PROCEDURE:

It is important to immobilize a vehicle in an emergency situation to prevent it from moving. See ERG section 2 for details.

3. Disable direct hazards/Safety regulations



- Shut down the high-voltage system using low-voltage devices.
- Shut down power in the vehicle.



- Yellow wires with this tag can be cut to shut down the high-voltage system.

4. Access to the Occupants



Access to the occupants can be achieved via one or two roof hatches, emergency exit windows, and doors.

Emergency responders must also consider the extraction of wheelchair passengers who are restrained by securement devices, the driver and his/her seat and compartment, the construction materials of the vehicle, no-cut zones, etc.

5. Stored Energy/Liquid/Gases/Solid

6. In case of fire

				
Follow all fire fighting and safety recommendations in the event of a fire.				

7. In Case of Water Submersion

	- If the vehicle should become submerged in water, the high-voltage system is isolated from the chassis and is designed to pose no shock hazard from touching the vehicle body. - Follow Section 3, Disable direct hazards/safety regulations of the ERG once out of water.
---	--

8. Towing/Transportation/Storage

 	- Check the condition and temperature of the high-voltage battery. - Towing on a flatbed is the preferred transport method. - Do not tow a vehicle that has been involved in an incident on its drive wheels, unless the high voltage has been shut down and the axle shafts have been removed. - Park the vehicle at least 50 feet (15 meters) from buildings and other vehicles (quarantine area).
---	---

EMERGENCY RESPONSE GUIDE FOLLOWS ON THE NEXT PAGES

	ID No.	Version No.	Page No.
	00-00-45	03 (April 2026)	7

The Nova Bus Hybrid Electric Vehicle (HEV) has a diesel engine and an electric drive.

1. High-voltage battery state of charge (SOC) and power flow display devices on the dashboard
2. Orange high-voltage cables in the motor compartment and inside roof fairings
3. High-voltage components with warning labels
4. An exhaust system indicates that a combustion engine is onboard
5. A diesel fuel reservoir in rear engine compartment.



HYBRID ELECTRIC VEHICLE IDENTIFICATION

A certification label is installed in all Nova Bus vehicles.

The eighth digit of the 17-digit VIN specifies the vehicle powertrain type:


J = Diesel

K = Alternate fuel (CNG)

L = HEV


M = Electric

MFD BY: Nova Bus (US) Inc			
DATE : _____			
GVWR: _____ KG _____ LBS			
GAWR		TIRE-DIMENSION-RIM	COLD INFL. PRESS
FRT:	KG	FRT-TIRES	FRT:
	LBS	FRT-RIMS	
RR:	KG	RR-TIRES	RR:
	LBS	RR-RIMS	
THIS VEHICLE CONFORMS TO ALL APPLICABLE FEDERAL MOTOR VEHICLE SAFETY STANDARDS IN EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE			
			V.I.N.: _____

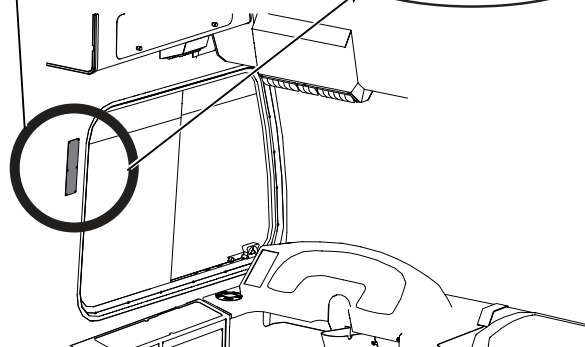



INFORMATION ON HIGH-VOLTAGE ENERGY SOURCE

Lithium-Ion battery cell chemistry, 633V nominal pack voltage. Bus is equipped with a battery pack that provides 120 KW peak nominal output power. The high-voltage system layout is shown in the image below.

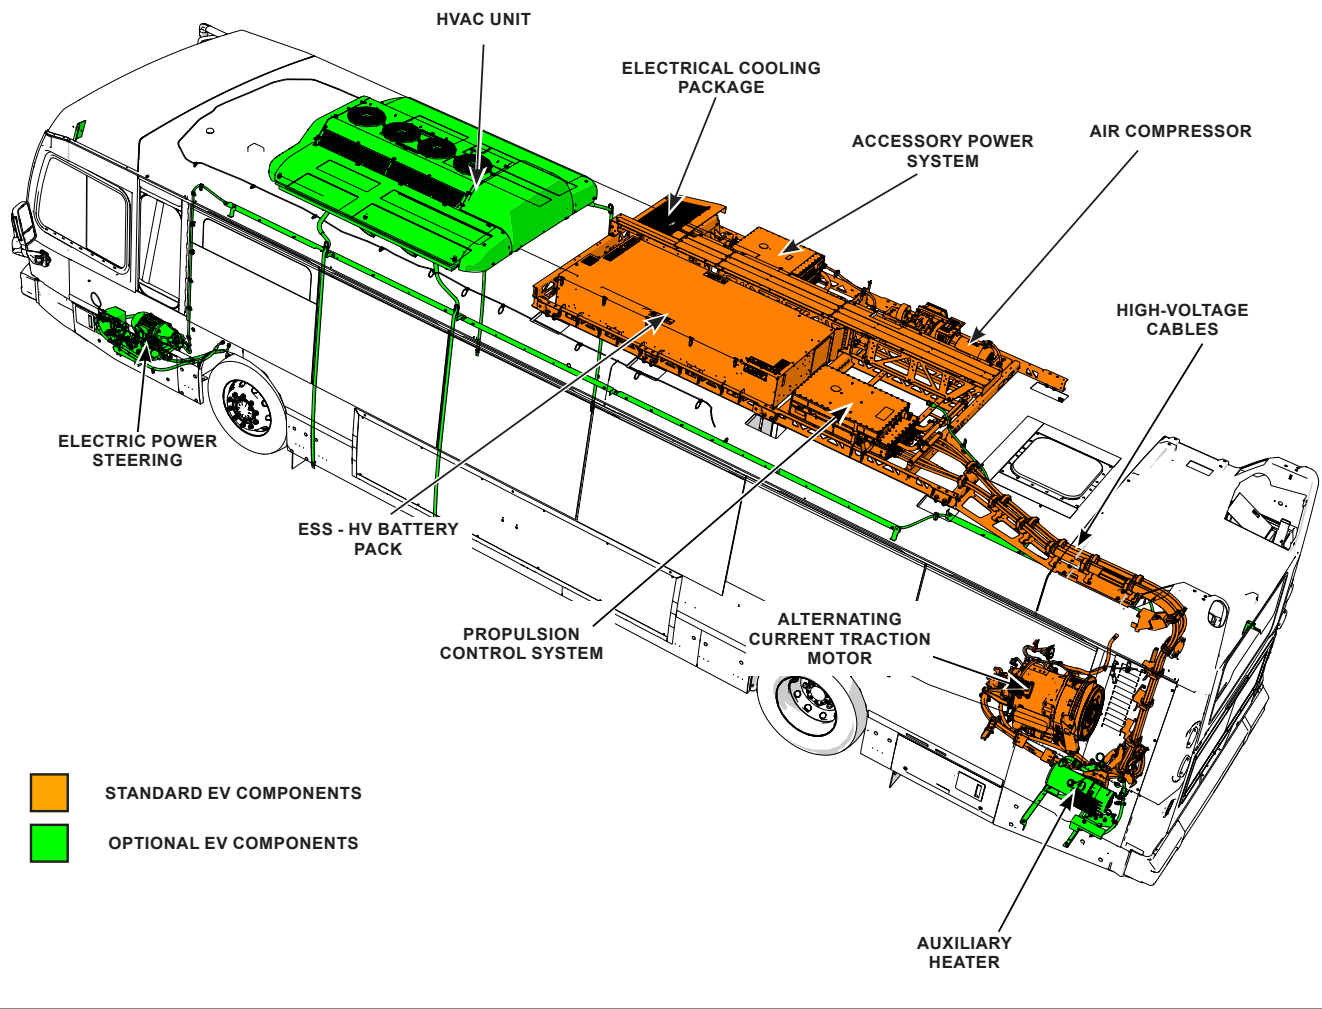

IMMOBILIZATION PROCEDURE:

1. Park the bus in a safe location.
2. Chock the wheels (if vehicle upright).
3. Set the **PARKING BRAKE**, select **NEUTRAL** on the **PUSH-BUTTON DRIVE SELECTOR** and turn the **MASTER CONTROL SWITCH** to the **OFF** position.
4. Release the air pressure from the front door motors: move the **DOOR CONTROL SWITCH**, located on the operator's left control panel, to the **F POSITION** (one notch to the right of neutral). This action avoids automatic door closure.

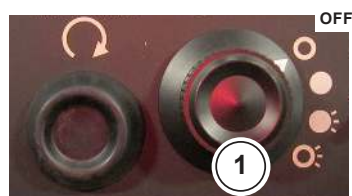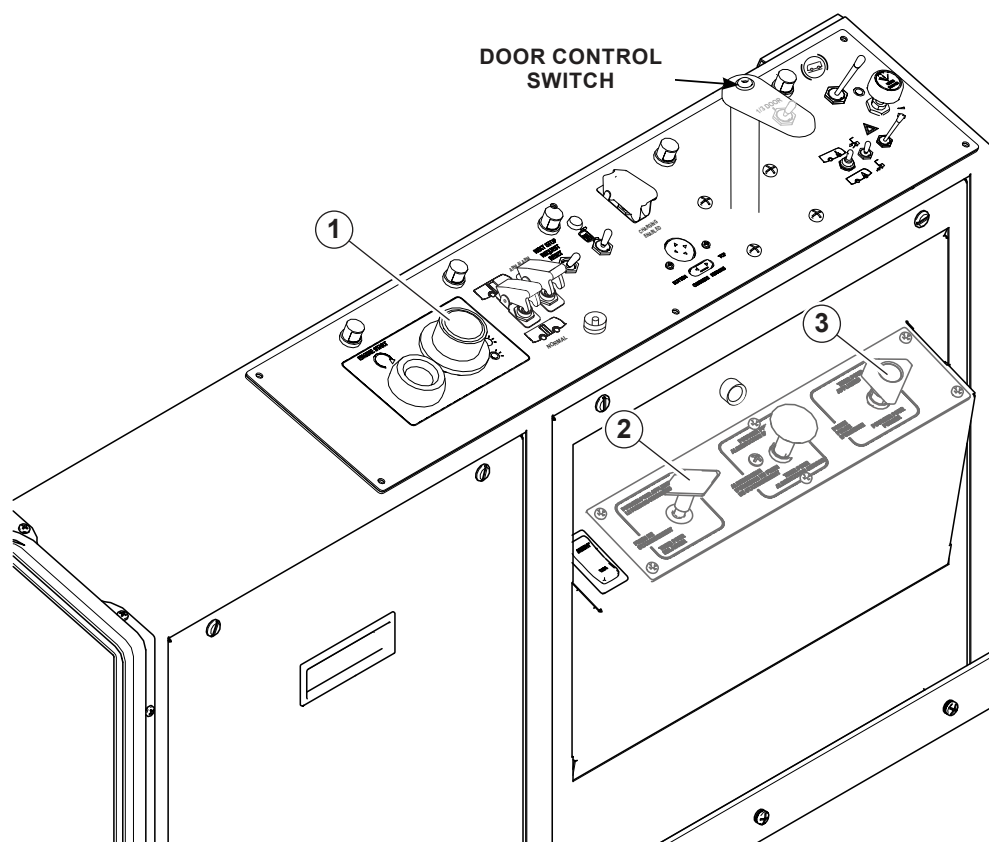**MASTER CONTROL SWITCH****PARKING BRAKE
(OPTIONAL PUSH
TO APPLY)****PARKING BRAKE
(OPTIONAL)****DOOR EMERGENCY AIR
RELEASE**

JACKING PROCEDURE




If jacking is required, follow the procedure indicated here:


1. Position the bus on a hard, level, flat surface before jacking.
2. Set the **PARKING BRAKE**, and select **NEUTRAL** on the **PUSH-BUTTON DRIVE SELECTOR**. Turn the **MASTER CONTROL SWITCH** to the **OFF** position.
3. The floor jack must be located properly to prevent the possibility of the jack sliding out from under the bus.
4. If the vehicle is too low to use the hoisting point, raise the vehicle from the front and place a jack stand under one of the jacking points. Then use one or more jacks under the forward lower radius rod connector clamps.
5. The designated support points are located under each jacking pad. (Front of the bus).
6. If it is impossible to follow step 3, the jack stand can be placed under the front axle.
7. If the vehicle is too low to use the hoisting point, raise the vehicle from the rear and place a jack stand under one of the jacking points. Then use one or more jacks under the forward lower radius rod connector clamps.
8. The designated support points are under each jacking pad. They are located along the underside of the vehicle, behind the rear wheels. (Rear of the bus).
9. If it's impossible to follow step 4, the jack stand can be placed under the rear axle.



WARNING

Never put lifting equipment under the rear batteries.

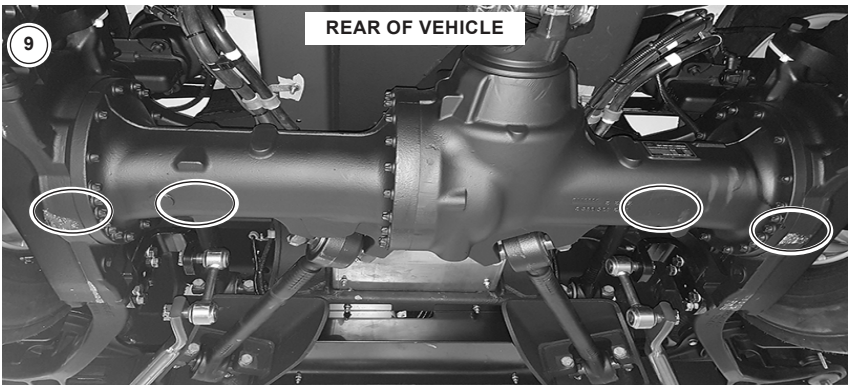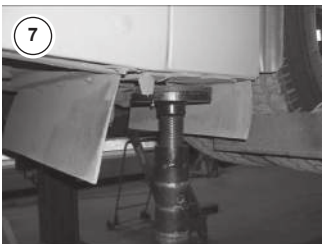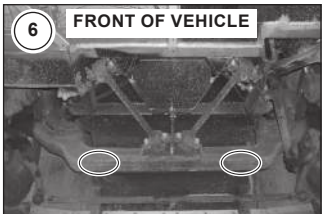

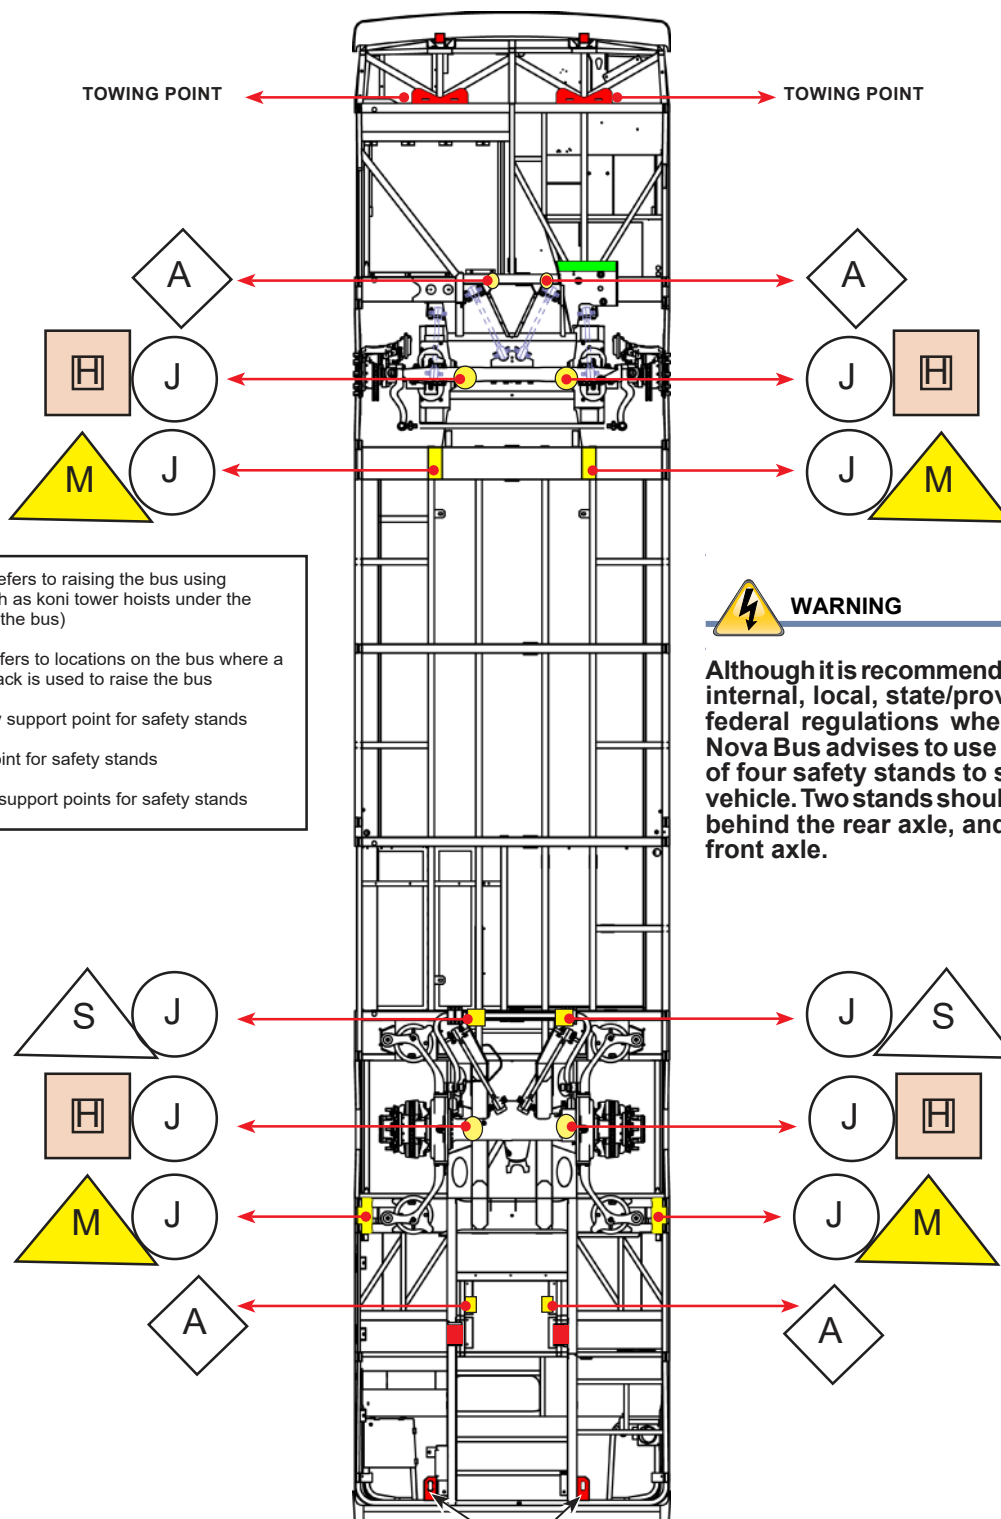

H = Hoisting (refers to raising the bus using equipment such as koni tower hoists under the wheels/tires of the bus)

J = Jacking (refers to locations on the bus where a floor or bottle jack is used to raise the bus)

M = Mandatory support point for safety stands

S = Support point for safety stands

A = Additional support points for safety stands



WARNING


Although it is recommended to follow internal, local, state/provincial, and federal regulations when hoisting, Nova Bus advises to use a minimum of four safety stands to support the vehicle. Two stands should be placed behind the rear axle, and two at the front axle.

(1) REAR TOWING CHAIN ATTACHMENT POINTS

The rated voltage on the LFS Hybrid Electric Vehicle is 633VDC.

1 	Check the instrument panel for the fire tell-tale (1) appearing with an audible alarm. This warning indicates that a thermal runaway has been detected in the lithium-ion batteries.
	SWITCHING OFF THE IGNITION Turn the MASTER CONTROL SWITCH to the OFF position.
	Shut down the high-voltage system either by: - the NON-DESTRUCTIVE or - the DESTRUCTIVE options.

SHUT DOWN HIGH VOLTAGE:



  12/24V BATTERY DISCONNECT SWITCH	Option 1 (Non-Destructive Method) If the streetside motor access door is accessible, turn the 12/24V BATTERY DISCONNECT SWITCH to the OFF position.
	Option 2 (Destructive Method) If the driver's area or the 24V BATTERY DISCONNECT SWITCH are inaccessible: Cut the YELLOW WIRE at ONE OF THE THREE locations: - Streetside roof, behind the Propulsion Control System - Curbside roof, near the air compressor - Inside curbside motor access door
 WARNING The high-voltage system contains enough energy to maintain an electric arc. Full respect of the safety procedures and proper use of the specified PPE rated for 8.75 cal/cm² (or better) reduces the risk of exposure to an electric arc.	

OPTION 2 - DESTRUCTIVE METHOD CUTTING LOCATIONS:



WARNING

Cutting at any of the locations shown will disable the high-voltage supply .

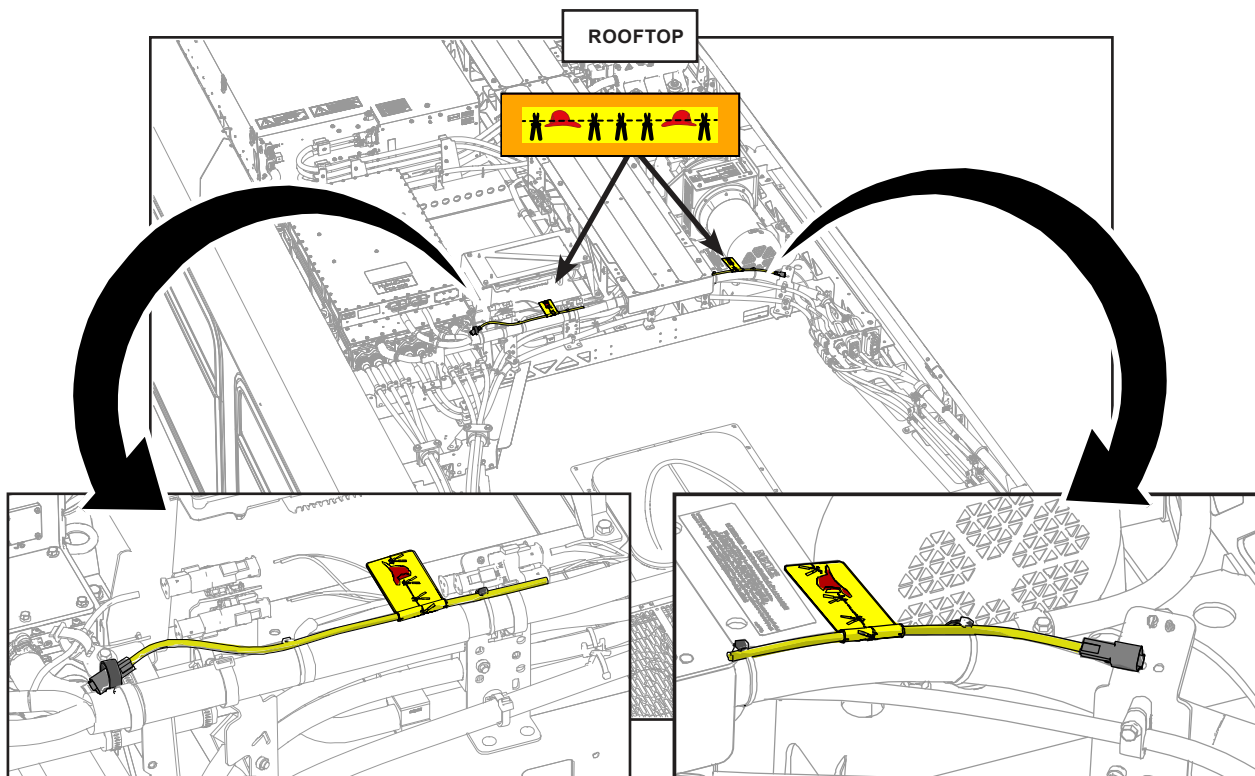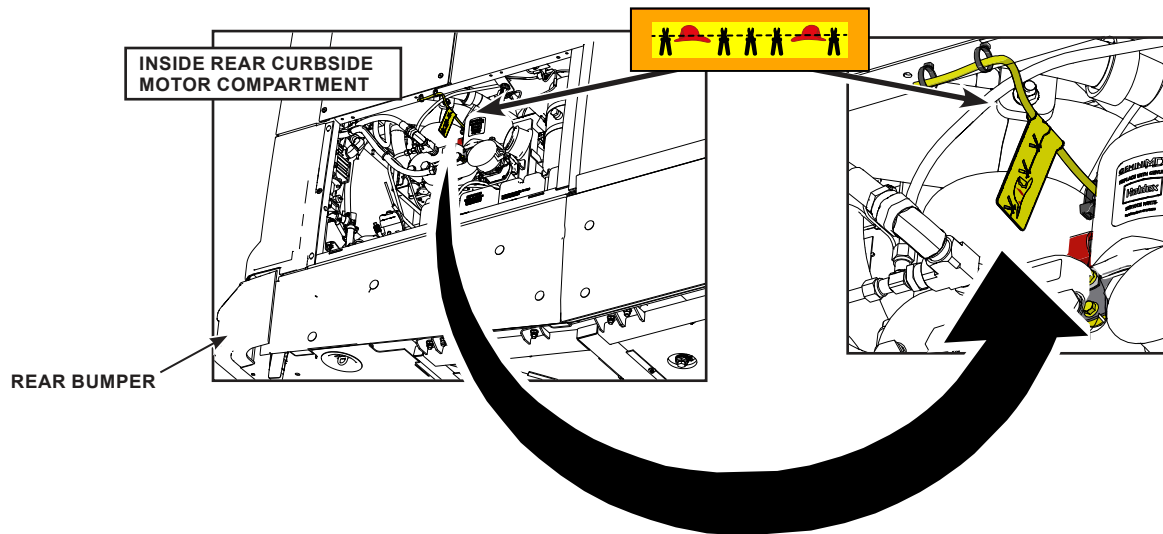

There are several points of exit for occupants in emergency situations. If accessible, these include:



- 1 emergency exit roof hatch at rear
- 4 emergency exits: 2 push-out windows on each side



- Two door exits


VEHICLE SHELL AND BODY STRUCTURE

The materials used for the vehicle shell and body structure are shown in the images below, including details of high-strength steel zones.



PROHIBITED CUT ZONES

The no-cut zones are shown below. The no-cut zones include any portion of the orange high-voltage cables, the ESS high-voltage battery packs, and any high-voltage components contained in the rear motor compartment. The prohibited cut zones are to be respected when the high-voltage system is active.

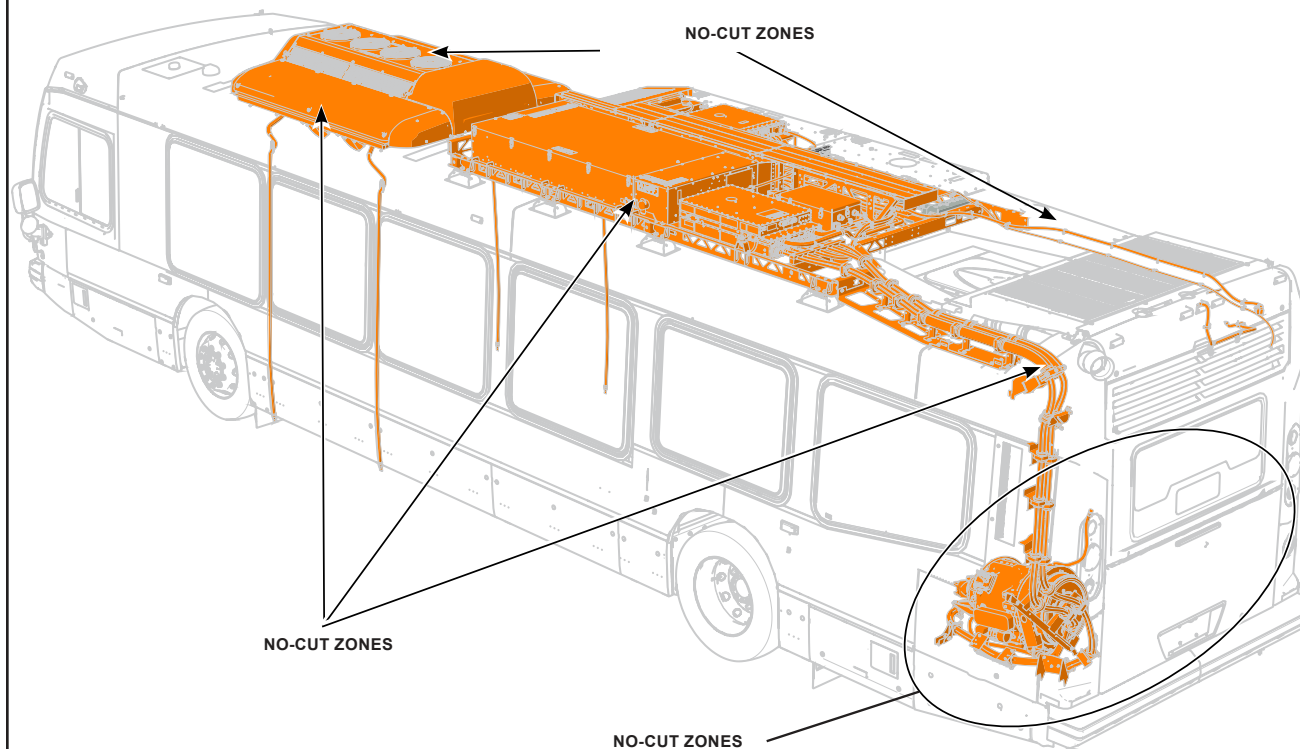


**DANGER
HIGH VOLTAGE**




DEFINITION
OF VEHICLE
ELECTRICAL RISK
ZONES

1. INSIDE THE BUS
FULLY SECURED AREA
2. ENGINE COMPARTMENT
LOW RISK - EXERCISE SOME CAUTION
3. ROOFTOP UNIT AND POWER STEERING
MODERATE RISK - EXERCISE CAUTION
4. BATTERY UNIT
HIGH RISK - EXERCISE EXTREME CAUTION

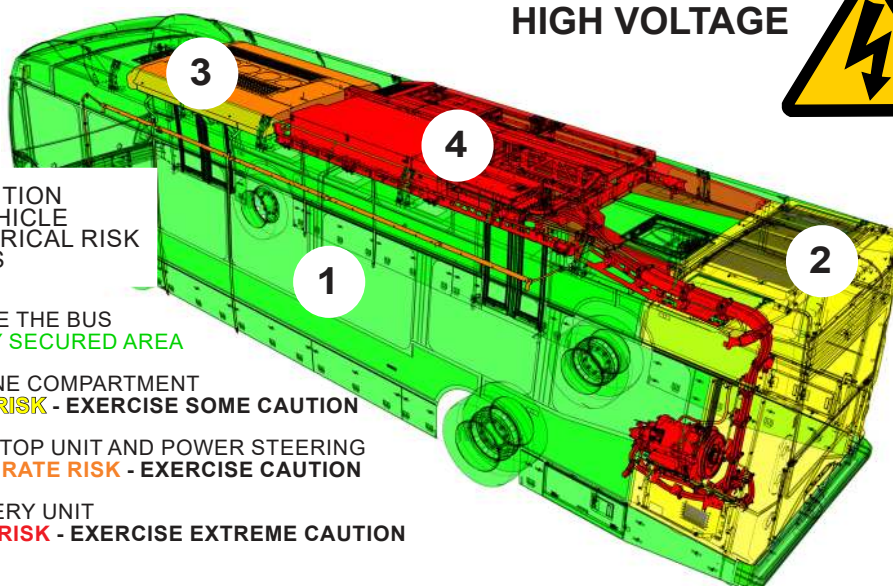

ADJUSTMENT MECHANISM(S): DRIVER'S SEAT

USSC OPERATOR'S SEAT CONTROLS

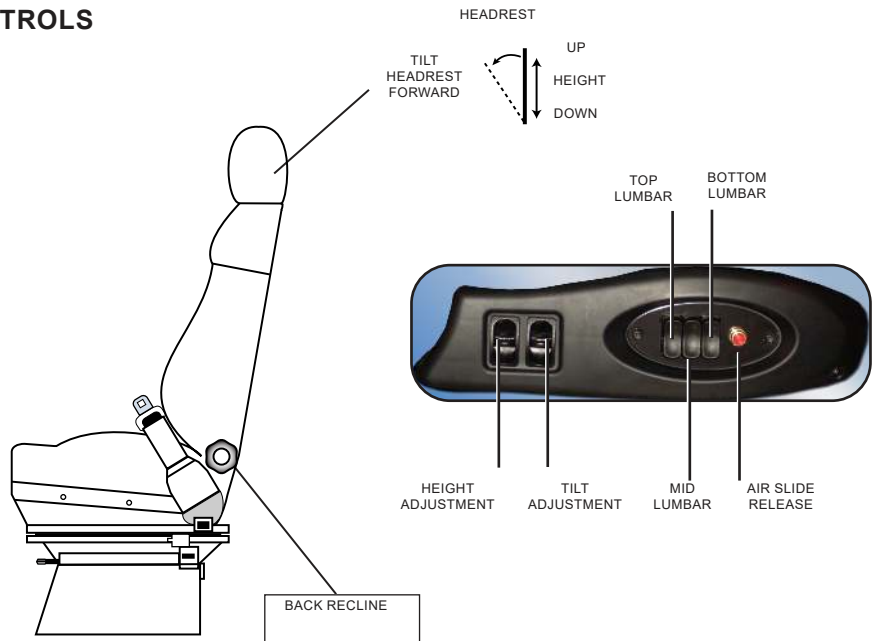

SEAT HEIGHT ADJUSTMENT

The height adjusting knob is located on the front left edge of the seat cushion. All air can be quickly released by pulling the knob out. Pushing the knob in restores air to the system. Rotating the knob raises or lowers the seat accordingly.

SEAT TILT ADJUSTMENT

The seat cushion angle can be adjusted 10 degrees; turn the tilt adjustment knobs located on the middle sides of the seat cushion.

SEAT BACK RECLINE

The seat back angle can be adjusted from 45 degrees forward to 125 degrees backward. Two seat recline knobs are located on both sides of the seat back where they meet the seat cushion.

LUMBAR SUPPORT

Located on the front edge of the seat are the air lumbar switches. Pushing the switches increases or decreases the amount of lumbar support.

FORE/AFT SLIDE

The entire seat can be adjusted by 11.8 inches front to back. Raising the slide handle, located at the seat front below the plastic bellows, releases the lock and allows the seat to move forward or backward. Optional: Press the red air slide release button located on the switch box to release the slides.

RECARO OPERATOR'S SEAT CONTROLS

SEAT CUSHION RAKE ADJUSTMENT

THE FRONT PART OF THE SEAT CAN BE ADJUSTED 15 DEGREES BY PULLING THE HANDLES UP AND MOVING THE THIGH EXTENSION UP AND DOWN TO THE DESIRED ANGLE.

THIGH EXTENSION (CUSHION LENGTH ADJUSTMENT)

THE FRONT PART OF THE SEAT CUSHION CAN BE EXTENDED UP TO 2 IN. (50MM), BY PULLING THE FRONT OF THE THIGH EXTENSION FORWARD OR BACKWARD TO THE DESIRED LENGTH.

MANUAL FORE/AFT ADJUSTMENT

PULL THE HANDLE UP TO MOVE THE SEAT BACKWARD AND FORWARD

HEADREST SUPPORT

HEIGHT ADJUST - PULL UP OR PUSH DOWN UNTIL THE DESIRED HEIGHT IS OBTAINED. TILT ADJUSTMENT - PULL FORWARD OR PUSH BACK UNTIL THE DESIRED ANGLE IS OBTAINED.

BACKREST RECLINE

FOR DESIRED BACK ANGLE, ROTATE HAND WHEEL CLOCKWISE OR COUNTERCLOCKWISE.

ADJUSTABLE SHOCK

TO ADJUST THE SHOCK, TURN CLOCKWISE TO SOFTEN THE RIDE. TURN COUNTERCLOCKWISE TO STIFFEN THE RIDE.



AIR LUMBER ADJUSTMENTS

PUSH SWITCH FORWARD TO INFLATE. PUSH SWITCH REARWARD TO DEFLATE.

AIR TRACK RELEASE

TO RELEASE TRACKS, PUSH BUTTON AND SHIFT BODY FOR DESIRED POSITION.


PNEUMATIC AIR SUSPENSION SWITCH

PUSH THE SWITCH UP TO RAISE SUSPENSION. PUSH THE SWITCH DOWN TO LOWER SUSPENSION.


SEAT CUSHION RAKE ADJUSTMENT

ACCESSIBILITY SEATING SECUREMENT


BLACK LAP/SHOULDER BELTS: REFER TO INSTRUCTIONS AND FIGURE G OR H FOR PROPER APPLICATION (FIGURE G SHOWN)

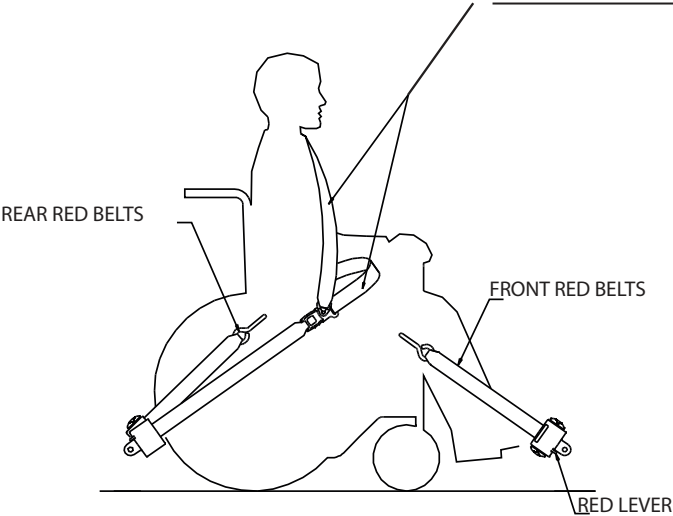

FLOOR MOUNTED SECUREMENTS

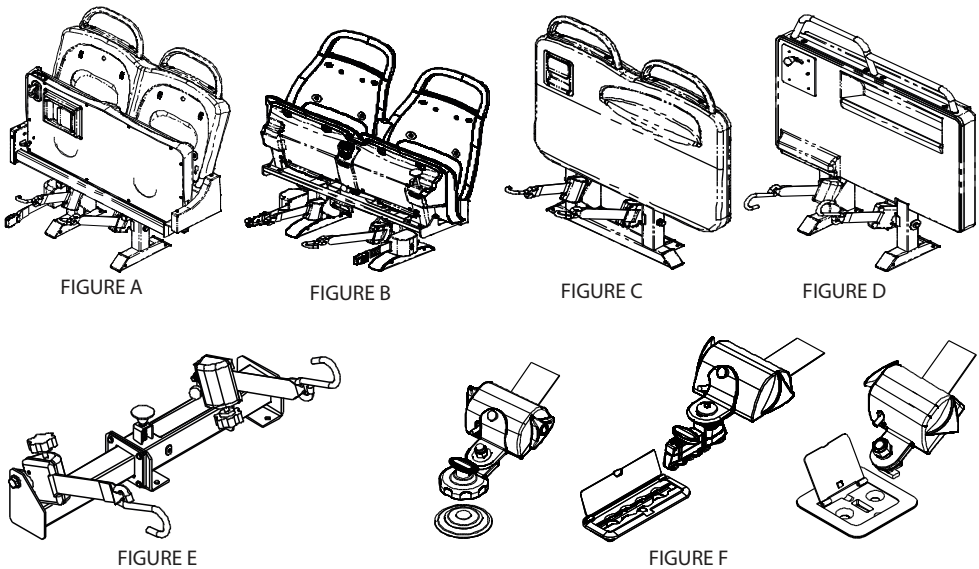

LAP AND SHOULDER CONNECTIONS

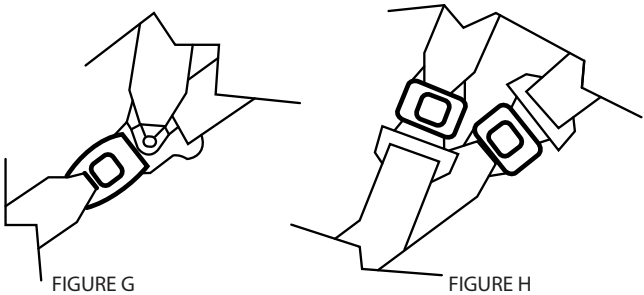


ADJUSTMENT MECHANISM(S): STEERING WHEEL

TO ADJUST THE ANGLE OF THE STEERING WHEEL:




1. Pull the knob up.
2. Place the steering wheel in the desired position.
3. Release the knob.

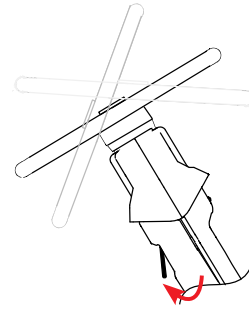

TO ADJUST THE HEIGHT OF THE STEERING WHEEL:

1. Push the knob down.
2. Place the steering wheel in

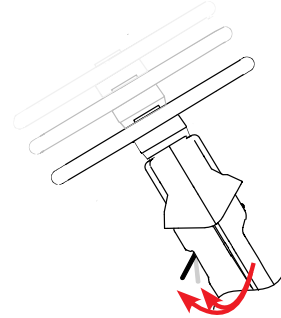


VEHICLE KNEELING SYSTEM

The kneeling and ramp functions might be protected by a **MASTER SWITCH** that is protected with a red cover. If this is the case, the master switch will need to be activated.

KNEELING

To adjust the height:



1. Before discharging passengers via the front door, activate (down position) the front kneeling switch (item 1). The front of the vehicle will lower between 4 and 5 inches (10 and 13 cm). While the front is being lowered, an alarm sounds, a light flashes outside the front door, and a tell-tale lights up to indicate that the operation is in progress.
2. To raise the vehicle, set the kneeling switch in the up position.


RAMP

Some conditions must be met before the access ramp can be deployed:

- The **MASTER CONTROL SWITCH** must be in the **RUN OR LIGHTS** position.
- The front door must be open.
- The transmission pushbutton selector is set to **NEUTRAL**.
- Parking brake must be in the **ON** position.


To deploy the ramp:

1. Hold the **RAMP SWITCH** (item 2) in the down position until the ramp is fully deployed.
2. An alarm will sound and a tell-tale will light up to indicate that the operation is in progress.
3. A light on the outside of the vehicle will flash to warn people.
4. Check the deployment of the ramp in the front door area.
5. To stow the ramp, hold the **RAMP SWITCH** (item 2) in the up position until the ramp is stowed.

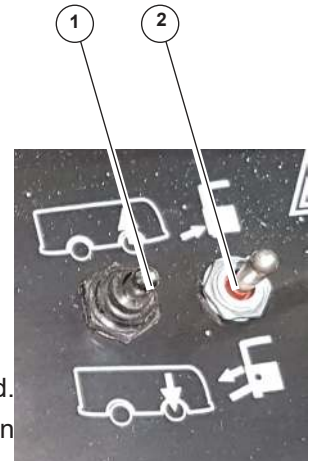

	COMPONENT TYPE	TYPE/ CHEMISTRY	NUM- BER	VOLUME/ WEIGHT	MAX. OPERATING PRESSURE	SPECIFIC DANGER (SYMBOL)
1	High-voltage propulsion batteries	Lithium-ion	1	800 lb (365 kg) (each)		
2	12/24V Batteries (house)	Lead-acid/ AGM	2	78 lb (35 kg) (each)		
4	Air system	Compressed air	4 tanks	8,000 cu. in. (0.13 cubic meters)	135 psi (961 kPa)	
5	Fire suppression (optional) bottle	Type ABC powder	2	22 lb (10 kg) of dry chemical agent	360 psi (2482 kPi)	
6	Coolant (MCP)	Ethylene-glycol/H ₂ O		5 gal (19 L)	18 psi (124 kPa)	
7	Coolant (ECP)	Ethylene-glycol/H ₂ O		5 gal (19 L)	18 psi (124 kPa)	
8	Engine cooling system	Ethylene-glycol/H ₂ O		34-35 gal (130-135 L)	18 psi (124kPa)	
9	A/C fluid	R407C		13-16 lb (5,896-7,257 g) depending on model	250 psi (17 bar)	
10	Flammable fluids/materials					
	a) Diesel fuel	Diesel	1 Tank	86 gal (325 L)		
	b) Steering assist fluid	Castrol TranSynd	1 Tank	0.19 gal (0.7 L)		
	c) Front axle	API GL-5/SAE J2360		1.3 gal (5 L) oil 3.4 oz (96 g) grease		
	d) Rear axle	API GL-5/SAE J2360		4.6 gal (17.5 L) oil 4.4-5.3 oz (125-150 g) grease		
	e) Interior materials	In accordance with DOT/FMVSS 302				

HIGH-VOLTAGE COMPONENT LOCATION

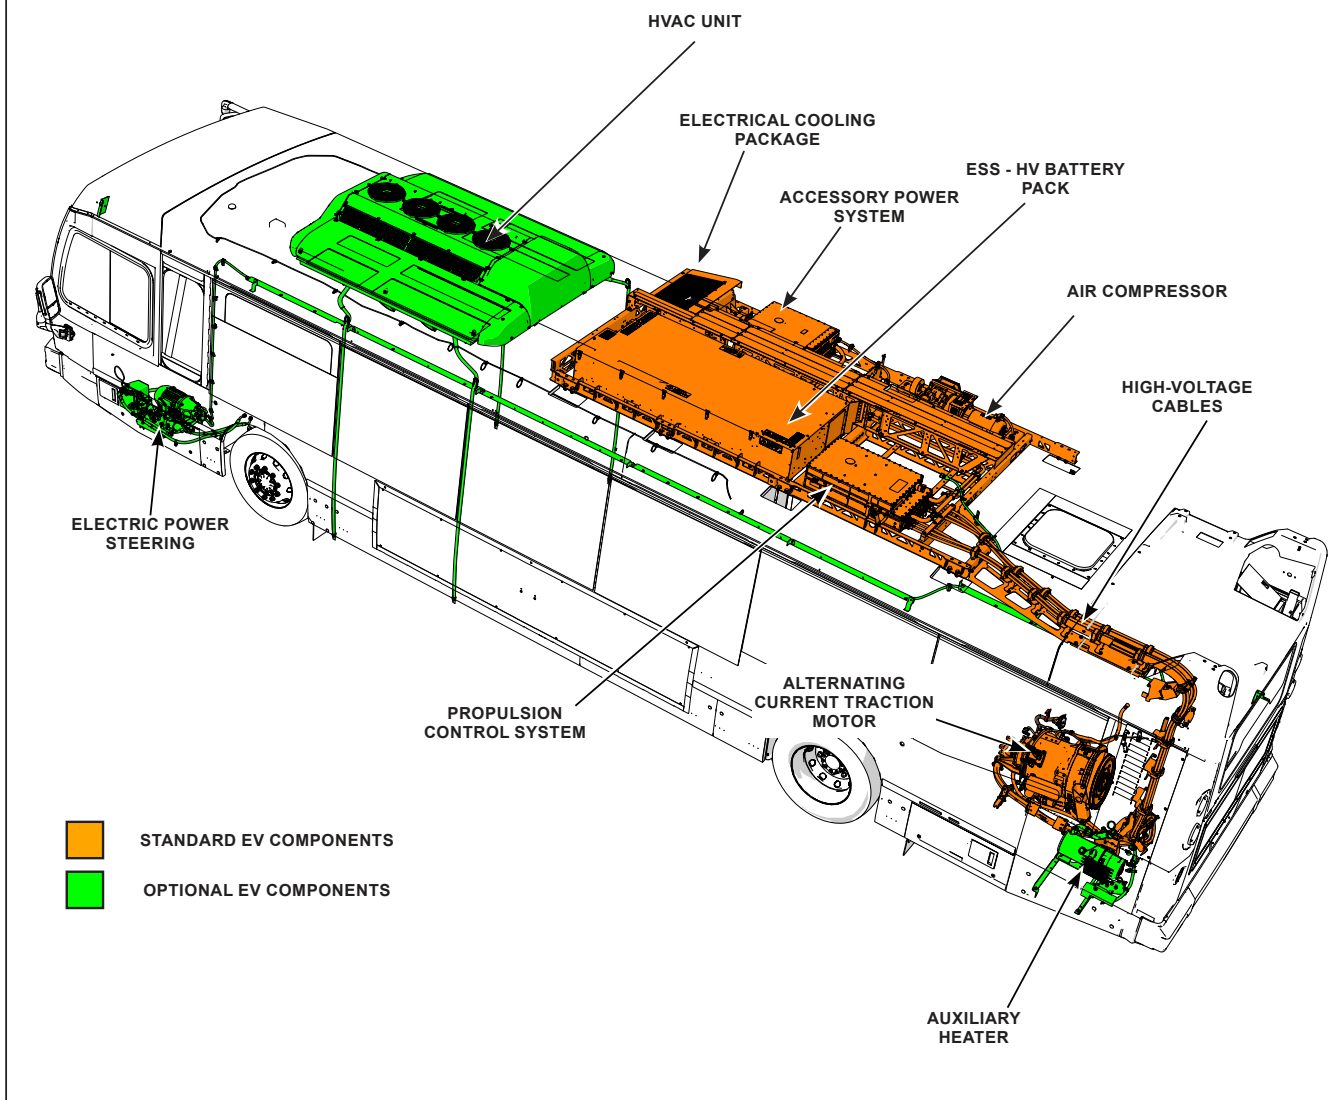

	ID No.	Version No.	Page No.
	00-00-45	03 (April 2026)	22

HIGH-VOLTAGE (HV) BATTERY PACK (BP) INFORMATION: GENERAL FIRST AID MEASURES AND ENVIRONMENTAL ASPECTS

Under normal conditions of use, there is no risk of exposure to the contents of the high-voltage (HV) battery packs (BP). However, unforeseen circumstances (e.g., a vehicle collision) may cause damage to one or more BP cells with uncontrolled increases in temperature and pressure (thermal runaway) that can lead to several possible hazards, as described below:

EXPOSURE TO HIGH VOLTAGE: 60V DIRECT CURRENT (VDC) OR 30V ALTERNATING CURRENT (VAC)



WARNING

Mitigate the risks with stranded energy (electrical energy inside the battery without a way to remove it safely) in high-voltage BPs.

- Avoid contact with HV cabling and components. **ALWAYS** assume the HV system is energized.
- Avoid contact with a damaged BP—a significant shock hazard may exist.
- **NEVER** cut orange HV cabling or penetrate HV components with tools.
- HV system shutdown procedures in Section 3, **DISABLE DIRECT HAZARDS**, are designed to disable the vehicle's HV system, not to discharge the BP. The BP will remain energized.
- Even with the BP completely discharged (State of Charge = 0), the system remains within the class B voltage definition and should, therefore, be disconnected as indicated in Section 3, **DISABLE DIRECT HAZARDS**.
- Sparks, smoke, bulging, or bubbling noises coming from the BP are signs of a potentially overheating battery, which could result in a delayed fire.
- Follow local medical protocols and First Aid standard operating procedures (SOP) for any burn, electrical, or other injuries.

EXPOSURE TO ELECTROLYTE MIXTURE:

- Wear appropriate PPE if exposure to electrolyte is expected. SCBA is highly recommended due to the possibility of severely irritating fumes.
- Any clothing or PPE that may have come into contact with electrolyte should be either decontaminated or discarded appropriately.
- If required, seek medical assistance.

INHALATION IN NON-FIRE SITUATIONS:

- If you detect leaking fluids, sparks, smoke, or bubbling noises coming from the BP, open the windows to ventilate the vehicle and prevent fumes from building up.
- If electrolyte leaks from the BP and is exposed to the air, electrolytic vapors might be released. In a non-fire situation, electrolytic vapors might be toxic (or severely irritating). If vapors are inhaled, immediately move exposed personnel to fresh air.

	ID No.	Version No.	Page No.
	00-00-45	03 (April 2026)	23

SAFETY MEASURES FOR BATTERY HANDLING:

- The battery assembly cover should never be breached or removed under any circumstance, including fire. Doing so might result in severe electrical burns, shocks, or electrocution.

HARMFUL AND/OR FLAMMABLE FUMES:

- Contents of high-voltage battery packs should be considered corrosive, toxic, and/or flammable.
- If you detect unusual odors or experience eye, nose, throat, or skin irritation, use full PPE with SCBA.
- If you detect leaking fluids, sparks, smoke, or bubbling noises coming from the high-voltage battery pack, ventilate the vehicle by opening doors and windows to prevent the buildup of fumes.
- Sparks, smoke, or bubbling noises coming from the high-voltage battery pack are signs of a potentially overheating battery, which could result in a delayed fire.

SPILL/LEAK HAZARDS FROM HIGH-VOLTAGE BATTERIES:

- High-voltage Li-Ion batteries are considered dry cell batteries, and if damaged or breached, electrolyte leakage should be minimal.
- The high-voltage battery on this vehicle is liquid cooled with coolant flowing to and from an external radiator unit on the roof. If the cooling circuit is damaged or disconnected from the batteries or if the battery housing is breached, coolant may leak. The coolant is a water/glycol/ethylene solution (similar to that of the coolant for conventional vehicle radiators) and should not be confused with battery electrolyte. Battery electrolyte is internal to the individual battery cells inside the battery pack.
- If damage is extensive, cross contamination with battery electrolyte is possible.




	ID No.	Version No.	Page No.
	00-00-45	03 (April 2026)	24

BATTERY FIRE SITUATIONS

- Establish a 50-foot (15-meter) radius safety zone around the vehicle.
- Lithium-ion batteries contain fuel and oxidizer. They do not require an oxygen source, therefore, water cannot remove the oxygen source. Water can, however, reduce temperatures when supplied in large amounts, and control spreading.
- Do not extinguish battery fires with small amounts of water. Establish an additional water source as battery fires can take up to 24-hours to burn out and several thousand gallons of water.



- Do not use ABC fire extinguishers to put out a lithium-ion battery fire.
- Standard firefighting practices can be applied to other portions of the vehicle to prevent the fire from spreading.
- Use a thermal imaging camera to verify that all heat sources are extinguished, helping prevent risk of reignition.
- During thermal runaway, lithium-ion batteries can release hydrogen fluoride, which can be harmful.

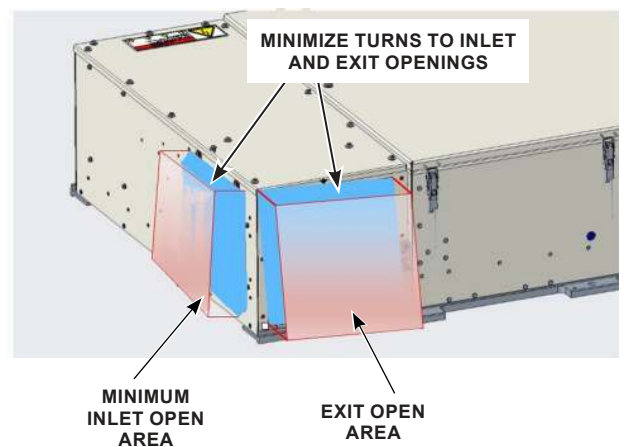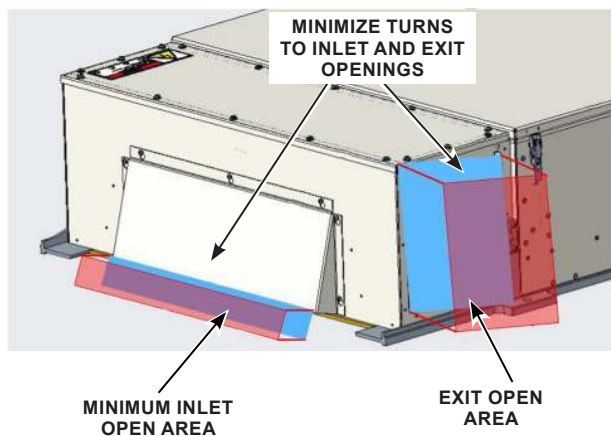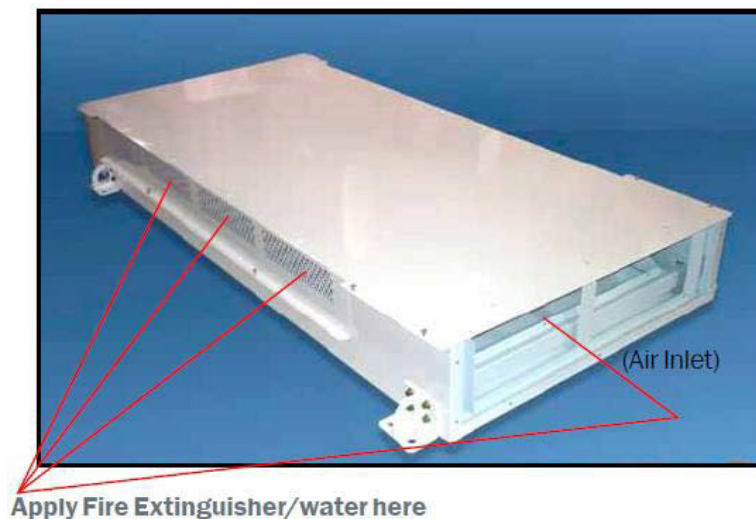

STORING A DAMAGED HIGH-VOLTAGE (HV) BATTERY PACK

When a damaged HV battery pack is placed in storage, it is placed in a quarantine area. **The quarantine area must fulfill the following minimum requirements:**

- The location of a quarantine area must be chosen under the aspect to **minimize collateral damage** to any kind of structure within its vicinity in case of a fire or sudden ignition of stored materials. The quarantine area shall not be in the direct vicinity of office buildings, residential areas, etc.
- The quarantine area must be in an area where possible **smoke and fume development cannot harm people, impede traffic, or harm the environment.**
- The quarantine area must **not be within a water protection area.**
- The quarantine area must be **separate from the storage of other dangerous goods** such as inflammable or chemical substances.
- The quarantine area must be **protected from environmental factors** such as rain, moisture, dirt and debris, as well as direct sunlight.
- The quarantine area must be **well-ventilated.**
- The quarantine area must have **enough space** to store more than one HV battery pack at a time with enough safe distance between the battery packs to avoid chain reactions in case of a fire.
- The quarantine area must be equipped with an **automated fire extinguishing system.**
- The quarantine area must provide proper equipment for **long-term monitoring** of unstable battery packs.
- The quarantine area must be **protected from unauthorized access.**

FIRE SITUATIONS INVOLVING OTHER MATERIALS



If other materials are involved, use an ABC class fire extinguisher.

Lithium-ion batteries can self-ignite, and/or re-ignite even after a fire has been extinguished. Damaged batteries can vent toxic gas.

If coolant escapes from the battery cooling system, there is a risk of thermal reaction in the high-voltage batteries.

Monitor the temperature (with a thermal imaging camera) of the high-voltage battery.

Wear appropriate protective equipment.



OPTIONAL FIRE SUPPRESSION SYSTEMS

1. FOGMAKER

The Fogmaker saline water fire suppression system detects and suppresses fire in the engine compartment. A hydropneumatic detection tube ruptures and depressurizes. The loss of pressure will trigger the release valve and the suppression agent will instantly fill the hydraulic hoses, pipes, and nozzles. The pressurized suppressant is ejected from the nozzles, and it creates a dense fog of suppression agent.

SUPPRESSION AGENT


- Saline water mist

2. KIDDE

The Kidde fire suppression system is located in the engine compartment. The fire sensor detects a fire in the compartment and a protection panel's fire alarm and a delay engine stop indicators illuminate. An audio alarm sounds, and the HVAC shuts down immediately. After 15 seconds, the engine shuts down automatically and the fire extinguisher discharges by itself into the compartment. The engine shut down and the fire extinguisher activation can be delayed for an additional 15 seconds by pressing the protection panel's engine stop indicator/switch. The driver can discharge the extinguisher immediately and shut down the HVAC and the engine with the manual activation switch. After activation, the system must be reset, and the extinguisher removed and replaced.

SUPPRESSION AGENTS

- Purple K dry chemical
- ABC dry chemical

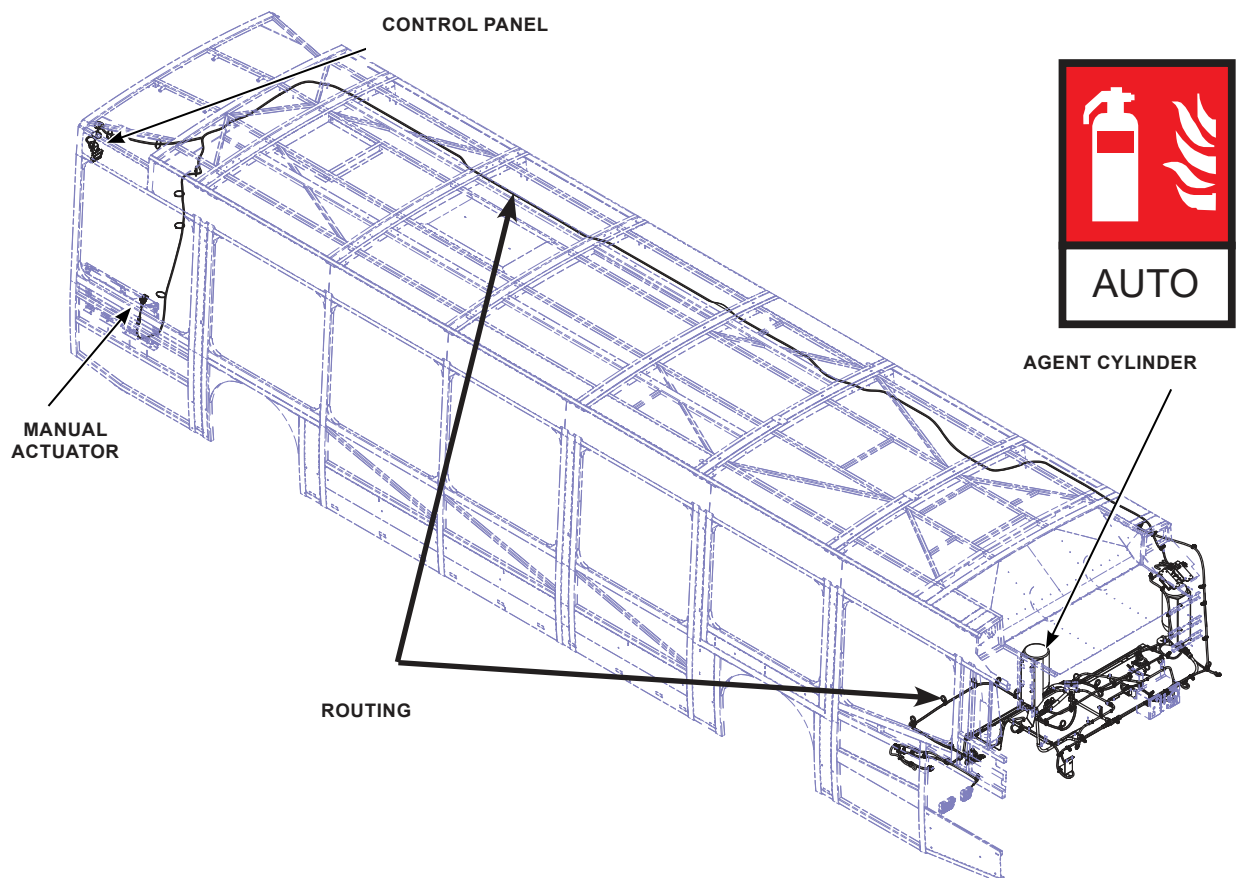

	ID No.	Version No.	Page No.
	00-00-45	03 (April 2026)	27

- The high-voltage system is isolated from the chassis and is designed to pose no shock hazard from touching the vehicle body.
- The system is designed not to energize surrounding water and is equipped with short-circuit fault detectors designed to shut down the high-voltage system in the event of a short.
- On a submerged vehicle, avoid contact with high-voltage components, cabling, or service disconnects.
- Follow standard departmental practices and procedures for passenger access and vehicle removal from water and wear appropriate Personal Protective Equipment (PPE).




Follow Section 3, **DISABLE DIRECT HAZARD/SAFETY REGULATIONS** once out of the water. Allow the water to drain. Wear appropriate protective equipment.





- **DO NOT TOW** a hybrid electric vehicle that has been involved in an incident on its drive wheels unless the high-voltage has been shut down and the axle shafts have been removed.
- The electric motors can produce electricity when moving the vehicle with the rear drive tires on the ground. This remains a potential source of electric shock even when the high-voltage system is disabled. If the hybrid electric vehicle must be moved on the rear drive wheels, make sure the high-voltage system has been shut down and the axle shafts removed.
- The vehicle can be transported on a flatbed, preventing any wheel rotation during transport
- Park the hybrid electric vehicle involved in an accident in a suitable place, maintaining a safe distance from other vehicles, buildings, and combustible objects. The distance should be of 15 meters (50 ft), all around what was involved in an incident until the recommissioning of the vehicle is completed.
- If the ESS high-voltage battery is damaged, there is a risk of delayed thermal or chemical reaction.
- There is a risk of delayed fire, especially after fire suppression has been deployed if the pack has not fully combusted.
- Observe the vehicle for a minimum of 48 hours using a thermal infrared camera or other method of your choice that will allow a quick and proper reaction in case of a thermal runaway.

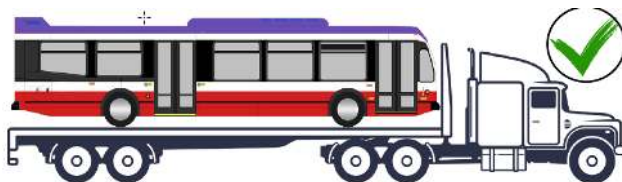

REMOVING THE AXLE SHAFTS




WARNING


Shut down the high-voltage system before towing the electric vehicle.

1. Remove the axle shaft bolts from the end of the hub.
2. Pull the axle shaft to remove it from the hub.

AXLE SHAFT
BOLTS (10)

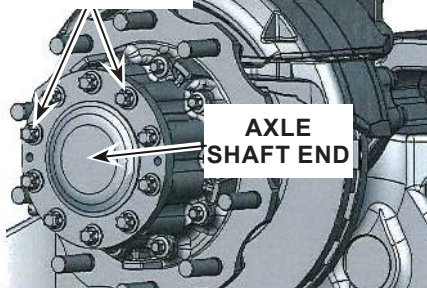

AXLE SHAFT
BOLTS

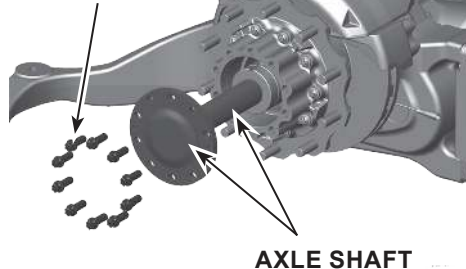

AXLE SHAFT

MAXIMUM LOADING DURING LIFTING AND TOWING:

This information specifies the loading that can be applied when using a towing hook, towing hitch cross-member, axles, and torque stay anchorages.

Single towing hook: Do not load the hook more than the vehicle gross weight.

Double towing hooks: Do not load each hook more than half the vehicle gross weight.

Towing hitch, towing Hitch Cross-Member: Max. 25.5 inches (648 mm) from center of member

MINIMUM JACK REQUIREMENTS

Weight Capacity..... 10 tonnes (10,000 kg)

Diameter of jack head..... 2 in. (51 mm)

MINIMUM SUPPORT REQUIREMENTS

Weight Capacity..... 10 tonnes (10,000 kg)

Diameter of support head 6 in. (152 mm)

TRACK

Aluminum Wheels

Front..... 86.8 in. (2,205 mm)

Rear 77.2 in. (1,960 mm)

Steel Wheels

Front..... 86.3 in. (2,191 mm)

Rear 76.5 in. (1,942 mm)

CENTER OF GRAVITY

Length

To front of rear axle..... 78.9 in. (2,003 mm)

To rear of front axle..... 165.2 in. (4,197 mm)

Width

To the right of bus centerline..... 3.1 in. (79 mm)

Height

From the ground 46.9 in. (1,191 mm)

WHEELBASE

..... 244 in. (6,200 mm)

9. Important additional information



Page 30



- Do not cut high-voltage orange cables unless the system is de-energized using the procedure in section 3.
- Do not touch any high-voltage orange cables or electric components unless the system is de-energized using the procedure in section 3.
- Do not perform any operation on a damaged vehicle without appropriate Personal Protective Equipment (PPE).

10. Explanation of pictograms used

Page 31

	Use water to extinguish the fire		Air-conditioning component
	Use ABC powder to extinguish the fire		Air-conditioning line
	Auto fire suppression system		Emergency exits
	General warning sign		Door exits
	Warning, Electricity		Break cover for access
	Low temperature warning		Steering wheel tilt control
	Electric propulsion		Height control
	High-voltage battery pack		Seat adjustment
	High-voltage components		Lifting points
	Cut high-voltage interlock loop		Gas strut, preloaded spring
	High-voltage power cable		Air tank
	Low-voltage device that disconnects high voltage		Diesel fuel
	Device to shut down power in vehicle		Fuel lines
	Low-voltage battery		Use thermal infrared camera

	To indicate the risk of flammability
	To indicate the risk of an explosion
	Environmental hazard
	Risk of acute toxicity
	Gases under pressure
	To indicate the risk of corrosive material/substances