

TICO **ELECTRIC**



Pro E-Spotter

Model 208



Emergency Response Guide



Intentionally Left Blank Page

0. Rescue Sheet	Page 2
1. Identification / Recognition	Page 6
2. Immobilization/Stabilization/Lifting	Page 7
3. Disable Direct Hazards/Safety Regulations	Page 9
4. Access to the Occupants	Page 13
5. Stored Energy/Liquids/Gases/Solids	Page 18
6. In Case of Fire	Page 21
7. In Case of Water Submersion	Page 22
8. Towing/Transportation/Storage	Page 23
9. Important Additional Information	Page 26
10. Explanation of Pictograms Used	Page 27

0. Rescue Sheet

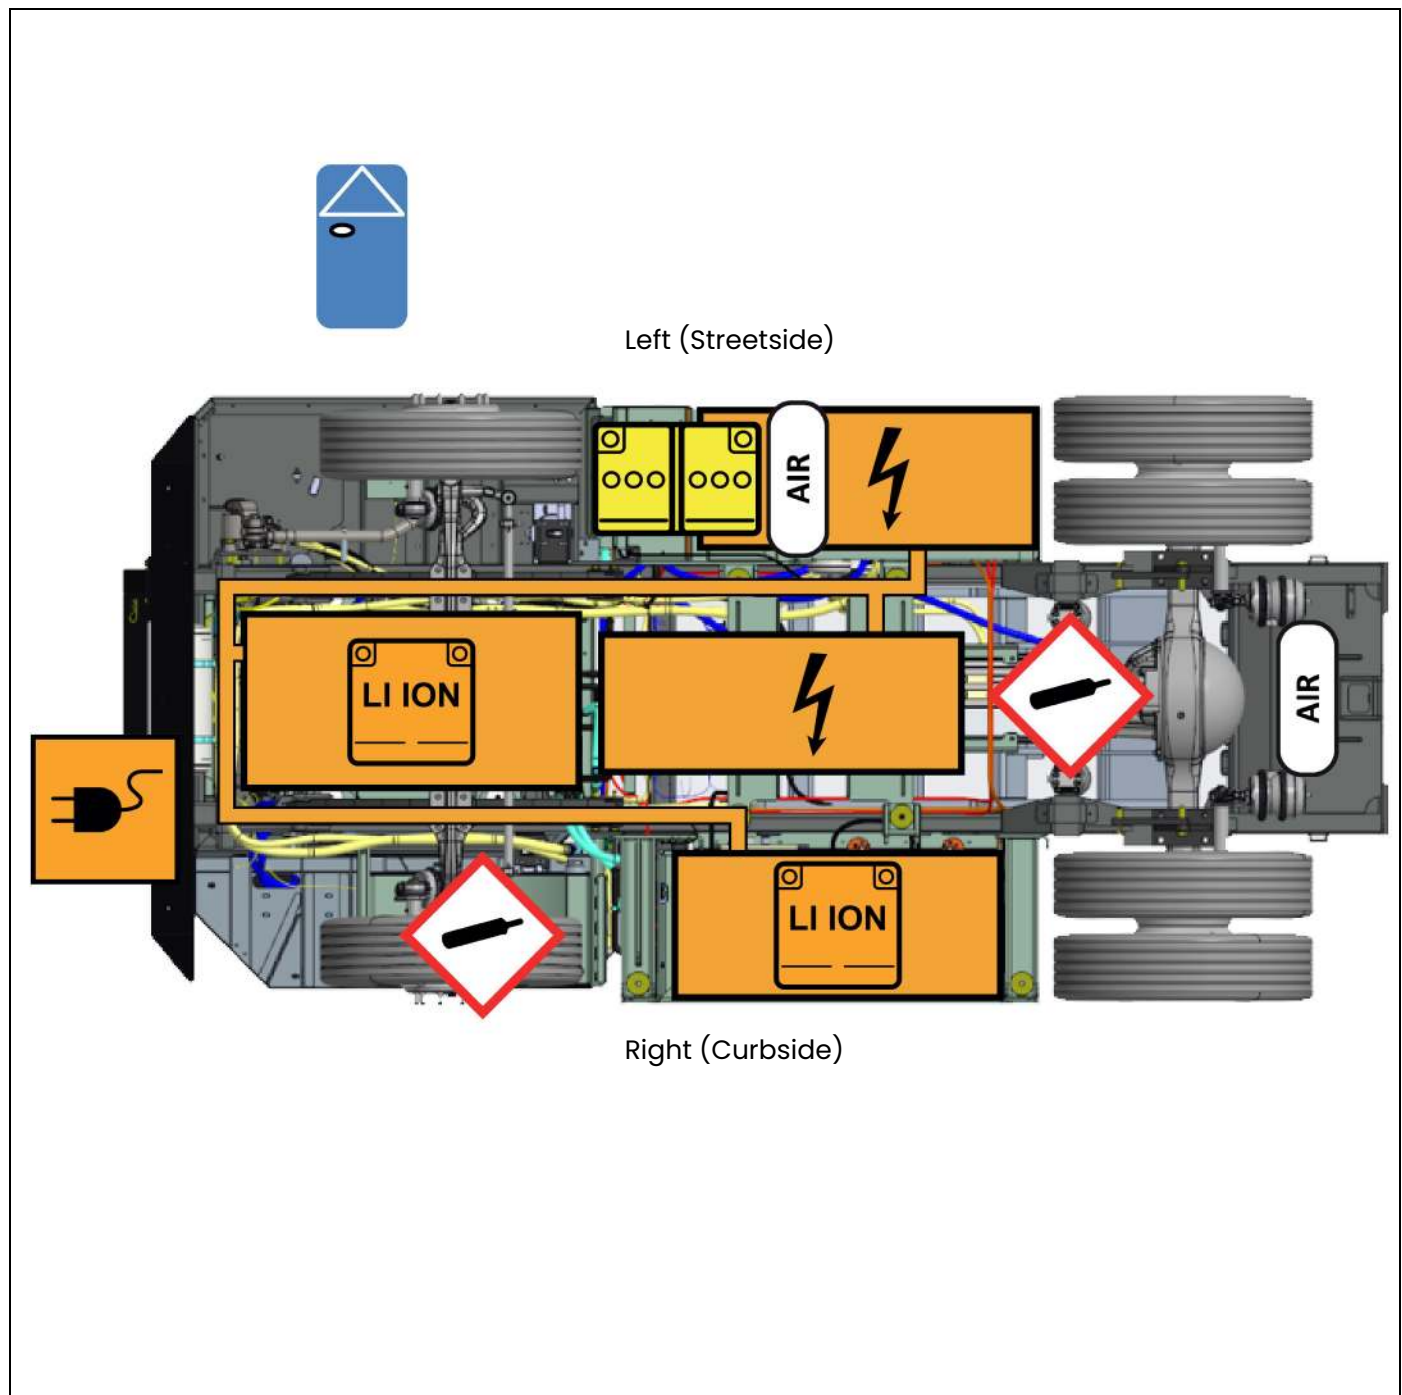


Figure 1-1: Bottom View

T0035 (208)

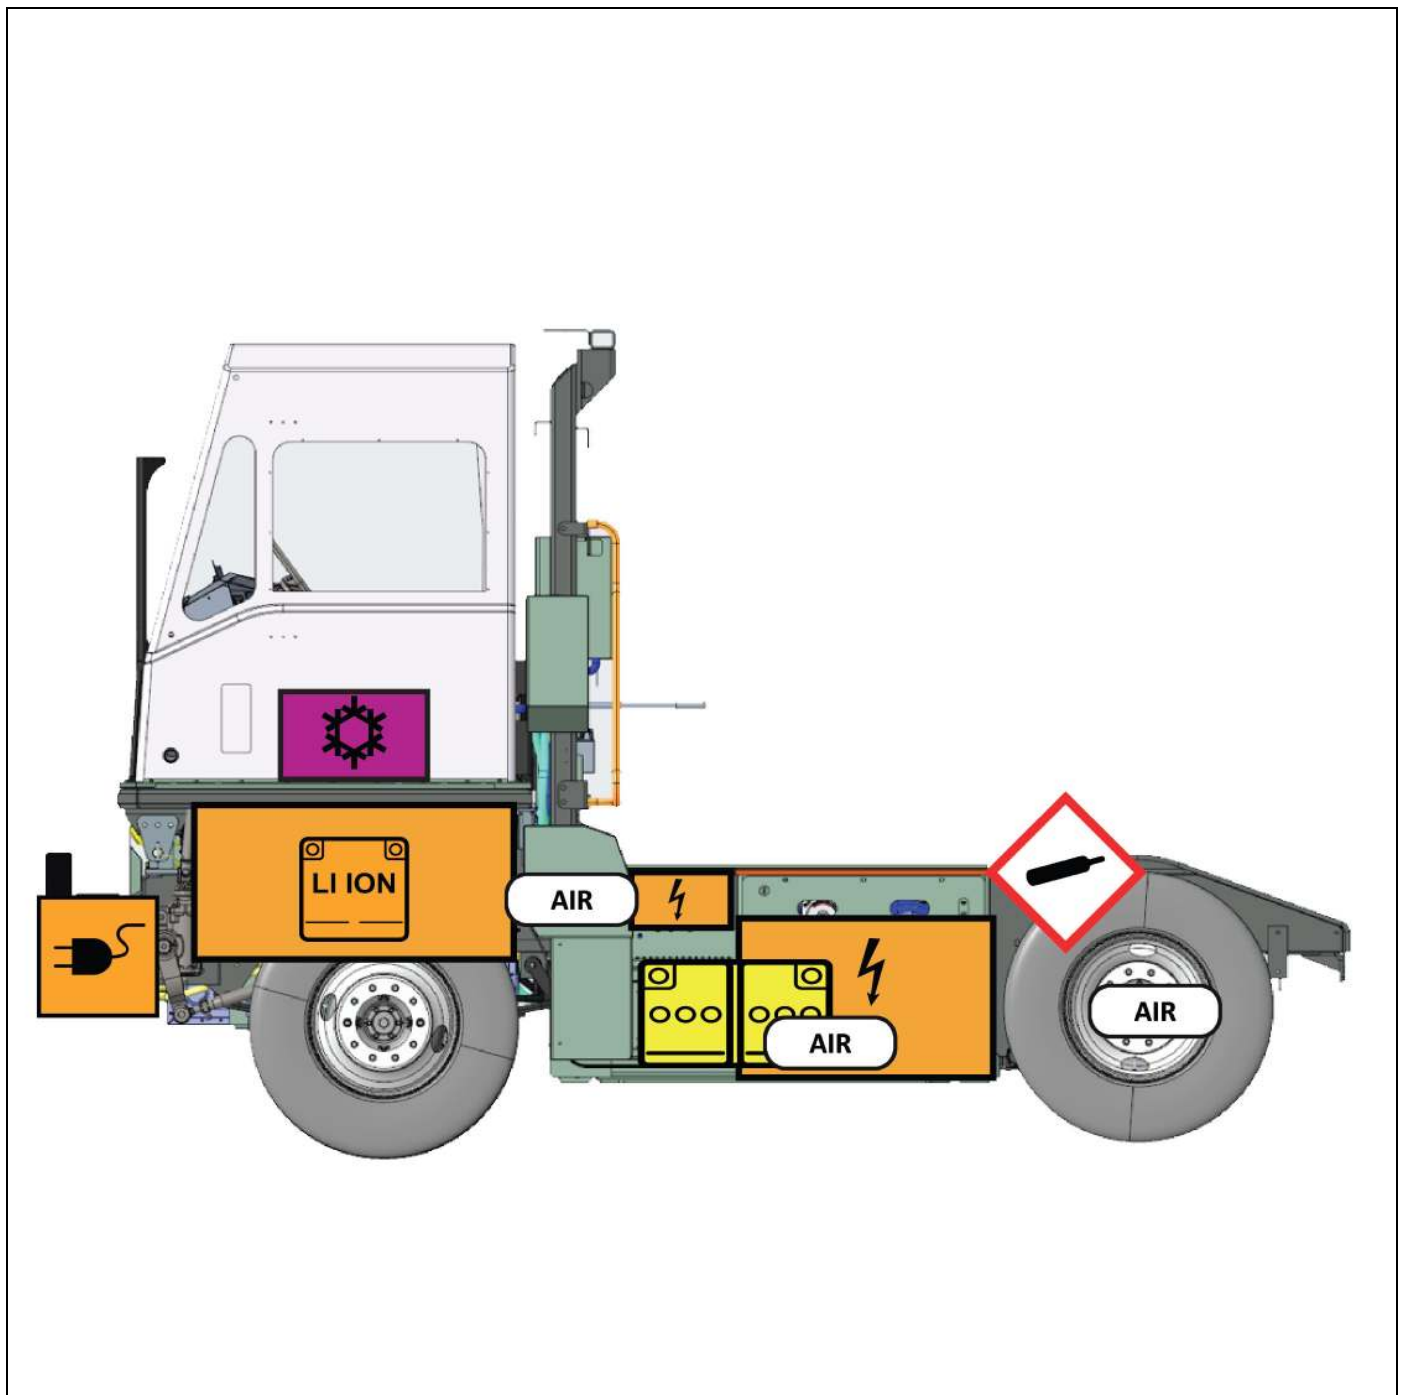


Figure 1-2: Left View

T0036 (208)




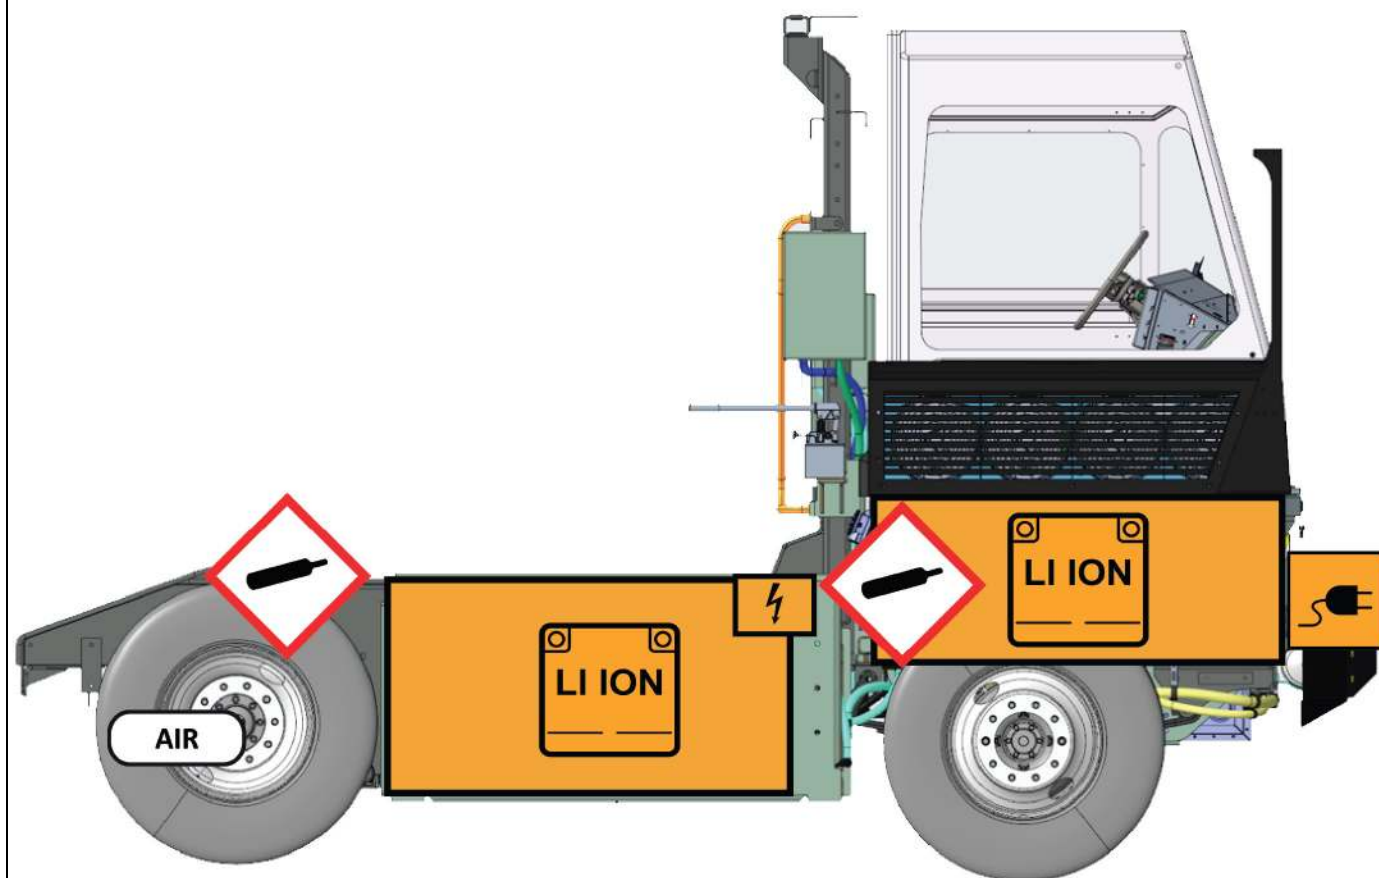


Figure 1-3: Right View

T0037

		
High Voltage Component	Battery Pack, High-Voltage	Battery, Low-Voltage
		
High-Voltage Battery Cable	Charge Port	Air Tank
		
Air-Conditioning Component	Left Hand Drive	Gases Under Pressure (Hydraulics)

1. Identification / Recognition

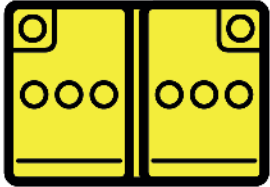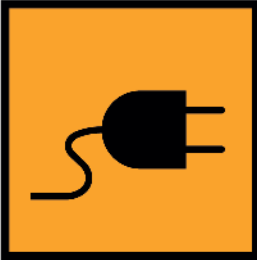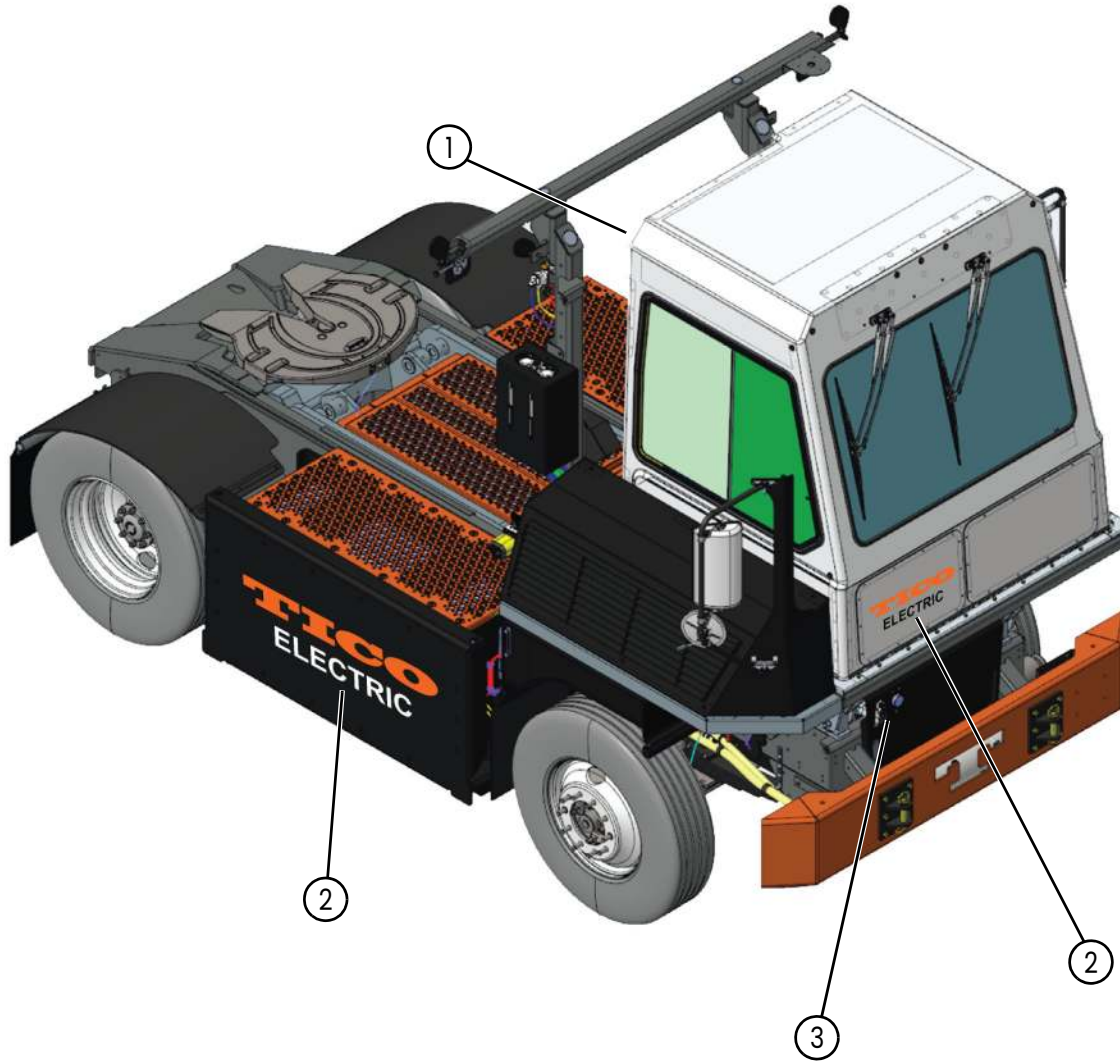

T0047 (208)

Figure 1-4:

- 1) No Exhaust Pipe
- 2) "TICO Electric" Badging (Location Varies)
- 3) Charge Port

2. Immobilization/Stabilization/Lifting



Always approach the tractor from the side to avoid the travel path. Movement is still possible despite the lack of engine noise.



Figure 1-5:

T0035

1. Chock the wheels.
2. Pull to apply the parking brake. (A)
3. Pull to apply the trailer brake (if applicable). (B)
4. Shift the tractor into Neutral. (C)

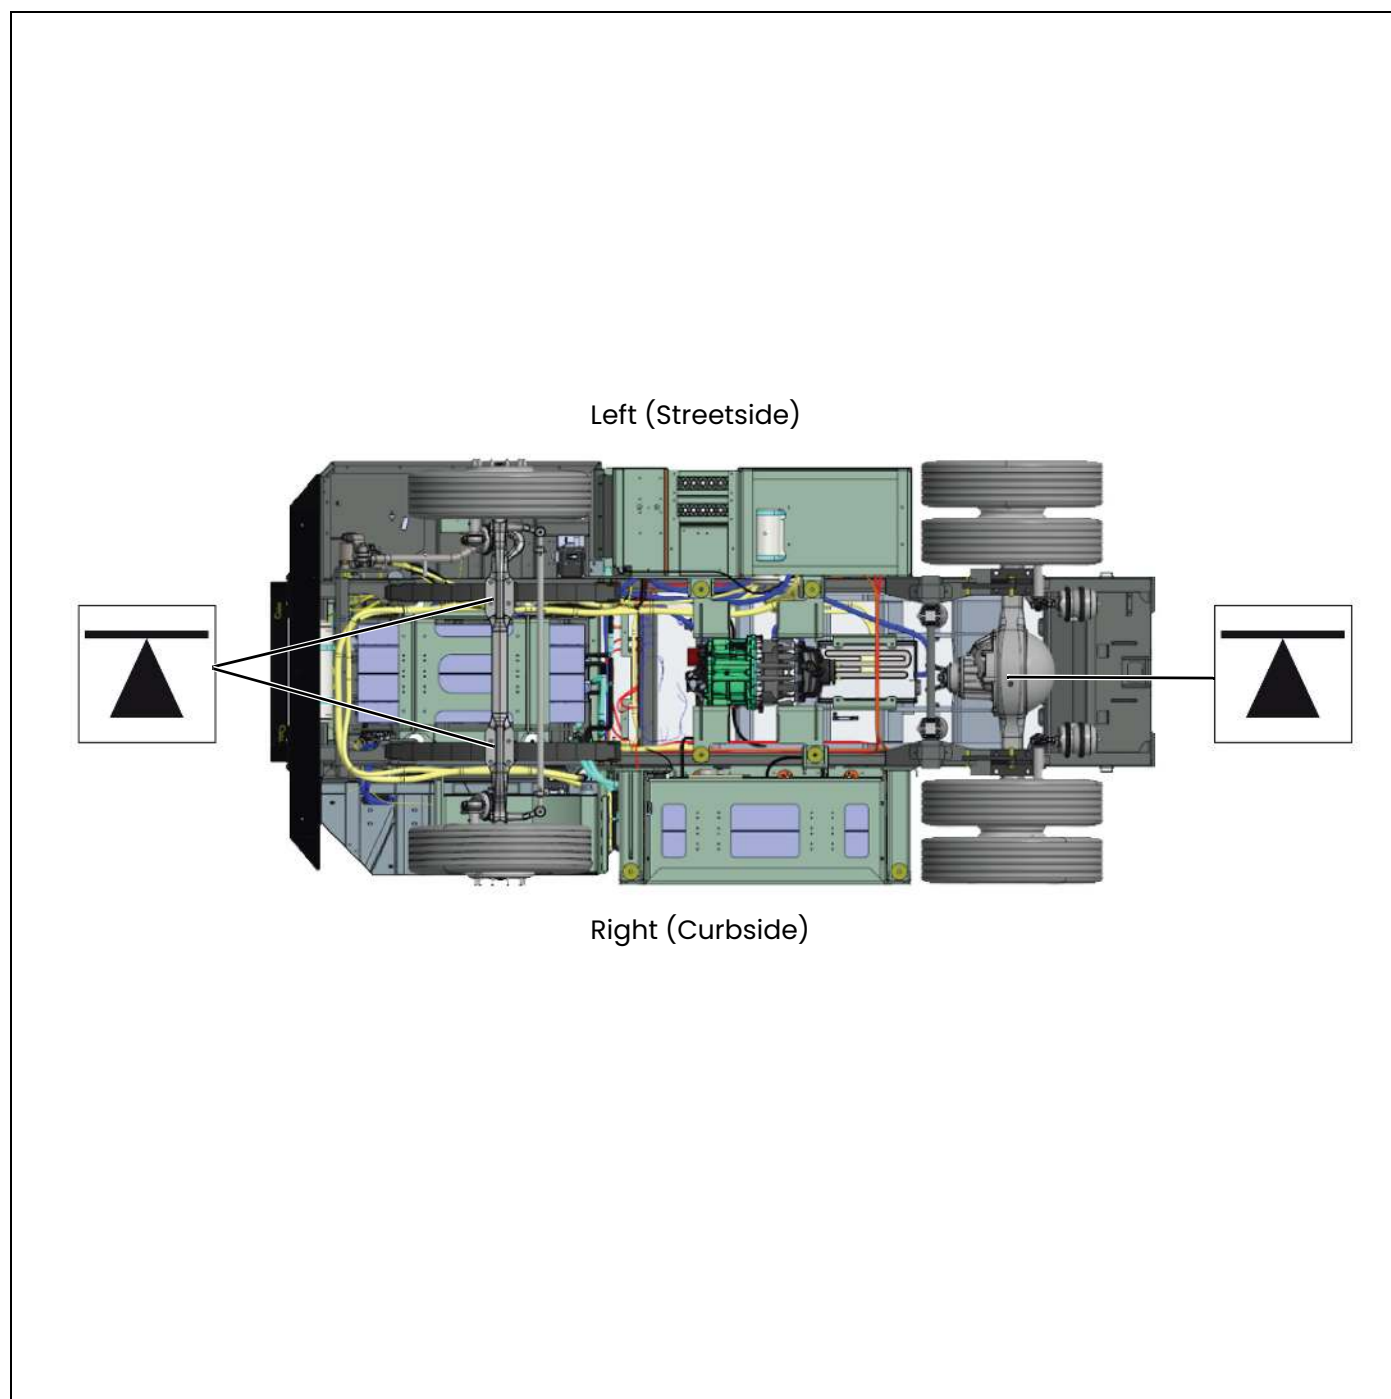


Figure 1-6: Lifting Points

T0029 (208)

3. Disable Direct Hazards/Safety Regulations

1. Turn the ignition switch to the off position.



T0046 (208)

Figure 1-7: Ignition Switch

3. DISABLE DIRECT HAZARDS/SAFETY REGULATIONS

2. Turn the low voltage master disconnect switch to the off position.

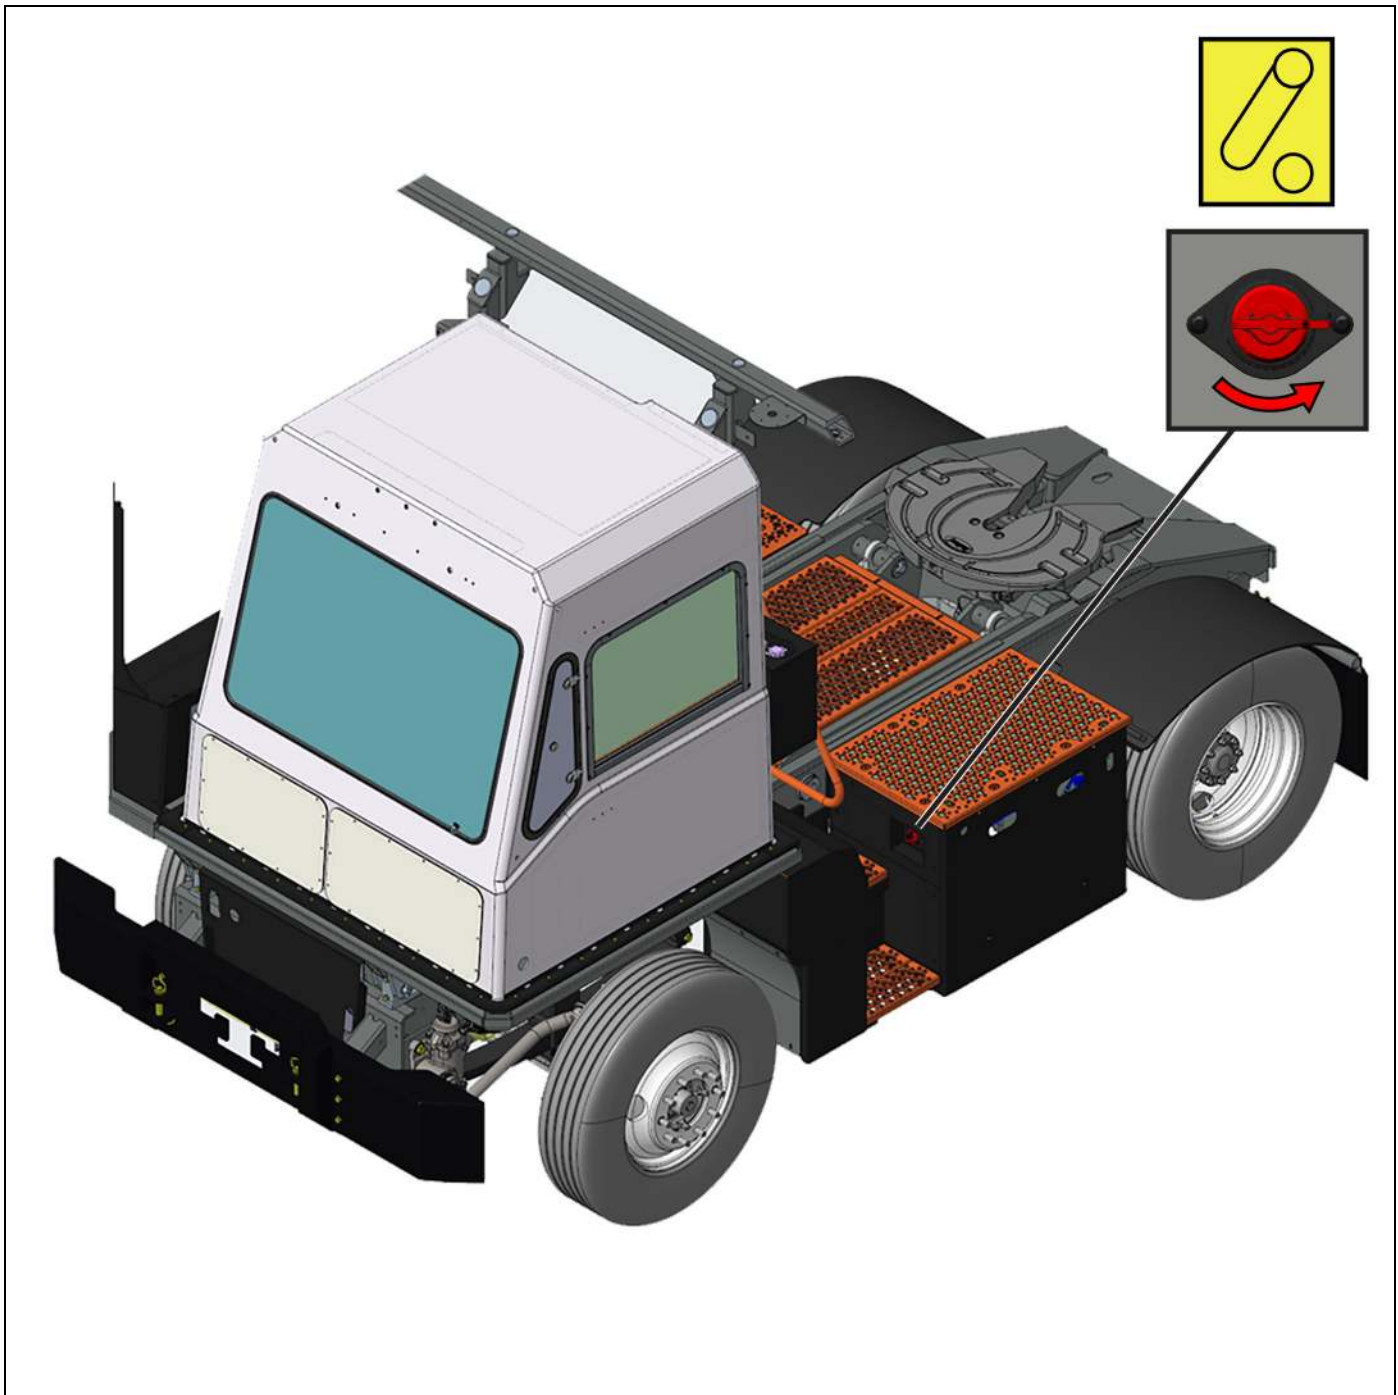


Figure 1-8: Low Voltage Master Disconnect Switch

T0032

3. Open the EGIS access door, located on the front of the left compartment, and turn the EGIS switch to the OFF position.


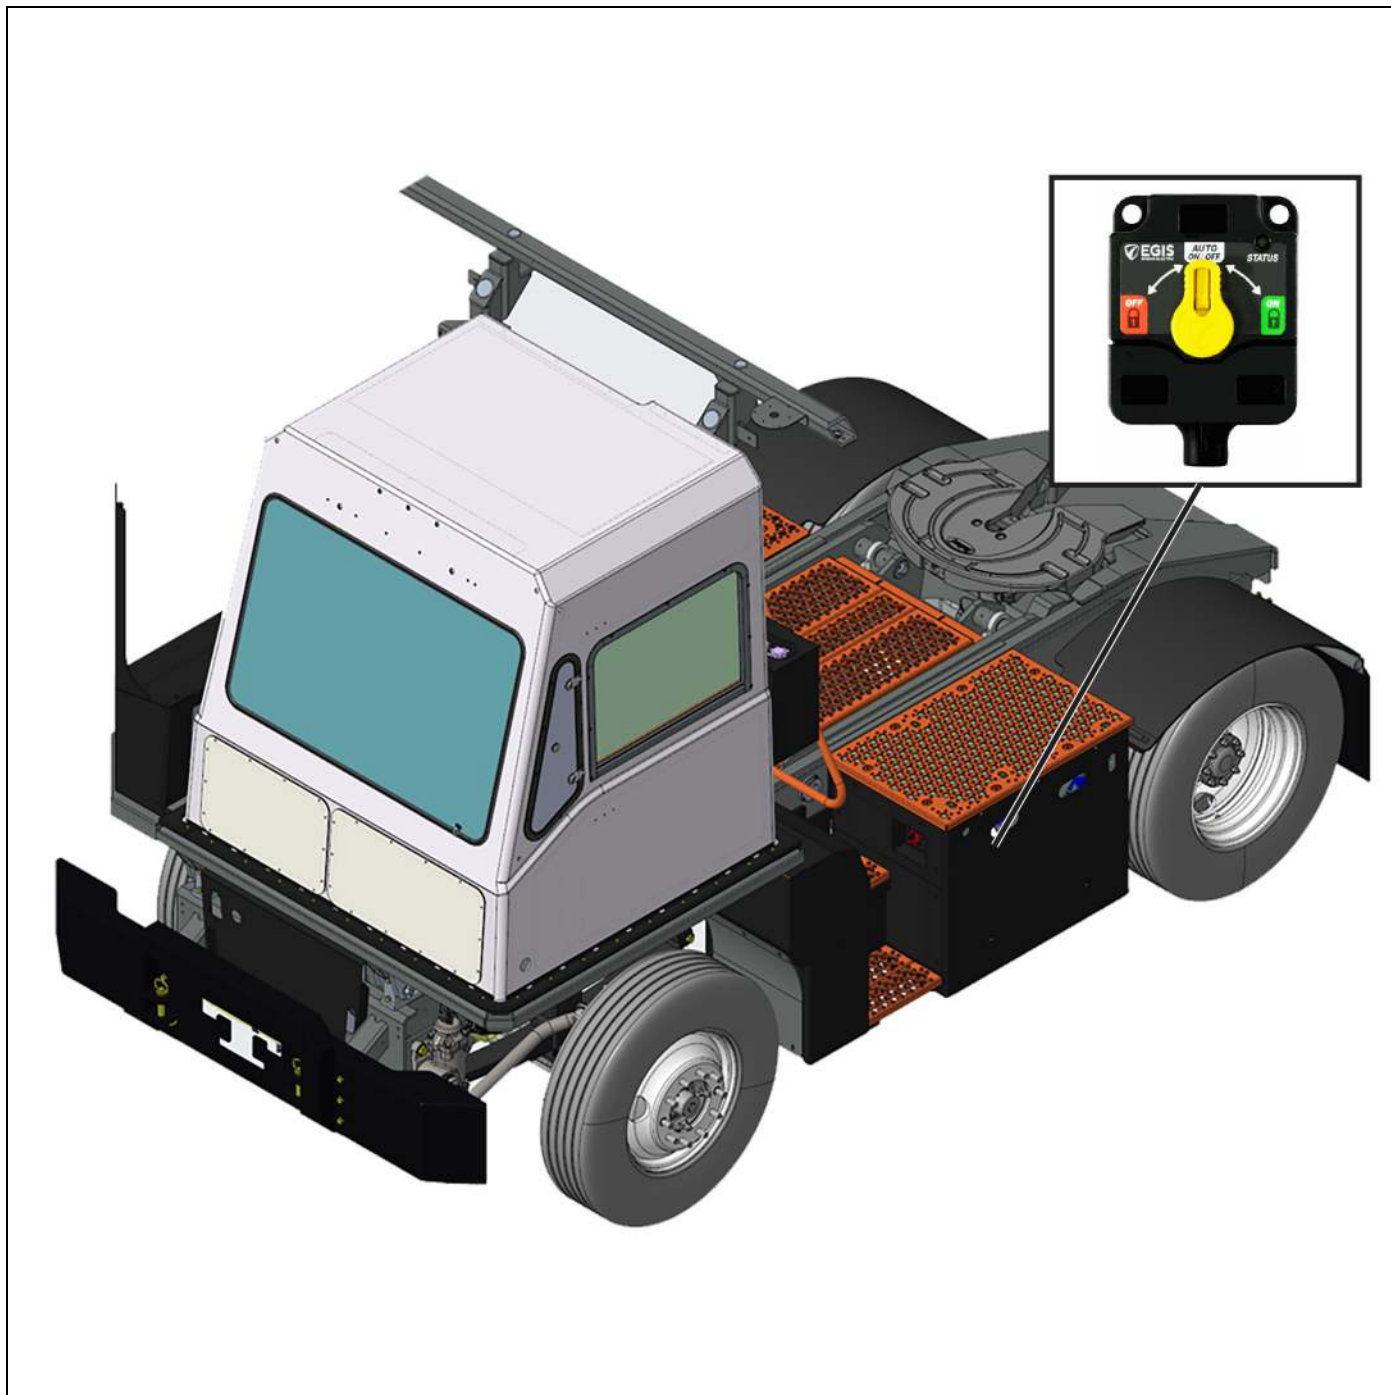


Figure 1-9: EGIS

T0027 (208)

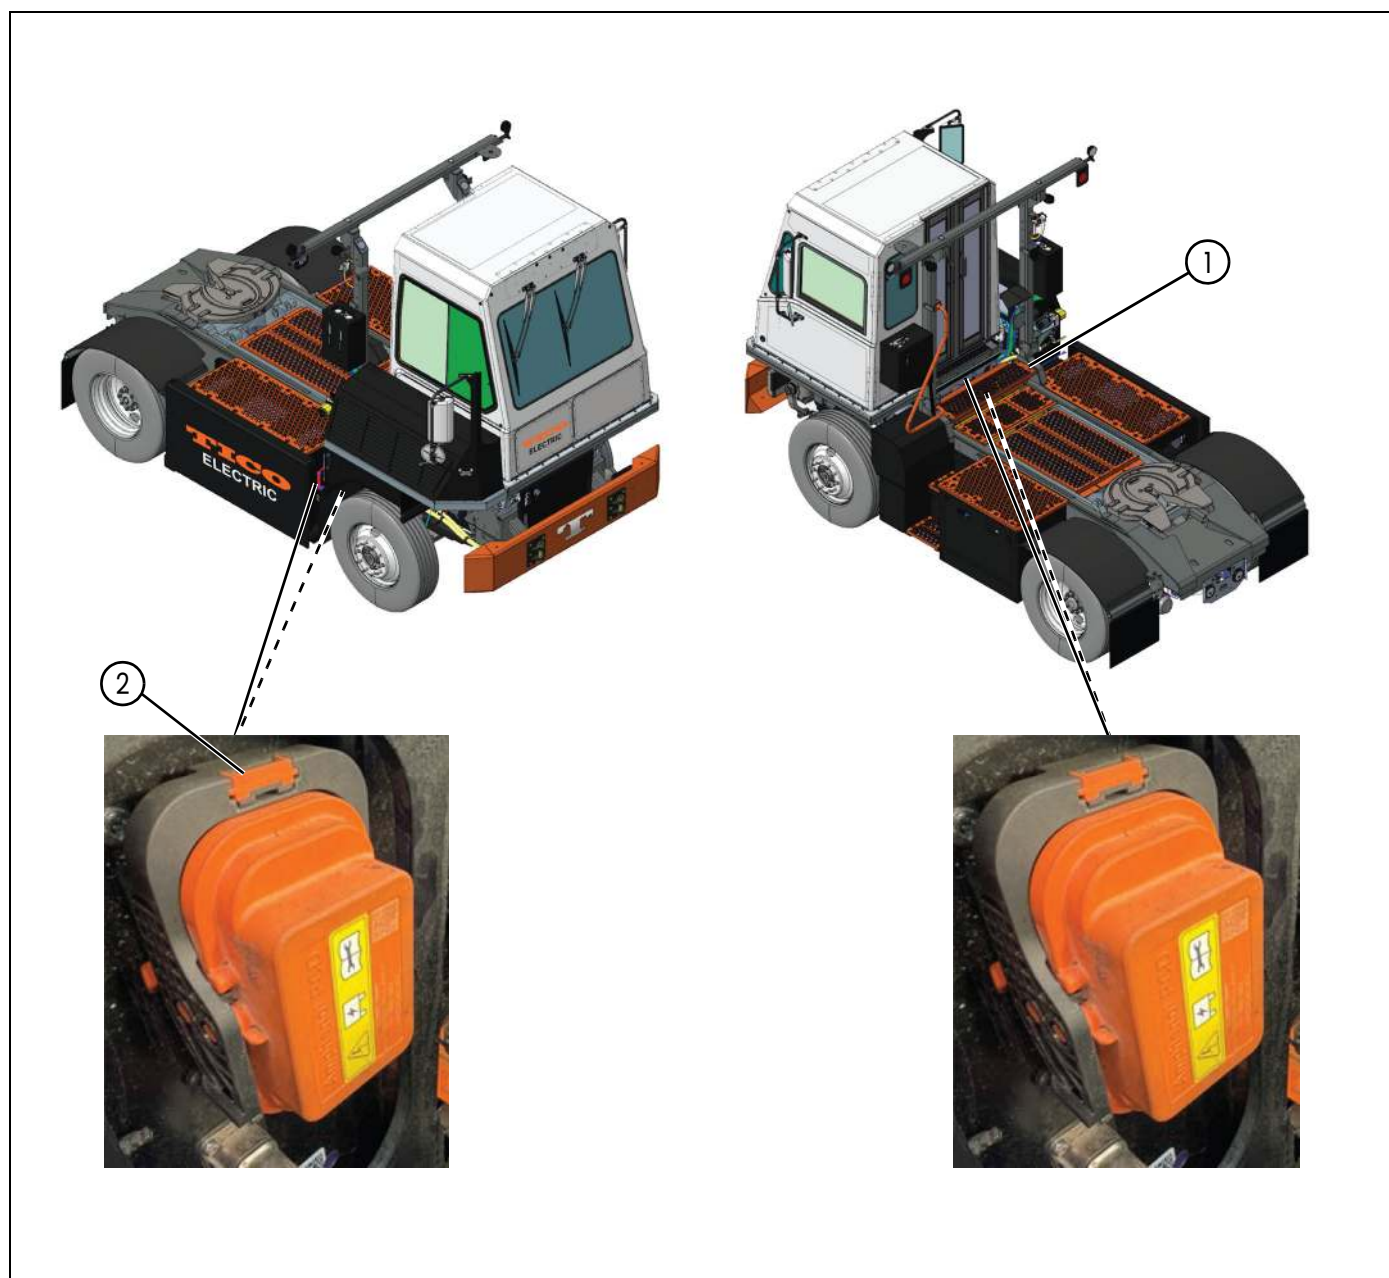

T0047 (208)

Figure 1-10: Battery Manual Service Disconnect



- The rear step plate behind the cab (1) must be removed to access the Manual Service Disconnect (MSD).
- The side and under cab battery packs each have 2 Manual Service Disconnects (MSD).
- Pull out on latch (2) and remove the MSD.
- Always assume the high voltage system is energized. Do not cut high voltage wires or touch high voltage components.
- Removing the MSD cuts off high voltage power at the battery pack.

4. Access to the Occupants

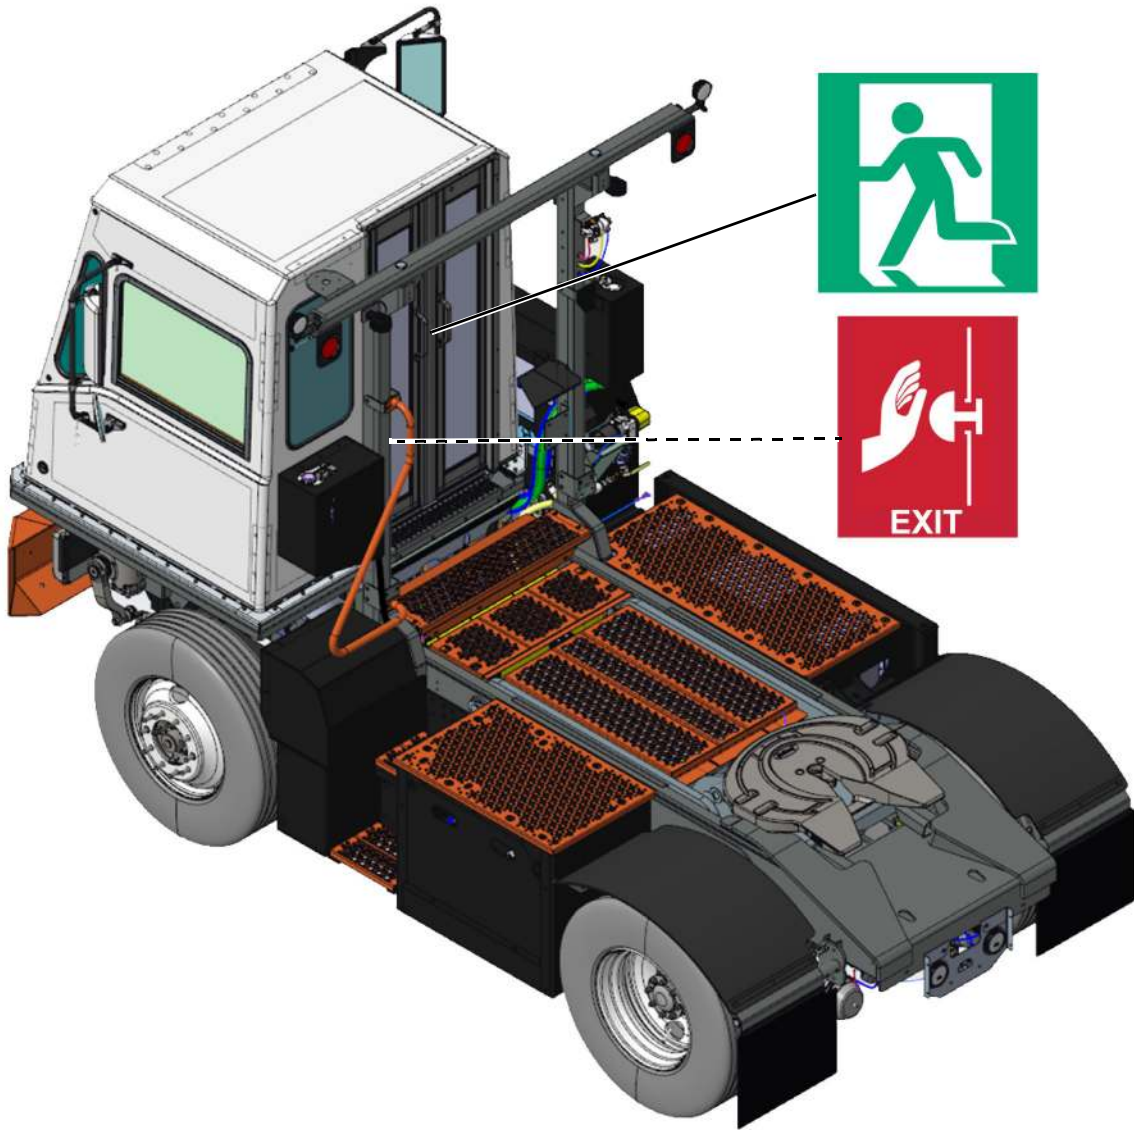


Figure 1-11: Rear Door

T0016 (208)




T0017 (208)

Figure 1-12: Door Override Switch




When the tractor is on, the air system is pressurized and the doors must be actuated from inside the cab. Push the door override switch to release air pressure and allow the doors to be opened manually.

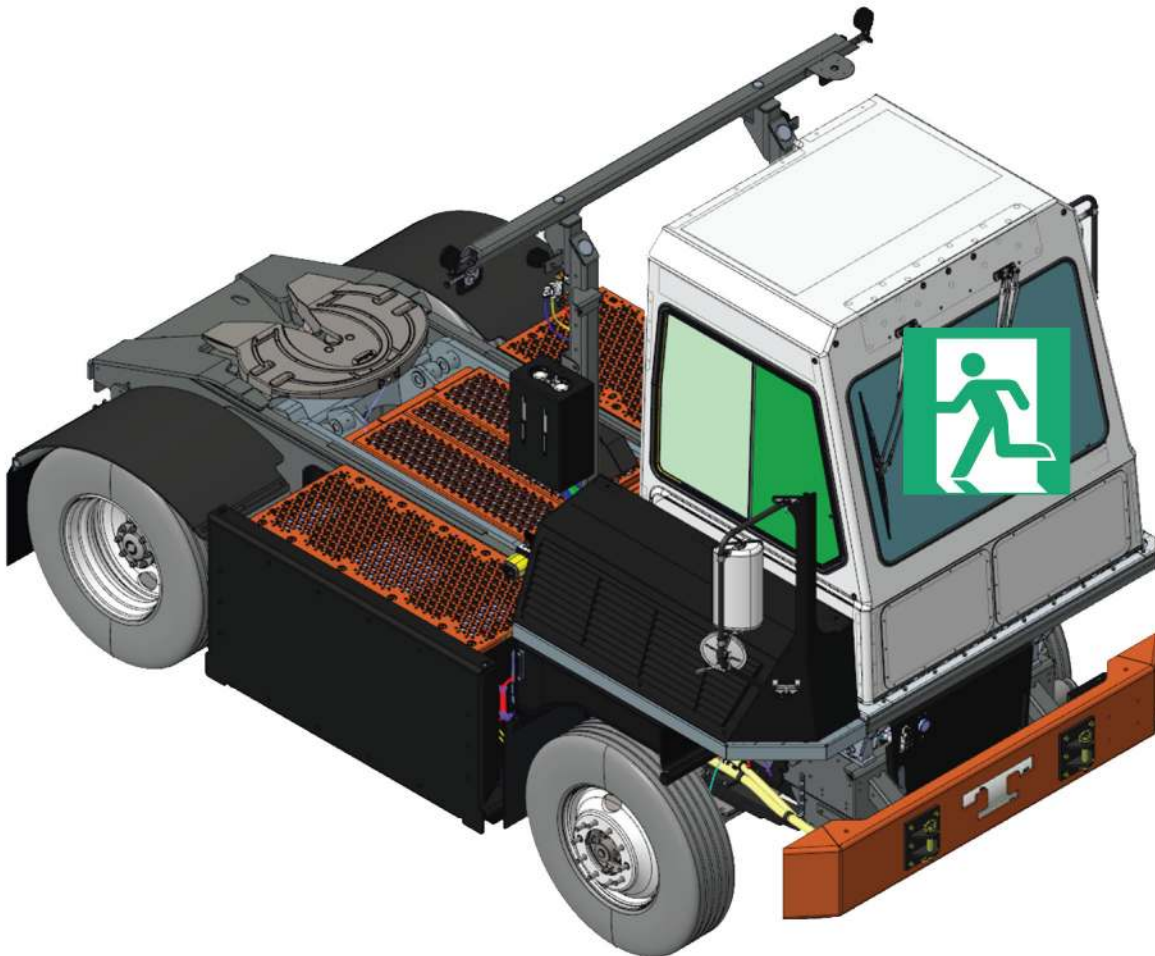

T0018 (208)

Figure 1-13: Windshield

- The windshield can be forced outward from its frame to provide egress.
- The cab is constructed of fiberglass composite and contains no high-strength or ultra-high strength steel.

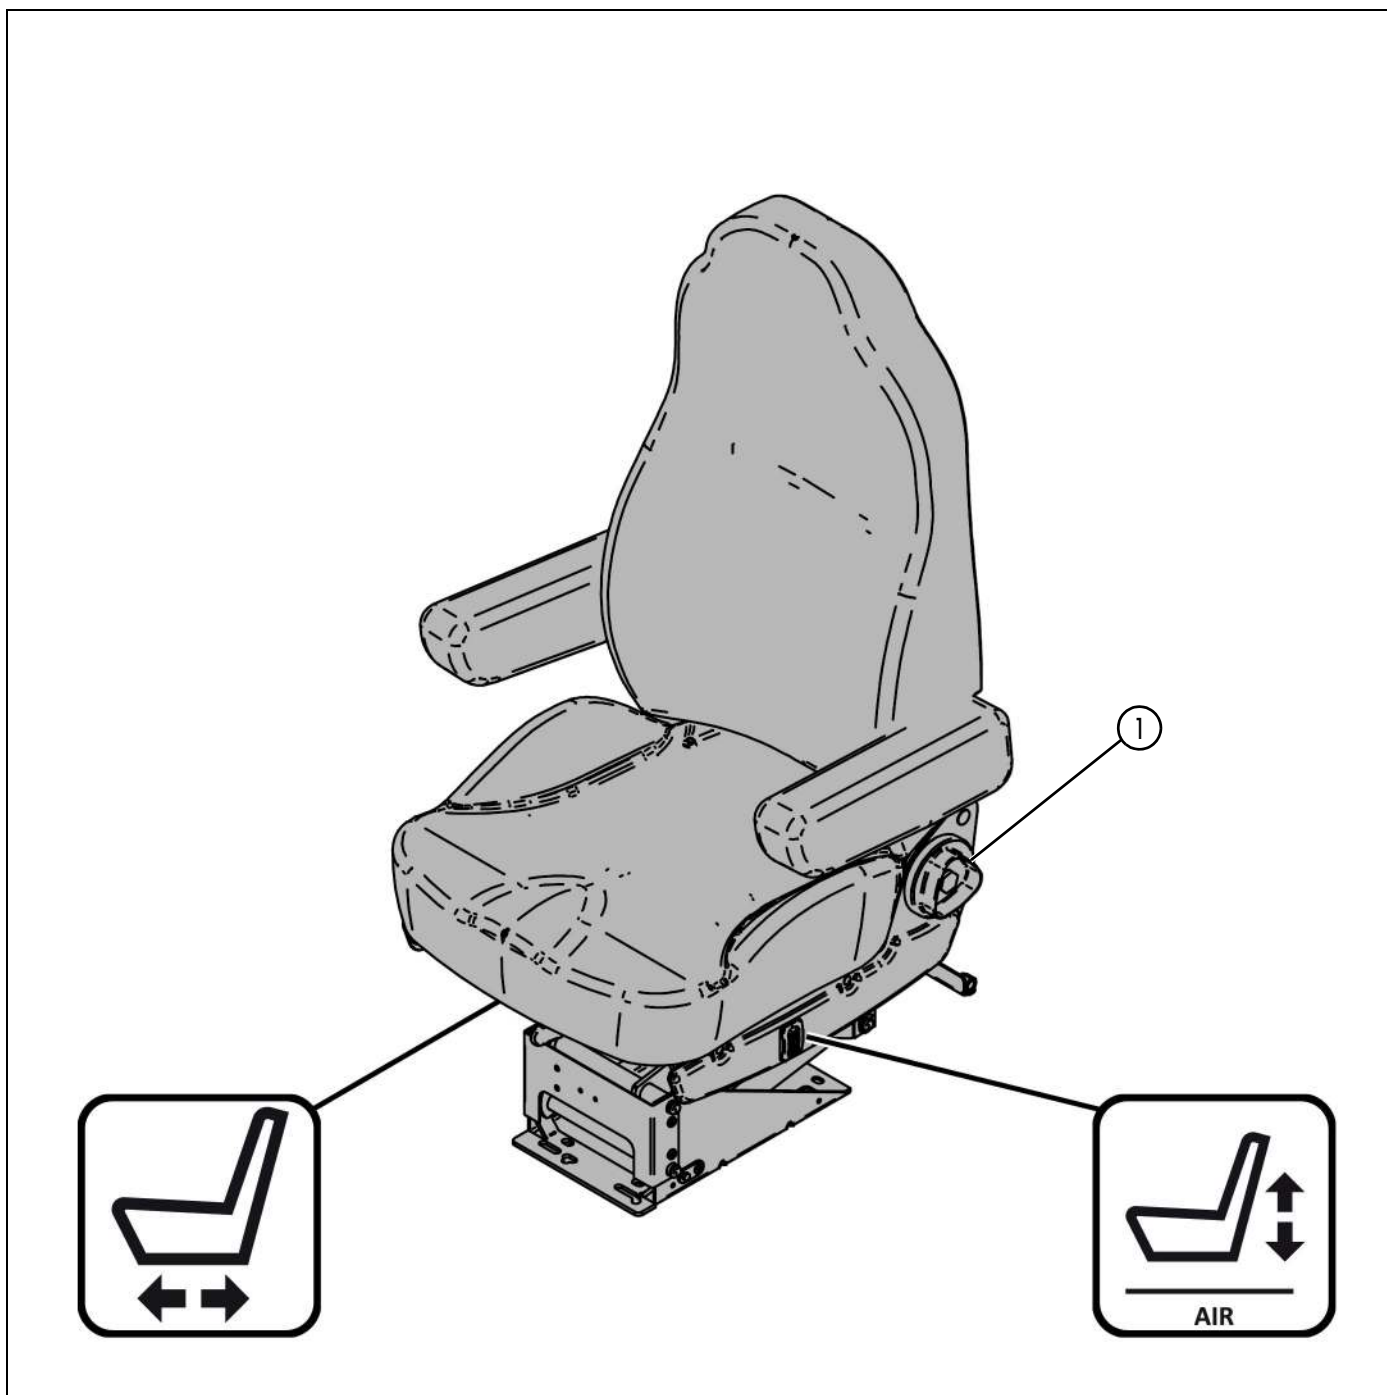

T0006

Figure 1-14: Seat Adjustment

- 1) Seat Recline Adjustment



T0021

Figure 1-15: Steering Column Tilt Adjustment

5. Stored Energy/Liquids/Gases/Solids

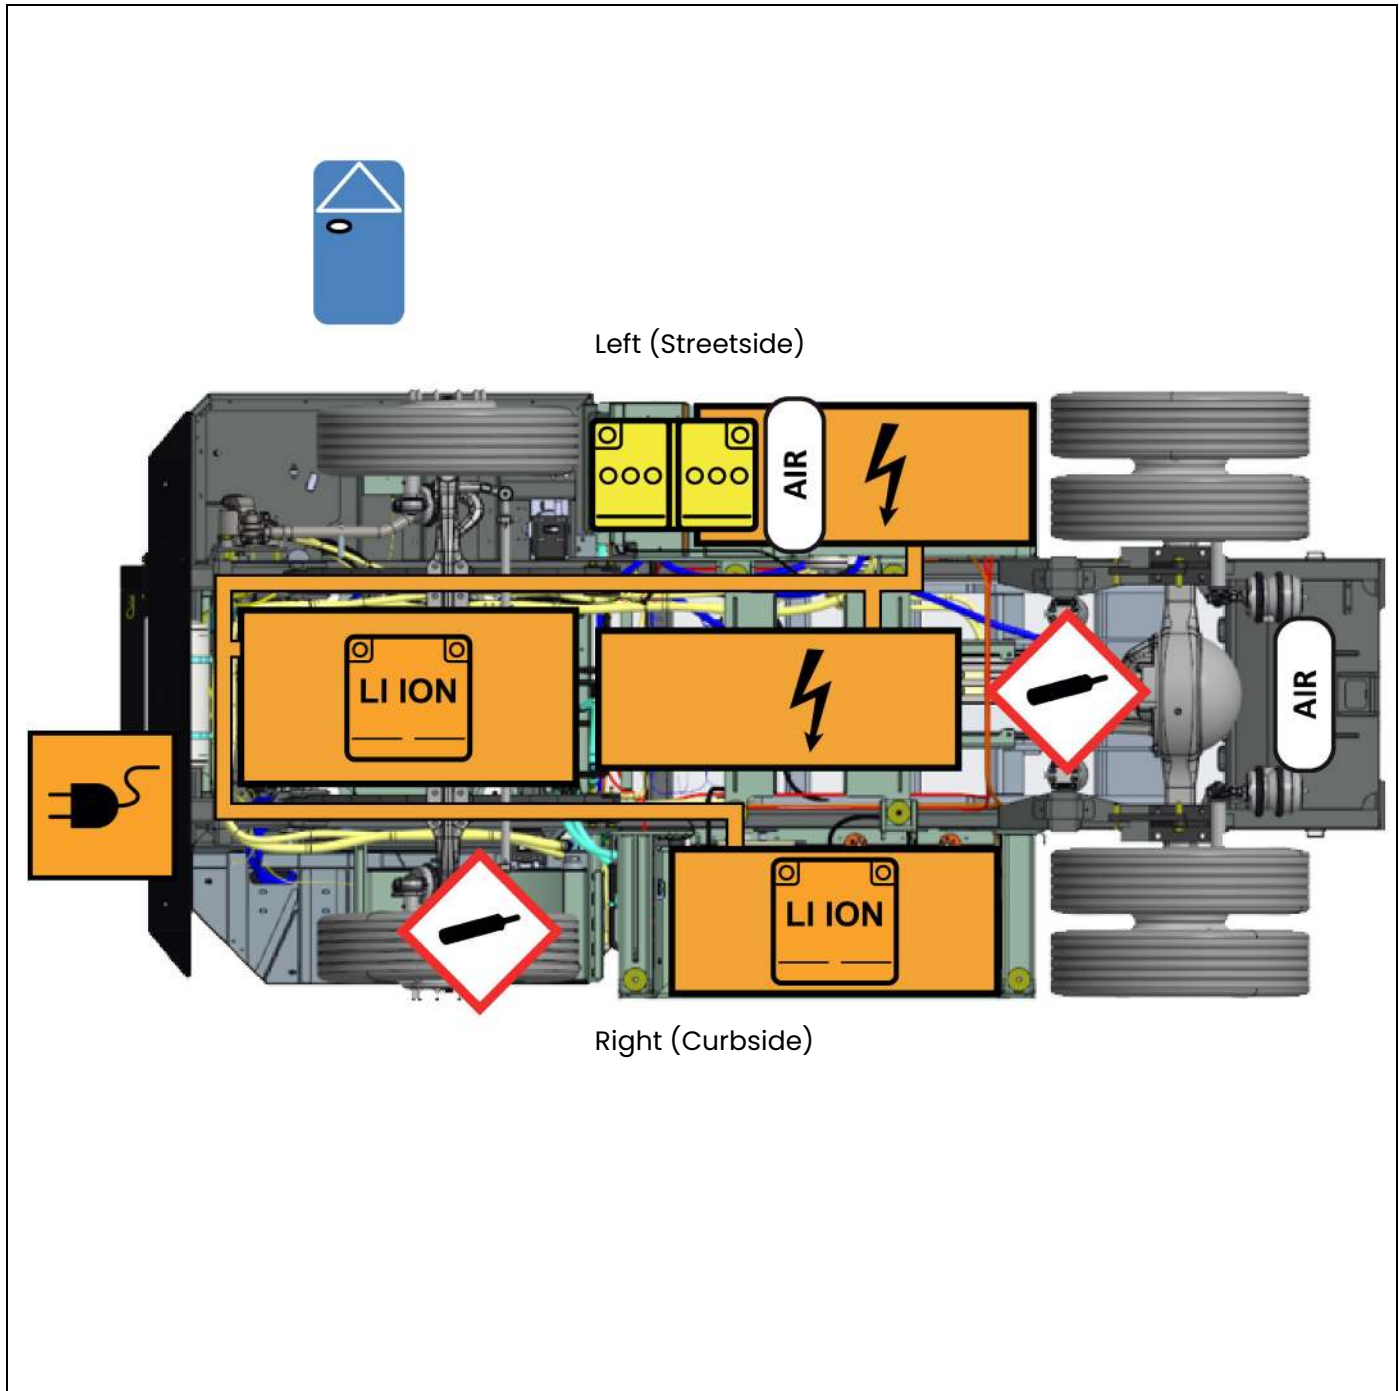


Figure 1-16: Bottom View

T0035 (208)

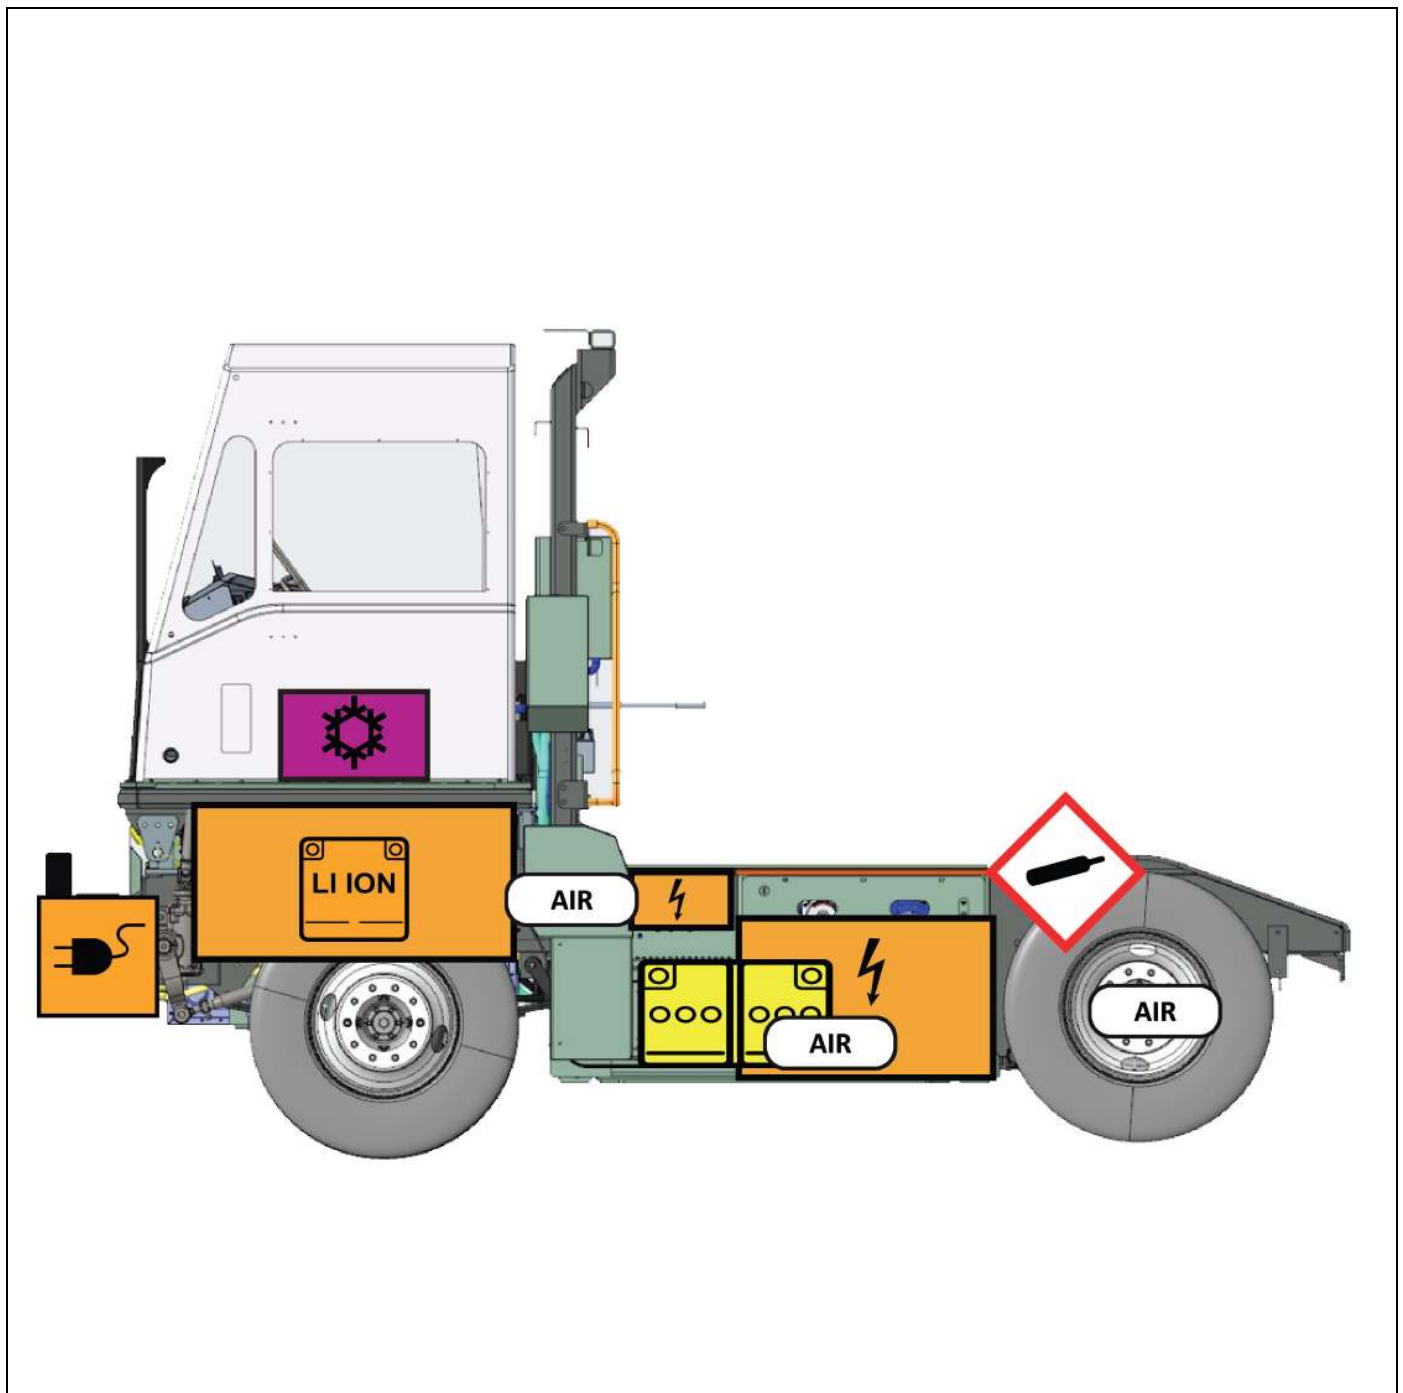


Figure 1-17: Left View

T0036 (208)

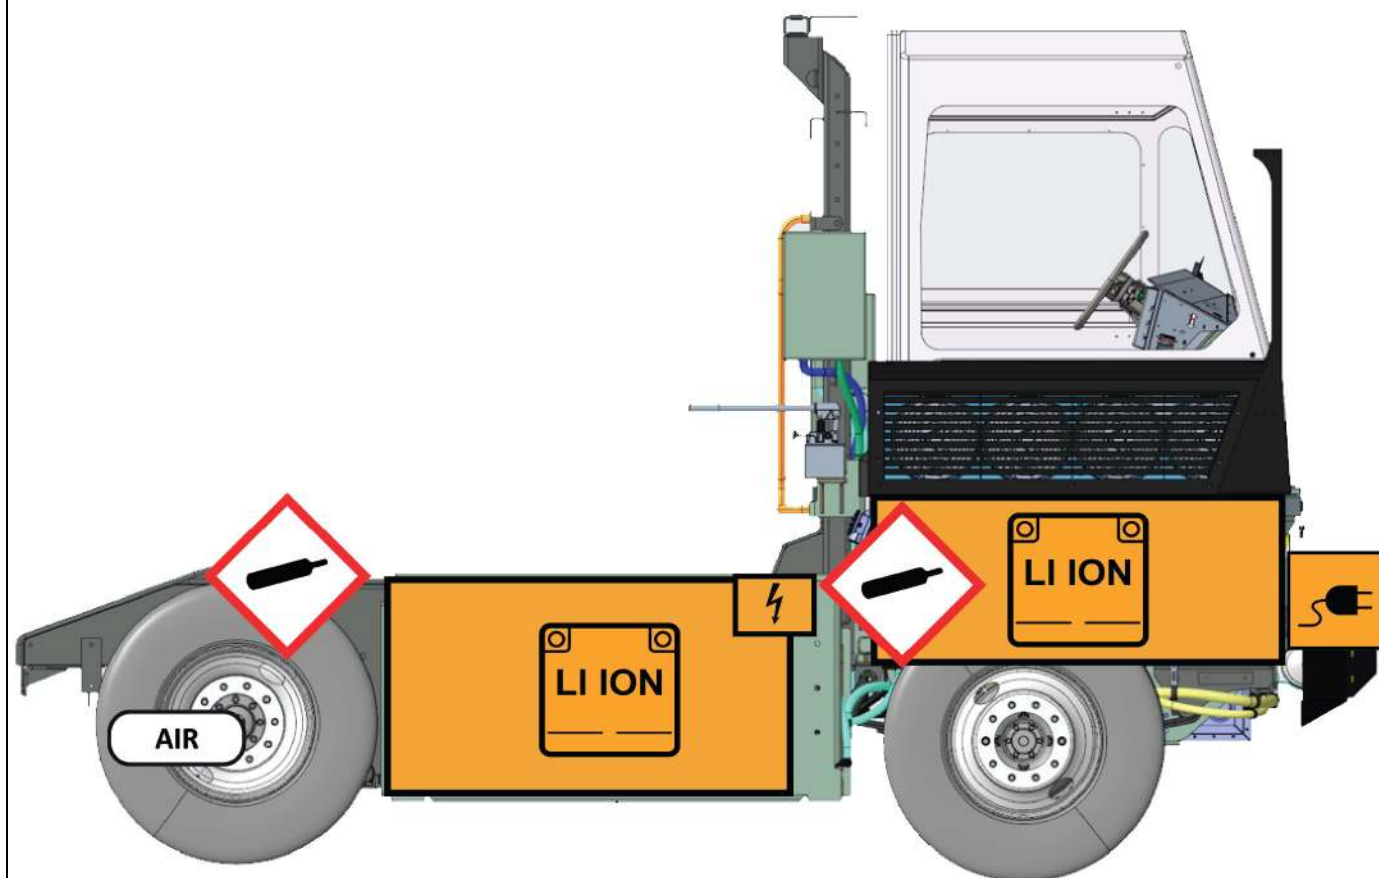


Figure 1-18: Right View

T0037 (208)

6. In Case of Fire



Extinguish lithium-ion battery related fires using a large quantity of water.



If thermal runaway occurs, lithium ion batteries can release hydrogen fluoride. Use appropriate PPE.



Extinguishing a lithium-ion battery fire with water may produce hydrofluoric acid.



Monitor battery temperature with a thermal imaging camera. Make sure that the battery has cooled sufficiently and that temperatures do not increase.

An increase in temperature indicates potential thermal runaway. Check for hissing, popping, or smoke.

7. In Case of Water Submersion



- A submerged tractor must only be approached by trained personnel wearing the required Personal Protective Equipment (PPE).
- Submersion can cause damage to electrical components. Avoid contact with high voltage system.
- Damage to a submerged tractor may not be visible.
- Disable all direct hazards if possible. See “3. Disable Direct Hazards/Safety Regulations”.

8. Towing/Transportation/Storage



Figure 1-19

T0047 (208)

- 1) Front Tow Points



Figure 1-20

T0011 (208)

- 1) Rear Tow Points



Towing requires special equipment and training. TICO Manufacturing recommends using a professional service when towing a disabled tractor.

Towing the Vehicle

It is recommended to tow the tractor with the rear wheels suspended to prevent damage. This avoids the need to remove the rear axle shafts. Spring brakes must be caged if installed on the front wheels.

Towing the Vehicle (Front Wheels Suspended)



It is not recommended to tow the tractor with the front wheels suspended. This may result in serious damage.

If the tractor must be towed with the front wheels suspended:

- Always use a rigid towing bar or properly restrain the towed tractor. Towing the tractor using a chain or tow cable is not recommended.
- Always remove the axle shafts from the rear axles.
- Always cage spring/parking brakes to prevent the rear drive wheels from locking in the event of a loss of air pressure.

Storing the Vehicle



Damaged lithium-ion batteries can pose a risk of delayed fire. When parking a damaged tractor, maintain a safe distance from combustible objects, buildings, and other tractors




Monitor the battery temperature using a thermal infrared camera for 48 hours.

9. Important Additional Information





- **Always assume the high voltage system is energized.**
- **Do not touch high voltage wires or components.**
- **Do not cut any orange cables or black cables with orange loom.**
- **Always use appropriate Personal Protective Equipment (PPE) when performing any operation on a damaged tractor.**

10. Explanation of Pictograms Used

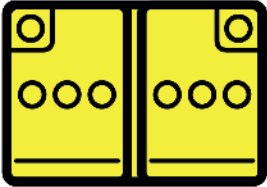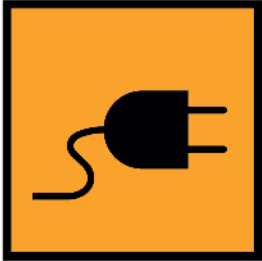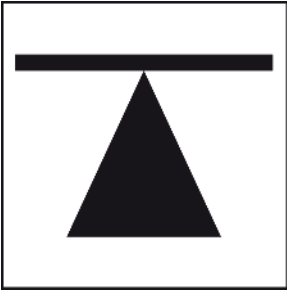		
General Warning	High Voltage Component	Battery Pack, High-Voltage
		
Battery, Low-Voltage	High-Voltage Battery Cable	Charge Port
		
Air Tank	Air-Conditioning Component	Electrical Cutoff Switch
		
Ignition Switch OFF	Left Hand Drive	Lifting Point

10. EXPLANATION OF PICTOGRAMS USED

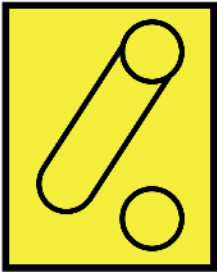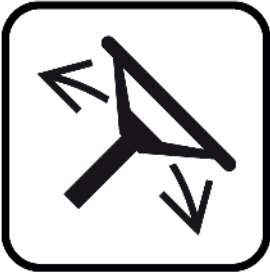		
Battery Electric Vehicle	Low-Voltage Disconnect	High-Voltage Disconnect
		
Emergency Exit	Emergency Door Opener	Seat Height Adjustment (Air)
		
Seat Adjustment Longitudinal	Steering Wheel, Tilt Control	Use Thermal Infrared Camera
		
Use Water to Extinguish Fire	Acute Toxicity	Corrosives

Intentionally Left Blank Page

TICO

YOUR
BEST
MOVE.