

# EMERGENCY RESPONSE GUIDE

INFORMATION FOR EMERGENCY RESPONDERS FOR  
AUTONOMOUS ZOOX ROBOTAXIS



## Table of Contents

|                                                |    |
|------------------------------------------------|----|
| Emergency Response Guide Summary               | 3  |
| 0. RESCUE SHEET                                | 4  |
| 1. IDENTIFICATION / RECOGNITION                | 5  |
| 2. IMMOBILIZATION / STABILIZATION / LIFTING    | 9  |
| 3. DISABLE DIRECT HAZARDS / SAFETY REGULATIONS | 11 |
| 4. ACCESS TO THE OCCUPANTS                     | 15 |
| 5. STORED ENERGY / LIQUIDS / GASES / SOLIDS    | 20 |
| 6. IN CASE OF FIRE                             | 23 |
| 7. IN CASE OF SUBMERSION                       | 25 |
| 8. TOWING / TRANSPORTATION / STORAGE           | 27 |
| 9. IMPORTANT ADDITIONAL INFORMATION            | 31 |
| 10. EXPLANATION OF PICTOGRAMS USED             | 35 |
| Appendix A                                     | 38 |

Emergency Response Guide Summary

The Emergency Response Guide is intended for use by all emergency responders in the jurisdictions where Zoox operates the Zoox robotaxi. This Guide provides safety information and suggested best practices on how to safely interact with a Zoox electric robotaxi in the event of an emergency.

This document outlines suggested practices for emergency responder interaction with the following:

- **Zoox Remote Operators:** Remote support for riders, the Zoox electric robotaxi, and emergency responders. Zoox Remote Operators can disengage autonomy, can play prerecorded messages through the external audio system, and may be contacted via the door audio system.
- **Zoox Support Team:** On-site support for law enforcement, emergency responders, vehicle transporters, etc. These representatives have the appropriate training and equipment to assist with towing the robotaxi and to disable autonomous mode, among other capabilities.
- **Riders:** Passengers in the robotaxi, who are **not** the appropriate point of contact for engaging with law enforcement, emergency responders, etc.

CONTACT ZOOX REMOTE OPERATORS

(833) 322-2277

Zoox Remote Operators are available at all times that the robotaxi is in operation.

Before interacting with a Zoox electric robotaxi, call Zoox Remote Operators to confirm the robotaxi has safely stopped and autonomous mode is inactive. Zoox Remote Operators may be contacted through the external door audio system on the robotaxi, in addition to the phone number provided in this Guide.

Have the following available at the time of the call with Zoox Remote Operators:

- Alphanumeric Vehicle ID Number
- Location Information

For non-emergencies or general questions, call (833) 322-2277 or email [safety@zoox.com](mailto:safety@zoox.com).



RECOMMENDATIONS FOR EMERGENCY RESPONDER TOOLS

In emergency situations related to a Zoox robotaxi, the following tools are recommended:

- |                                                                                                                                                                                    |                                                                                                                                                                                |                                                                                                                                                                                          |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"><li>• Halligan Bar</li><li>• Hydraulic Cutter</li><li>• Hydraulic Spreader</li><li>• Insulated Cable Cutter</li><li>• Insulated Gloves</li></ul> | <ul style="list-style-type: none"><li>• Personal Protective Equipment (PPE)</li><li>• Rescue Stabilization Jacks</li><li>• Self-contained Breathing Apparatus (SCBA)</li></ul> | <ul style="list-style-type: none"><li>• Metal Circular Saw</li><li>• Shatter Hammer</li><li>• Thermal Imaging Camera (TIC) or Infrared (IR)</li><li>• Wheel Chocks or Cribbing</li></ul> |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|  |  |                                                                                                                                                                                                                                                                                                                                   |
|--|--|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  | <b>DANGER</b>                                                                                                                                                                                                                                                                                                                     |
|  |  | <b>HV HAZARD</b> <ul style="list-style-type: none"><li>• Always assume the High Voltage (HV) system in the Zoox robotaxi is energized</li><li>• During a fire, beware of pressurized components that could fail, rupture, or suddenly release</li><li>• Specific equipment may be required for certain steel components</li></ul> |

0. RESCUE SHEET
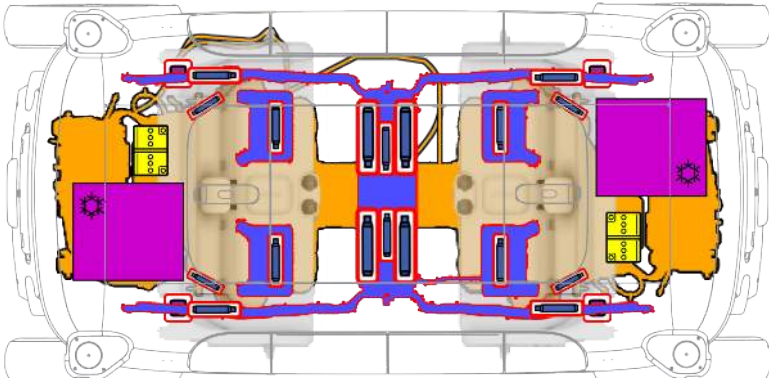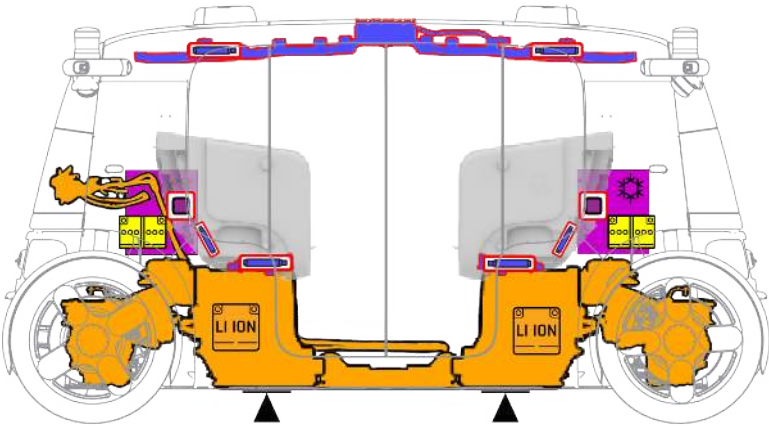
|                                                                                                                                                                          |                           |                                                                                     |                             |                                                                                     |                        |                                                                                     |                              |                                                                                       |                        |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|-------------------------------------------------------------------------------------|-----------------------------|-------------------------------------------------------------------------------------|------------------------|-------------------------------------------------------------------------------------|------------------------------|---------------------------------------------------------------------------------------|------------------------|
| ZOOX                                                                                                                                                                     |                           | Zoox<br>From 2027-                                                                  |                             |  |                        |                                                                                     |                              |                                                                                       |                        |
|                                                                                         |                           |                                                                                     |                             |                                                                                     |                        |                                                                                     |                              |                                                                                       |                        |
|                                                                                       |                           |                                                                                     |                             |                                                                                     |                        |                                                                                     |                              |                                                                                       |                        |
|                                                                                      |                           |                                                                                     |                             |                                                                                     |                        |                                                                                     |                              |                                                                                       |                        |
|                                                                                       | Airbag                    |  | Stored gas inflator         |  | Seat belt pretensioner |  | Carbon structure             |  | High strength zone     |
|                                                                                       | High Voltage battery pack |  | High Voltage power cable    |  | High Voltage component |  | High Voltage ultra-capacitor |  | High Voltage Cable Cut |
|                                                                                       | Low voltage battery       |  | Low voltage ultra-capacitor |  | Lifting point          |  | Air conditioning component   |                                                                                       |                        |
| Contact Zoox: (833) 322-2277 <a href="mailto:safety@zoox.com">safety@zoox.com</a><br>©2026 Zoox, Inc. Proprietary. All Rights Reserved. Printed Copies are Uncontrolled. |                           | ID no.<br>FO-GD-000247-01                                                           |                             | Version No.<br>01                                                                   |                        | Version Date<br>01/2026                                                             |                              | Page No.<br>1 of 4                                                                    |                        |

1. IDENTIFICATION / RECOGNITION


IDENTIFY ZOOX ELECTRIC ROBOTAXIS

Zoox robotaxis are symmetrical. Unlike conventional human-driven cars, the front and rear look identical.

The robotaxis are all-electric, autonomous passenger vehicles. They are road-ready and meet all applicable state and federal laws. The illustration below helps identify an electric and autonomous Zoox robotaxi:

Features

- Capability to reverse path of travel without turning around
- Sensor pods on each quarter of the body
- Robotaxi doors on each side of the body
- No steering wheel
- Two carriage-style seats with capacity for up to four riders
- Fully electric motor and propulsion
- Unique Zoox sounds when a rider interacts with the robotaxi
- Informational and instructional pre-recorded messages, played through the external audio system

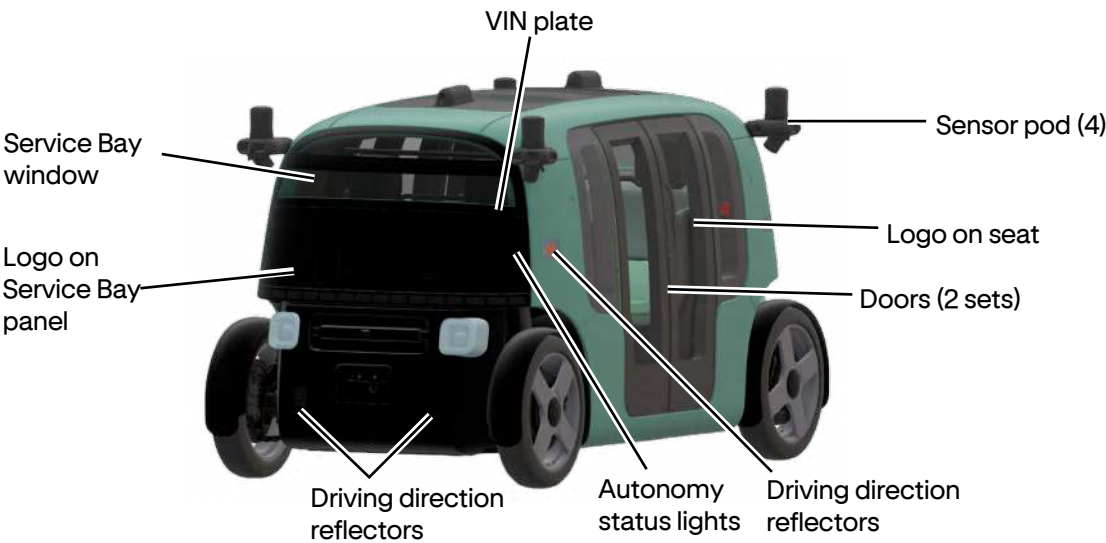

| FRONT AND REAR                                                                                                                                                                                                                                                                                                                                                                | SIDE                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"><li>• <b>Vehicle Identification Number (VIN):</b> Bottom-right of the Service Bay window</li><li>• <b>Zoox logo:</b> Left side of the Service Bay panel, facing the robotaxi</li><li>• <b>License plate:</b> Affixed to the front and/or rear of the robotaxi</li><li>• <b>Driving direction reflectors:</b> Below the tail lamps</li></ul> | <ul style="list-style-type: none"><li>• <b>Alphanumeric Vehicle ID Number:</b> At the top of the side quarter panels</li><li>• <b>Zoox logo:</b> To the right of the door, visible through the quarter glass window</li><li>• <b>Zoox logo:</b> On the reflective surface of the wheel</li><li>• <b>Driving direction reflectors:</b> Embedded in the side quarter panels</li></ul> |

## 1. IDENTIFICATION / RECOGNITION

### ZOOX VEHICLE INFORMATION AND DOCUMENTS



The following documents can be found in a document clip, placed inside the Chargeport door. The Chargeport door can be unlocked remotely by Zook Remote Operators. If they are unable to assist, on-site Zook Support Team members will be able to unlock the Chargeport door:

- Vehicle Registration
- Proof of Insurance
- State Permit(s)
- Zook Contact Information and Business Cards

### PROPULSION ENERGY SOURCE




#### Electric Vehicle



#### High Voltage (HV) Battery (2):

- Lithium-ion
- 400V
- Located on the Front and Rear side of the robotaxi beneath the rider seats.



#### Low Voltage (LV) Battery (2):

- Lead-Acid
- 12V
- Located on the Front and Rear side of the robotaxi above the HV batteries.


1. IDENTIFICATION / RECOGNITION

STATUS INDICATIONS

High Voltage (HV) Status Indications

Zoox robotaxis have the capability to indicate if HV is active or inactive. To determine if the HV system is on, approach the robotaxi and look for the following indicators:

- If **any** airbags are deployed, HV is inactive
- If **no** airbags are deployed, always assume that HV is active

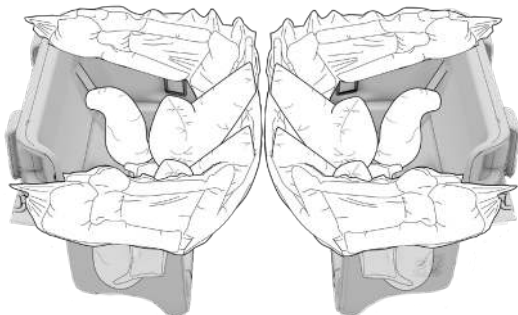

- A secondary indicator is the Service Bay Indicator color:

|                                                                                                      |                                            |               |
|------------------------------------------------------------------------------------------------------|--------------------------------------------|---------------|
| ONLINE  - Green   | Robotaxi is in autonomous mode.            | HV enabled    |
| OFFLINE [OFF] - [none]                                                                               | Robotaxi is <b>not</b> in autonomous mode. | HV off, LV on |
| OFFLINE  - Orange | Robotaxi is <b>not</b> in autonomous mode. | Charging      |
| OFFLINE  - Purple | Robotaxi is <b>not</b> in autonomous mode. | HV on         |

NOTE:

- HV discharges to <60V in 5 seconds, post-airbag deployment
- HV has an internal energy reserve which allows it to retain charge up to 2 minutes after shutdown; Battery charge depletes to almost 0V (zero volts) after a maximum of 2 minutes
- The low voltage system maintains lights, audio/video communications, and powered door function for up to 5 minutes following a crash
- Remote Operators are notified if the vehicle has been involved in a collision. Some minor contact with the vehicle, such as grazing or contact with small or soft objects, may not be detectable by the system.
- A prerecorded message may be playing through the external audio system

Autonomous Mode Status Indications

 IMPORTANT

Emergency responders cannot disable autonomous mode without the assistance of Zoox Remote Operators or on-site Zoox Support Team members.

Call: **(833) 322-2277**

Have the following available at the time of the call:

- Alphanumeric Vehicle ID Number
- Location Information



## 1. IDENTIFICATION / RECOGNITION

### Autonomous Mode is Active

Zoox robotaxis have service bay exterior light indicators to identify whether the robotaxi is in autonomous mode. The robotaxi is in autonomous mode if the service bay indicators are green, as depicted in the picture below.



ONLINE  - Green

Robotaxi is in autonomous mode.

### Autonomous Mode is Inactive

The robotaxi **IS NOT** in autonomous mode if service bay indicators are off (unlit), orange, or purple. **HV may be enabled.** An example of unlit service bay indicators is depicted below.



OFFLINE   

Off/Orange/Purple

Robotaxi is **NOT** in autonomous mode.

#### NOTE:

- In the event of a collision, autonomous mode is disabled
- A prerecorded message may be playing through the external audio system

### Hazard lights

Hazard lights, or the outer half of each headlight (C-shaped) on both sides, may flash amber as a visual indicator of caution to other road users.



Front View



Rear View

**NOTE:** A prerecorded message may be playing through the external audio system




2. IMMOBILIZATION / STABILIZATION / LIFTING

VERIFY THE ROBOTAXI IS OFF

Zoox robotaxis are fully electric, which means there is not typical combustion engine noise. The robotaxi is **ON** if HV is active and **OFF** if HV is inactive. Additionally, there are 2 Low Voltage (LV) 12V DC batteries to support some robotaxi systems.

To determine if the robotaxi is ON or OFF:

- For a crash in which airbags have deployed, HV is disconnected pyrotechnically
- For a crash in which airbags have **NOT** deployed, HV may still be connected.
  - If necessary, double-cut the HV Cut Loop to disconnect HV. More information on the HV Cut Loop can be found in the section “HV Cut Loop”.

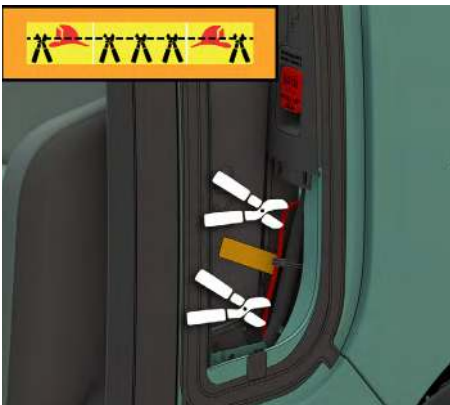

- The robotaxi does not disconnect LV after a crash. LV is only disabled after a crash as a result of physical damage or if the LV battery power drains completely

CHOCK WHEELS

|  |                                                                                                                                                                                                                               |
|--|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>WARNING</b>                                                                                                                                                                                                                |
|  | <ul style="list-style-type: none"><li>• Automated rotating parts</li><li>• Ensure the area near the wheels is free and clear of all personnel</li><li>• Ensure no foreign objects or charging cables are in the way</li></ul> |

**IMPORTANT**

Considerations and safety best practices when using wheel chocks on a Zoox robotaxi:


- Use wheel chocks or cribbing in pairs
- Tire size: 185/60R22
- Tire type: 4x Radial

## 2. IMMOBILIZATION / STABILIZATION / LIFTING

Recommended steps to safely and properly chock the wheels:


1. Place 2 chocks snugly in the front and back of a single tire tread.

**NOTE:** Ensure the chock is centered and squared with the tire

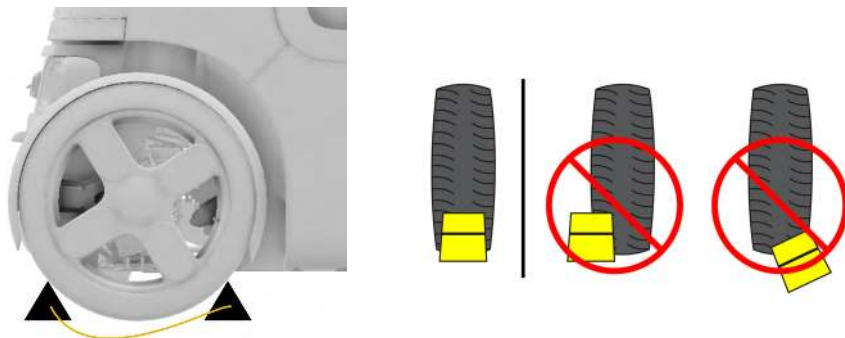

2. Chock both of either the Front or Back wheels.

### STABILIZATION / LIFTING

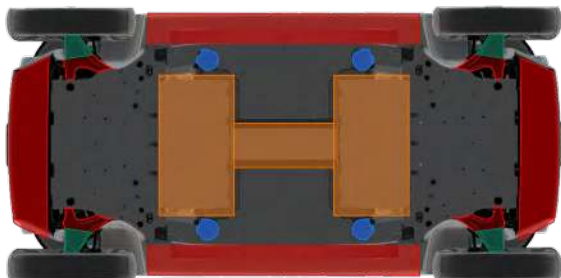

|                                       |                                         |
|---------------------------------------|-----------------------------------------|
| <span style="color: red;">■</span>    | Not suitable for stabilization/recovery |
| <span style="color: blue;">■</span>   | Stabilization/Lifting points            |
| <span style="color: green;">■</span>  | Recovery/Towing points                  |
| <span style="color: orange;">■</span> | HV components                           |

|  |                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                            |
|--|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <div style="border: 1px solid black; padding: 5px; text-align: center;"> <div style="background-color: red; color: white; padding: 2px 10px; font-weight: bold;">DANGER</div> <div style="display: flex; justify-content: space-between; font-weight: bold;"> <span>400 VOLTS DC</span> <span>HIGH VOLTAGE - ONLY QUALIFIED PERSONS TO MOVE OR ALTER EQUIPMENT</span> </div> </div> | DANGER                                                                                                                                                                                                                                                                                                                                                     |
|  |                                                                                                                                                                                                                                                                                                                                                                                     | <b>HV HAZARD</b> <ul style="list-style-type: none"> <li>• Be careful to not damage the HV battery pack when lifting the robotaxi</li> <li>• Do not stabilize or lift the robotaxi using the HV battery areas</li> <li>• Potential risk of fluid leaks</li> <li>• When lifting, ensure the robotaxi is clear of personnel, tools, and components</li> </ul> |


### IMPORTANT

Considerations and safety best practices when stabilizing or lifting a ZOOX robotaxi:

- Wear PPE
- Insulated gloves
- Stabilization and vehicle jacks
- Safe lifting devices
- Wheel chocks or cribbing

## 3. DISABLE DIRECT HAZARDS / SAFETY REGULATIONS

### HIGH VOLTAGE (HV) BATTERY POWER

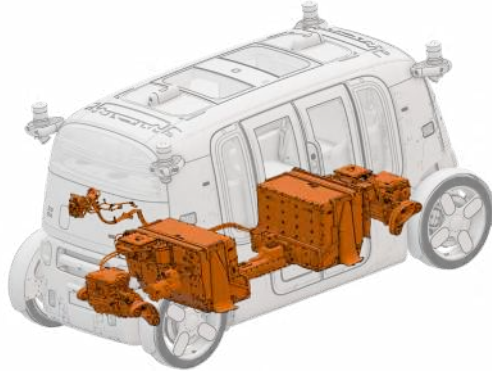

|                                                                                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                             |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | <div style="background-color: black; color: white; padding: 5px; text-align: center;"><b>DANGER</b></div> <div style="display: flex; justify-content: space-between; padding: 5px;"> <div style="text-align: center;"> <b>400<br/>VOLTS<br/>DC</b> </div> <div style="text-align: center; font-size: small;"> <b>HIGH<br/>VOLTAGE -</b><br/> <small>ONLY QUALIFIED<br/>PERSONS TO<br/>MOVE OR ALTER<br/>EQUIPMENT</small> </div> </div> | <p style="color: red; margin: 0;"><b>DANGER</b></p> <p style="margin: 0;"><b>HV HAZARD</b></p> <ul style="list-style-type: none"> <li>Interacting with HV is extremely dangerous and can result in serious injury or death</li> <li>Always assume the HV system is energized</li> <li>Risk of HV Electrocutation</li> </ul> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|


Zoox robotaxis have 2 separate but connected HV (400V DC Lithium-ion) batteries on the robotaxi (one per drive module) on each side of the robotaxi beneath the rider seats. Each HV component, including the HV battery, is connected to the drive module ground via Potential Equalization (PE) cables. The 2 HV batteries function as one battery. However, if one HV battery malfunctions due to a non-safety critical failure, the other HV battery continues to power all systems with no loss in robotaxi function. For any safety-critical failure of either battery, the robotaxi disables the HV system.

#### NOTE:


- In the event of a collision resulting in airbag deployment, Zoox robotaxis are equipped with 2 pyrotechnic fuses to disconnect power to the contactors in both HV batteries
- HV discharges to <60V in 5 seconds, post-airbag deployment
- HV has an internal energy reserve which allows it to retain charge up to 2 minutes after shutdown; Battery charge depletes to almost 0V (zero volts) after a maximum of 2 minutes

#### High Voltage Cut Loop

In the event of an emergency, HV power can be disconnected by double-cutting the HV Cut Loop. There are 2 HV Cut Loops on opposite sides of the robotaxi rider cabin. When facing the door from the robotaxi exterior, the cut loop is on the right side. Only one HV Cut Loop must be cut in order to disable the high voltage system.

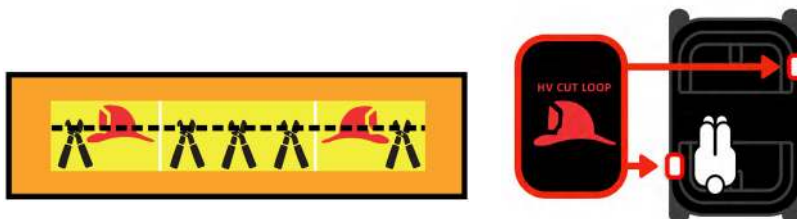


## 3. DISABLE DIRECT HAZARDS / SAFETY REGULATIONS

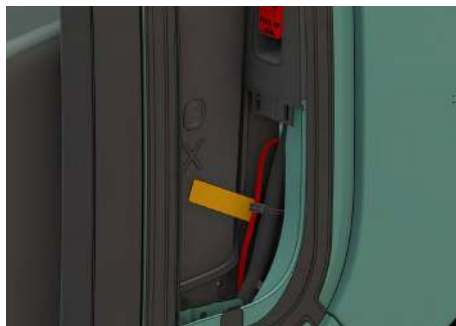

### Steps to Cut the HV Cut Loop

1. Locate the Fire Helmet icon on the trim panel of the seat-side pillar. If necessary, break the glass of the quarterpanel window to the right of the doors to access the HV Cut Loop.

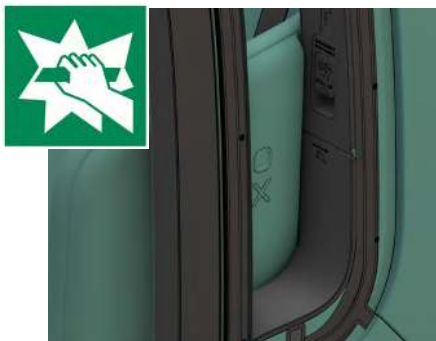

### CAUTION

- Be careful when breaking glass, as sharp shards of glass may pierce the skin
- Wear PPE


### NOTE:

- There are 2 HV Cut Loops, accessible on each side of the robotaxi. Cut one loop to disable the entire HV system
- This area of the rider cabin also houses the Emergency Response Handle
- In a crash or thermal event, a flashing red light across from the Emergency Response Handle will illuminate the location of the handle and the HV Cut Loop icon

2. Remove the lower trim piece from the seat-side pillar to access the HV Cut Loop.
3. Double-cut the HV Cut Loop, leaving as much gap as possible, to ensure the cut loop cannot be reconnected.

## 3. DISABLE DIRECT HAZARDS / SAFETY REGULATIONS

|                                                                                   |                                                                                                                                                                                                                               |                                                                                                                                                                                                                                                                                                                                                                                |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <div data-bbox="344 374 584 449"><b>DANGER</b></div> <div data-bbox="352 449 584 566"> <div>400<br/>VOLTS<br/>DC</div> <div>HIGH<br/>VOLTAGE -<br/>ONLY QUALIFIED<br/>PERSONS TO<br/>MOVE OR ALTER<br/>EQUIPMENT</div> </div> | <div data-bbox="616 342 759 374"><b>DANGER</b></div> <div data-bbox="616 395 799 427"><b>HV HAZARD</b></div> <ul style="list-style-type: none"> <li>• Cut through the harness on each side of the tag to remove a section of the cable; this ensures that the cable ends cannot reconnect inadvertently</li> <li>• Always use caution around HV</li> <li>• Wear PPE</li> </ul> |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

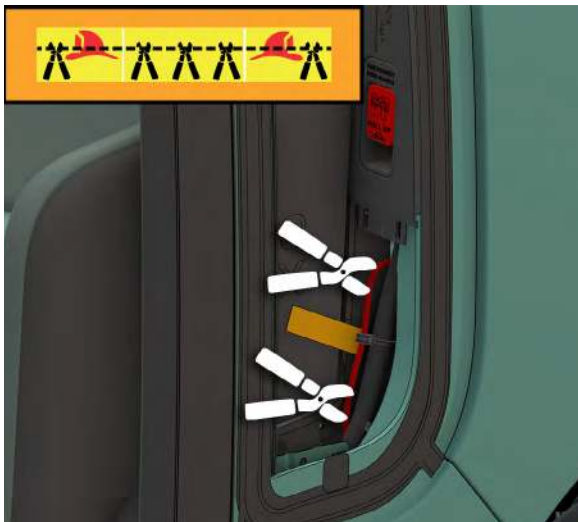

### IMPORTANT

- Always use caution around HV
- Wear PPE


**IF ANY AIRBAGS ARE DEPLOYED, HV WILL BE DISCONNECTED IN ≤5 SECONDS.**

#### NOTE:

- Call Zook Remote Operators: (833) 322-2277
- Have the location and alphanumeric vehicle ID number available

## 3. DISABLE DIRECT HAZARDS / SAFETY REGULATIONS

### LOW VOLTAGE (LV) BATTERY POWER

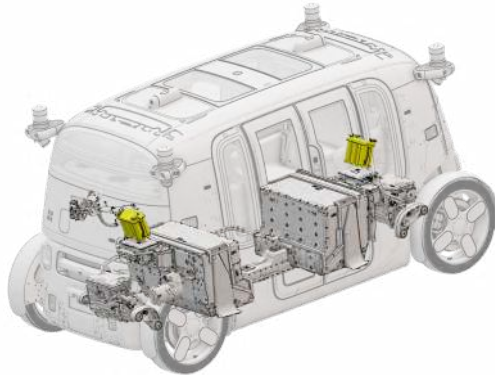

|  |                                                                                                                                                                                                                                                                                                 |
|--|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>DANGER</b></p> <ul style="list-style-type: none"> <li>• Electric hazard when interacting with LV</li> <li>• Interacting with LV is dangerous and can result in serious injury, damage, or death</li> <li>• Chemical hazards may exist from the battery outgassing or exploding</li> </ul> |
|--|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

#### IMPORTANT

**THERE IS NO METHOD FOR EMERGENCY RESPONDERS TO CUT 12V POWER.**

The robotaxi does not disconnect LV after a crash. LV is only disabled after a crash as a result of physical damage or if the LV batteries drain completely.

#### NOTE:

- Call Zook Remote Operators: **(833) 322-2277**
- Have the location and alphanumeric vehicle ID number available

## 3. DISABLE DIRECT HAZARDS / SAFETY REGULATIONS

### DISABLE AIRBAGS



*Location of gas inflators*

|                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | <p><b>DANGER</b></p> <ul style="list-style-type: none"> <li>• The Airbag Control Unit (ACU) has an internal energy reserve which allows it to remain powered 1-2 minutes after loss of LV power</li> <li>• Failure to follow Zook instructions can result in serious injury, damage, or death</li> <li>• The ACU has a backup power supply and is powered as long as LV is energized</li> </ul> |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### IMPORTANT

**UNDEPLOYED AIRBAGS MAY BE PRESENT. THERE IS NO METHOD FOR EMERGENCY RESPONDERS TO DISABLE THE 12V AIRBAG SYSTEM.**

Considerations for airbags in Zook robotaxis:

- If any airbags are deployed, HV is disabled
- Potential static electricity risk
- Do not come into contact with the airbag inflators
- Not all airbags deploy during a collision. Depending on the collision and the occupancy of the robotaxi, only certain airbags will deploy
- The ACU has backup power from the LV system



4. ACCESS TO THE OCCUPANTS


Extract Occupants

If a robotaxi has **not** been in a collision, there are three options to open the doors:

- 1. Riders open doors via the in-cabin touchscreen.
- 2. Emergency responders use the door button to open doors.
- 3. Riders or emergency responders contact Zook Remote Operators to open the doors.

If a robotaxi has been in a collision or is experiencing a system fault, the above options for door operation may not function as intended. Emergency responders can attempt to use the door button on either side of the robotaxi, or can break the quarterglass and actuate the Emergency Door Handle to gain access to the riders. A prerecorded message may be playing through the external audio system.

DOOR BUTTON STATUS INDICATIONS

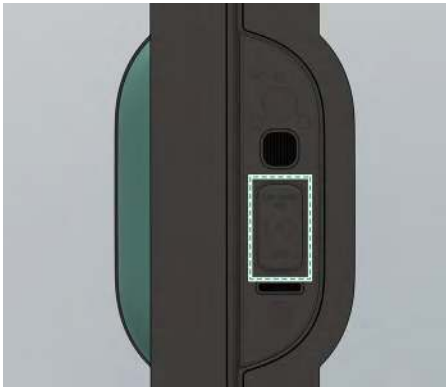

| COLOR | STATUS                                                    | INSTRUCTIONS                                                                                                                                                                                                                 |
|-------|-----------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|       | <b>Green:</b><br>Door Access is Functional                | Press the door button (shown in the image) once to open the doors.                                                                                                                                                           |
|       | <b>White HELP:</b><br>Door Control Unavailable            | Press the door button to contact Zook Remote Operators. This can also indicate there is a call active with Zook Remote Operators via the door audio system.                                                                  |
|       | <b>Unlit:</b><br>Door Control Unavailable                 | If the door button is unlit, door control is unavailable.                                                                                                                                                                    |
|       | <b>Amber:</b><br>The Door Function is Temporarily Stopped | Press the door button once. If the door button status turns green, function has returned. If the door button continues to show amber and the doors cannot be manually opened, refer to “Emergency Door Handle” instructions. |
|       | <b>Red:</b><br>Door Access is Not Functional              | The doors cannot be opened from this side of the robotaxi. Try the doors on the opposite side of the robotaxi or refer to the “Emergency Door Handle” instructions.                                                          |
|       | <b>Use Other Side:</b><br>Door Access is Not Functional   | The doors cannot be opened from this side of the robotaxi. Try the doors on the opposite side of the robotaxi or refer to the “Emergency Door Handle” instructions.                                                          |

## 4. ACCESS TO THE OCCUPANTS


### IMPORTANT

- Powered door operation is maintained until the 12V batteries drain, approximately 5 minutes after a crash

#### NOTE:

- Ensure autonomous mode is deactivated by calling Zook Remote Operators at **(833) 322-2277**
- Have the location and alphanumeric vehicle ID number available

Steps to Open the Doors with the Door Button:

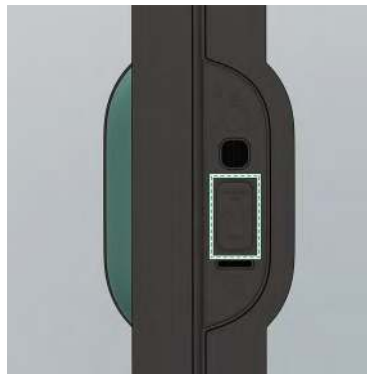

1. Locate the door button (highlighted in the image above).
2. Press the door button once to open the doors.

**NOTE:** If the door button is red or amber, press the door button once to reset. The status changes to green. If it does not change and doors cannot be opened, follow the instructions for the “Emergency Door Handle”

### EMERGENCY DOOR HANDLE



There are two Emergency Door Handles on opposite sides of the robotaxi rider cabin, one for each set of doors. When facing the door from the robotaxi exterior, the handle is on the right side.

## 4. ACCESS TO THE OCCUPANTS



### CAUTION

- Be careful when breaking glass, as sharp shards of glass may pierce the skin
- Wear PPE



### IMPORTANT

- The doors require force to open manually. If possible, the door should be pulled at the bottom for maximum efficiency
- If airbags are deployed due to a collision, graphics on the airbags show the location and operation of the Emergency Door Handle
- In a crash or thermal event, a flashing red light across from the Emergency Door Handle will illuminate the location of the handle
- A prerecorded message may be playing through the external audio system

### NOTE:



- Ensure autonomous mode is deactivated by calling Zook Remote Operators at **(833) 322-2277**
- Have the location and alphanumeric vehicle ID number available

#### Steps to use the Emergency Door Handle:

Riders can actuate the Emergency Door Handle to open the door. If the handle cannot be actuated by the cabin riders, emergency responders can break glass from the exterior of the robotaxi to access the Emergency Door Handle. If a crash or thermal event has occurred, a flashing red light across from the Emergency Door Handle will illuminate the location of the handle. A prerecorded message may be playing through the external audio system.

1. Two Emergency Door Handles are available, one on either side of the robotaxi rider cabin.

DOOR HANDLE  
LOCATIONS

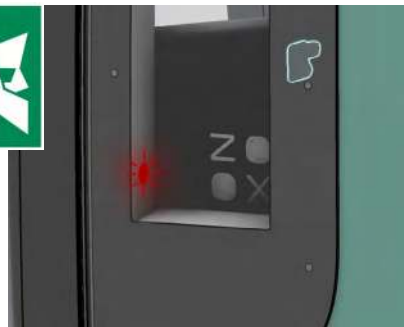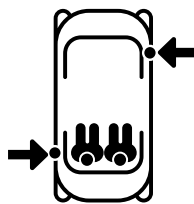

## 4. ACCESS TO THE OCCUPANTS



2. Pull the Emergency Door Handle to a 90 degree angle to release the door latch. The door latches release and if power remains, the system attempts to open automatically. Step back from the robotaxi as the doors open. If no power remains, the handle will need to be held in the pulled-up position while the right-side door is opened manually.

**NOTE:** In the event of a crash that resulted in “Horseshoe Airbags” deployment, a flashing red light illuminates the Emergency Door Handle position and graphics on the outward-facing side of the airbags show its location and operation. The graphic is only visible through the quarter panel glass (i.e. the glass next to the Door Handle - see image below)



### CUT AND NO CUT ZONES

- Primary extrication access is side door removal.
- Secondary extrication access is roof panel removal.

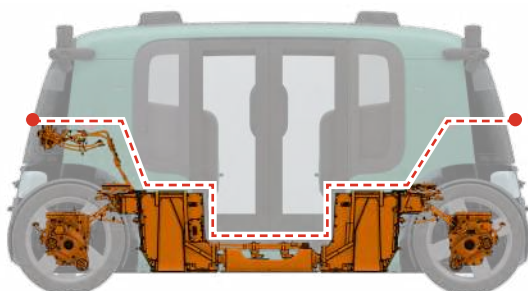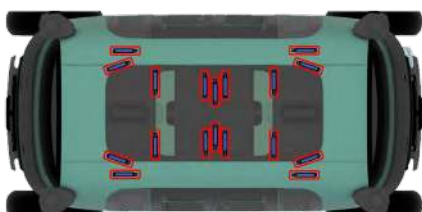

DO NOT  
CUT BELOW  
THIS LINE

4. ACCESS TO THE OCCUPANTS



**DANGER**

**400 VOLTS DC**

**HIGH VOLTAGE - ONLY QUALIFIED PERSONS TO MOVE OR ALTER EQUIPMENT**

**DANGER**

**HV HAZARD**

- Cutting into the No Cut Zones may cause severe injury, damage, or death
- Risk of HV electrocution: HV system components contain lithium-ion battery packs, HV cables (up to 400V DC), traditional vehicle batteries (12V DC), triggering devices, and compressed gas
- HV system components are located beneath the rider seats and floor



**WARNING**

- Damage to the No Cut Zones may discharge harmful gases and fluids
- Potential risk of fluid leaks


 **IMPORTANT**

**DO NOT CUT OR DAMAGE THE NO CUT ZONES**

Considerations and safety best practices when approaching Zook robotaxis:

- Airbag gas inflators are located in the roof and under the rider seats
- Wear PPE
- Wear SCBA


**EMERGENCY RESPONDERS**



**DANGER - HIGH VOLTAGE**  
**DO NOT CUT BELOW LINE**

**FOR ZOOK SUPPORT**  
 **(833) 322-2277**

5. STORED ENERGY / LIQUIDS / GASES / SOLIDS

|                                                                                   |      |                                                                                   |                                                                                   |                                                                                   |                                                                                    |                                                                                     |
|-----------------------------------------------------------------------------------|------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  | 12V  |  |  |  |                                                                                    |                                                                                     |
|  | 400V |  |  |  |  |  |






**DANGER**

**HV HAZARD**

- HV battery cells may emit fumes and other hazardous byproducts during a fire
- HV batteries may go into a further thermal runaway, when exposed to high temperatures during a fire
- Use a Thermal Imaging Camera or Infrared to monitor the battery temperature

HIGH VOLTAGE SYSTEM

The HV system is sub-assembled to the robotaxi chassis and 12V DC systems to form 2 integrated drive modules on the robotaxi. The HV system consists of the following components:

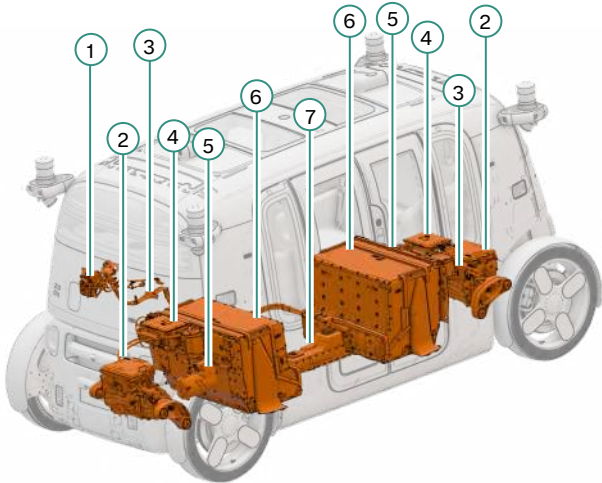

1. HV Vehicle Charge Inlet

2. Electric Drive Unit (EDU)

3. HV cables/harnesses


4. DC-DC Converter
5. Air Conditioning (AC) Compressor

6. High Voltage (HV) Battery

7. HV Battery Interconnect


## 5. STORED ENERGY / LIQUIDS / GASES / SOLIDS

### Electric Drive Unit (EDU)

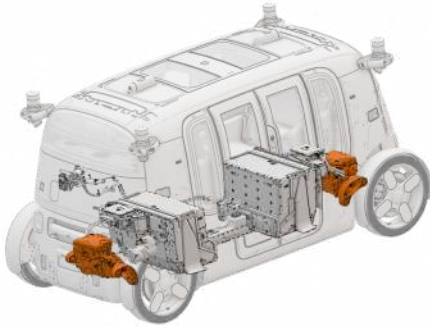


2 EDUs, 1 for each drive module, provide the torque to accelerate and decelerate the robotaxi. Each EDU is connected to the nearest HV battery through an HV cable.

### DC-DC Converter

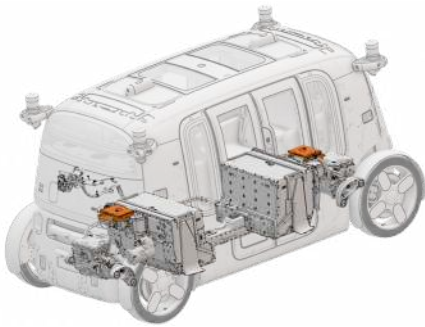

There are 2 DC-DC Converters that are located on top of each HV battery. They are liquid-cooled devices that convert 400V DC power to 12V DC LV power through an HV cable connected to the HV battery.

### Air Conditioning (AC) Compressor

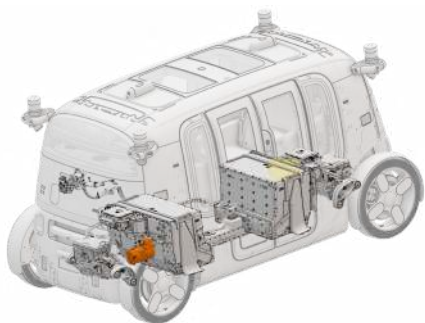


The AC Compressor is powered by the HV system. ZOOX robotaxis have 2 AC compressors on the robotaxi, 1 within each drive module. Within their respective drive module, they are connected to the HV battery through an HV cable.



## 5. STORED ENERGY / LIQUIDS / GASES / SOLIDS


### High Voltage (HV) Battery

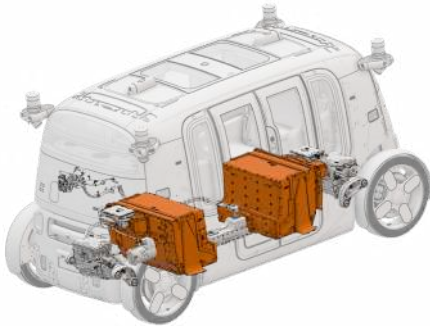

Zoox robotaxis use a self-contained 400V DC lithium-ion HV battery. There are 2 separate but connected HV batteries on the robotaxi (1 per drive module) on each side beneath the rider seats. Each HV component, including the HV battery is connected to the drive module ground via Potential Equalization (PE) cables. If 1 HV battery experiences a non-safety-critical failure, the other HV battery continues to power all systems with no loss in robotaxi function. For safety-critical failures of either battery, the HV system is disabled. The robotaxi HV system consists of HV Battery, AC Compressor, DC-DC Converter, EDU, and HV Battery Interconnect, all connected through HV cables to form one parallel HV circuit. Each HV battery contains the following:


- 3456 Li-ion Battery Cells
- 6 Modules/Packs
- 1 High Voltage Junction Box
- 1 Outer Enclosure
- 2 Potential Equalization (PE) cables

### HV Battery Interconnect & Charge Inlet

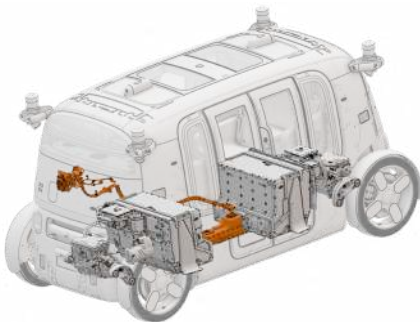

The HV Battery Interconnect is located on the underside of the Zoox robotaxi. It charges the robotaxi by connecting to both the HV batteries and pairing them with the HV Vehicle Charge Inlet to an external charger.

### LOW VOLTAGE SYSTEM

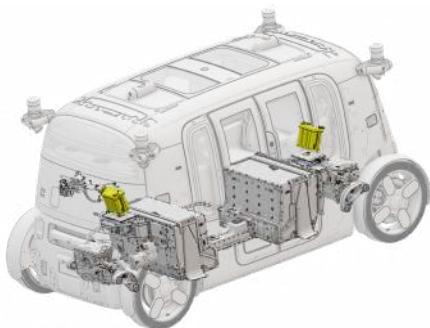


Zoox robotaxis have two 12V DC batteries that manage the doors, touchscreens, interior and exterior lights, airbags, seatbelts, seat restraint system, and in-cabin camera. Following a crash where HV is disabled, the low voltage system provides power to the audio link with Zoox Remote Operators, interior camera, lights, and door functions for up to 5 minutes.



6. IN CASE OF FIRE

EXTINGUISH A ROBOTAXI FIRE

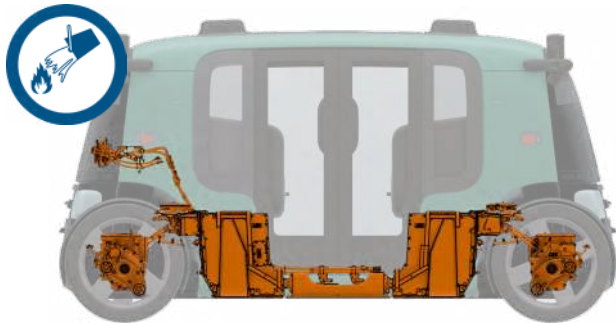

|                                                                                    |                                                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  | <p><b>DANGER</b></p> <p><b>HV HAZARD</b></p> <ul style="list-style-type: none"><li>• Interacting with HV is extremely dangerous and may result in injury or death</li><li>• Inflammable, flammable and toxic materials from the compromised or damaged battery and other byproducts may enter the rider cabin or ignite the robotaxi</li><li>• Battery re-ignition may occur</li><li>• Using water to extinguish a robotaxi fire may result in a chemical reaction that may burn the skin if contact with the fluid is made</li><li>• Fire can compromise robotaxi components (airbags, inflation cylinders, gas struts, etc.) and may cause inflation cylinder explosions</li></ul> |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

 **IMPORTANT**

**Safety best practices for Zoox robotaxi fires involve defensive firefighting and environmental management to minimize risk.** Fire extinguishing should only be conducted by firefighters or fire safety-trained persons.

When approaching a robotaxi fire:

- Wear Personal Protective Equipment (PPE)
- Wear Self-Contained Breathing Apparatus (SCBA)
- Use insulated tools for extinguishing fire
- Foam does not extinguish a battery fire


**NOTE**

- *Always assume the HV is energized*
- *If any airbags are deployed, HV will be disconnected in ≤5 seconds*
- *Ensure autonomous mode is deactivated by contacting Zoox Remote Operators at (833) 322-2277*
- *Have the location and alphanumeric vehicle ID number available*

Steps to extinguish a robotaxi/battery fire:

6. IN CASE OF FIRE

- 1. Apply constant and copious amounts of water (as high as 40,000 gallons) onto the HV batteries until risk to the surrounding environment is contained.

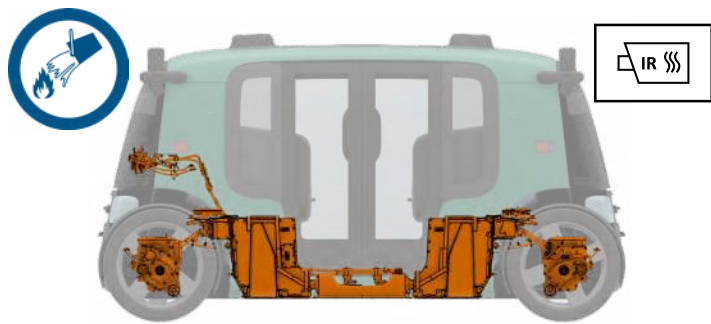

NOTE:

- Only water keeps the battery from entering thermal runaway
- If water is not readily available, use CO2, dry chemicals, or other fire-extinguishing agents to suppress the fire until water is available

- 2.  Monitor the battery temperature using a Thermal Imaging Camera (TIC) or Infrared (IR) during the cooling process.

NOTE:

- Cool down the battery if it is  $\geq 302^{\circ}\text{F}$  ( $150^{\circ}\text{C}$ )
- Optimal ambient temperature of the battery is  $\leq 122^{\circ}\text{F}$  ( $50^{\circ}\text{C}$ ).

- 3. Apply water directly to any exposed areas and continue to monitor the battery structure.

NOTE: Ensure the loose battery cells or modules are submerged in water for at least 24 hours

- 4. Advise second responders (vehicle transporters, etc.) of the risk of battery re-ignition.

Inhalation in Fire Situations

|                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br> | <p><b>DANGER</b></p> <ul style="list-style-type: none"><li>• Exposure to toxic vapors and gases may be released due to a battery fire and exposure to high heat levels, which include:<ul style="list-style-type: none"><li>• Cobalt</li><li>• Copper</li><li>• Lithium-ion</li><li>• Nickel</li><li>• Oxides of carbon</li><li>• Sulfuric acid</li></ul></li><li>• Full PPE and SCBA must be worn while in contact or close proximity of the robotaxi.</li><li>• Keep a safe distance while extinguishing an active battery fire with water.</li><li>• Stay upwind to avoid inhalation of fumes or smoke.</li></ul> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

7. IN CASE OF SUBMERSION



**DANGER**

- Potential risk of an HV battery fire
- Damaged HV batteries may discharge harmful fumes and gases

 **IMPORTANT**

Considerations and safety best practices for a submerged Zook robotaxi:

- A submerged Zook robotaxi should only be extracted by trained safety personnel
- Wear PPE
- Towing the robotaxi on a flatbed truck or trailer is preferred
- If the robotaxi has been submerged or shows signs of damage or outgassing, do not charge


**NOTE:**

- *Always assume the HV is energized*
- *If any airbags are deployed, HV will be disconnected in ≤5 seconds*
- *Call Zook Remote Operators at (833) 322-2277*
- *Have the location and alphanumeric vehicle ID number available*

Steps to recover a robotaxi submerged in water:

1. Install tow hooks/straps to the control arms at each wheel on one end of the robotaxi, as highlighted in green in the diagram.

**NOTE:** Towing the robotaxi from any areas other than those specified in the graphic may result in serious injury or damage to the robotaxi

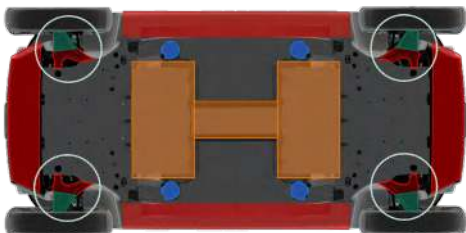

|                                                                                     |                                         |
|-------------------------------------------------------------------------------------|-----------------------------------------|
|  | Not suitable for stabilization/recovery |
|  | Stabilization/Lifting points            |
|  | Recovery/Towing points                  |
|  | HV components                           |

2. Attach and use winch cables to pull the robotaxi out of the water.
3. Allow the water to drain out of the robotaxi.
4. Monitor for any indications of HV damage.
  - Smoke, fire, and/or gas emissions
  - Cooling or heating temperature trends

## 7. IN CASE OF SUBMERSION

**NOTE:**


- If available, use a Thermal Imaging Camera or Infrared to monitor the battery temperature (the safe storage temperature of the battery is  $\leq 122^{\circ}\text{F}$  [ $50^{\circ}\text{C}$ ])
- The above is not a complete list of HV damage indicators. Do not touch or move the damaged or submerged HV components, cables, etc.

5. If safe to proceed, load the robotaxi onto a flatbed tow truck.

**NOTE:** Do not tow a Zook robotaxi with the wheels on the ground due to a potential risk of robotaxi damage and/or compromise of the battery enclosure, which may result in a battery thermal event

6. Store the robotaxi at least 50 feet away from other vehicles, combustible materials, and/or structures. Use visual indicators or signage to identify the robotaxi as all-electric.

**NOTE:** Signage is available for printing in “Appendix A”

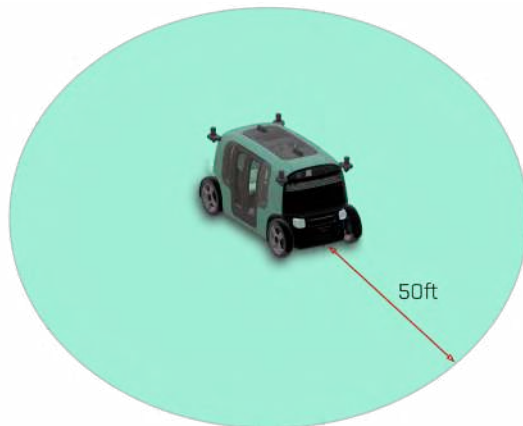

8. TOWING / TRANSPORTATION / STORAGE

TOW THE ROBOTAXI



**WARNING**

- Connecting the tow hooks/straps to areas other than specified may cause damage, serious injury, or death
- Due to the low profile, towing the robotaxi with the wheels on the ground may result in significant robotaxi damage
- Towing the robotaxi with the wheels on the ground may overheat the HV system and lead to a fire
- Using the chassis, frame, or suspension components to pull the robotaxi may result in damage to the robotaxi

 **IMPORTANT**

- Before attempting to tow, ensure autonomous mode is deactivated. See “Autonomous Mode Status Indications”
- Towing the robotaxi on a flatbed truck or trailer is preferred
- Check overhead clearance limits. The Zook robotaxi dimensions:

|        |                       |
|--------|-----------------------|
| Height | 6 ft 5 in (1949mm)    |
| Length | 11 ft 11 in (3630 mm) |
| Width  | 5 ft 10 in (1786 mm)  |
| Weight | 5732 lbs (2600 kg)    |

- Be careful not to scrape the battery pack when loading or unloading the robotaxi. Excessive vertical forces on the bottom of the battery may cause internal damage, increasing risk of a battery thermal event

**NOTE**

- *In an emergency, push bumpers may be used to move the robotaxi, although this presents a risk of sensor damage*
- *To confirm that the robotaxi has safely stopped and autonomous mode is deactivated, contact Zook Remote Operators at (833) 322-2277*
- *Have the location and alphanumeric vehicle ID number available*
- *Coordinate with Zook Remote Operators or the on-site Zook Support Team to tow the robotaxi*
- *A prerecorded message may be playing through the external audio system*

8. TOWING / TRANSPORTATION / STORAGE

If the robotaxi cannot be moved under its own power, the robotaxi must be towed. See instructions and important safety information below.

Steps to tow the robotaxi:

- 1. Before interacting with a Zook robotaxi, observe the service bay indicators to ensure autonomous mode is inactive and EPBs are applied. Ensure the robotaxi is off. See “Autonomous Mode Status Indications”.

NOTE:


- Contact Zook Remote Operators [(833) 322-2277] to confirm the robotaxi has safely stopped and autonomous mode is inactive
- A prerecorded message may be playing through the external audio system

- 2. Install wheel chocks under 2 wheels to prevent the robotaxi from rolling away.



- 3. Install tow hooks/straps to the control arms at each wheel on one end of the robotaxi, as highlighted in green in the diagram.

NOTE: Towing the robotaxi from any areas other than those specified in the graphic may result in serious injury or damage to the robotaxi

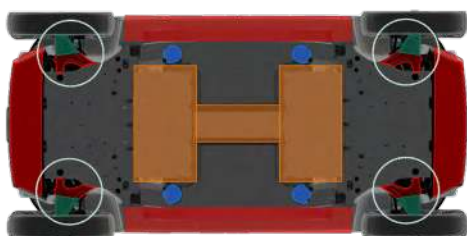

|  |                                         |
|--|-----------------------------------------|
|  | Not suitable for stabilization/recovery |
|  | Stabilization/Lifting points            |
|  | Recovery/Towing points                  |
|  | HV components                           |

- 4. Align the bed of the truck with the Zook robotaxi so the robotaxi can be pulled straight onto the truck bed.
- 5. Attach winch cables to the tow hooks/straps. Activate the winch to remove slack in the winch cables. **Do not fully tighten.**
- 6. If on-site, the Zook Support Team will disengage the EPBs. If there are no Zook Support Team members on-site, install wheel skates under all 4 tires and remove wheel chocks.

NOTE: Only the on-site Zook Support Team can disengage the EPBs

## 8. TOWING / TRANSPORTATION / STORAGE

7. Use winch cables to pull the robotaxi onto the flatbed of the tow truck.
8. Safely secure the robotaxi to the bed of the truck using the strap tie down method around the wheels. Once secure, release the tension from the winch cable and remove the wheel skates, if necessary.

**NOTE:** For enclosed trailers, the robotaxi can be further secured using wheel chocks if necessary

9. After offloading the robotaxi from the tow truck, chock the wheels.

### STORE THE ROBOTAXI


Zoox safety best practices and recommendations when storing a damaged Zoox electric robotaxi.

1. Use visual indicators or signage to identify the robotaxi as all-electric.

**NOTE:** Signage is available for printing in “Appendix A”



2. Store the robotaxi at least 50 feet away from other vehicles, combustible materials, and/or structures.

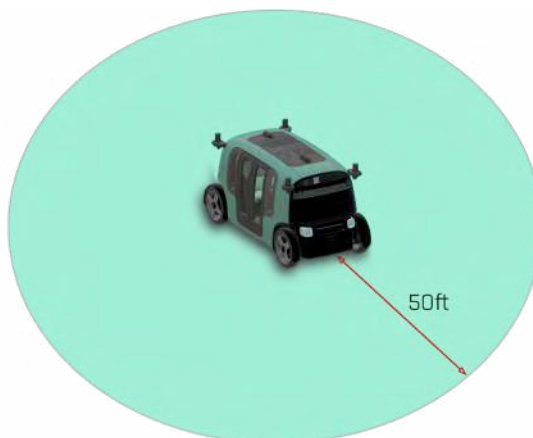



8. TOWING / TRANSPORTATION / STORAGE





**DANGER**

**HV HAZARD**

- Damage to HV components or battery may create an electrical safety hazard, resulting in severe injury or death
- Inflamed, flammable or toxic materials from the leaked battery may enter the passenger cabin or ignite the robotaxi
- Battery re-ignition may occur
- Fire can compromise robotaxi components (airbags, inflation cylinders, gas struts, etc.) and may cause inflation cylinder explosions

 **IMPORTANT**

- Store the robotaxi outside, at least 50 feet away from other vehicles, combustible materials, and/or structures
- Check overhead clearance limits. The Zook robotaxi dimensions:

|        |                       |
|--------|-----------------------|
| Height | 6 ft 5 in (1949mm)    |
| Length | 11 ft 11 in (3630 mm) |
| Width  | 5 ft 10 in (1786 mm)  |
| Weight | 5732 lbs (2600 kg)    |

- Be careful to not damage the battery pack when storing the robotaxi
- Ensure autonomous mode is inactive. See “[Autonomous Mode Status Indications](#)”

**NOTE**

- *Always assume the HV is energized*
- *If any airbags are deployed, HV will be disconnected in ≤5 seconds*
- *If necessary, confirm the robotaxi has safely stopped and autonomous mode is deactivated by contacting Zook Remote Operators at (833) 322-2277*
- *Have the location and alphanumeric vehicle ID number available*

## 9. IMPORTANT ADDITIONAL INFORMATION

### COLLISION RESPONSE AND ACTION



#### IMPORTANT

- The window adjacent to the Emergency Door Handle is illuminated with a flashing red light
- If airbags are deployed, graphics on the horseshoe airbags show the location and operation of the Emergency Door Handle. See “[Emergency Door Handle](#)”
- After a collision, the doors may not function properly
- Post-collision, a prerecorded message may be announcing via the external speakers, that autonomy is disabled
- If there is no on-site ZOOX Support Team, call ZOOX Remote Operators at **(833) 322-2277** and have the location and alphanumeric vehicle ID number available

ZOOX robotaxis are capable of detecting that they have been involved in a crash. The robotaxi immediately notifies ZOOX Remote Operators and performs the following procedures:

- Safely stop
- Disconnect the HV if certain crash conditions are met
- Enable the EPB and service brakes
- Set Active Suspension to Passive
- Maintain exterior lights
- Illuminates interior lights
- Turn on the hazard lights
- Unlock the Doors to allow door access
- Present the “Door Open” screen on the touchscreen
- In a severe crash, turn off HVAC


ZOOX Remote Operators remotely monitor the robotaxi in real time for any indications of safety risks or events. If circumstances warrant, ZOOX Remote Operators contact and work with emergency responders to resolve any incident or emergency scenario. A prerecorded message may be playing through the external audio system.

**NOTE:** ZOOX Support Team members may arrive at the scene of the robotaxi incident to provide support for law enforcement and emergency responders. They have a ZOOX badge

9. IMPORTANT ADDITIONAL INFORMATION


RESTRAINT SYSTEMS

Airbags


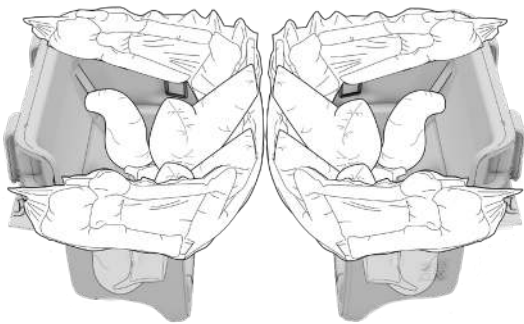


The airbags are managed by the Airbag Control Unit (ACU) and are uniquely designed to minimize injury potential in front, rear, side or rollover collisions.

Zoox robotaxis have five distinct types of airbags:

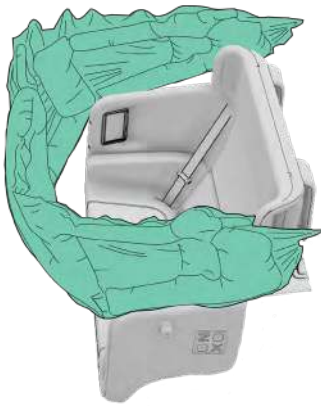
| TYPE                                                                                                                   | LOCATION                                                                                                                                      | FUNCTION                                                                                                                                                                                                                     |
|------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div><p>Horseshoe Airbags</p></div> | <p>The horseshoe airbags (1 each driving direction) are located in and deploy from the ceiling in a U-shape or “horseshoe” shaped manner.</p> | <ul style="list-style-type: none"><li>• Provide protection in a side crash</li><li>• Minimize risk of ejection in rollover crashes</li><li>• Provide a reaction surface for the frontal airbags in frontal crashes</li></ul> |

9. IMPORTANT ADDITIONAL INFORMATION
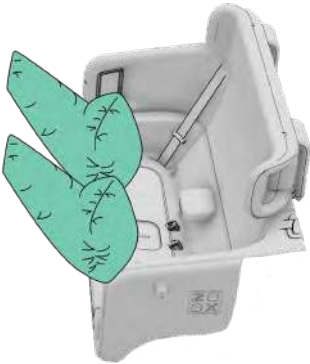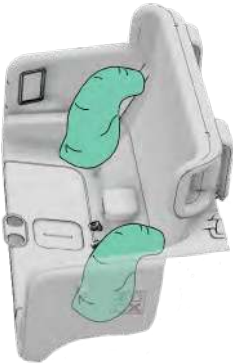
| TYPE                                                                                                                      | LOCATION                                                                                                                                                           | FUNCTION                                                                                                                                                                                                                                                                                                   |
|---------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div>Frontal Airbags</div> <div></div>   | <div>The frontal airbags (1 in front of each seating position) are located in and deploy from the center roof bow area, dropping down in front of each seat.</div> | <div>Provide protection for forward facing riders in a frontal crash.</div>                                                                                                                                                                                                                                |
| <div>Thorax Airbag</div> <div></div>    | <div>The seat side airbags (1 at each seating position) are located and deploy from the lower seat back corner.</div>                                              | <div>Provide protection for the chest, shoulders and pelvis of the rider in a side crash.</div>                                                                                                                                                                                                            |
| <div>Seat Pan Airbag</div> <div></div> | <div>The seat pan airbags (1 at each seating position) are located in and deploy within the seat bottom cushion.</div>                                             | <div><ul style="list-style-type: none"><li>• Raise the front edge of the seat, which reduces the risk of the rider’s body sliding in a forward-facing collision by holding them more securely in the seats</li><li>• Deploys only on forward-facing seats in high-speed frontal collisions</li></ul></div> |


## 9. IMPORTANT ADDITIONAL INFORMATION

### Head Restraint System

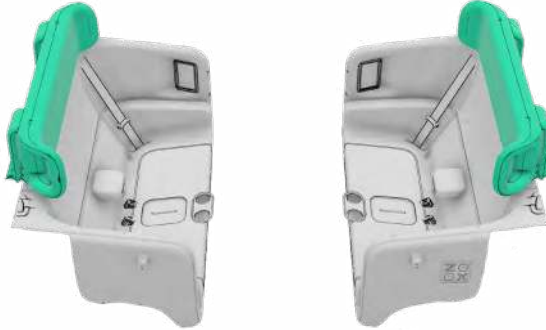

All of the 4 seating positions in the Zook robotaxi are equipped with integrated headrests. They are not removable nor adjustable.

### Seatbelts

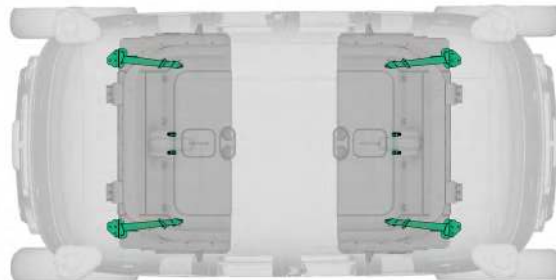

Zook robotaxis have a touchscreen for each seat that notifies riders to “fasten seatbelt,” and do not operate until all riders have properly and securely buckled up. The robotaxis have a safety system that verifies appropriate seatbelt usage by riders with two inputs:


- **Sensors:** placed in the seats, used to detect a rider’s presence
- **Switches:** situated in the seatbelt buckles to monitor whether the belts are fastened

If the automated driving system detects a potential or imminent collision, the seatbelt system proactively tensions the seatbelt webbing to bring riders into the optimal position for airbag deployment and protection. This capability maximizes seatbelt safety performance for riders at all times.

### Airbag Control Unit

The Airbag Control Unit (ACU) deploys individual seatbelt pretensioners. There are 4 seatbelt anchor pretensioners and 4 seatbelt retractor pretensioners, 1 at each seat.

## 10. EXPLANATION OF PICTOGRAMS USED

| SYMBOL                                                                              | EXPLANATION                         |
|-------------------------------------------------------------------------------------|-------------------------------------|
|    | Electric Vehicle Propulsion         |
|    | Battery pack, high-voltage          |
|    | Airbag inflator/stored gas inflator |
|    | Battery, low-voltage                |
|    | Warning, Electricity                |
|   | General warning sign                |
|  | Use thermal Infrared camera         |
|  | Break to obtain access              |
|  | Use water to extinguish the fire    |
|  | Gases under pressure                |
|  | Acute toxicity                      |
|  | Flammable                           |

10. EXPLANATION OF PICTOGRAMS USED

| SYMBOL                                                                            | EXPLANATION                   |
|-----------------------------------------------------------------------------------|-------------------------------|
|  | Explosive                     |
|  | Corrosives                    |
|  | Hazardous to the human health |



**THIS PAGE INTENTIONALLY  
LEFT BLANK**



# ELECTRIC VEHICLE



Electrical Hazard

**Store the vehicle at least 50 feet away from other vehicles, combustible materials, and/or structures.**



HV Battery