
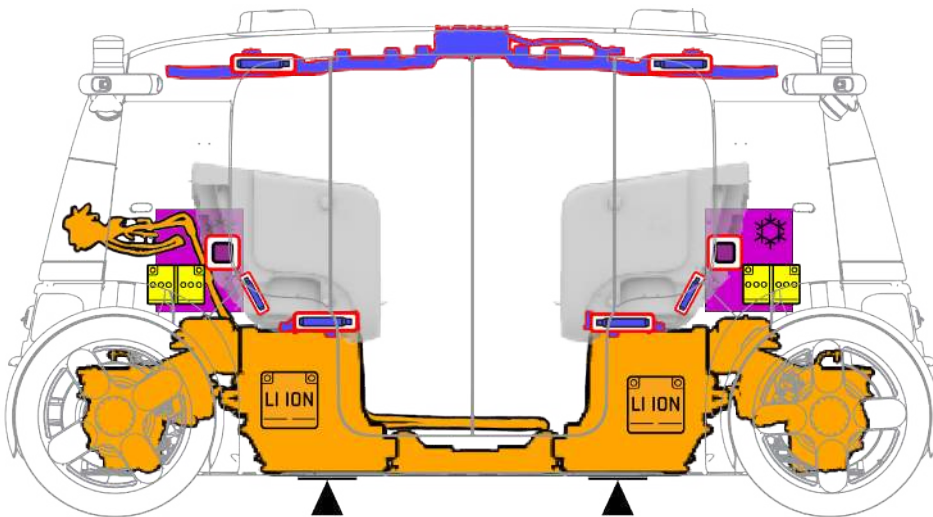


ZOOX

Zoox
From 2027-

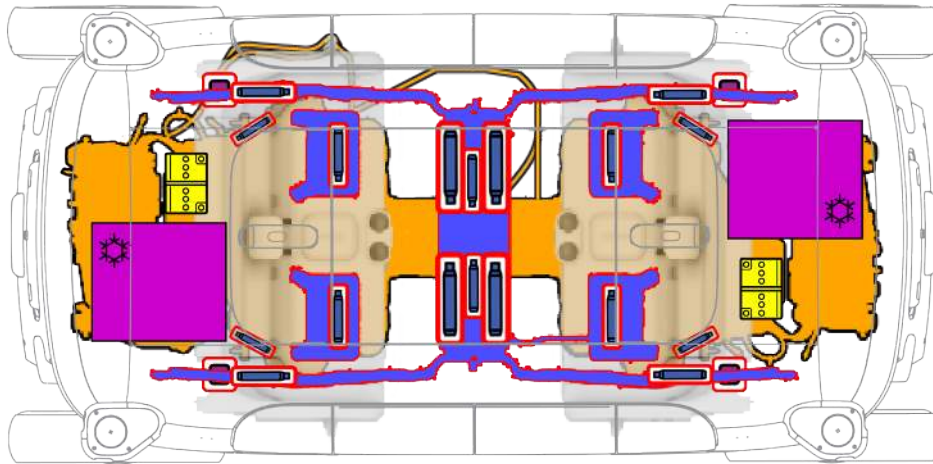

	Airbag		Stored gas inflator		Seat belt pretensioner		Carbon structure		High strength zone
	High Voltage battery pack		High Voltage power cable		High Voltage component		High Voltage ultra-capacitor		High Voltage Cable Cut
	Low voltage battery		Low voltage ultra-capacitor		Lifting point		Air conditioning component		
Contact Zoox: (833) 322-2277 safety@zoox.com ©2026 Zoox, Inc. Proprietary. All Rights Reserved. Printed Copies are Uncontrolled.		ID no. FO-GD-000247-01		Version No. 01		Version Date 01/2026		Page No. 1 of 4	

1. IDENTIFICATION / RECOGNITION

FEATURES

- Symmetrical
- Sensor pods on each quarter of the body
- Robotaxi doors on each side of the body
- No steering wheel
- Two carriage-style seats with room for 4 riders
- Unique Zook sounds, including pre-recorded informational messages


FRONT AND BACK

- Vehicle Identification Number (VIN): Bottom-right of the Service Bay window
- Zook logo: Left side of the Service Bay panel, when facing the robotaxi
- License plate: Affixed to the front and/or rear of the robotaxi
- Driving direction reflectors: Below the tail lamps

SIDE

- Zook logo: To the right of the door, visible through the quarter glass
- Zook logo: On the reflective surface of the wheel
- Driving direction reflectors: Embedded in the side quarter panels

2. IMMOBILIZATION / STABILIZATION / LIFTING

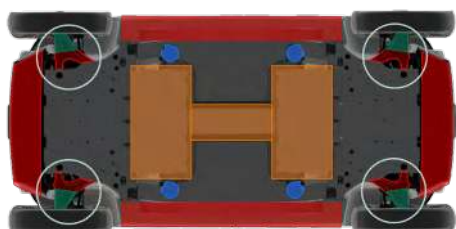




■ Not suitable for stabilization/recovery

■ Stabilization/Lifting points

■ Recovery/Towing points

■ HV components

3. DISABLE DIRECT HAZARDS / SAFETY REGULATIONS

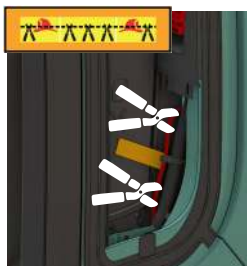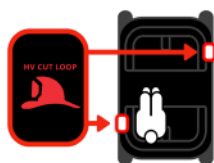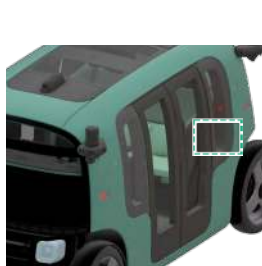

Two HV Cut Loops (HVCL) are present, accessible on each side of the robotaxi. **Cut one HVCL on one side of the robotaxi to disable the entire HV system.**

When facing the door from the robotaxi exterior, the HVCL is on the right side. To access, break glass, and remove the trim piece with the "HV Cut Loop" icon. Double cut the HVCL. This cut will disable high voltage.

Important: Cut through the harness on each side of the tag to remove a section of the cable. This ensures that the cable ends cannot reconnect inadvertently.

DO NOT CUT ANY ORANGE COLORED HIGH VOLTAGE CABLES.

There is no method for emergency responders to cut 12V power.

IF ANY AIRBAGS ARE DEPLOYED, HV WILL BE DISCONNECTED IN ≤5 SECONDS. UNDEPLOYED AIRBAGS MAY BE PRESENT.

Autonomous Status Indications




Green status lights shown

ONLINE  - Green	Robotaxi is in autonomous mode.	HV enabled
OFFLINE [OFF] - [Unlit]	Robotaxi is NOT in autonomous mode.	HV off, LV on
OFFLINE  - Orange	Robotaxi is NOT in autonomous mode.	Charging
OFFLINE  - Purple	Robotaxi is NOT in autonomous mode.	HV on

If additional verification about the status of High Voltage or Autonomy mode is required beyond the visual signals described, contact Zook Support at (833) 322-2277.

4. ACCESS TO THE OCCUPANTS

Door Status Indications

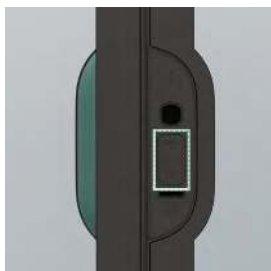**Functional - Green**

To open the doors, press the door button once.

**Not functional/Temporarily not functional - Unlit, Red, or Amber**


The doors on the opposite side of the Robotaxi may be accessible.

To reset the fault, press the door button once. If the fault can be reset, the light will change to green. If the fault cannot be reset, the light will remain unlit, red, or amber. Refer to Emergency Door Handle instructions.

**Help - White**

Press the door button to contact Zook Support. This can also indicate there is a call active with Zook Support via the door audio system.

Emergency Door Handle

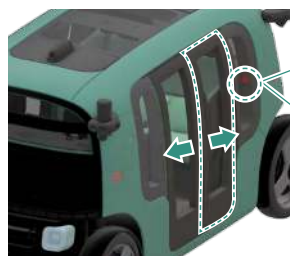

Flashing guide light




Two emergency door handles are present, one for each door. When facing the door from the Robotaxi exterior, the handle is on the right side.

To access, break glass, pull handle and step back. If the doors do not open automatically, pull and hold the handle at a 90 degree angle while manually pulling the right-side door.


No Cut Zones



DO NOT CUT INTO GAS INFLATOR CYLINDERS

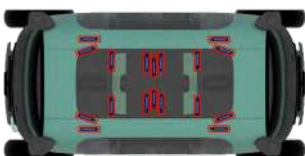

AIRBAG GAS INFLATOR CYLINDERS ARE PRESENT IN THE ROOF AND SEATS

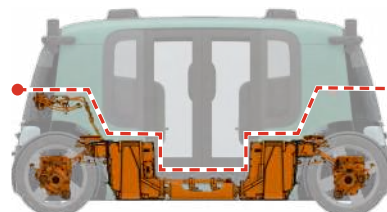

DO NOT CUT BELOW THIS LINE

5. STORED ENERGY / LIQUIDS / GASES / SOLIDS

 12V				
 400V				

	DANGER 400 VOLTS DC HIGH VOLTAGE - ONLY QUALIFIED PERSONS TO MOVE OR ACTUATE EQUIPMENT	DANGER - HV battery cells are sealed and do not have enough electrolyte to form a pool of liquid - The batteries are cooled with pink coolant - A clear fluid is most likely water - Use a Thermal Imaging Camera or Infrared to monitor the battery temperature
---	---	--

6. IN CASE OF FIRE



Apply constant and copious amounts of water (as high as 40,000 gallons) onto the HV batteries until risk to the surrounding environment is contained.



DANGER
400
VOLTS
DC
HIGH
VOLTAGE -
ONLY QUALIFIED
PERSONS TO
MOVE OR ALTER
EQUIPMENT

DANGER

- HV battery cells are sealed and do not have enough electrolyte to form a pool of liquid
- The batteries are cooled with pink coolant
- A clear fluid is most likely water
- Use a Thermal Imaging Camera or Infrared to monitor the battery temperature

7. IN CASE OF SUBMERSION



DANGER
400
VOLTS
DC
HIGH
VOLTAGE -
ONLY QUALIFIED
PERSONS TO
MOVE OR ALTER
EQUIPMENT

DANGER

- Potential risk of an HV battery fire
- Damaged HV batteries may discharge harmful fumes and gases

8. TOWING / TRANSPORTATION / STORAGE



9. IMPORTANT ADDITIONAL INFORMATION

Zoox robotaxis are capable of detecting that they have been involved in a collision. The robotaxi will immediately notify Zoox Support and perform the following procedures:

- Safely stop
- Disconnect the HV if certain crash conditions are met
- Enable the EPB and service brakes
- Set Active Suspension to Passive
- Maintain exterior lights
- Illuminate interior lights
- Turn on the hazard lights
- Unlock the doors to allow door access
- Present the "Door Open" screen on the touchscreen
- In a severe crash, turn off HVAC

Zoox Support remotely monitors the vehicle in real time for any indications of safety risks or events.

10. EXPLANATION OF PICTOGRAMS USED

	Electric Vehicle Propulsion		Use thermal Infrared camera		Flammable
	Battery pack, high-voltage		Break to obtain access		Explosive
	Battery, low-voltage		Use water to extinguish the fire		Corrosives
	Warning, Electricity		Gases under pressure		Hazardous to the human health
	General warning sign		Acute toxicity		