




Audi A7 TFSI e

Sedan, as of 2019

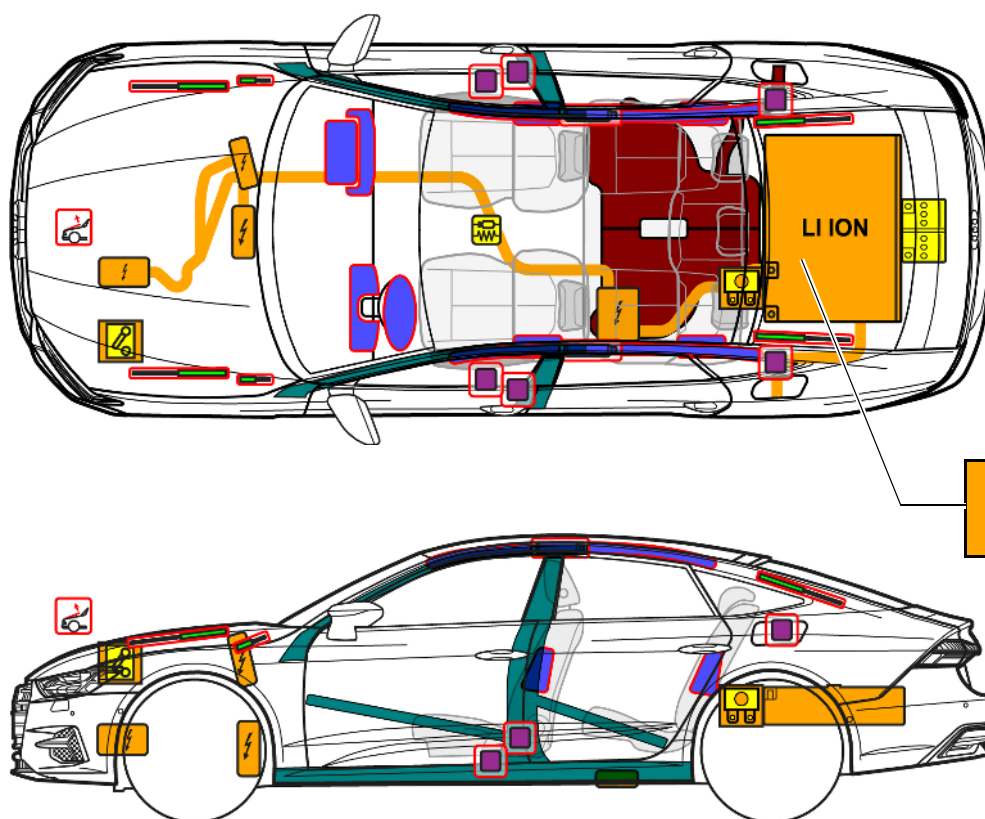

400 V
LI ION

Note: The illustration shows the maximum possible range of equipment.

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic roll-over protection system		Gas strut / preloaded spring		High-strength zones		Special attention		
	Battery, low-voltage		Ultra-capacitor, low-voltage		Fuel tank		Gas tank		Safety valve
	Battery, high-voltage		Power cable, high-voltage		Separator, high-voltage		Fuse box, disabling high-voltage system		Ultra-capacitor, high-voltage
	High-voltage separator to low voltage		Fuse box, disabling high-voltage to low voltage		High-voltage component		Fuel tank, petrol		



1. Identification / recognition



The electric motor is silent. The display on the left of the instrument cluster (power meter) indicates whether the electric drive is switched “OFF” or “READY” for operation.

Logo



Charging port



Engine compartment (orange cable)




2. Immobilization / stabilization / lifting

Immobilize the vehicle

Press the Park button “P” and apply the parking brake.



Lifting points

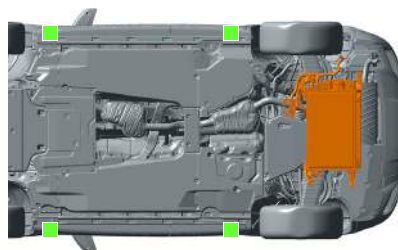


Suitable lifting points High-voltage battery

Turn off the ignition (power meter display “OFF”)



Press the START-STOP button without depressing the brake pedal.





3. Disable direct hazards / safety regulations

Deactivate the high voltage system



Option 1: Separation point in engine compartment

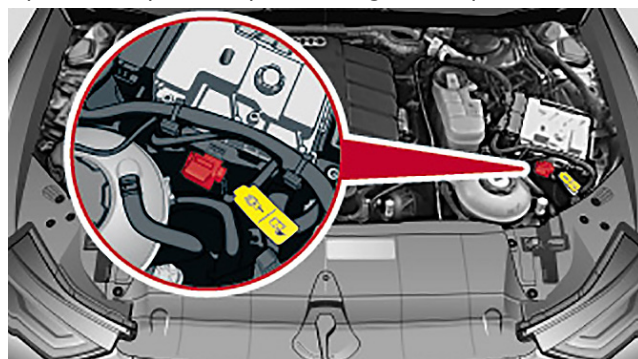

① Pull out red tab

② Pull out black connector





Audi A7 TFSI e

Sedan, as of 2019



Option 2: Fuse in passenger compartment



Fold the rear backrest forward and open the cover




Pull out fuse



Do not touch, cut or open high voltage components or the high-voltage battery. Wear suitable safety equipment.

In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated. The high-voltage system is de-energized approx. 20 seconds after deactivation.

Disconnect the 12-volt battery (in the trunk on the right-hand side of the vehicle)




Remove the cover



Disconnect the negative terminal



Separate from charging station (emergency release in the trunk on the left-hand side of the vehicle)



Remove the cover




Release the yellow loop from the retainer and pull it



Disconnect the charging connector



4. Access to the occupants

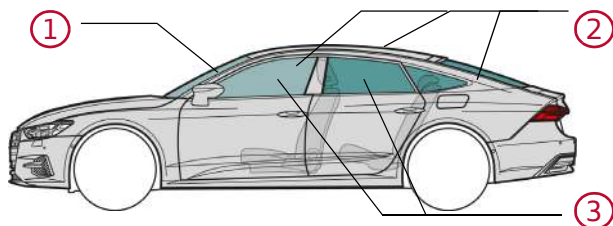

Glass types:

- ① Composite safety glass
- ② Single-layer safety glass
- ③ Side windows, optional Composite safety glass

5. Stored energy / liquids / gases / solids



400 V




52 l



12 V




There is a risk of a thermal reaction in the high-voltage battery if coolant escapes from the battery cooling system.
Monitor the temperature of the high-voltage battery.



6. In case of fire



Lithium-ion batteries can self-ignite spontaneously, sometimes several hours after an event causing damage or the result of incorrect use, and can re-ignite after a fire has been suppressed.
Wear suitable safety equipment.




7. In case of submersion

After recovering the vehicle from the water, deactivate the high-voltage system (see Section 3) and allow the water to drain off. Wear suitable safety equipment.

8. Towing / transportation / storage



Lithium-ion batteries can self-ignite, or re-ignite after a fire has been extinguished.



If the vehicle has been involved in an accident or if the HV battery is damaged or appears to be damaged: Deactivate the high-voltage system (see Section 3). Park the vehicle at a safe distance, at least 5 m, from buildings and other vehicles (quarantine area).



Do not tow a vehicle that has been involved in an accident on its drive axles.



9. Important additional information

10. Explanation of pictograms used



Flammable



Explosive



Caustic, skin irritant



Hazardous to human health



Environmental hazard



Petrol hybrid vehicle



Petrol vehicle



Warning High voltage



Caution, danger



Use lots of water to extinguish the fire.

LI ION


Lithium-ion battery




Dangerous voltage




Release the bonnet



Unlock luggage compartment



Use thermal infrared camera



Remove smart key