


**INFORMATION FOR THE FIRST AND  
SECOND EMERGENCY RESPONSE TEAMS  
EMERGENCY RESPONSE GUIDE FOR VEHICLE**

**Ferrari** \_\_\_\_\_  
**849**  
**Testarossa**



**Ferrari 849 Testarossa**  
**PHEV**  
from 2025 to -

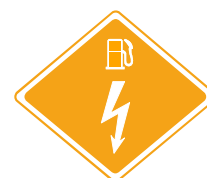

COPYRIGHT© 2025 - FERRARI S.p.A. -  
All rights reserved

Code no. 55064864  
Catalog no. 9080/25

Ferrari Technical Service Department  
Via Abetone Inferiore, 4  
41053 Maranello Modena - Italy

## CONTENTS



|                                                       |                |
|-------------------------------------------------------|----------------|
| <b>0. Rescue Sheet(s)</b>                             | <b>page 3</b>  |
| <b>1. Identification / recognition</b>                | <b>page 4</b>  |
| <b>2. Immobilization / stabilization / lifting</b>    | <b>page 4</b>  |
| <b>3. Disable direct hazards / safety regulations</b> | <b>page 6</b>  |
| <b>4. Access to the occupants</b>                     | <b>page 7</b>  |
| <b>5. Stored energy / liquids / gases / solids</b>    | <b>page 10</b> |
| <b>6. In case of fire</b>                             | <b>page 11</b> |
| <b>7. In case of submersion</b>                       | <b>page 12</b> |
| <b>8. Towing / transportation / storage</b>           | <b>page 12</b> |
| <b>9. Important additional information</b>            | <b>page 13</b> |
| <b>10. Explanation of pictograms used</b>             | <b>page 14</b> |

|             |              |          |
|-------------|--------------|----------|
| Version No. | Version date | Page No. |
| 01          | 11/2025      | 2/14     |

O. Rescue sheet(s)



**849**  
**Testarossa**  
**Ferrari 849 Testarossa**  
**PHEV**  
from 2025 to -

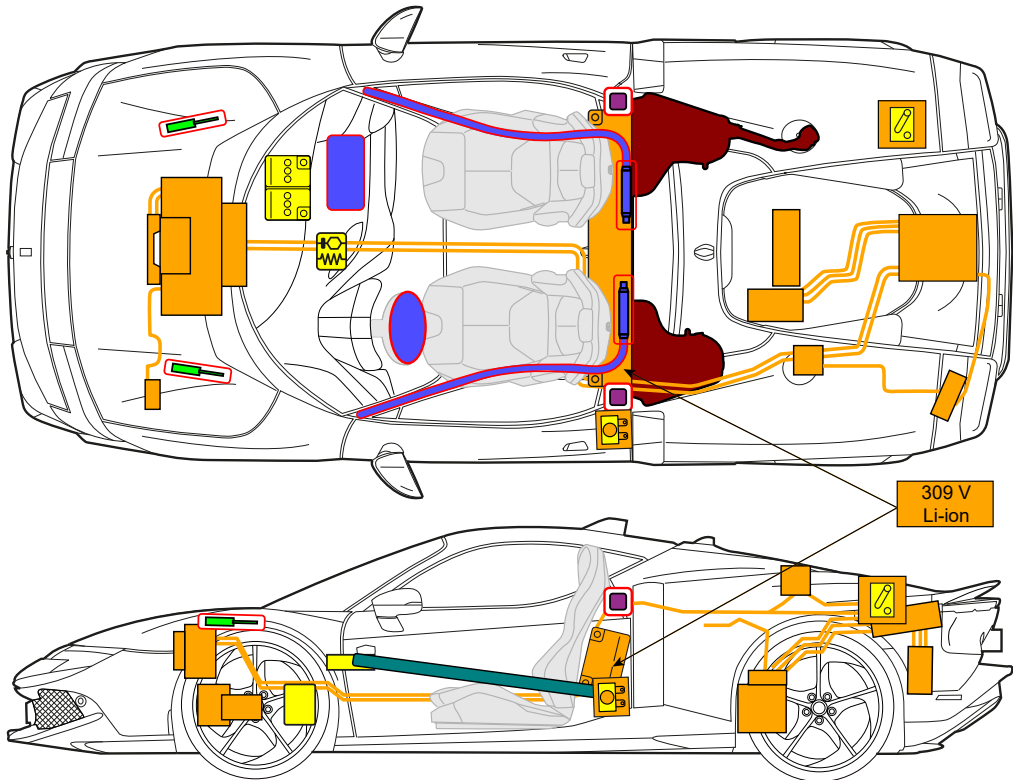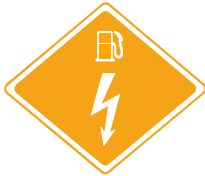

|  |                            |  |                                                  |  |                        |  |                                 |  |  |
|--|----------------------------|--|--------------------------------------------------|--|------------------------|--|---------------------------------|--|--|
|  | Airbag                     |  | Stored gas inflator                              |  | Seat belt pretensioner |  | SRS control unit                |  |  |
|  |                            |  | Gas strut / Preloaded spring                     |  | High strength zone     |  |                                 |  |  |
|  | Battery, low voltage       |  |                                                  |  |                        |  |                                 |  |  |
|  | Battery pack, high-voltage |  | High voltage power cable                         |  |                        |  | Fuse box disabling high voltage |  |  |
|  |                            |  | Low voltage device that disconnects high voltage |  | Fuel Tank              |  |                                 |  |  |

## 1. Identification / recognition

### ■ Position of model name



- **Power source:** Lithium ion batteries for the electric part and gasoline for the ICE part. The wording "HYBRID VEHICLE" under the V.I.N. number on the left hand side of the windshield indicates that the vehicle is equipped with a high voltage hybrid system.



The 849 Testarossa is equipped with a number of safety systems which have been designed to protect your safety. These features help to ensure safe access to the vehicle under various conditions.

However, whenever you have to intervene on a damaged hybrid vehicle which has been involved in an accident or fire or in rescue or recovery situations, always assume that the vehicle's high voltage system is powered up.

## 2. Immobilization / stabilization / lifting

### ■ Completely immobilize the vehicle:

If possible, stabilize the vehicle by applying the electric parking brake before deactivating the 12V electrical system: press the brake pedal firmly and pull the lever with symbol (P) on the dashboard to the left of the steering wheel.



- NEVER assume that the vehicle is turned off simply because it does not make a noise.
- NEVER touch the cables, connectors or high voltage system components with your bare hands.
- A failure to deactivate the high voltage system before performing normal emergency response procedures may result in serious burns or electrocution which can also be fatal.
- If you have to touch a high voltage system cable, connector or component, always wear suitable Personal Protective Equipment.



| Version No. | Version date | Page No. |  |
|-------------|--------------|----------|--|
| 01          | 11/2025      | 4/14     |  |



- **How to determine whether the vehicle is ON/OFF:**  
Check the instrument panel lighting



The vehicle can only be considered to be in KEY-OFF state if the engine is off and the message eD "READY" does NOT appear on the instrument panel.



- **Lifting points:**



Given the aerodynamic shape of the undertray, access to the support points for lifting is not easy: to lift the vehicle, we recommend contacting technicians with suitable equipment to work in complete safety.

If the vehicle has to be lifted following an accident or in order to perform emergency repair work, we recommend passing on the following information to the people who will be performing the work:

- Never lift the vehicle by pressing on the bottom of the high voltage battery. There is a risk of serious and even fatal injury.
- To lift the vehicle, use only the support points indicated below.

Failure to comply with the above may cause serious injury.





Be very careful when lifting the vehicle to avoid damaging the parts near the support points.



Never lift the vehicle using the support points near the high voltage battery which is in the central rear area.

To lift the vehicle, use the points shown in the figure.

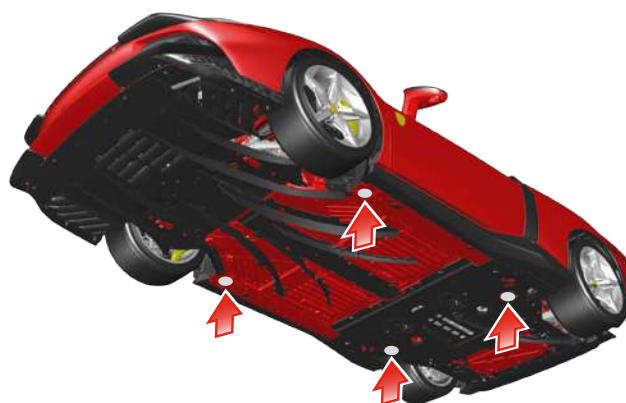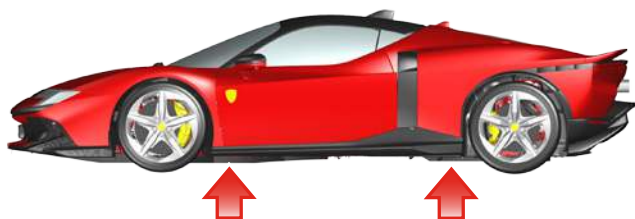

### 3. Disable direct hazards / safety regulations



When deactivated with the High Voltage (HV) service connector or by removing the low voltage fuse, the high voltage system does not discharge immediately. Wait at least 30 seconds before performing any work on the vehicle.  
Do not touch or cut any components. There is a risk of serious and even fatal injury.




To deactivate the high voltage system, do the following:



- Open the door on the driver side.
- If the vehicle is still running, perform a KEY-OFF.



The vehicle can only be considered to be in KEY-OFF state if the engine is off and the message eD "READY" does NOT appear on the instrument panel.




- Open the engine compartment lid by pulling release lever **A** on the driver side footrest.
- Lift the engine compartment lid and keep it raised.
- Release the end of the support rod **B** from the catch **C** on the right-hand side of the hood.
- Extend the support rod downwards and position its end in the designated slot on the chassis, as shown in the figure.
- Access the engine compartment.

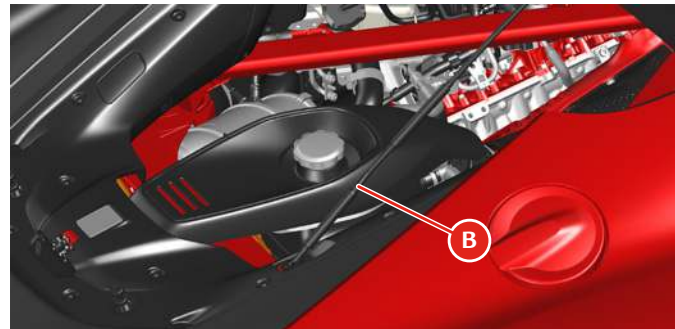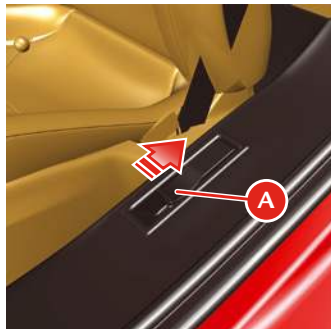

The procedure for deactivating the high voltage system with the High Voltage (HV) service connector must only be performed by technicians in possession of valid Ferrari High-Voltage Technician (F-HVT) certification, or other valid certification (issued by accredited organization) for working on hybrid/electric vehicles and high voltage systems, and who have the necessary equipment to operate in complete safety.



- Open the access cover on the right hand side of the engine compartment cosmetic shield, turning the screw counterclockwise by 1/4 of a turn as indicated in the figure.
- Go to the HV service connector and pull out the release device shown in the figure, as indicated on label (1) affixed to the chassis cross member near the cover.

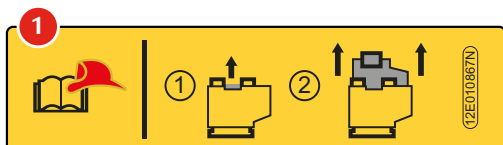

## ■ Alternative emergency procedure


If the HV connector is not accessible, follow the procedure described below:



The procedure for removing the low voltage fuse which deactivates the high voltage system must only be performed by technicians in possession of valid Ferrari High-Voltage Technician (F-HVT) certification, or other valid certification (issued by accredited organization) for working on hybrid/electric vehicles and high voltage systems, and who have the necessary equipment to operate in complete safety. Only follow this procedure if you cannot access the HV service connector in the engine compartment.



- Partially remove the trim panel behind the backrest, as shown in the figure.
- Remove the fuse shown in the figure with the label (2) affixed to it.

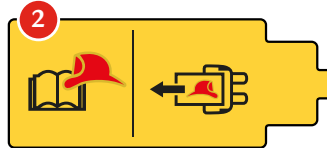

## 4. Access to the occupants



Do not cut, touch or work on the high voltage components. IF YOU DO, there is a real risk of even fatal injury.





Do not cut the hybrid system high voltage battery: There is a risk of serious and even fatal injury.



If vehicle components have to be removed, NEVER touch any of the high voltage system components or the high voltage cables. There is a risk of serious and even fatal injury.



### ■ High strength zone on bodywork

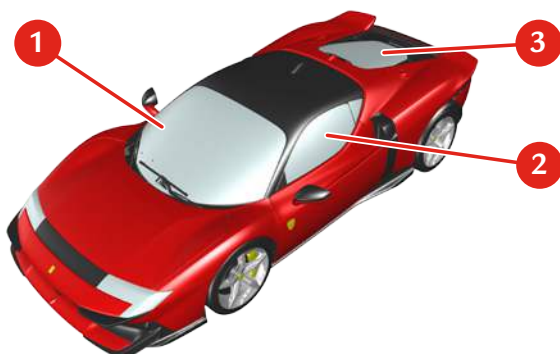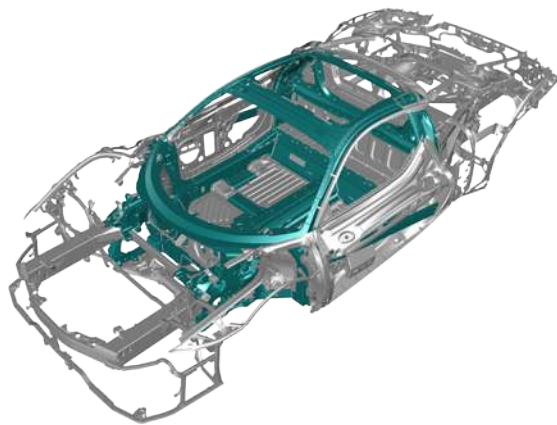

### ■ Zones NOT subject to cutting:

Do not cut the bodywork near the airbag and the high voltage system. See first page

#### ■ Windows:


- Laminated glass
- Tempered glass
- Tempered glass

#### Fiorano Pack

- Laminated glass
- Tempered glass
- Polycarbonate (Lexan)

#### ■ Type of bodywork:

Steel and aluminum and carbon fiber

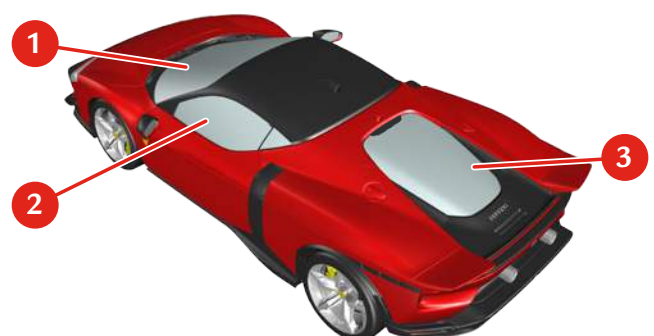





## ■ Seat adjustment:



The vehicle may be equipped with electrically adjustable seats. These can only function if the 12V battery is connected.





### Basic seat:

- **Back/forward adjustment**  
Move control 1 forward or backward to the desired position.
- **Seat back rake adjustment**  
Move control 2 forward or backward to set the required backrest rake angle.
- **Tilting the backrest**  
Pull lever 3 upwards and push the backrest towards the front of the vehicle.  
Returning the backrest to its original position will automatically lock it in place.

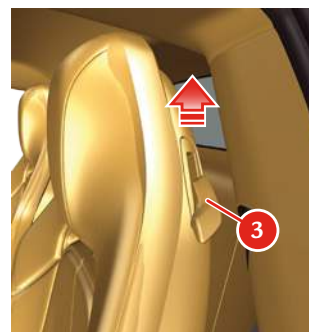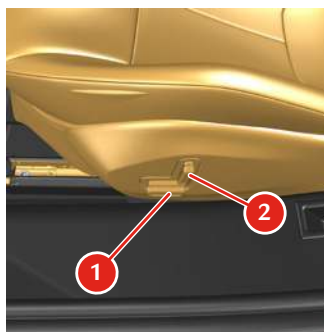

### Racing seat (optional)

- **Back/forward adjustment**  
Pull lever 4 **upward** and slide the seat forward or backward to the desired position. Release the lever and gently rock the seat back and forth to check that it is securely locked.
- **Seat back rake adjustment**  
Turn the knob 5 clockwise or counterclockwise to set the required backrest rake angle.
- **Tilting the backrest**  
To tilt the backrest, pull the strap 6 up and push the backrest toward the front of the car.  
Returning the backrest to its original position will automatically lock it in place.  
The height of the driver seat can be adjusted with control 7.

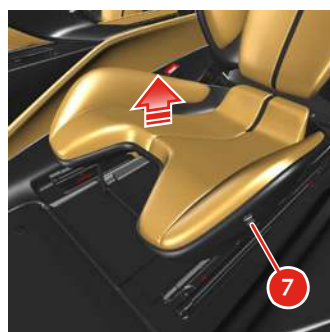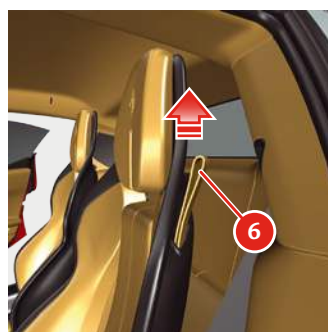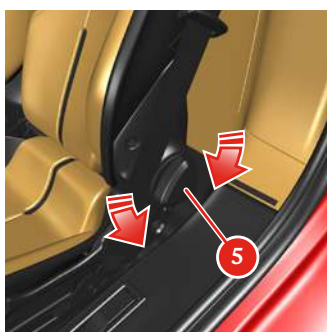
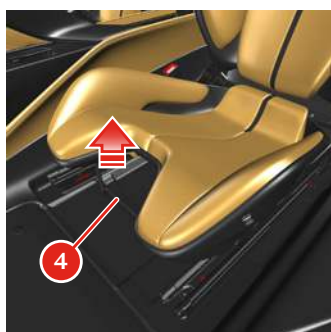


### Monocoque seat (optional – if available)

The monocoque seat (optional) is only available for vehicles equipped with four-point seat belts (optional).

- **Back/forward adjustment**  
Pull lever 8 **upward** and slide the seat forward or backward to the desired position. Release the lever and gently rock the seat back and forth to check that it is securely locked.
- **Seat back rake adjustment**  
Turn the knob 9 clockwise or counterclockwise to set the required backrest rake angle.

When tilting the backrest, use the knob without forcing when the end stop is reached. Also ensure that the backrest does not come into contact with the rear wall of the passenger compartment.

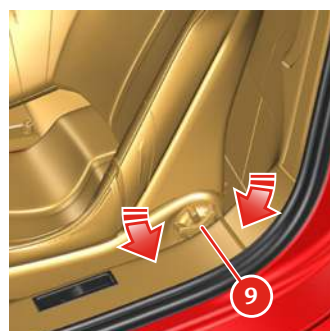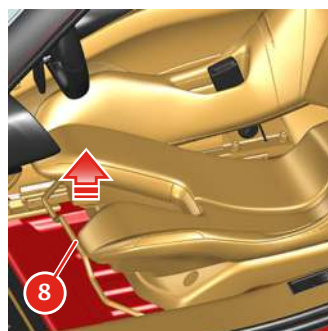

**NOTE:** Height adjustment of the Monocoque seat (optional) must only be performed by specialized technicians at the FERRARI SERVICE NETWORK.

|  | Version No. | Version date | Page No. |
|--|-------------|--------------|----------|
|  | 01          | 11/2025      | 8/14     |




### Full-electric seat (optional)

Three adjustments are possible using control **1**:

- fore/aft: move the control forward or backward;
- height: move the command up or down;
- seat cushion inclination (tilt); move the front or rear part of the control up or down to adjust the seat tilt.


Use control **2** to adjust the seat back rake angle. Push the control forward or backward to adjust the seat back rake.

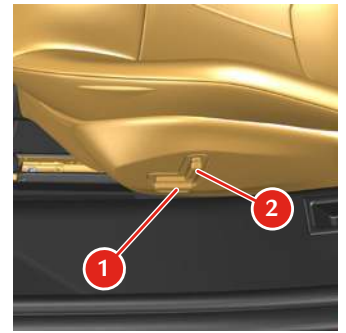

To tilt the backrest, pull lever **3** up and push the backrest towards the front of the vehicle. Returning the backrest to its original position will automatically lock it in place.

This seat is also electrically adjustable using the controls on the RH spoke of the steering wheel.

- To go to the adjustment screen, press and quickly release the "comfort" button (shown in the figure) and select the "Seat adjustments" screen.


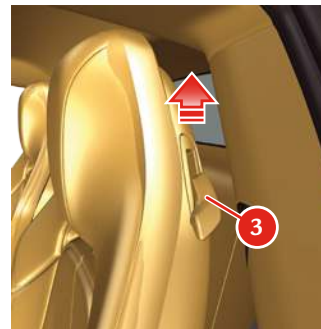


### ■ **Steering wheel adjustment:**

The steering wheel can be adjusted for rake and reach.

#### Mechanical adjustment

- Unlock (🔓) the lever shown underneath the steering column by pushing it toward the dashboard.
- Adjust the position of the steering wheel.
- Lock (🔒) the steering wheel by pulling the lever toward you until it locks into place.

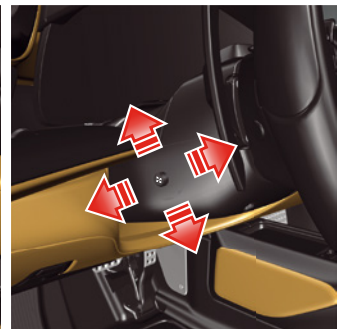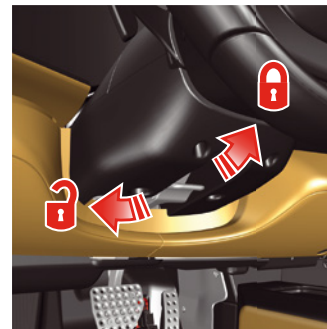




#### Electrical adjustment

- It can only be adjusted if the instrument panel is activated (KEY-ON).
- Move the button to the left of the steering column in the four directions to adjust the steering wheel.
- The steering wheel position is memorized, together with the position of the external side-view mirrors, when the seat position is stored.

| Version No. |  | Version date | Page No. |
|-------------|--|--------------|----------|
| 01          |  | 11/2025      | 9/14     |

- **Auxiliary occupant protection systems:**
  - 3-point driver and passenger seat belt (with pretensioner and an automatic system that reduces the force applied to the occupant);
  - 4-point driver and passenger seat belt (with load limiting device) - (optional - if available);
  - dual stage driver-side front airbag;
  - dual stage passenger-side front airbag;
  - driver-side lateral head protection airbag
  - passenger head protection lateral airbag (head bag);

- passenger seat with occupant classification sensor (available for US and Canada markets);
- Seat with built-in headrest;
- electronic control unit (ECU);
- additional sensors;
- airbag system failure warning light;
- body with crumple zones.

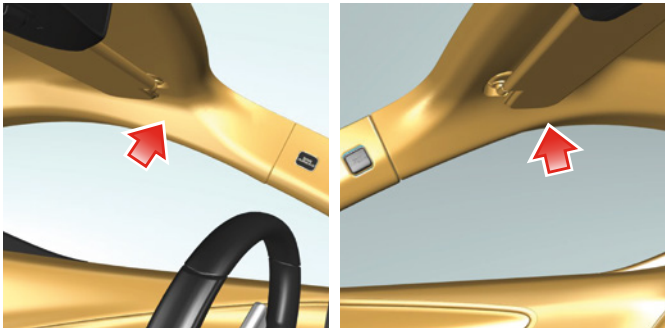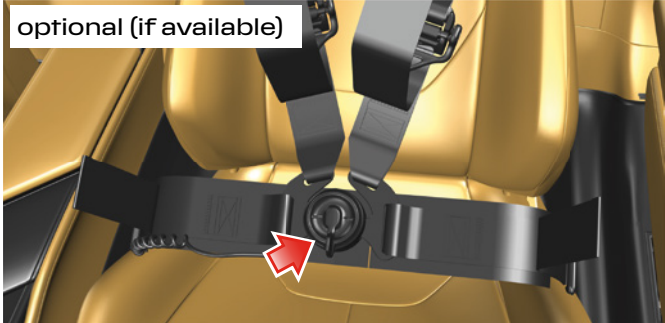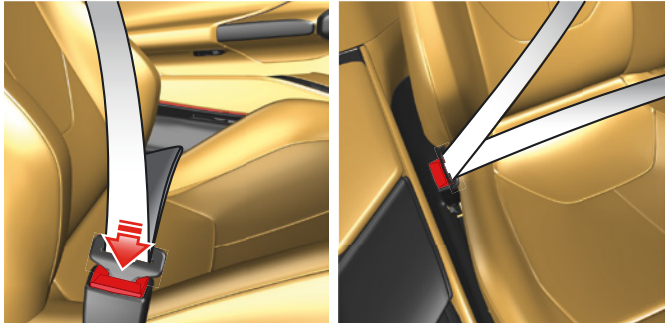

## 5. Stored energy / liquids / gases / solids

|                                                                                                              | Capacity                  | Hazard                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|--------------------------------------------------------------------------------------------------------------|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 12 V LI ION battery<br>   | 40 Ah                     |                                                                                                                                                                               |
| 309 V LI-ION battery<br>  | 26.2 Ah                   |      |
| A/C system<br>            | (R-1234yf)<br>1100 ± 20 g |                                                                                                                                                                               |
| Front Airbag Inflator<br> | -                         |                                                                                                                                                                                                                                                                                                                                                         |
| Side Airbag Inflator<br>  | -                         |                                                                                                                                                                                                                                                                    |

|                                                                                                | Capacity        | Hazard                                                                                                                                                                  |
|------------------------------------------------------------------------------------------------|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Fuel Tank<br> | 18 US Gal (68l) |   |

- Under normal conditions of use, the battery poses no risk of exposure to its contents.
- In addition to the conventional 12V electrical system, the vehicle is equipped with a 353 V high-voltage system. High voltage is extremely dangerous and may cause serious burns and a violent electric shock which can result in serious or fatal injury. The high voltage electrical system and high voltage battery are dangerous and may cause burns, other serious injuries or death. Never attempt to remove or tamper with the high voltage cables (with orange covering), the high voltage battery, connectors or any other component in the high voltage electrical system, especially if it appears to be damaged.
- Electrolyte or battery acid is corrosive. Avoid contact with skin, eyes or clothing. Wear appropriate protective clothing. Specifically, wear protective gloves, an apron and face protection. In case of contact, rinse any splashes of electrolyte or acid off immediately with clean water. Seek immediate medical attention.
- Do not inhale any gases produced by the battery.
- The following safety measures must be observed when handling the battery.
  - Do not immerse the battery in liquids.
  - Do not expose the battery to temperatures of over 122°F: do not incinerate the battery.
  - Do not allow the internal temperature of the battery to drop to below -40 °F.
  - Short circuits and physical damage are the most common causes of malfunction when handling the battery.
  - Appropriate PPE (personal protective equipment) (e.g., nitrile gloves and eye protection) must always be worn when handling the battery.
  - Metallic jewelry (e.g., rings, bracelets, watches, necklaces, etc.) that may come into contact with the metal parts of the battery should be removed or covered with a non-conductive material; keep all non-essential metal objects away from the battery and take care when using metal objects such as tools in the vicinity of the battery.
  - Never touch a damaged battery.
- Exposure to high voltage components can cause electric shock and burn injury or even death. These components may only be repaired by technicians with specific training on working with high voltage systems.
- DO NOT tamper with the high voltage battery. DO NOT remove the screws on the battery or the high voltage protection guards. DO NOT dismantle the high voltage battery.
- The battery pack cover must not be broken or removed under any circumstances, including fire. This may cause severe electrical burns, electric shock or electrocution.

6. In case of fire




Use large amounts of water

In the event of a fire, immediately contact the fire emergency responders and follow the steps below to start to extinguish the fire.  
If it is not possible to apply large amounts of water to the high-voltage battery, it is recommended to allow the battery fire to extinguish itself.



HIGH VOLTAGE BATTERY:  
RE-IGNITION IS POSSIBLE!



## ■ Vehicle fire extinguisher (optional)



Never use sea water or salt water.



When using the fire extinguisher, keep a safe distance from the flames.  
To use the extinguisher, follow the instructions written on it.



If the fire is limited in size, a powder-based fire extinguisher suitable for extinguishing class A, B, C fires caused by electrical cables or components, etc. or oil may be used.



## 7. In case of submersion



If the vehicle is immersed completely or partially in water, do not touch any high voltage system cables, connectors or components.



Normally, contact with the bodywork of a hybrid vehicle submerged in water does not pose a high voltage risk and normal extrication procedures can therefore be performed and the vehicle safely moved by following these recommendations:

- remove the vehicle from the water;
- if possible, let the water drain out of the vehicle;
- follow the procedures for stabilizing the vehicle and deactivating the high voltage system.

## ■ See Section 3.

## 8. Towing / transportation / storage



### ■ Transport




Towing the vehicle is not permitted. Towing can cause serious damage to the vehicle and the high voltage hybrid system.



The tow hook supplied with the vehicle may only be used in an emergency to load the vehicle onto a recovery truck or flatbed trailer.



**HIGH VOLTAGE BATTERY:  
RE-IGNITION IS POSSIBLE!**





## ■ Towing



To tow the vehicle onto a recovery vehicle, avoid using anchor points that are not designed for the tow hook inserted in the housing on the front bumper.




Do not use the levers, suspension and wheel rims but only the tow hook properly fitted in place.

1. take the tow hook out of the tool bag;
2. make sure that the area is free of dirt and tightly screw the tow hook into the housing on the RH side of the front bumper which can be accessed by removing the external protective cap shown by the arrow;
3. if it is not engaged before KEY-OFF, release the parking brake (EPB) by pulling the lever on the dashboard and pressing the brake pedal.



Maximum angles of tow of the tow hook in the two tow levels: 25° and 5°.

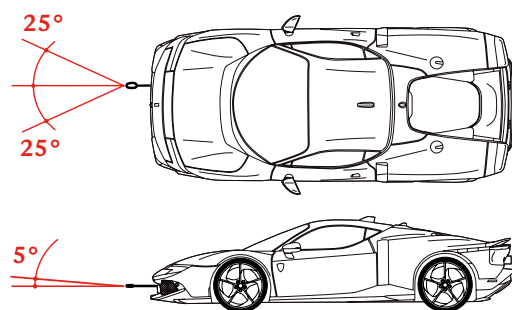

If there is an electrical system failure, release the electric parking brake (EPB) and Park Lock manually.

If the electrical system is still working, perform a KEY-OFF before towing.

Only if necessary and if the electrical system is still working, leave the instrument panel on (KEY-ON) to enable the lights to work; when towing the vehicle, do not attempt to start the engine.



Please note that with the engine turned off, the brake system is not fully functional.



When towing the vehicle, you must comply with Road Regulations.

## 9. Important additional information




### ■ Auxiliary occupant protection systems:

See Section 4

### ■ Service:

Make sure that all maintenance work and inspections are performed by the FERRARI AUTHORIZED NETWORK. FERRARI recommends contacting an Authorized Ferrari Dealer, available on the official FERRARI website (<https://www.ferrari.com>).

10. Explanation of pictograms used

|                                                                                   |                                                                   |                                                                                   |                                        |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------|-----------------------------------------------------------------------------------|----------------------------------------|
|  | Safety-related information: General warning sign                  |  | Risk of flammability                   |
|  | Risk of electrocution                                             |  | Risk of explosion                      |
|   | Warning: Low temperature                                          |  | Risk of acute toxicity                 |
|  | ABC fire extinguisher                                             |  | Hazardous to human health              |
|  | Use water to extinguish the fire                                  |  | Risk of corrosive substances/materials |
|   | Air conditioning component                                        |  | Risk of gases under pressure           |
|   | Open the luggage compartment lid                                  |  | Open the engine compartment lid        |
|  | To indicate that an infrared camera must be used to detect a fire |                                                                                   |                                        |