




Lightning eMotors Class 3, 80-kWh Bus Door T-350 HD Platform 2016-20XX

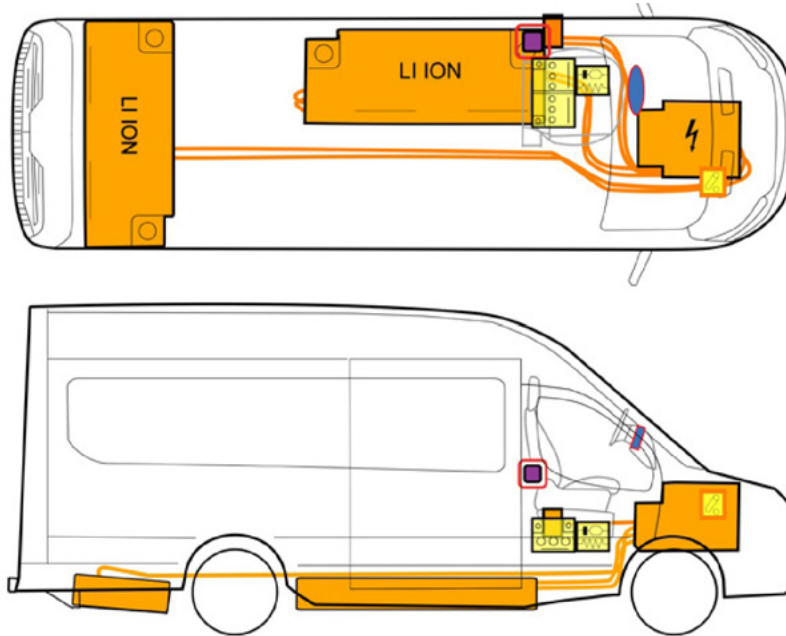

Top View

	Airbag		Battery, low voltage		Seat belt pretensioner		SRS control unit
	Battery, high voltage		High-voltage power cable		Low voltage disconnect to high voltage		Dangerous high voltage

1. Identification / recognition



The electric motor is silent. Vehicle movement is capable until vehicle is fully shut down.



Additional Information

Major electrical design is consistent across body variations.

Document Number

OPS-F-028

Version

R1

Page

1 of 4




2. Immobilization / stabilization / lifting

Immobilize the vehicle

Apply parking brake
Put vehicle in Park
Turn off vehicle



Jacking points

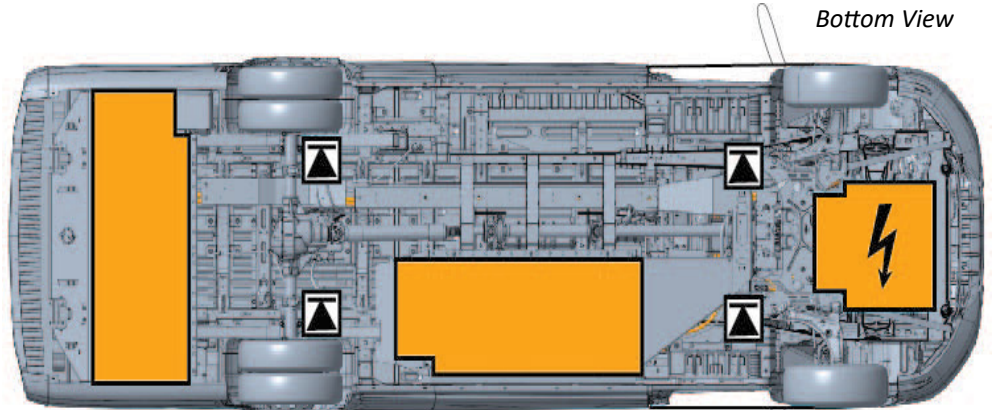

Bottom View

Jacking points

HV components

3. Disable direct hazards / safety regulations




Do not touch, cut, or open high-voltage components and batteries.

Method 1 - Preferred

Step 1: Turn off ignition.



Step 2: Disconnect negative terminal from 12V battery.

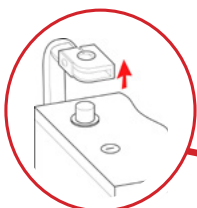

Method 2 - If Method 1 cannot be completed

Step 1: Remove connector if possible, otherwise cut wire in location shown.



Step 2: Disconnect negative terminal from 12V battery.
(See Method 1, Step 2)



Lightning eMotors Class 3, 80-kWh Bus Door T-350 HD Platform 2016-20XX

Method 3 - If Methods 1 and 2 cannot be completed


Step 1: If possible, turn off ignition.

Step 2: If possible, disconnect negative terminal from 12V battery. (See Method 1, Step 2)

Step 3: Remove Manual Service Disconnects (MSD) from all batteries.




MSD

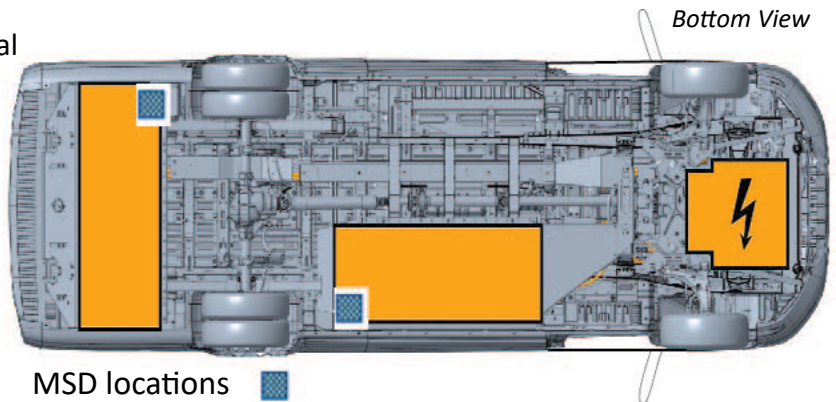

Bottom View

MSD locations

4. Access to occupants

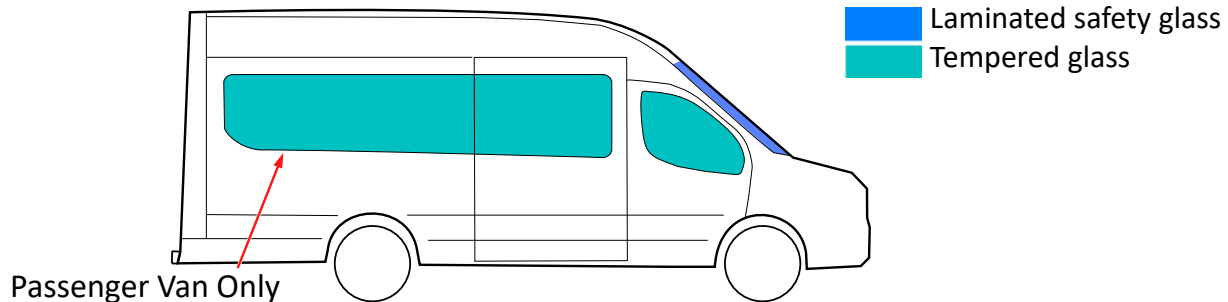


Passenger Van Only

5. Stored energy / liquids / gasses / solids

350V



12V



There is an increased risk of a thermal reaction in the high-voltage battery if there is a significant loss of coolant. Monitor temperature of the high-voltage batteries using an infrared camera.

6. In case of fire

Use copious amounts of water directly on high-voltage battery to extinguish fire.



Damaged lithium-ion batteries may re-ignite after the fire is extinguished. Monitor temperature of the high-voltage battery using an infrared camera.



7. In case of submersion

If possible, turn the ignition off in a submerged vehicle to disable the high-voltage system.


No other disabling activities are to be attempted.

Immobilize the vehicle, allow it to dry, and then perform disabling steps in Section 3.



Submerged vehicles pose an increased risk for producing secondary fire events (re-ignition).

8. Towing / transportation / storage

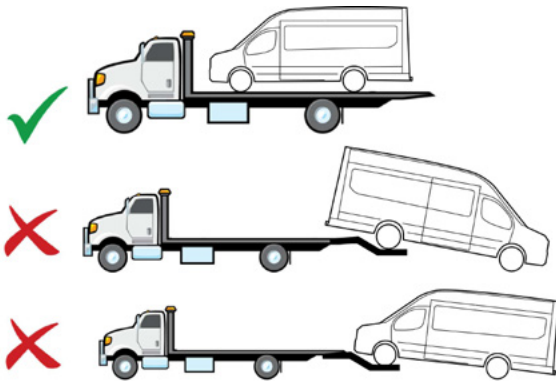

1. Deactivate high-voltage system (see Section 3).

2. Perform an inspection for evidence of active fire or smoldering. Visual or audible clues include gurgling, bubbling, popping, crackling or hissing noises.

3. Confirm high-voltage batteries are not rising above ambient temperature using an infrared camera.

4. Load vehicle for transport.

5. Park vehicle outdoors at least 50 feet from buildings or other vehicles.



Damaged lithium-ion batteries may re-ignite after the fire is extinguished.
Use infrared camera to confirm battery temperature is not rising above ambient before towing.



9. Important additional information

10. Explanation of pictograms used



Flammable



Explosive



Hazardous to
human health



Environmental
hazard



Acute toxicity



General
warning



Use lots of
water to
extinguish fire



Lithium-ion
battery



Corrosive



High-voltage
warning



Use infrared
camera



Jacking
points