
LINCOLN

LINCOLN Corsair Hybrid

2027

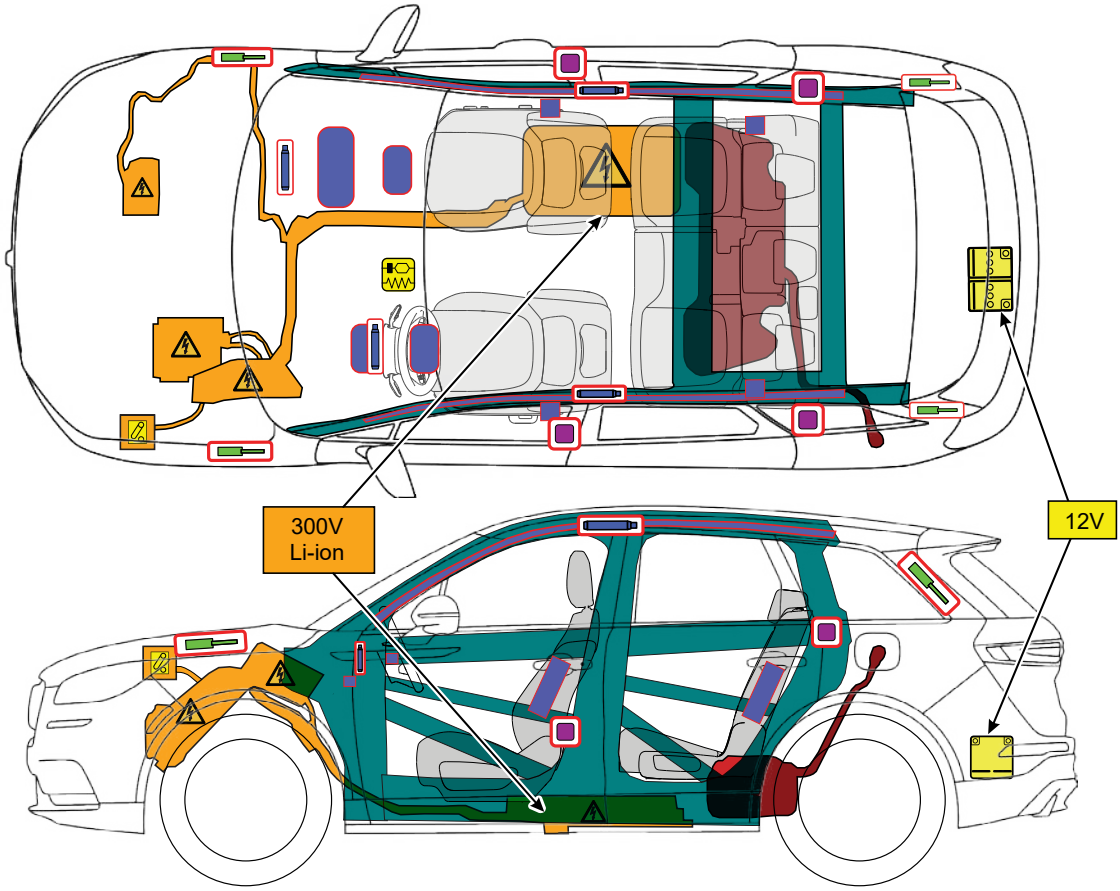





Airbag

Structural Reinforce-ments

Control unit

High-voltage battery

High-voltage disconnection point

Gas generator

Gas filled spring device

Battery

High-voltage wire / components

Seat belt tensioner

Fuel tank Gasoline

High-Voltage component

CPR © 2026 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
07/2026

VERSION:
Lincoln_Corsair_Hybrid_2026_07_v01

LINCOLN Corsair Hybrid

2027

For more detailed information, please refer to the full Corsair Hybrid Emergency Response Guide.

1. Identification / recognition

HYBRID VEHICLES MAY NOT HAVE ENGINE NOISE. LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.




1. Vehicle Identification Number (VIN) 8th position identifies the engine type
   - Need to verify VIN
2. Blue Lincoln badging. (Not available on all vehicles)


2. Immobilization / stabilization / lifting

IMMOBILIZATION

1. Position wheel and tire chocks
2. Put vehicle into PARK position (1). Check that the vehicle ready light (2) is off.
3. Shut vehicle off with the push button. Remove the key or PAAK (Phone As A Key) from the vehicle to prevent vehicle from turning back on.

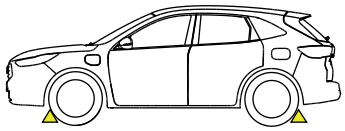



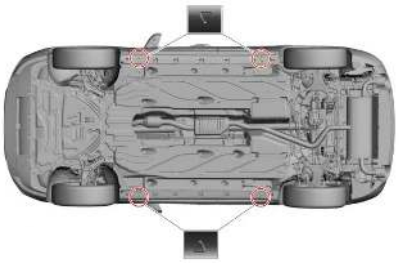



3. Disable direct hazards / safety regulations

Under Non-urgent situations refer to, "Non-urgent situations" in the Emergency Response Guide.

Deactivate the high-voltage system.

1. Cut the wires adjacent to the Low Voltage Service Disconnect. Isolate the wires to prevent reconnection.

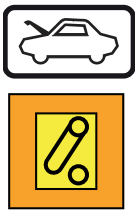

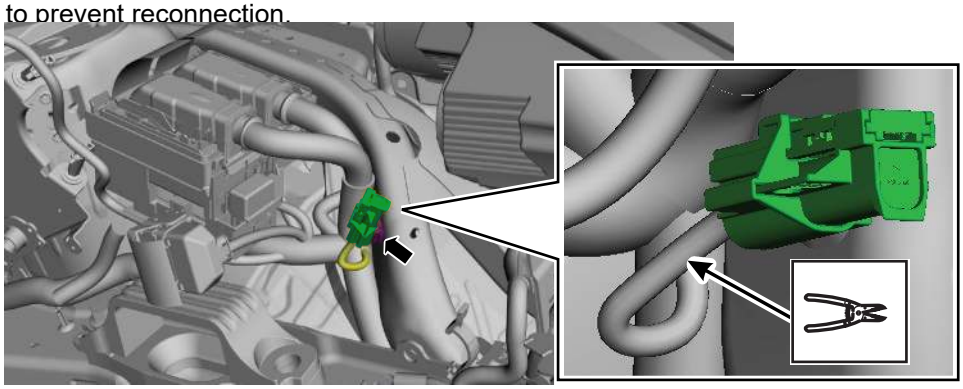

CPR © 2026 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
07/2026




VERSION:
Lincoln_Corsair_Hybrid_2026_07_v01

LINCOLN Corsair Hybrid


2027

12-Volt Battery Disconnect - Disables Safety Restraint System


1. Remove the rear compartment cover.
2. Remove the nuts and rear floor storage bin..
3. Locate and cut the negative battery cable to ground at two locations 3 in (7.6 cm) apart from each other. Isolate cable to prevent reconnection.

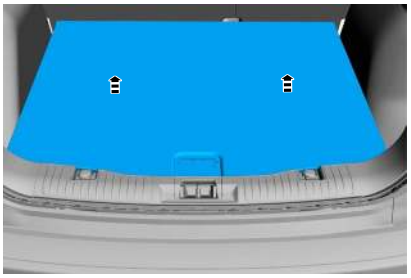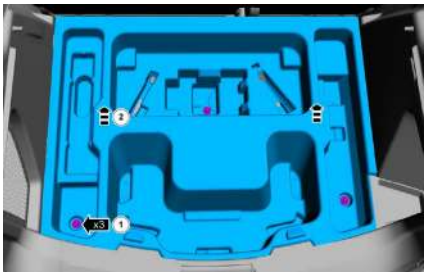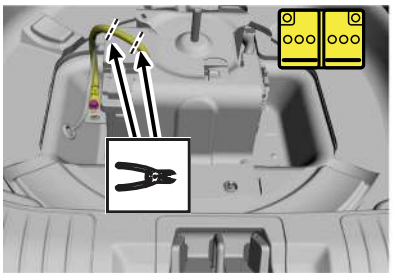4. Access to the occupants

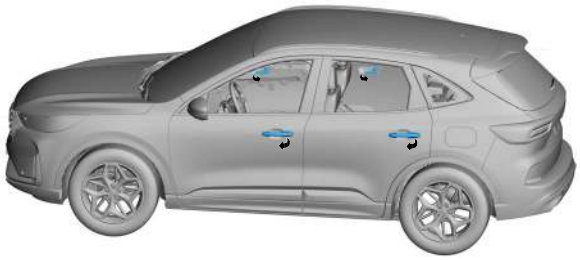

① Laminated Safety Glass
② Tempered Safety Glass

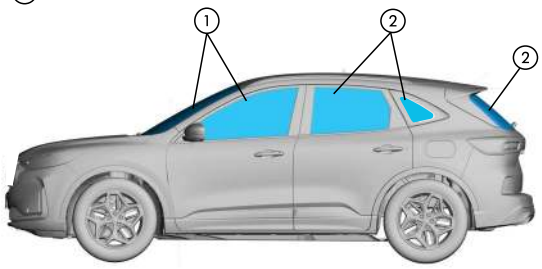

5. Stored energy / liquids / gases / solids



12 V



300 V

Refer to the vehicle overview illustration on Page 1 for location reference of the high voltage battery, 12-volt battery, gas tank, and other vehicle component locations.

6. In case of fire



LITHIUM-ION BATTERIES CAN IGNITE SPONTANEOUSLY OR RE-IGNITE AFTER THE FIRE HAS BEEN EXTINGUISHED.
WEAR APPROPRIATE PPE.



CPR © 2026 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
07/2026

VERSION:
Lincoln_Corsair_Hybrid_2026_07_v01

LINCOLN Corsair Hybrid

2027

For more detailed information, please refer to Section 9 to access the full Corsair Hybrid Emergency Response Guide.


7. In case of submersion

After removing the vehicle from the water, deactivate the high-voltage system (See Section 3) and allow the water to drain.
Wear appropriate PPE.

8. Towing / transportation / storage

LITHIUM-ION BATTERIES CAN IGNITE SPONTANEOUSLY OR RE-IGNITE AFTER THE FIRE HAS BEEN EXTINGUISHED.
WEAR APPROPRIATE PPE.

If the vehicle has been involved in an accident or if the HV battery is damaged or unstable:
Deactivate the high-voltage system (See Section 3).
Do not store a severely damaged vehicle inside a structure or within 50 ft (15m) of any structure or vehicle.



9. Important additional information

For specific information and safety preparation regarding the High Voltage system, refer to: https://www.motorcraftservice.com, select Free Resources>Quick Guides>Reference Guides for the appropriate vehicle emergency response guide.

For First Responder Resources, refer to https://www.ford.com/firstresponder/

© Copyright 2026, Ford Motor Company. All rights reserved. This document may be reproduced in its entirety and distributed for emergency responder use only. It may not be excerpted for any purpose.

10. Explanation of pictograms used

