INFORMATION FOR FIRST AND SECOND RESPONDERS

EMERGENCY RESPONSE GUIDE FOR VEHICLE

ECLIPSE SPORTBACK



ELECTRIC

2027 Model year






Version:1.0

Emergency Response Sheet

ECLIPSE SPORTBACK Battery Electric Vehicle
4 doors / 5 seats / Hatch Back
(2026 -)



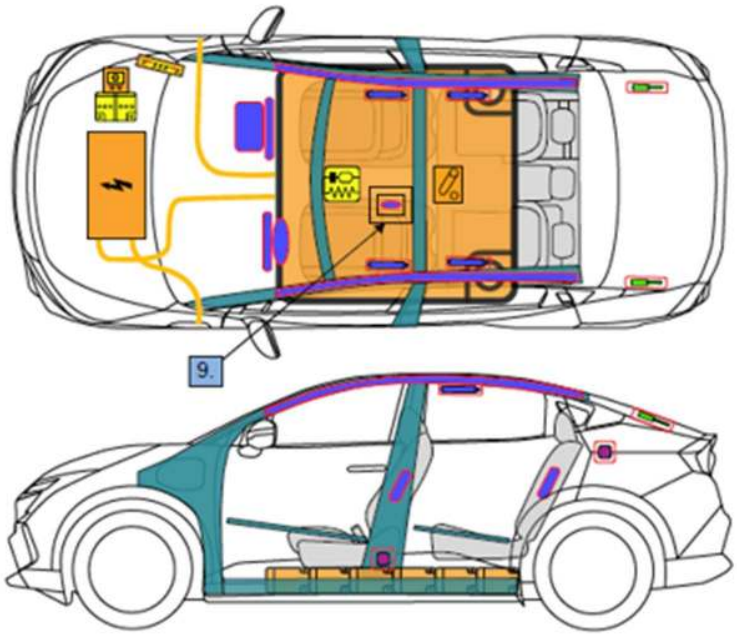

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Gas strut / Preloaded spring
	High strength zone		Battery low voltage		Fuse box disabling high voltage system		High voltage Power cable component		
	High voltage battery pack		High voltage disconnect		Zone requiring special attention		Ultra capacitor, low voltage		Ultra capacitor, high voltage

ID No.	Version No.	Version Date.	Page
DEA-NNRS-EN01	01	06/2026	1

Ⓒ MITSUBISHI MOTORS CORPORATION. All rights reserved.

Table of Contents

0. Rescue sheet(s) ERG–2

1. IDENTIFICATION / RECOGNITION ERG–5

1-1 About MITSUBISHI ECLIPSE SPORTBACK 05
1-1.1 Exterior 05
1-1.2 Interior Component Location 07
1-1.3 Vehicle Identification Number (VIN) Layout 08
1-1.4 Warning and Indicator Lamp Information 09
1-1.5 High-Voltage-Related and 12-volt-Related Component Locations and Descriptions 10
1-1.6 High-Voltage Safety Measures 13
1-1.7 High-Voltage Circuit Shut-Off System 15
1-1.8 Preventing Electrical Shock 15
1-1.9 Emergency Medical Equipment 15

2. IMMOBILIZATION / STABILIZATION / LIFTING..... ERG–15

2-1 Emergency Response Steps 15
2-2 Preparation Items 16
2-2.1 Personal Protective Equipment (PPE) Protective Wear Control 17
2-2.2 Daily Inspection 17
2-2.3 Insulated Tools 17
2-3 Vehicle Immobilization and Stabilization 17

3. DISABLE DIRECT HAZARDS / SAFETY REGULATIONS..... ERG–19

3-1 How to Handle a Damaged Vehicle at an Accident Scene 19
3-2 High-voltage System Shut-Down Procedures 21
3-2.1 Removing the Charge Connector 22
3-2.2 Indications the High-voltage System is ON 25
3-2.3 Powering Down the High-voltage System 25
3-2.4 Primary Procedure 26
3-2.5 Alternate Procedure 1 (Cable cut) 28
3-2.6 Alternate Procedure 2 (Remove Service Plug) 30

4. ACCESS TO THE OCCUPANTS ERG–33

4-1 Accessing the Occupants 33
4-2 Cutting the Vehicle Body 37
4-2.1 SRS Air Bag System Components Location 37
4-2.2 Plastic Parts Locations 39
4-2.3 Vehicle Cut Sheet 40
4-2.4 High Strength Steel Locations Vehicle 41

5. STORED ENERGY / LIQUIDS / GASES / SOLIDS ERG–42

5.1 General Fluid Spills and Gas Leaks 42
5-1.1 Fluids and gases used in this vehicle 42
5-1.2 Gas leaks 42
5-2 Components Requiring Special Attention 42
5-2.1 Low-voltage Battery 42
5-2.2 High-voltage Battery 43

6. IN CASE OF FIRE..... ERG –44

6-1 Vehicle Fire 44
6.1.1 Fire Extinguishing 44
6-1.2 Use a thermal imaging camera 45
6-1.3 Gas strut - Risk of missile effect 46

7. IN CASE OF SUBMERSION ERG–47

7-1 Water Submersion 47

8. TOWING / TRANSPORTATION / STORAGE ERG–48

8-1 Roadside Assistance 48
8-1.1 Jump Starting 50
8-1.2 Electric Parking Brake Release Procedures 51
8-1.3 P (Park) Position Release Procedure 52
8-1.4 Towing 54
8-1.5 Storing the Vehicle 57
8-1.6 Tools Installed in The Vehicle 57
8-1.7 Jacking Up the Vehicle and Changing a Tire 57
8-1.8 Repairing a Flat Tire with “MITSUBISHI MOTORS” Emergency Tire Puncture Repair Kit 59
8-2 Storing the Vehicle 64
8-2.1 Sign Example 64
8-2.2 Preparation Items 66
8-2.3 Removing the Service Plug 67
8-3 Preparation for Dismantling 70
8-3.1 Discharging Procedures 70
8-3.2 Preparation Items 73
8-3.3 Personal Protective Equipment (PPE) and Insulated Tools 74
8-3.4 High-voltage System Shut-Down Procedures 74
8-4 Dismantling Information 75
8-4.1 Precautions for Handling High-voltage Battery 77
8-4.2 High-voltage Battery Pack Removal 78

9. IMPORTANT ADDITIONAL INFORMATION ERG–96

9-1 Recovery/Recycling of the High-voltage Battery 96

10. EXPLANATION OF PICTOGRAMS USED ERG–97

10-1 Explanation of Pictograms Used 97

1. Identification / Recognition


1-1 About The MITSUBISHI ECLIPSE SPORTBACK


This vehicle uses two types of batteries. One is a 12-volt battery that is the same as the battery in vehicles powered by internal combustion engines, and the other is the high-voltage battery for the traction motor which propels the vehicle. The high-voltage battery is encased in steel and mounted underneath the vehicle.

The vehicle must be plugged-in in order for the high-voltage battery to be recharged. Additionally, the vehicle system can recharge the high-voltage battery by converting driving force into electricity while the vehicle is decelerating or being driven downhill. This is called regenerative charging. This vehicle is considered to be an environmentally friendly vehicle because it does not emit exhaust gases.

1-1.1 Exterior

The specific exterior identification features are indicated as follows:

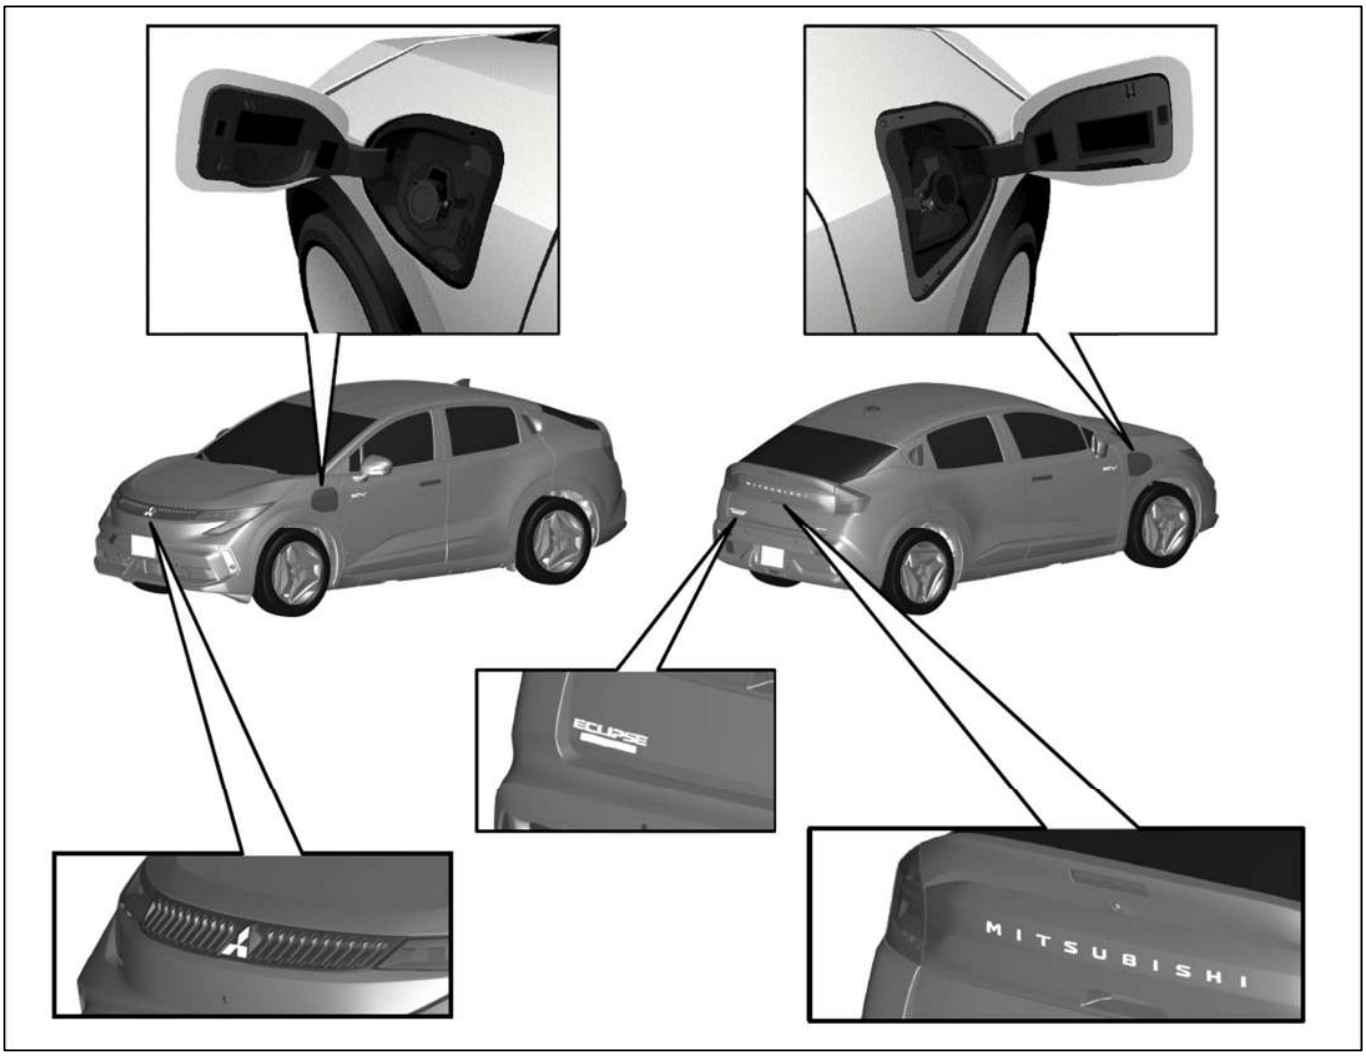

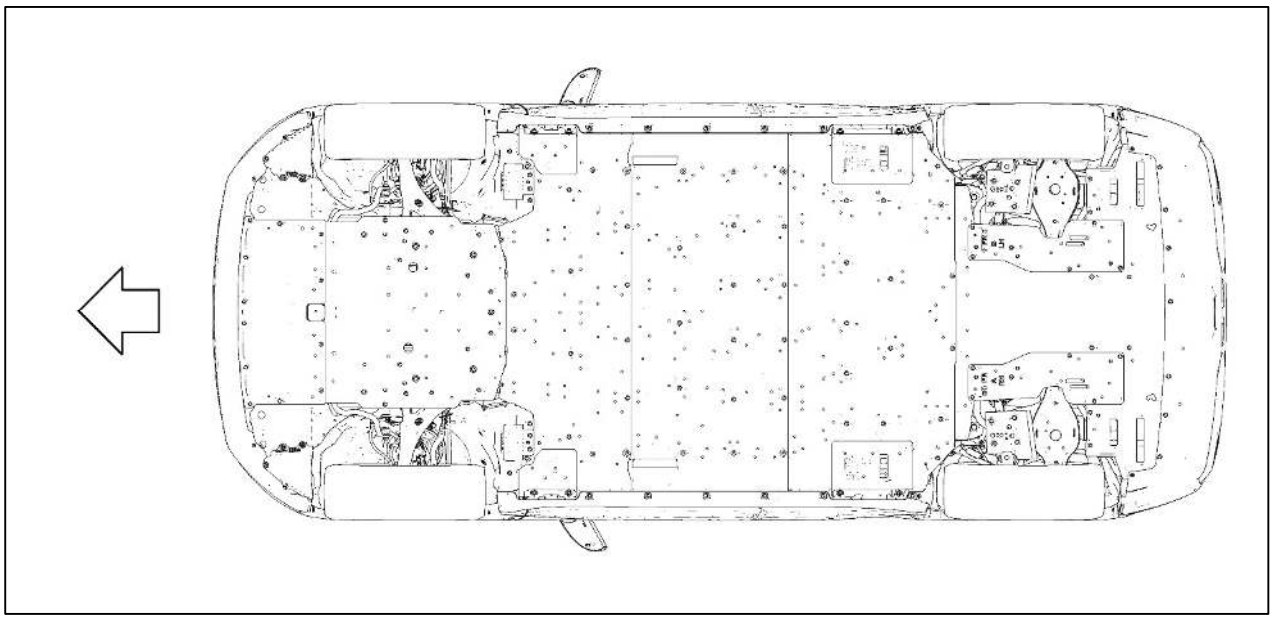


- No tail pipe.
- Plastic shields cover entire under side.
- No exhaust system components.

⇦ : Vehicle front.

1-1.2 Interior Component Location

Interior components referenced in this manual are as follows:

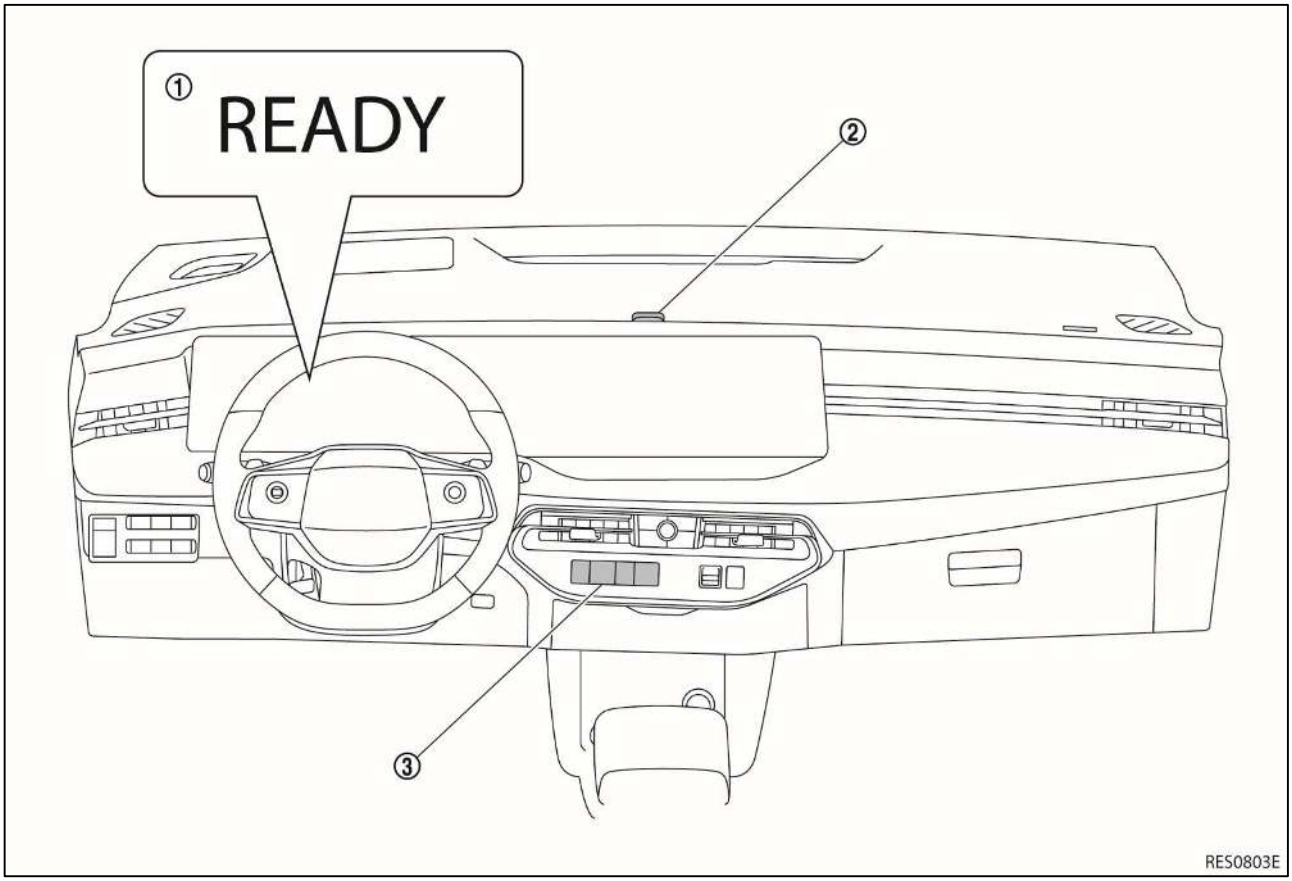

1. READY indicator
2. Charging status indicator
3. Shift buttons


1-1.3 Vehicle Identification Number (VIN) Layout

The vehicle identification number can be located as follows:
Example VIN : JN1 **A**Z2BAXTM000000

The High-voltage battery type is identified by the 4th alphanumeric character: **A**

The ECLIPSE SPORTBACK is identified by the 5th and 6th alphanumeric character: **Z2**

Z2 = Model code

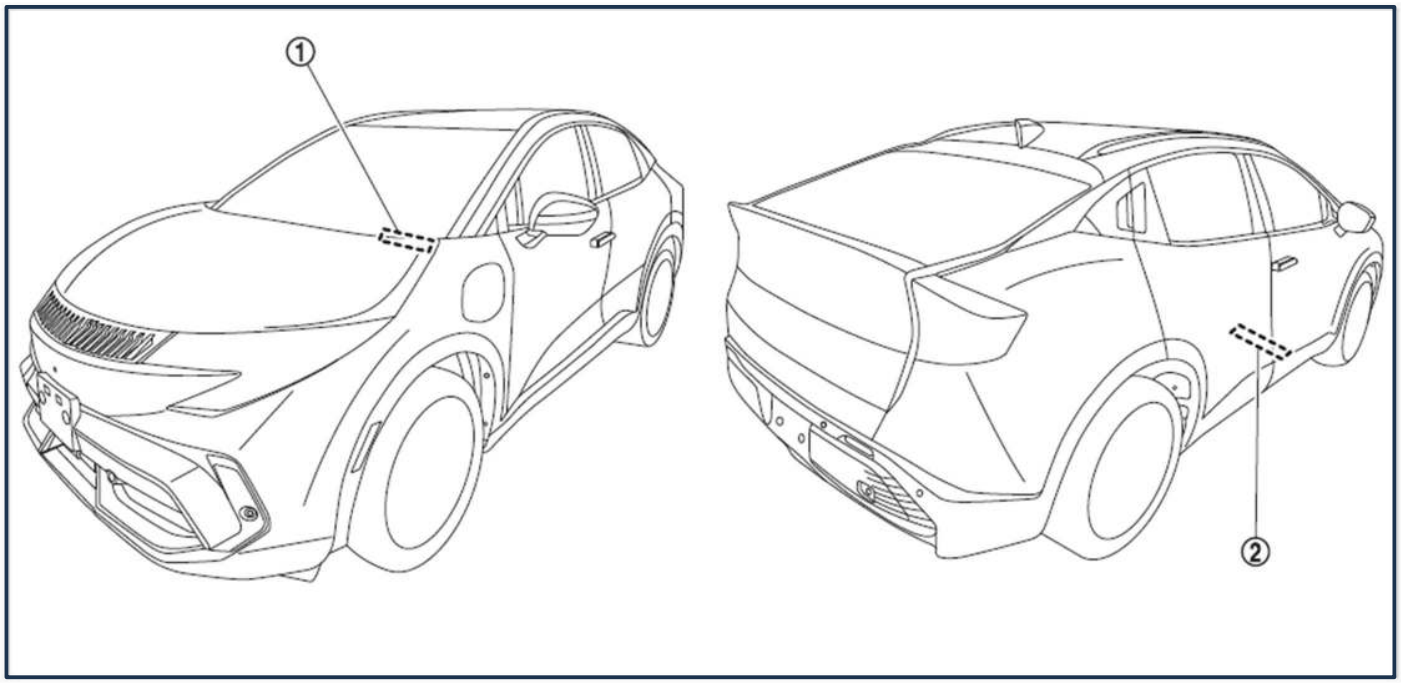

1. VIN plate (visible through windshield)
2. Vehicle identification number (Chassis number)


1-1.4 Warning and Indicator Lamp Information

The following warning and indicator lamps are located in the instrument cluster.

Lamp Name	Icon	Description
READY Indicator		This lamp is on when the EV system is powered up and the vehicle is ready to drive.
EV System Warning Lamp*1		• Malfunction has occurred in the EV system and/or • Emergency shut-off system has been activated. The shut-off system activates in the following conditions: – Front and side collisions in which the air bags are deployed. – Certain rear collisions. – Certain EV system malfunctions.
Master Warning Lamp (RED)		This lamp is on when another red warning lamp is displayed in the instrument cluster or a warning is displayed on the vehicle information display.
Master Warning Lamp (YELLOW)		This lamp is on when: • High-voltage battery is getting low on charge. • A yellow warning lamp is displayed in the instrument cluster or a message is displayed on the vehicle information display.

*1: The READY indicator light will turn off in certain EV system malfunctions.

1-1.5 High-Voltage-Related and 12-volt-Related Component Locations and Descriptions

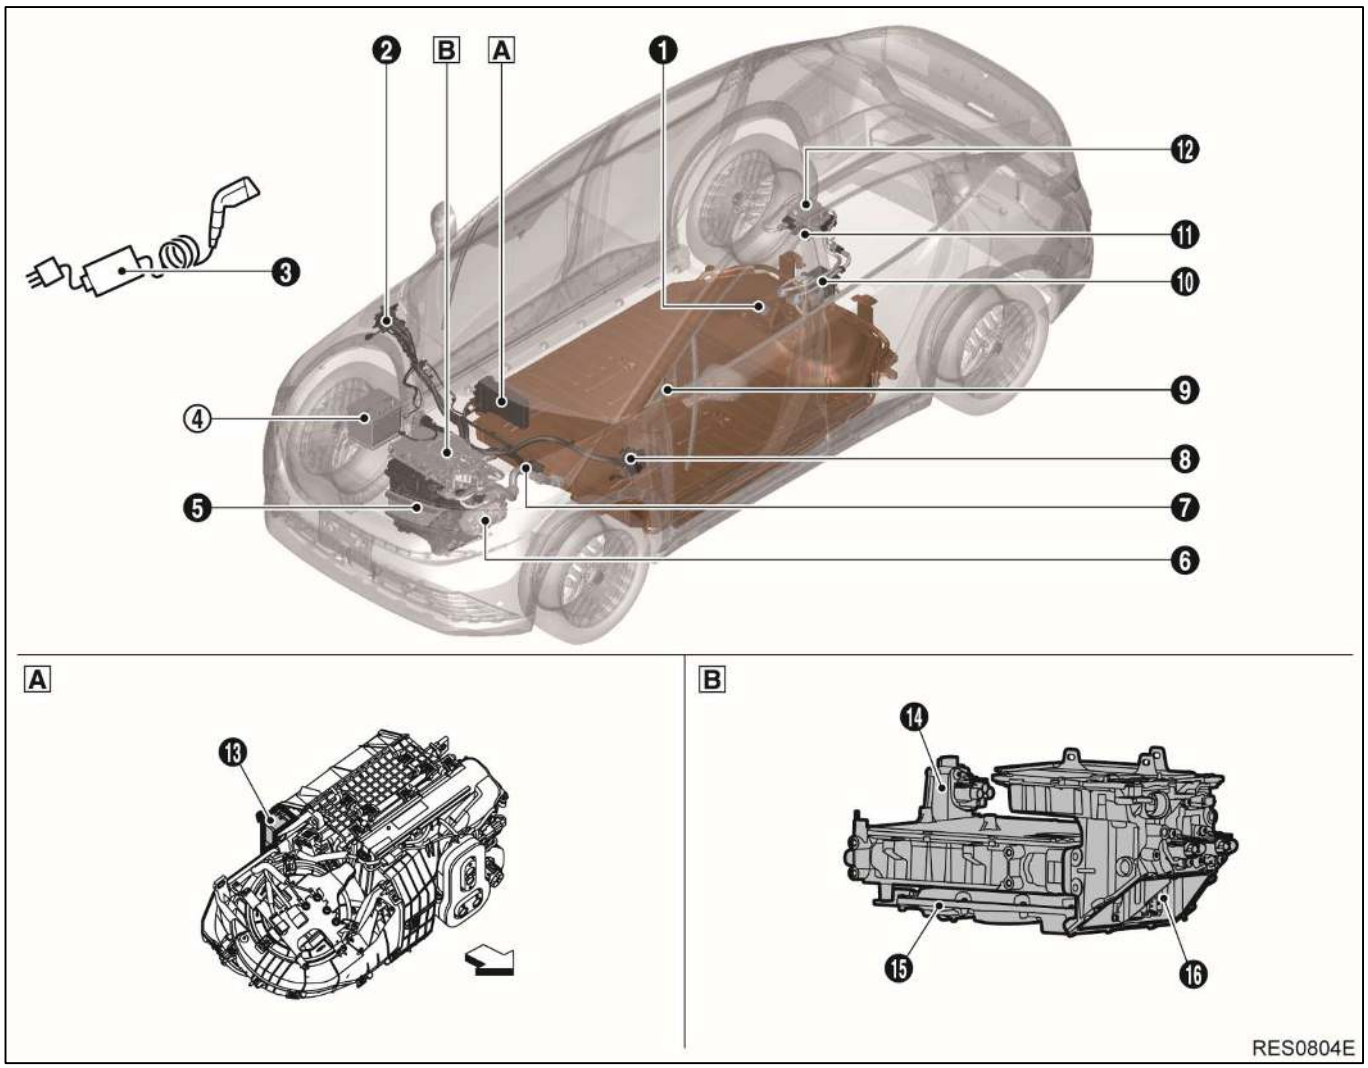

NOTE:

Components with white number in black background are high-voltage components.

⇦ : Vehicle front.

No.	Component	Location	Description
❶	Service plug	Under rear seat	Isolates the battery from the rest of the high-voltage electrical system.
❷	Quick charge port	Vehicle right side	Connection port for quick charge cable. Quick charging charges the high-voltage battery directly from the quick charge port.
❸	Charge cable & charge connector	Charge port	Used when charging high-voltage batteries. Connect the charging connector at the end of the charging cable to the connection port of the charging port.
□	12-volt battery	Motor room	A lead-acid battery that supplies power to the low voltage devices.
❺	Electric powertrain assembly	Motor room	Inverter: Converts the DC power stored in the high-voltage battery to three-phase AC power and controls motor torque (revolution) by regulating the motor current. Traction motor: Converts three-phase AC power to drive power (torque) which propels the vehicle.
❻	Electric air conditioner compressor	Motor room	Exclusive use motor operated with high-voltage compresses refrigerant gas for high pressure.
❼	High-voltage cables (orange color)	Motor room and undercarriage	Orange-colored power cables carry high-voltage current between each of the high-voltage components.
❽	Normal charge port	Vehicle left side	Connection port for normal charge cable (EVSE). EVSE: (Electric Vehicle Supply Equipment). Normal charging charges the high-voltage battery via the on-board charger from the normal charge port.
❾	High-voltage battery	Undercarriage	Stores and outputs DC power needed to propel the vehicle. Coolant is circulated to control battery temperature.
❿	PTC battery heater (If so equipped)	Undercarriage	A dedicated heater that operates at high-voltage and heats the coolant for the high-voltage battery.
⓫	Power plug junction box (If so equipped)	Luggage room	Supplies high-voltage power to the PTC battery heater and DC/AC inverter.
⓬	DC/AC inverter (Power plug inverter) (If so equipped)	Luggage room	Converts the power from the high-voltage battery to supply 120V AC power (1500 W).
⓭	PTC cabin heater	Built in A/C unit in the instrument panel	A dedicated heater that operates at high-voltage heats the air for heating. PTC: (Positive Temperature Coefficient)
⓮	On-board charger	Motor room	During normal charging, power from a household outlet is converted from single-phase AC to DC, the voltage is increased, and the high-voltage battery is charged. When using the V2L system, power from the high-voltage battery is converted from DC to AC and

			output via the VLC (vehicle load connector), allowing the use of household appliances and other devices outside the vehicle.
⓯	DC/DC converter	Motor room	The DC/DC converter reduces the voltage of the high-voltage battery to provide power to the 12-volt battery.
⓰	High-voltage junction box	Motor room	The high-voltage junction box provides electric power from the high-voltage battery to all high-voltage parts of the vehicle.

High-Voltage Battery Pack Specifications


High-voltage battery voltage	372 V
Number of high-voltage battery modules in the pack	7
High-voltage battery dimensions	1973.2 x 1456 x 357.7 mm (77.68 x 57.32 x 14.08 in).
High-voltage battery weight	464.2kg (1023.4lb)

1-1.6 High-Voltage Safety Measures

Circuit insulation	The high-voltage positive (+) and negative (-) circuits are insulated from the metal chassis.
Reducing the risk of electrocution	The high-voltage components and harnesses have insulated cases or orange-colored coverings which provide insulation and easy identification. The high-voltage battery case is electrically connected to the vehicle ground. This connection helps protect the vehicle occupants and emergency responders from high-voltage electrical shock.
Identification	The high-voltage components are labeled “WARNING” similar to the label shown below. All high-voltage harnesses are coated in orange.

Warning Labels

The following warning label is applied to the high-voltage junction box located under hood.

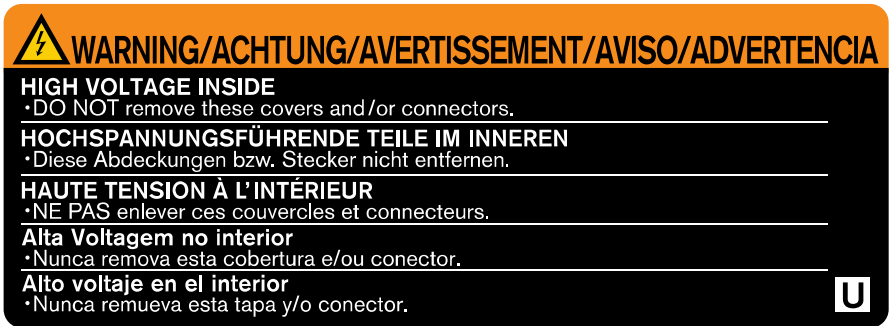

The following warning label is applied to the service plug access cover located under the rear seat cushion flap.



AAYIA0455ZZ

The following warning label is applied to the high-voltage battery located on the vehicle's undercarriage.



216ZZ

1-1.7 High-Voltage Circuit Shut-Off System

The high-voltage can be shut off by the following methods:

Service plug	Positioned in the center area of the high-voltage battery, this shuts off output high-voltage when manually removed.
System main relay (located in high-voltage battery)	Controlled by the power switch, this relay, which is controlled by the 12-volt system, shuts off the high-voltage from the high-voltage battery.
Emergency shut-off system	In the case of a collision (front and side collisions in which the air bags are deployed, certain rear collisions) or certain system malfunctions this system is designed to shut off the high-voltage from the high-voltage battery.
Charging connector	Some of the high-voltage components are activated during charging. Remove the charging connector to deactivate these components.

1-1.8 Preventing Electrical Shock

1. If it is necessary to touch any of the high-voltage harnesses or components, you must always wear appropriate Personal Protective Equipment (PPE) (refer to 2-2 Preparation Items (ERG–16)) and shut off the high-voltage system by referring to 3-1.4 Powering Down the High-voltage System (ERG–25).
2. To avoid the risk of electrocution, NEVER touch the inside of the high-voltage battery unless appropriate PPE is worn even after shutting off the high-voltage system. The high-voltage battery maintains charge even though the high-voltage system is shut down.
3. Cover any damaged high-voltage components with insulated tape.

1-1.9 Emergency Medical Equipment

The high-voltage system should not interfere with emergency medical equipment which must be used in or near the vehicle at an accident scene.

2. Immobilization / Stabilization / Lifting

2-1 Emergency Response Steps

⚠ DANGER

- **⚠ Failure to properly shut down the high-voltage electrical system before the Emergency Response Procedures are performed will result in serious injury or death from electrical shock. To prevent serious injury or death, NEVER touch high-voltage harnesses or components without always wearing appropriate Personal Protective Equipment (PPE).**
- **⚠ If it is necessary to touch any of the high-voltage harnesses or components you must always wear appropriate PPE to avoid electrical shock. Shut down the high-voltage system by following the steps outlined in 3-1.4 Powering Down the High-voltage System (ERG–25). Wait at least ten (10) minutes for complete discharge of the high-voltage capacitor after the high-voltage system has been shut down.**

⚠WARNING

- **NEVER assume the ECLIPSE SPORTBACK is shut OFF simply because it is quiet.**
- **If the READY indicator or charging indicator are ON, the high-voltage system is active.**
- **If possible, be sure to verify that the READY indicator on the instrument cluster is OFF and the high-voltage system is stopped.**
- **Some of the under hood parts get hot and may cause serious burns. Use caution when working on or around these parts.**

2-2 Preparation Items

Preparation Items	Specification	Purpose
Personal Protective Equipment (PPE): Insulated gloves 	Up to 1,000V	For protection from high-voltage electrical shock
Insulated shoes 	–	
Safety shield 	–	
Leather gloves 	Must be able to fasten tight around the wrist (worn over insulated gloves).	To protect insulated gloves
Wrenches 	Size: 10mm	To remove the service plug access cover bolts. To remove the 12-volt battery terminal bolt.
Solvent resistant protection gloves	–	To utilize in the event of a high-voltage battery electrolytic solution leak.
Solvent resistant protection shoes	–	
Absorbent pad	The same pad used for internal combustion engine fluids can be used.	To absorb any high-voltage battery electrolytic solution leakage.
Standard fire fighting equipment	Standard fire fighting equipment Depending on type of fire (vehicle or battery) use standard fire fighting equipment (water or extinguisher).	To extinguish a fire.

Insulated tape	Insulating	To cover any damaged harnesses to protect from and prevent electrical shock. Tape should cover all bare or damaged wire.

2-2.1 Personal Protective Equipment (PPE) Protective Wear Control

Perform an inspection of the Personal Protective Equipment (PPE) items before beginning work. Do not use any damaged PPE items.

2-2.2 Daily Inspection

This inspection is performed before and after use. The responder who will be using the items should perform the inspection and check for deterioration and damage.

- Insulated rubber gloves should be inspected for scratches, holes and tears. (Visual check and air leakage test)
- Insulated safety boots should be inspected for holes, damage, nails, metal pieces, wear or other problems on the soles. (Visual check)
- Insulated rubber sheet should be inspected for tears. (Visual check)

2-2.3 Insulated Tools

When performing work at locations where high-voltage is applied (such as terminals), use insulated tools meeting 1,000V/300A specifications.

2-3 Vehicle Immobilization and Stabilization

If possible, immobilize the vehicle by turning the 12-volt system OFF and stabilize it with a wheel chock(s).

First Responders:


- Stabilize the vehicle with cribbing, by removing air from the tires, or utilize the Lift Airbag Equipment for rescue.


Dismantlers/Roadside Assistance Workers:

- Stabilize the vehicle with wooden blocks or by removing air from the tires.

⚠WARNING

1. **Do not stabilize the vehicle with cribbing under the high-voltage battery.**
2. **To avoid electrical shock, do not put the Lift Airbag Equipment for rescue and wheel chock(s) under the high-voltage components and harnesses as shown following.**

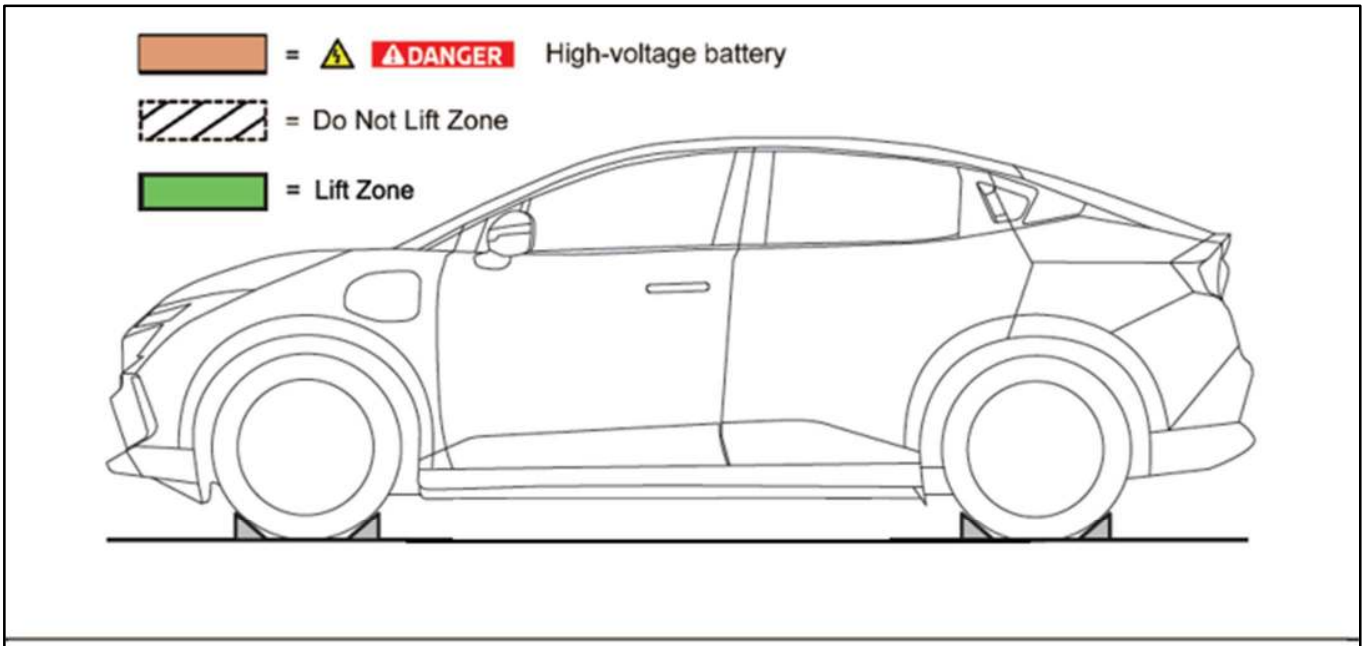
= DANGER High-voltage battery
= Do Not Lift Zone
= Lift Zone

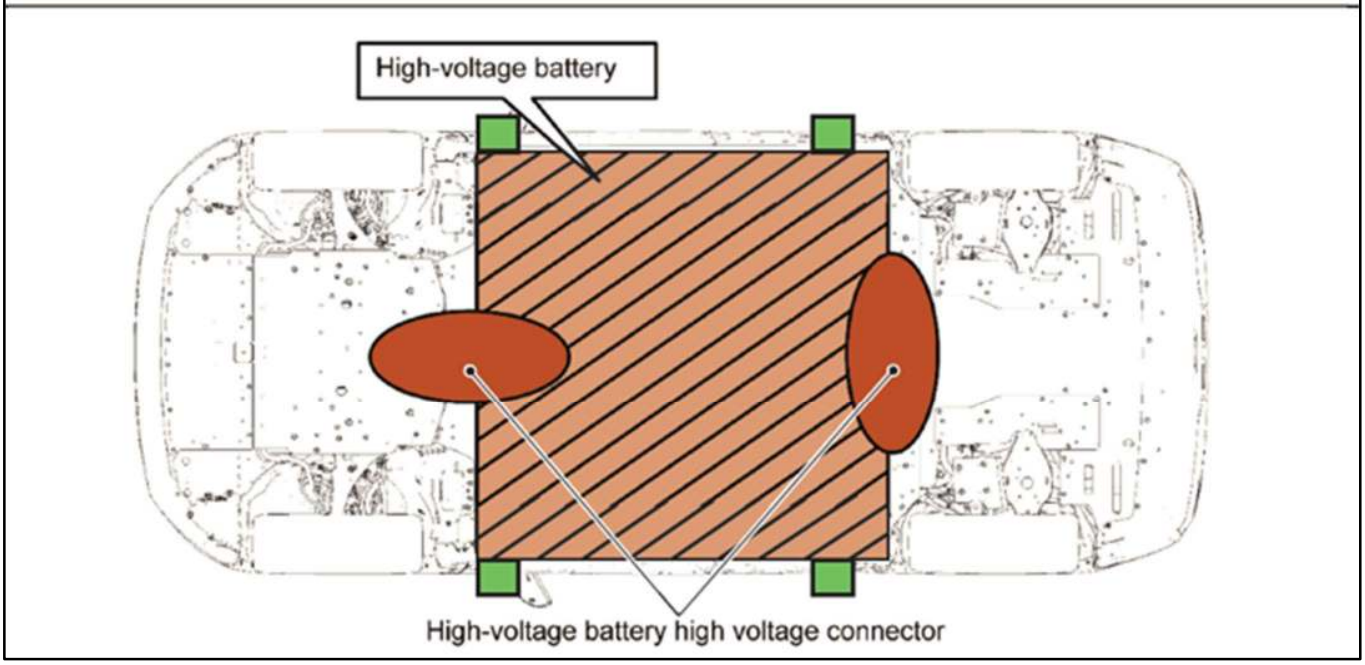
High-voltage battery
High-voltage battery high voltage connector

3. Disable Direct Hazards / Safety Regulations

3-1 How to Handle a Damaged Vehicle at an Accident Scene

If the operation is needed for the following systems, please operate them before battery disconnection.

- Door lock
- Power window
- Power seat
- Power back door
- Electric parking brake

NOTE:

If any air bags have deployed in the following 3 situations, the high-voltage (HV) system has been designed to automatically shut off at the time of deployment.

The ECLIPSE SPORTBACK high-voltage system incorporates capacitors which are energized whenever the high-voltage system is on. If the high-voltage system is shut down (either through one of the built-in automatic mechanisms or manually through one of the procedures explained in this ERG), the capacitors will begin to gradually discharge. After 5 minutes, the voltage level will have dropped below 60V, and **complete discharge requires approximately 10 minutes after high-voltage system shut down**. It is within this period of time that responders must be most cautious.

When arriving to an incident involving an ECLIPSE SPORTBACK, the vehicle should be approached with caution and inspected for the level of damage. In addition to overall vehicle condition (location and severity of body damage, air bag deployment, etc.), the high-voltage system should be assessed specifically. The locations of the high-voltage component parts are illustrated in this ERG. Refer to 1-1.5 High-Voltage-Related and 12-volt-Related Component Locations and Descriptions (ERG–10). Appropriate Personal Protective Equipment (PPE) must always be worn when approaching a vehicle of unknown condition, as described in this ERG.

Situation 1) High-voltage system intact, occupants can be accessed without extrication tools

The HV system can be shut down by following the procedures in this guide, while wearing appropriate PPE. After HV system shut down, occupant assistance can begin immediately, and no wait period is necessary.

Situation 2) High-voltage system intact, occupants cannot be accessed without extrication tools

The HV system can be shut down by following the procedure in this guide, while wearing appropriate PPE. After HV system shut down, absolute care must be taken not to cut through or damage any HV system wiring, battery or components within **ten (10) minutes of HV system shut down**, but occupant assistance operations using extrication equipment can begin immediately. The locations of the HV components are illustrated in this guide.

Situation 3) High-voltage (HV) system damaged

If there is any evidence that the HV system has been compromised (such as arcing/sparking, orange wiring harnesses cut or damaged, HV component casings damaged, etc.), the responder may still be at risk of high-voltage exposure. The vehicle must be approached with extreme caution prior to initiating any system shut down procedures or rendering assistance to occupants. Appropriate PPE must always be worn as described in this guide, and the **ten (10) minute wait time must be observed after HV system shut down** in order to ensure the system is de-energized.

In rare situations where vehicle damage is very severe, HV system shut down procedures as described in this guide may not work. In these instances extreme caution and appropriate risk management must be followed to prevent shock or electrocution to the responder or occupant.

3-1.1 High-voltage System Shut-Down Procedures

Any of the following procedures can shut down and isolate the high-voltage system. The first response operation should only begin after shutting down the high-voltage system. If the vehicle is heavily damaged, for example the high-voltage battery is deformed, broken or cracked, appropriate Personal Protective Equipment (PPE) must always be used and the high-voltage battery and high-voltage components must not be touched.

⚠ DANGER

- **⚠ Failure to properly shut down the high-voltage system before the Emergency Response Procedures are performed will result in serious injury or death from electrical shock. To prevent serious injury or death, NEVER touch high-voltage harnesses or components without always wearing appropriate Personal Protective Equipment (PPE). PPE must always be worn when touching or working on high-voltage components.**
- **⚠ When contact with high-voltage components or high-voltage harnesses is unavoidable, or when there is risk of such contact, you must always wear appropriate PPE. PPE must always be worn when touching or working on high-voltage components.**

⚠WARNING

- ⚠ If the charge connector is connected to the vehicle, remove it. Refer to 3-1.2 Removing the Charge Connector (ERG–22).
- ⚠ The vehicle contains parts that contain powerful magnets. If a person who is wearing a pacemaker or other medical device is close to these parts, the medical device may be affected by the magnets. Such persons must not perform work on the vehicle.
- Be sure to verify that the READY indicator is off and the high-voltage system is stopped.
- After the high-voltage system is shut down, please wait at least ten (10) minutes for complete discharge of the high-voltage capacitor. While waiting, do not operate any vehicle functions.

  NOTE:


  The high-voltage full discharge takes ten (10) minutes, but after five (5) minutes the voltage has dropped below 60V.

- After shutting down the high-voltage system and removing the 12-volt battery negative (-) terminal, wait at least three (3) minutes to discharge the air bag capacitor. Even though the 12-volt battery negative (-) is disconnected, the Supplemental Restraint System (SRS) air bag maintains voltage at least three (3) minutes. During this time, there is a possibility of sudden SRS air bag inflation due to harness short circuit or damage and it may cause serious injuries.
- Always shut down the high-voltage system before disconnecting the 12-volt battery. Not doing so may result in serious injury or death from electrical shock.
- The 12-volt system will remain active even after the 12-volt battery negative (-) terminal is removed while the high-voltage system is active. The high-voltage system is active during any of the following conditions:
  – charging indicator is turned ON
  – READY indicator is turned ON

  Refer to 1-1.2 Interior Component Location (ERG–7) for location of these indicators. This is because DC/DC converter will not shut down and power will be supplied to the 12-volt system and high-voltage system continuously.

3-1.2 Removing the Charge Connector


Press the charge connector unlock switch to unlock the charge connector.

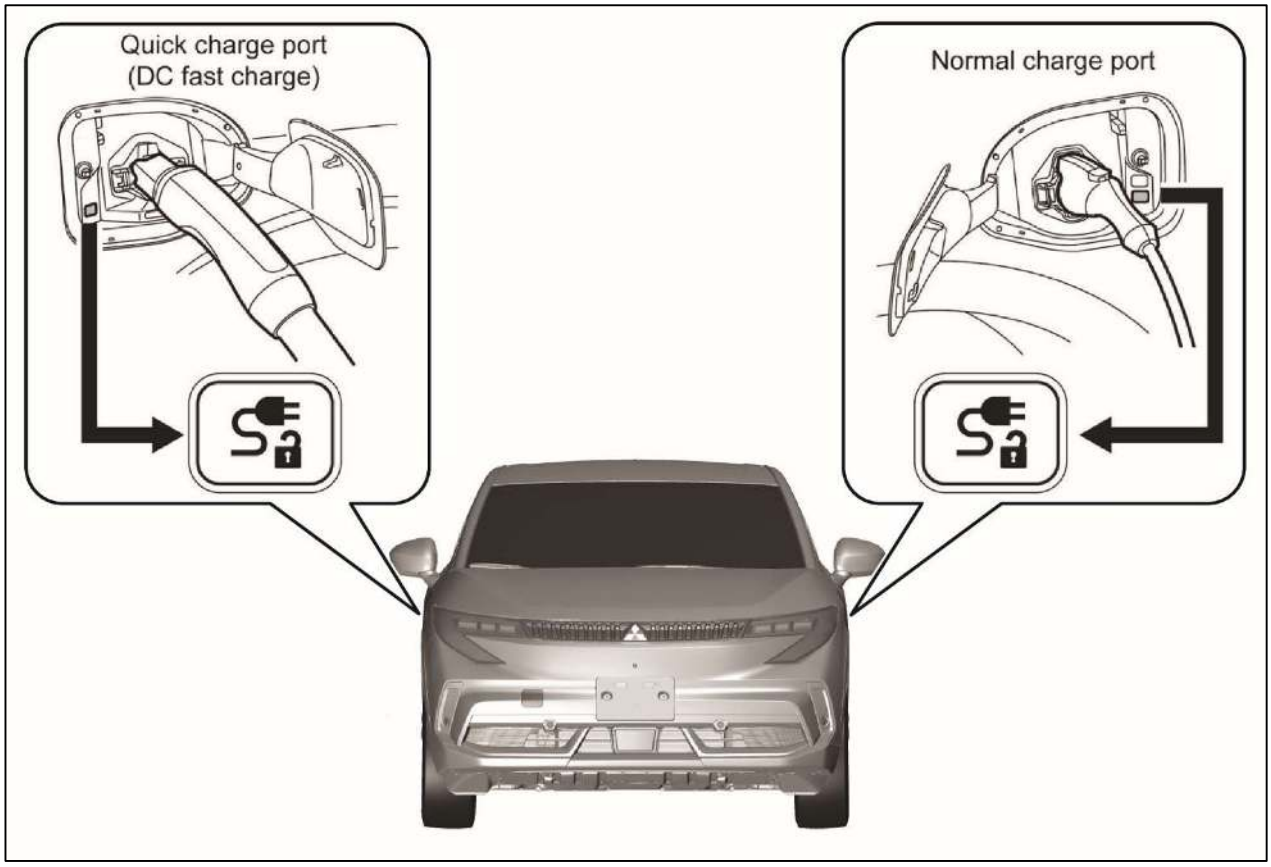

NOTE:


- **If the "MITSUBISHI MOTORS" Intelligent Key® is not carried, operating the switch will not unlock the connector.**
- **Depending on the charging station, the lock mechanism established by local standards may not be compatible with the vehicle. It may not be possible for the charge connector to lock to the vehicle**

1. **If the quick charge connector cannot unlock**
   a. Place power switch in OFF position.

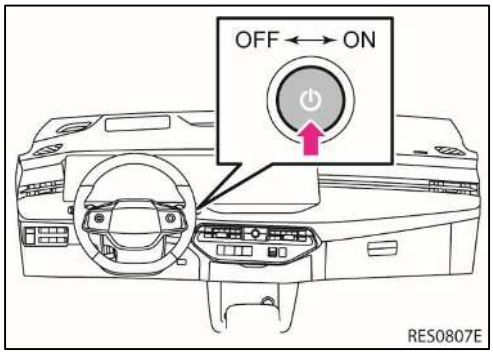


   b. Open the hood.



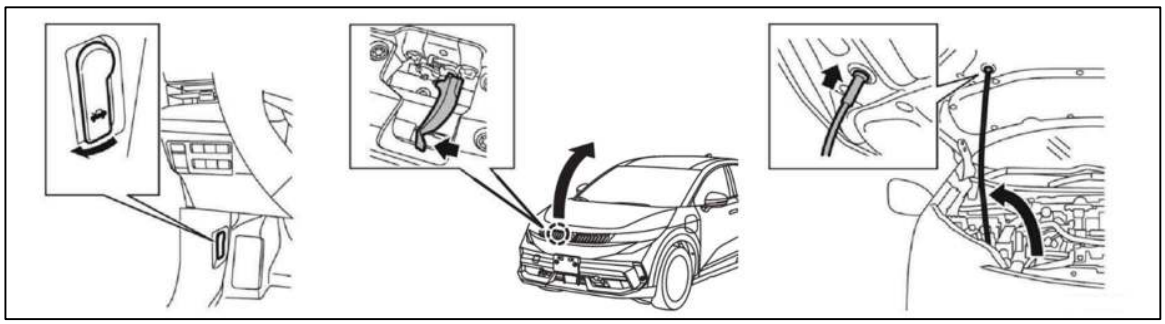


   c. Pull lock release cable (**A**) to unlock the charging connector lock.

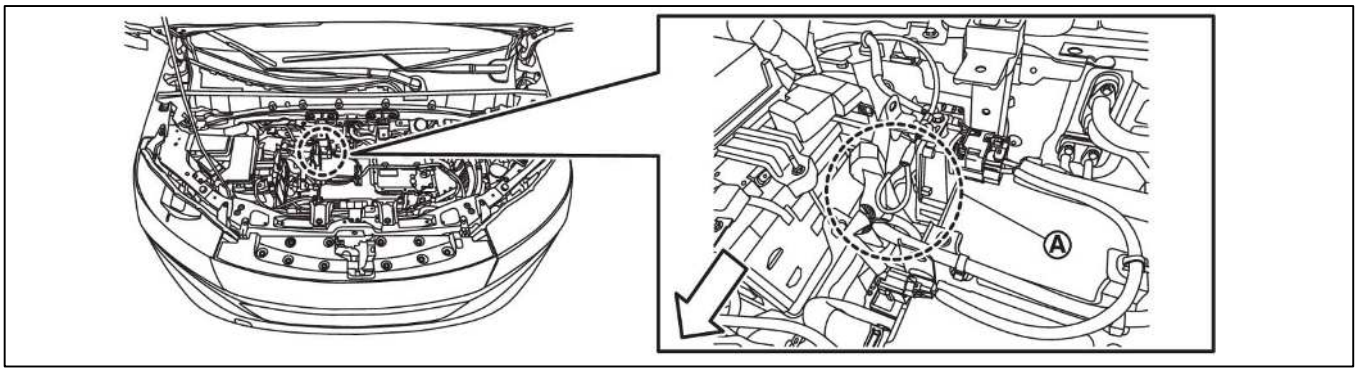


2. **If the trickle and normal charge connector cannot unlock**


a. Place power switch in OFF position.

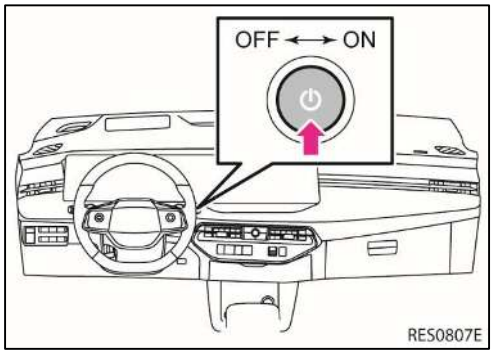

b. Break and remove charge port cover (**1**).

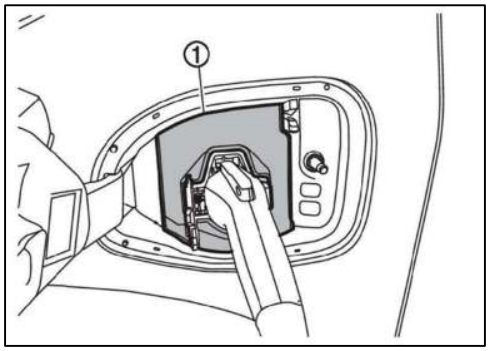


c. Operate the lever (white) of the charge connector lock actuator (**1**) located at the top of the charge port toward the rear of the vehicle.

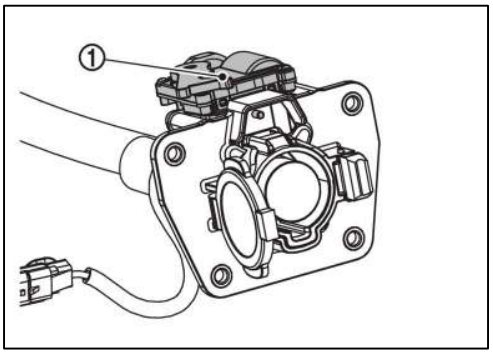

3-1.3 Indications the High-voltage System is ON

1. If the READY indicator is ON, the high-voltage system is active.
2. The high-voltage system is active if any charging status indicator (1) is ON (LED on top of the instrument panel).

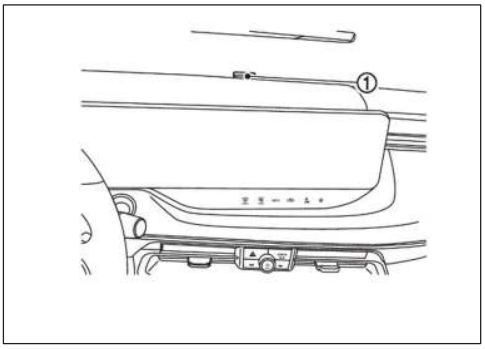

Before disconnecting the 12-volt battery terminal, if necessary, lower the windows, unlock the doors, and open the rear hatch as required. Once 12-volt battery is disconnected, power controls will not operate.


3-1.4 Powering Down the High-voltage System

The high-voltage system can be shut down with any 1 of the following procedures:


- Turn OFF the power switch **and** disconnect the 12-volt battery. Refer to 3-1.5 Primary Procedure (ERG–26).
- When the power switch cannot be operated due to vehicle damage. Refer to 3-1.6 Alternate Procedure 1 (Cable cut) (ERG–28).
- Remove the service plug and disconnect the 12-volt battery. Refer to 3-1.7 Alternate Procedure 2 (Remove Service Plug) (ERG–30).

3-1.5 Primary Procedure

1. Check the READY indicator in the meter and the charging status indicator on the dashboard. If the READY indicator is ON or the charging status indicator is ON or blinking, the high-voltage system is activated.
2. Open the hood.

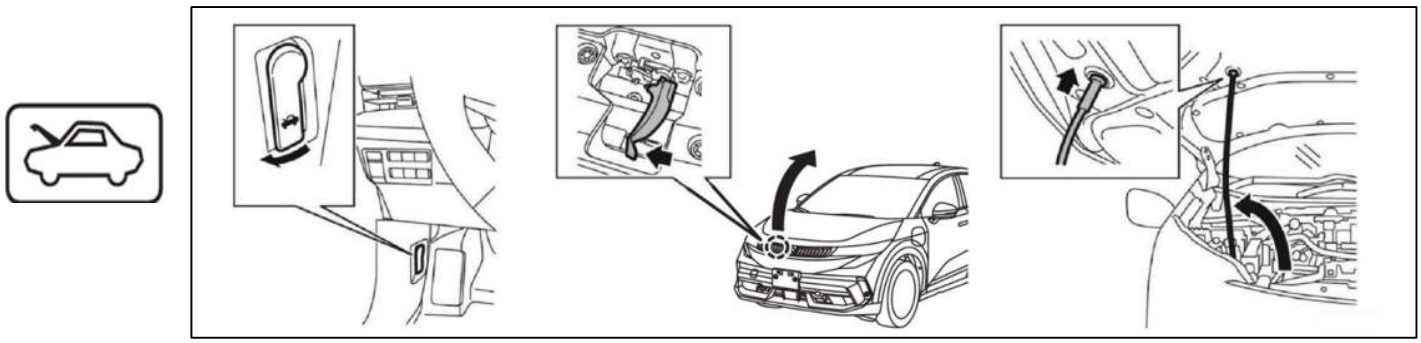

3. Press and hold the power switch for at least 2 seconds and confirm that the READY indicator is off and the charging status indicator is off.

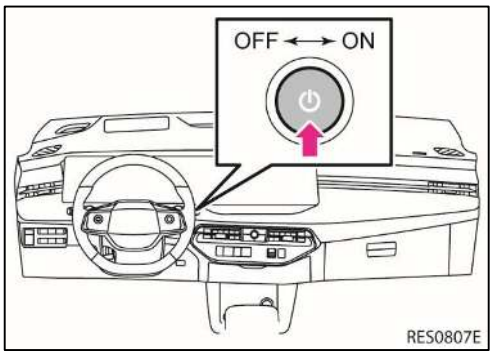

If the READY indicator does not turn off, refer to:


- If the hood can be opened — 3-1.6 Alternate Procedure 1 (Cable cut) (ERG–28)
- If the hood cannot be opened — 3-1.7 Alternate Procedure 2 (Remove Service Plug) (ERG–30) .


4. After performing step 3, open the driver's door, exit the vehicle, close the driver's door, and wait at least 5 minutes.

⚠ CAUTION

- **Since the accessory power is turned on by the auto ACC function, no vehicle operations such as operating the door locks or opening/closing the doors shall be performed during standby.**
- **If the vehicle is operated, wait at least 5 additional minutes from that point.**


5. If possible, keep the “MITSUBISHI MOTORS” Intelligent Key® at least 5 meters (16 feet) away from the vehicle to prevent accidentally turning ON the EV system.



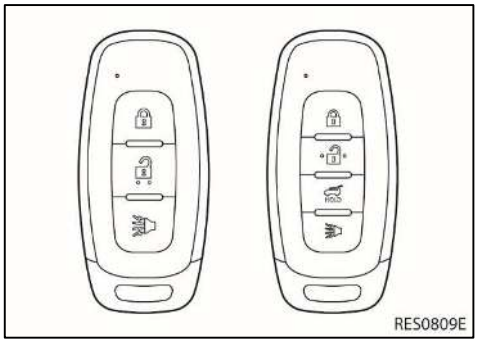

6. Disconnect the 12-volt battery (**1**) negative (-) cable (**A**). Insulate the negative (-) battery cable terminal with insulated tape.




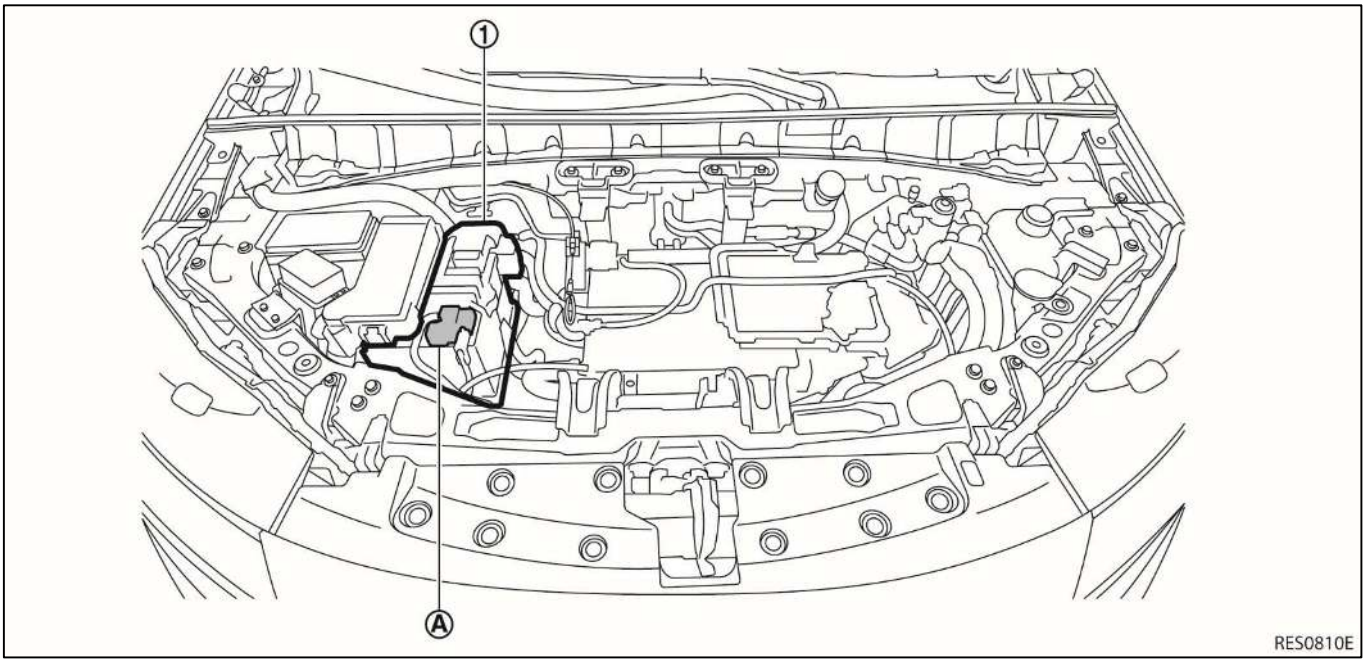

7. **Wait at least ten (10) minutes for complete discharge** of the high-voltage capacitor after the power switch has been turned OFF.
8. Perform the emergency response, roadside assistance action or dismantling operation.


3-1.6 Alternate Procedure 1 (Cable cut)

1. Open the hood.

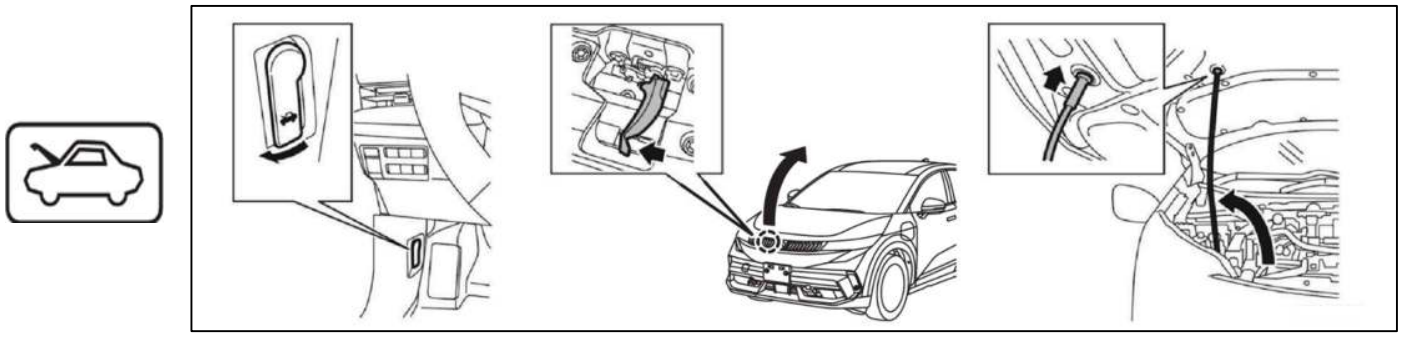


2. Cut off both ends of the first responder label located on the left side of the motor room when viewed from the front of the vehicle.



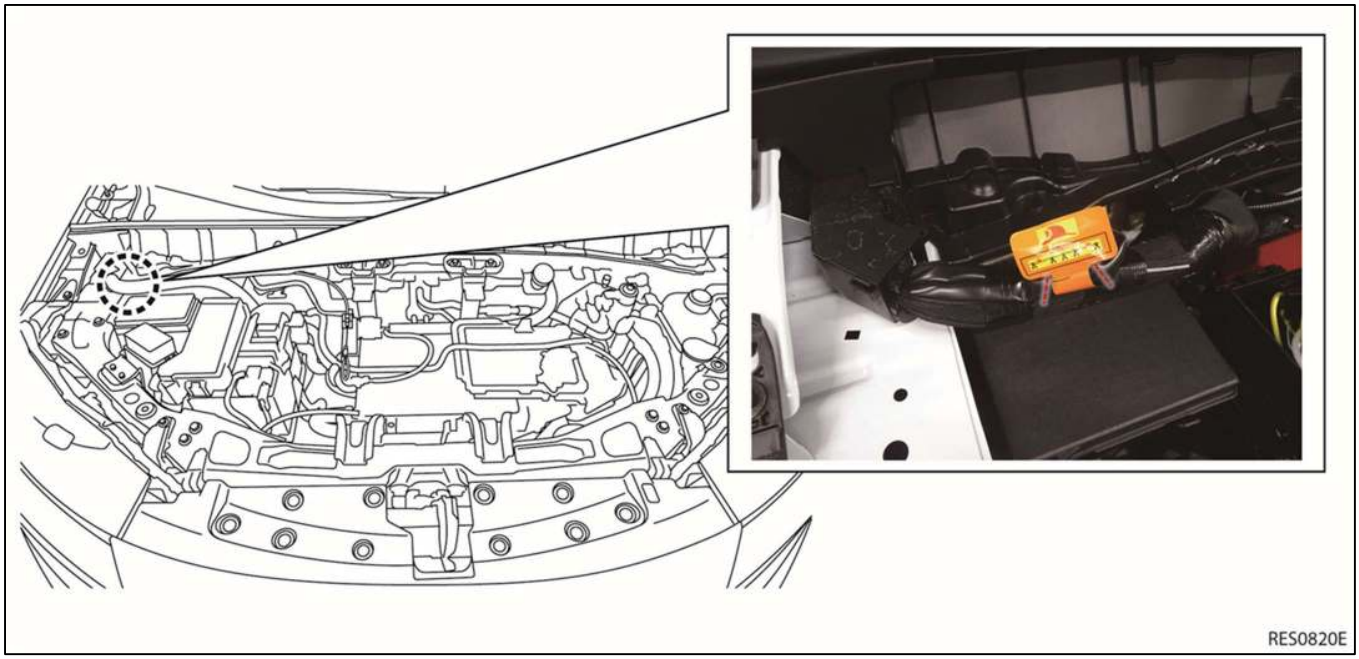

3. Disconnect the 12-volt battery (1) negative (-) cable (A). Insulate the negative (-) battery cable terminal with insulated tape.

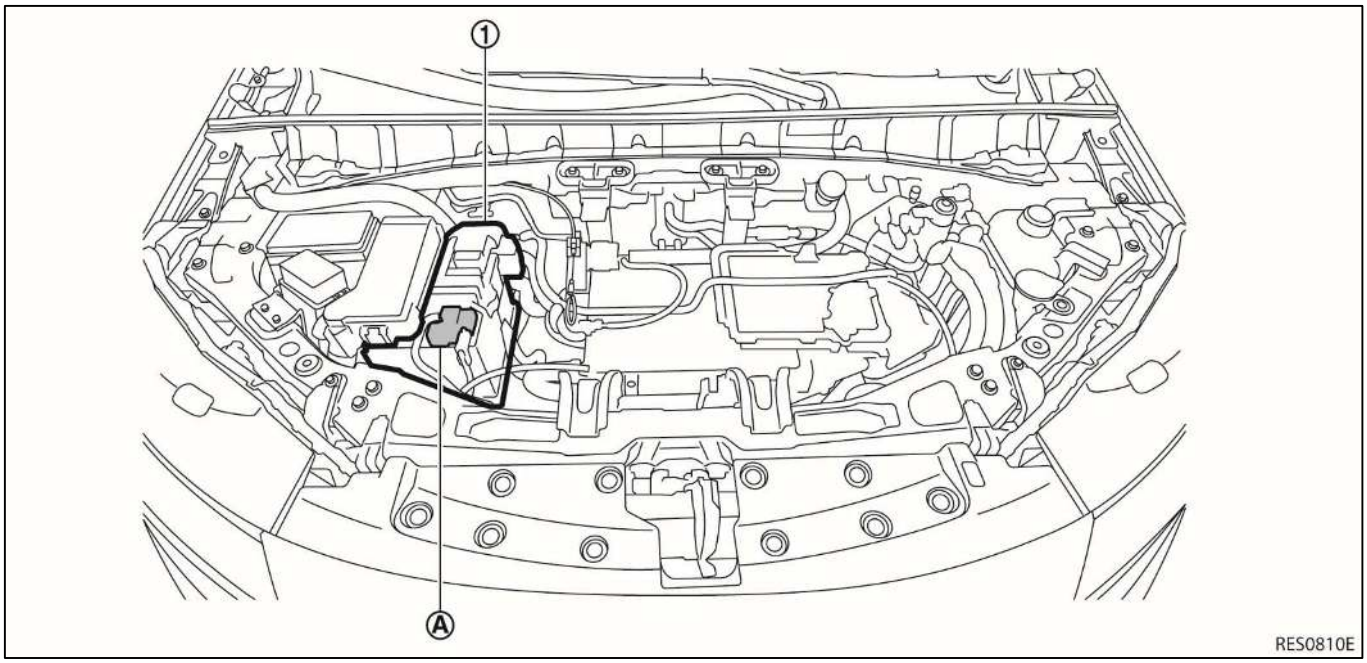

4. **Wait at least ten (10) minutes for complete discharge** of the high-voltage capacitor after the fuses are pulled.
5. Perform the emergency response, roadside assistance action or dismantling operation.

3-1.7 Alternate Procedure 2 (Remove Service Plug)

⚠ DANGER


⚠ Do not remove the service plug without always wearing appropriate Personal Protective Equipment (PPE) to help protect the responder from serious injury or death by electrical shock.

⚠ Immediately cover the service plug socket with insulated tape. The high- voltage battery retains high-voltage power even when the service plug is removed. To avoid electric shock, NEVER touch the terminals inside the socket.

⚠ DANGER


⚠ To avoid unintended reinstallation and risk of electrical shock and severe personal injury or death, the rescuer should carry the service plug on his/her person while work is in progress.

1. Check the READY indicator status. If it is ON, the high-voltage system is active.
2. Place the selector lever in the Park (P) position.
3. Press the power switch once to turn OFF the high-voltage system. Then verify whether the READY indicator is OFF.

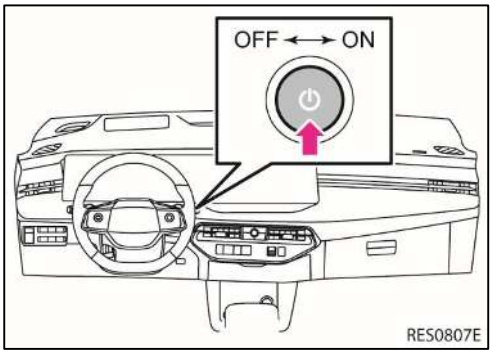


4. Open the zipper (**1**) on the lower front-facing surface of the rear center seat cushion.


   ⇦ : Vehicle front.

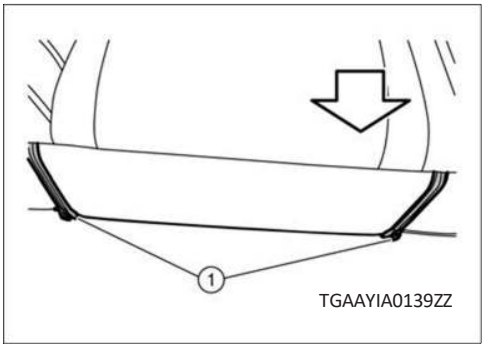

5. Remove the service plug terminal cover mounting bolt (**A**) and nuts (**B**), and remove the service plug terminal cover.

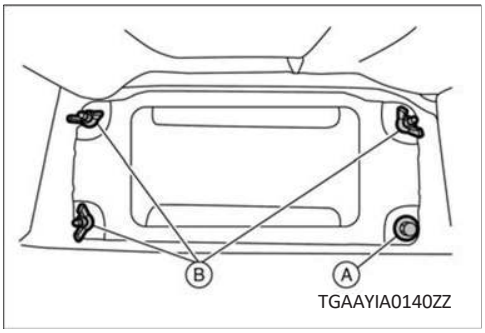


6. Remove the service plug using the following steps: (**1**) push up lever until it stops, (**2**) press pawl to unlock, (**3**) push up lever, (**4**) pull out service plug.

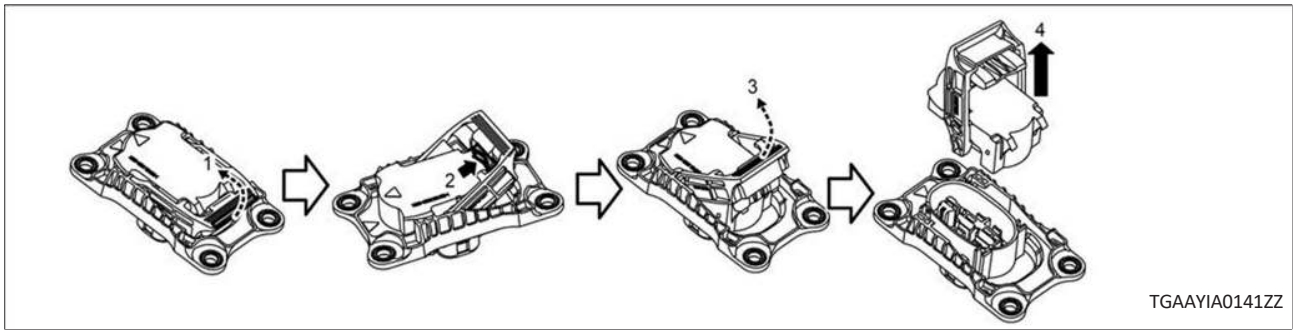


7. **Wait at least (10) minutes for complete discharge** of the high-voltage capacitor after the service plug has been removed.

8. Open the hood.

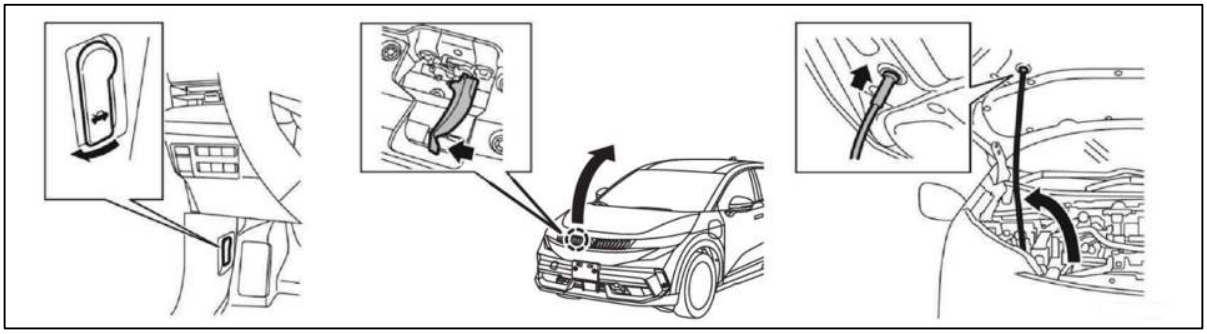

9. Disconnect the 12-volt battery (**1**) negative (-) cable (**A**). Insulate the negative (-) battery cable terminal with insulated tape.

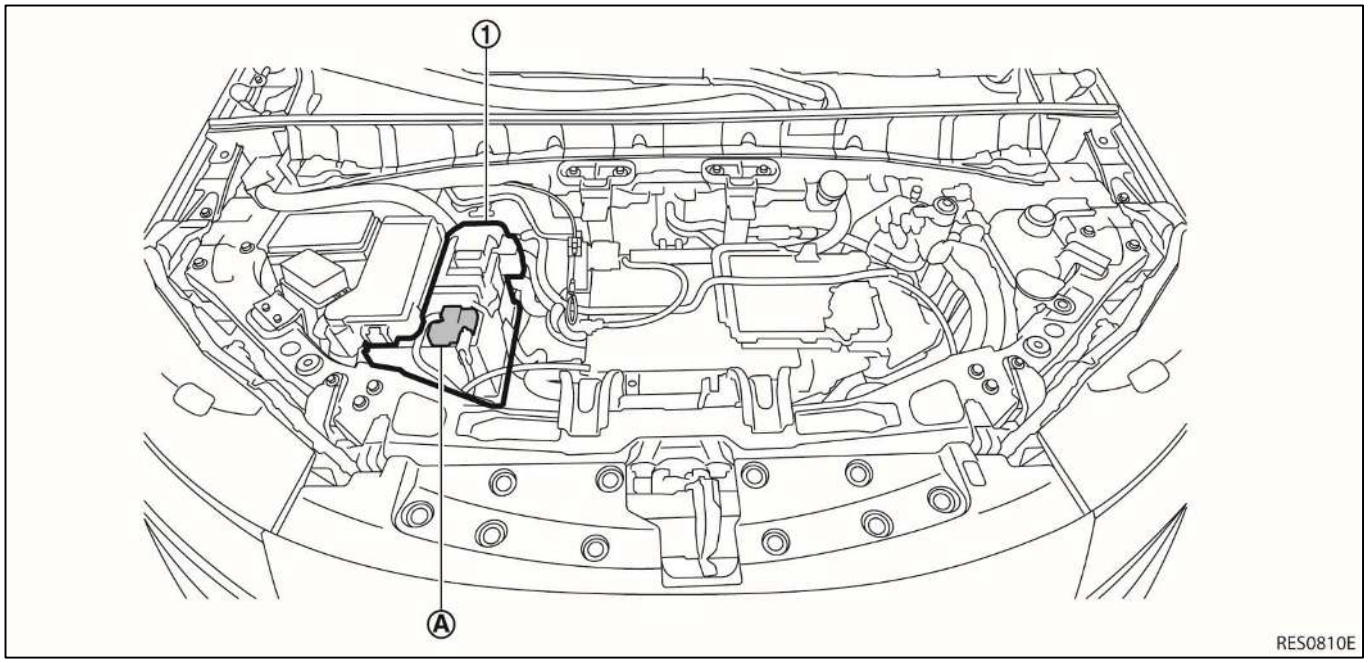


10. Perform the emergency response, roadside assistance action or dismantling operation.

4. Access to the Occupants


4-1 Accessing the Occupants

1. Remove windows.
   a. Perform window removal the same as a normal vehicle.

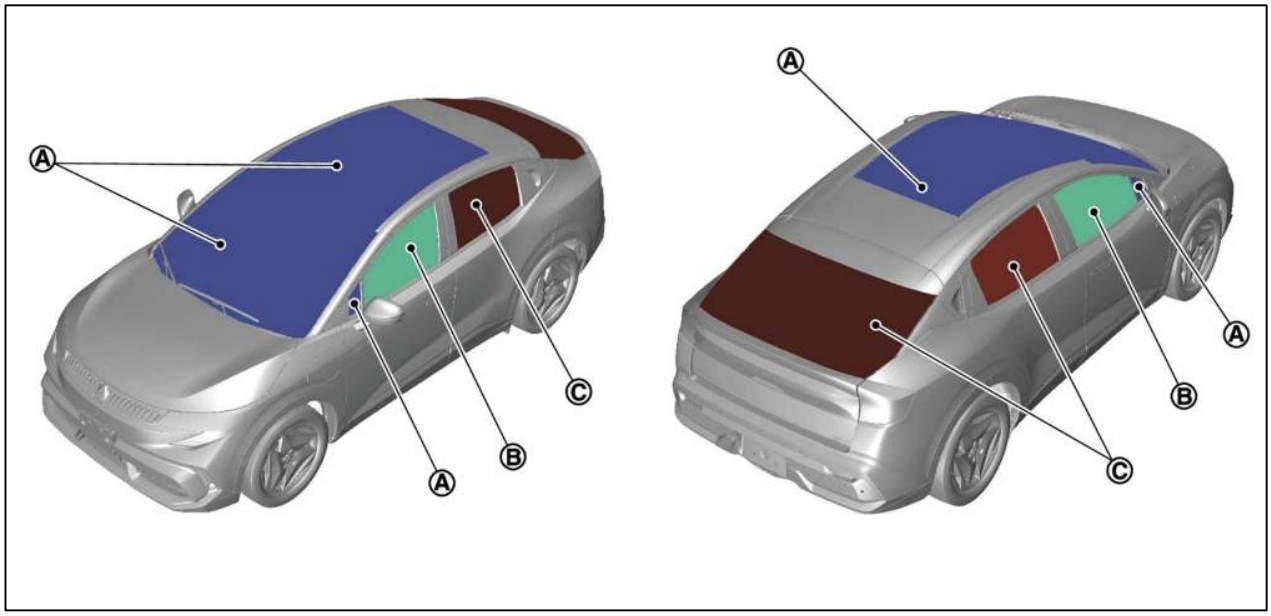


A: Laminated glass B: Laminated glass/Tempered glass C: Tempered glass

2. Remove doors.
   a. Door:
   The doors can be opened by operating the knob or handle installed on the door.
   The doors are removable with hand tools or basic rescue tools such as electrical/hydraulic rescue tools. It may be easier to remove the doors by cutting door hinges.
   b. Flush door handle:
   If the door handle does not extend outward due to a discharged battery, the door can be unlocked the door by the following procedure.
      (1). Push the front part of the door handle of the driver's door.
      (2). Pull the door handle out from its stored position, and then pull it further forward to open the door.

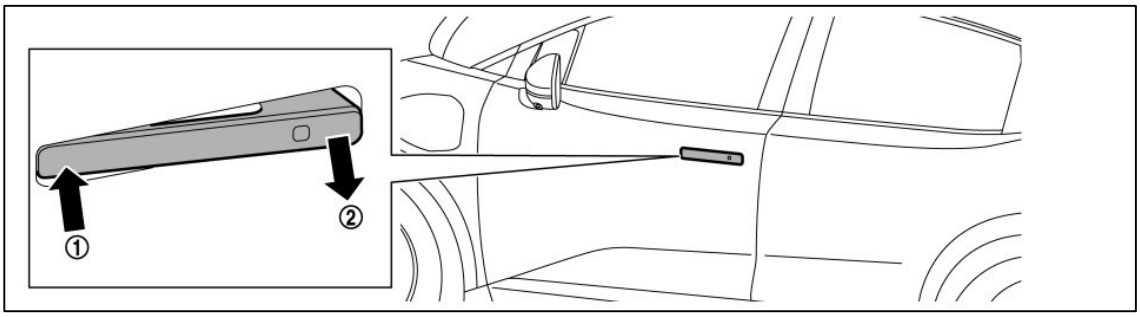

⚠ CAUTION

If the door is locked, pull out the mechanical key from the Intelligent Key, then separate the key plate from the key head, and then insert the key plate into the key cylinder inside the flush door handle to unlock it.

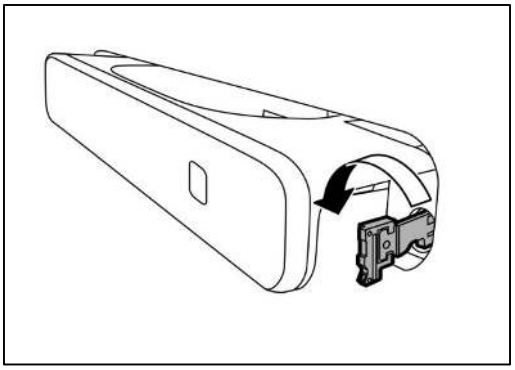


c. Opening the doors from the inside:
When the doors are unlocked, they can be opened by operation the handle on the door.



d. Opening the tailgate from the outside:
When the tailgate is unlocked, they can be opened by operation the boot switch on tailgate.




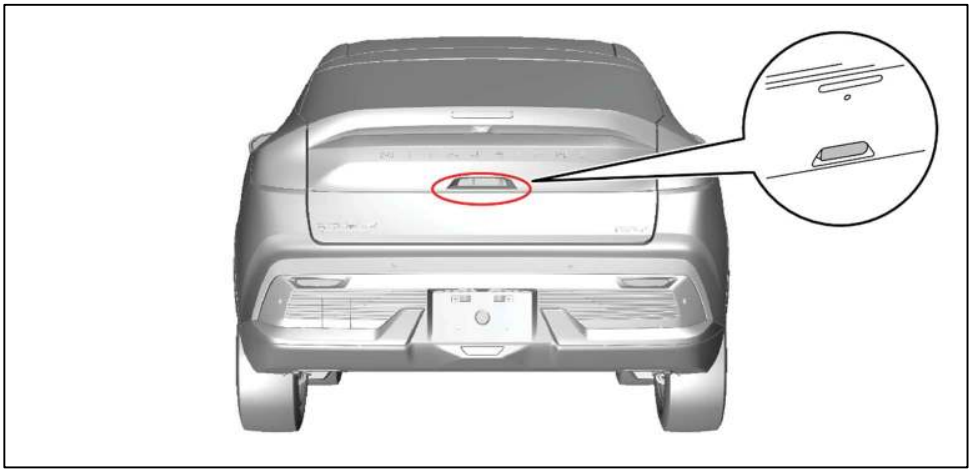


e. Opening the tailgate from the inside, when 12-volt power is available:
Where vehicle power is available, the tailgate can be opened from the inside using the power tailgate switch on the instrument panel by pushing the switch for more than 1 second.



f. Opening the tailgate from the inside, when 12-volt power is **not** available:
If the tailgate cannot be opened with the power door lock switch due to a discharged 12-volt battery, follow these steps:
1. Fold the rear seats down
2. Move the release lever to the left. The tailgate will be unlatched
3. Push the tailgate up to open

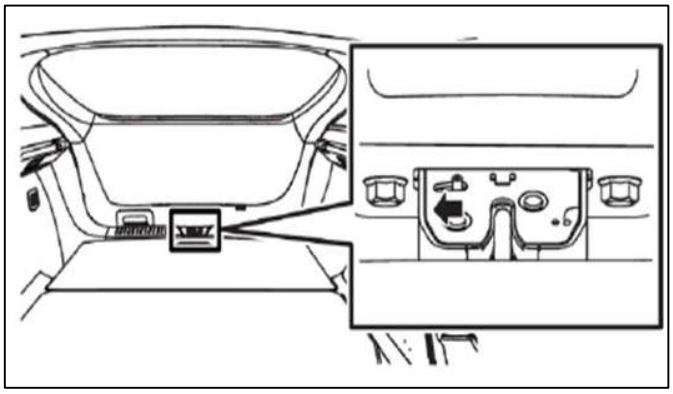


3. Adjust steering wheel (if necessary).
   a. Pull the lock lever (**1**) down and adjust the steering wheel up or down, forward or rearward to the desired position. Push the lock lever up securely to lock the steering wheel in place.

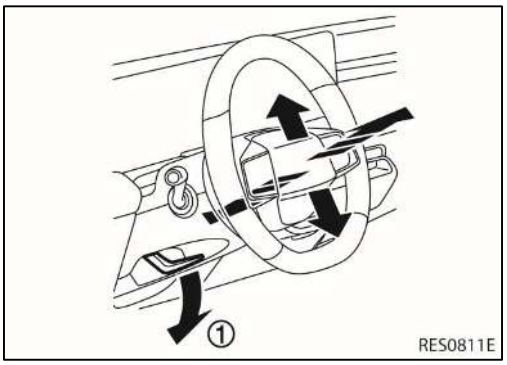

4. Adjust front seat

   a. **MANUAL SEAT —** Front seat can be adjusted forward/backward manually by pulling up and holding lever (**1**), tilted forward/backward manually by pulling up and holding lever (**2**) and pull up or push down the adjusting lever (**3**) repeatedly to adjust the seat height until the preferred position is achieved.

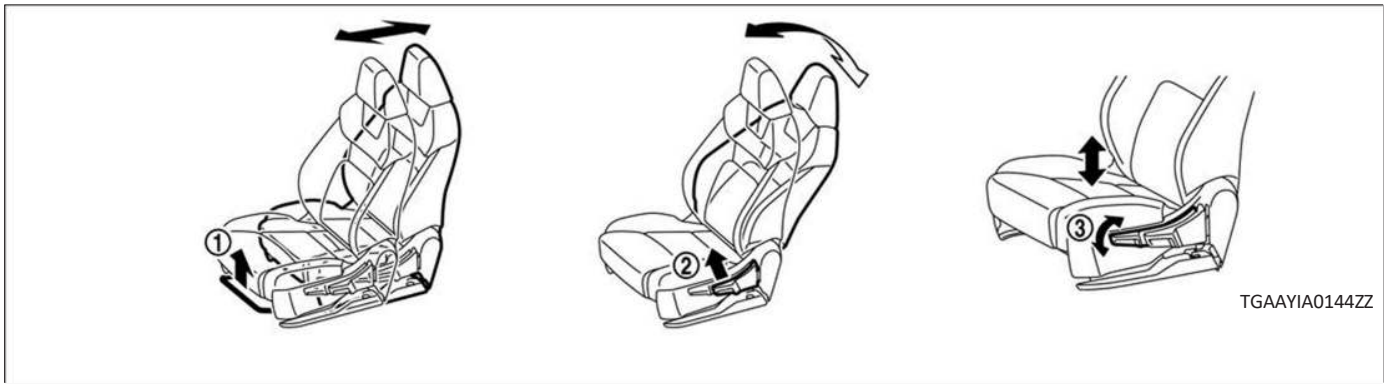


   b. **POWER SEAT** — **Seat Position**: Move the seat position to forward or backward by the adjusting switch (**1**); — **Seat-Back**: Move the seat-back to forward or backward by the adjusting switch (**2**); — **Seat Lifter**: Move the seat height to desired position by the adjusting switch (**3**).



5. Remove front seat head restraint (if necessary).


   The front seat head restraint can be removed by pressing the lock knob and pulling it up.

   Note: The front head restraints with a speaker are not designed to be pulled out.

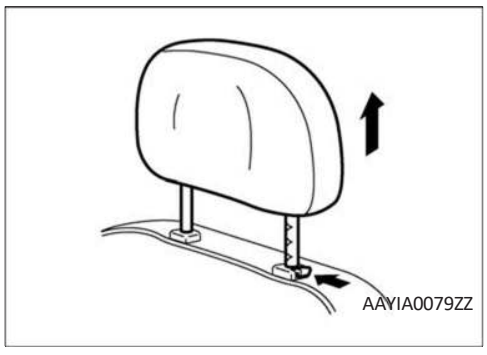

6. Unfasten the seat belt.

   Seat belt can be unfastened by pressing the release button. If seat belt cannot be unfastened, cut it with a belt cutter.

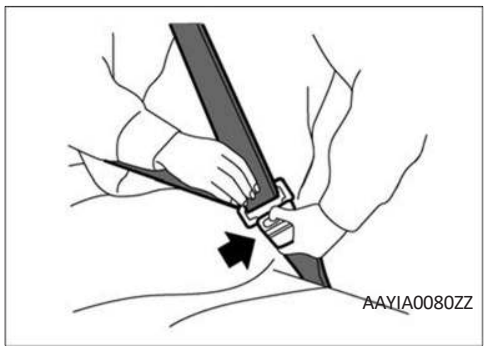

4-2 Cutting the Vehicle Body

⚠ DANGER

- **⚠ Do not cut into high-voltage related areas to avoid severe personal injury or death.**
- **⚠ Do not cut into the high-voltage battery to avoid severe personal injury or death.**
- **⚠ When removing parts, NEVER touch the high-voltage parts or the insides of the exposed orange-colored high-voltage cables to avoid severe personal injury or death. Personal Protective Equipment (PPE) must always be worn when touching or working on high-voltage components.**

⚠ WARNING

- **Do not cut air bag parts to avoid unintended deployment of the air bags and the risk of severe personal injury or death.**


If at least **ten (10) minutes** have passed since the rescuer shut down the high-voltage system (refer to 3-1.4 Powering Down the High-voltage System (ERG–25)), then the rescuer can cut the vehicle except for the high-voltage battery.

If the rescuer cannot wait the full ten (10) minutes or shut down the high-voltage system, absolute care must be taken to avoid cutting HV parts and appropriate Personal Protective Equipment (PPE) must always be worn. DO NOT cut the high-voltage battery due to possible electrocution risk and electrolyte solution leakage.

4-2.1 SRS Air Bag System Components Location

Avoid cutting air bag system parts. However, the vehicle can be cut (except inflators) under the following conditions:

- The front, side and curtain air bags have deployed.
- At least three (3) minutes have passed after the 12-volt battery negative (-) cable has been disconnected and the high-voltage system has been shut down.

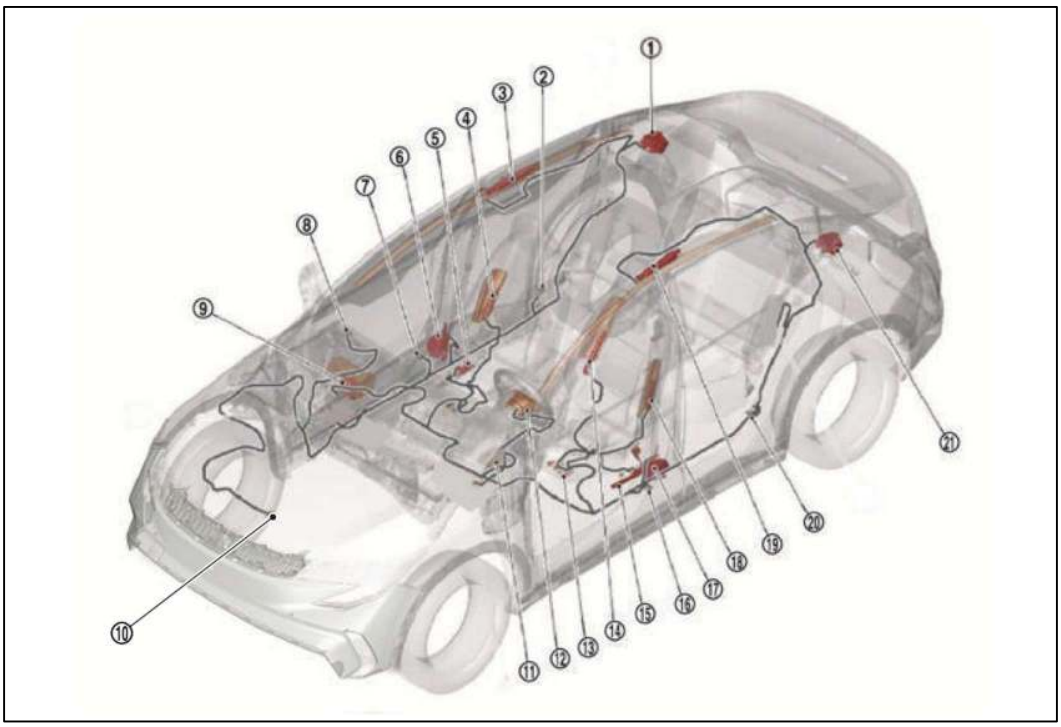


1. Rear seat belt pre-tensioner inflator (passenger side)
2. Rear side air bag module inflator (passenger side)
3. C-pillar satellite sensor (passenger side)
4. Curtain air bag module inflator (passenger side)
5. Front side air bag module inflator (passenger side)
6. Lap pre-tensioner inflator (passenger side)
7. Front seat belt pre-tensioner inflator (passenger side)
8. B-pillar satellite sensor (passenger side)
9. Front door satellite sensor (passenger side)
10. Passenger air bag module inflator
11. Knee air bag module inflator (passenger side)
12. Crash zone sensor
13. Knee air bag module inflator (driver's side)
14. Air bag diagnosis sensor unit
15. Driver air bag module inflator
16. Front door satellite sensor (driver's side)
17. Front center air bag module inflator
18. Lap pre-tensioner inflator (driver's side)
19. B-pillar satellite sensor (driver's side)
20. Front seat belt pre-tensioner inflator (driver's side)
21. Front side air bag module inflator (driver's side)
22. Curtain air bag module inflator (driver's side)
23. C-pillar satellite sensor (driver's side)
24. Rear side air bag module inflator (driver's side)
25. Rear seat belt pre-tensioner inflator (driver's side)

4-2.2 Plastic Parts Locations

The resin parts shown in blue below may not be able to be spread with a spreader.




4-2.3 Vehicle Cut Sheet

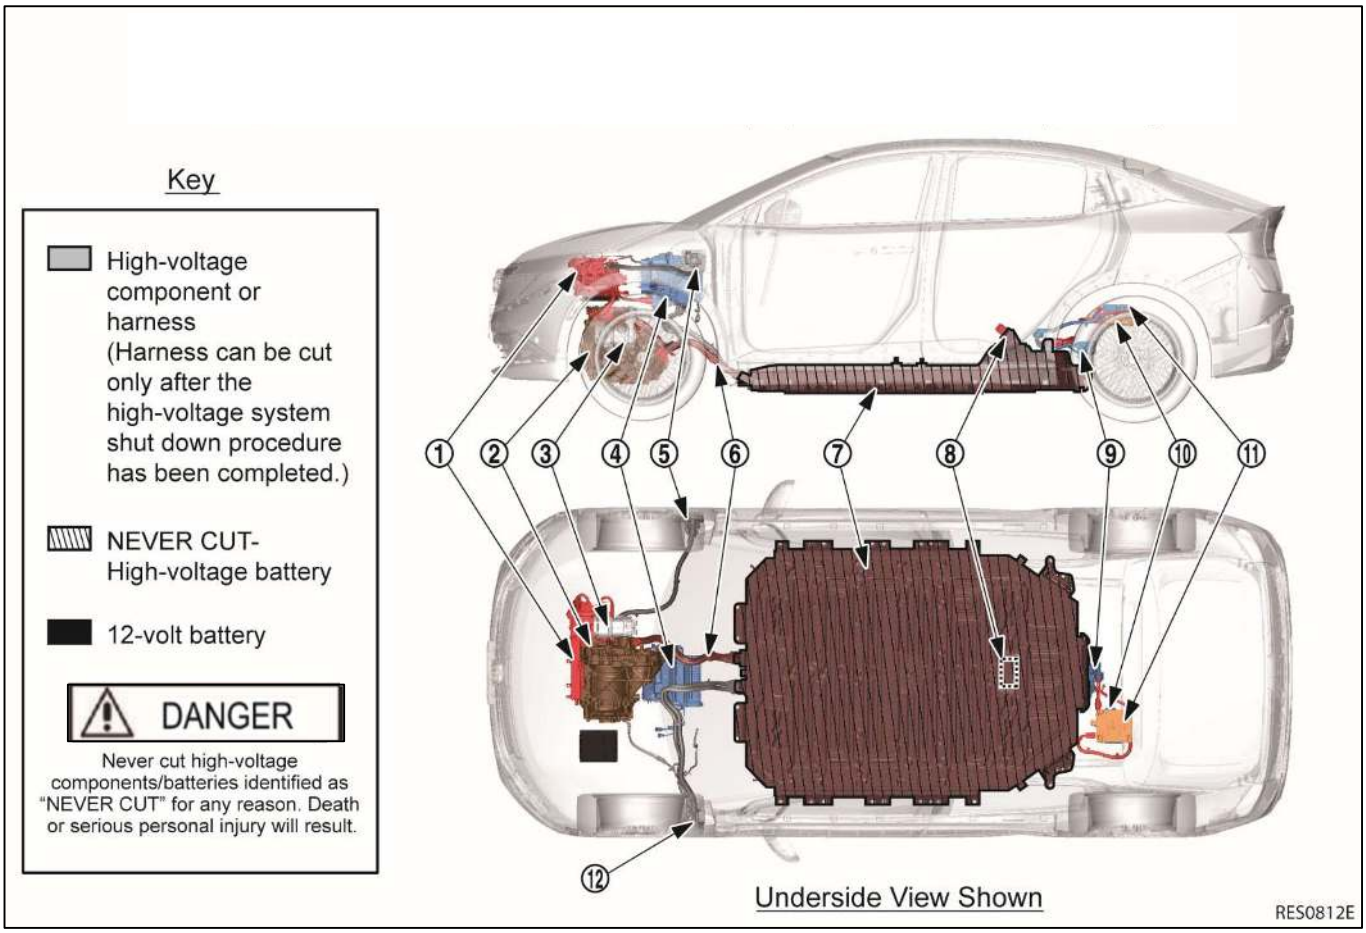


1. High-voltage power delivery assembly
   - On-board charger
   - DC/DC converter
   - High-voltage junction box
2. Electric powertrain assembly
   - Inverter
   - Traction motor
3. Electric air conditioner compressor
4. A/C unit (Built-in PTC cabin heater)
5. Normal charge port
6. High-voltage cables
7. High-voltage (Li-ion) battery
8. Service plug
9. PTC battery heater (If so equipped)
10. DC/AC inverter (Power plug inverter) (If so equipped)
11. Power plug junction box (If so equipped)
12. Quick charge port

4-2.4 High Strength Steel Locations Vehicle

upper surface

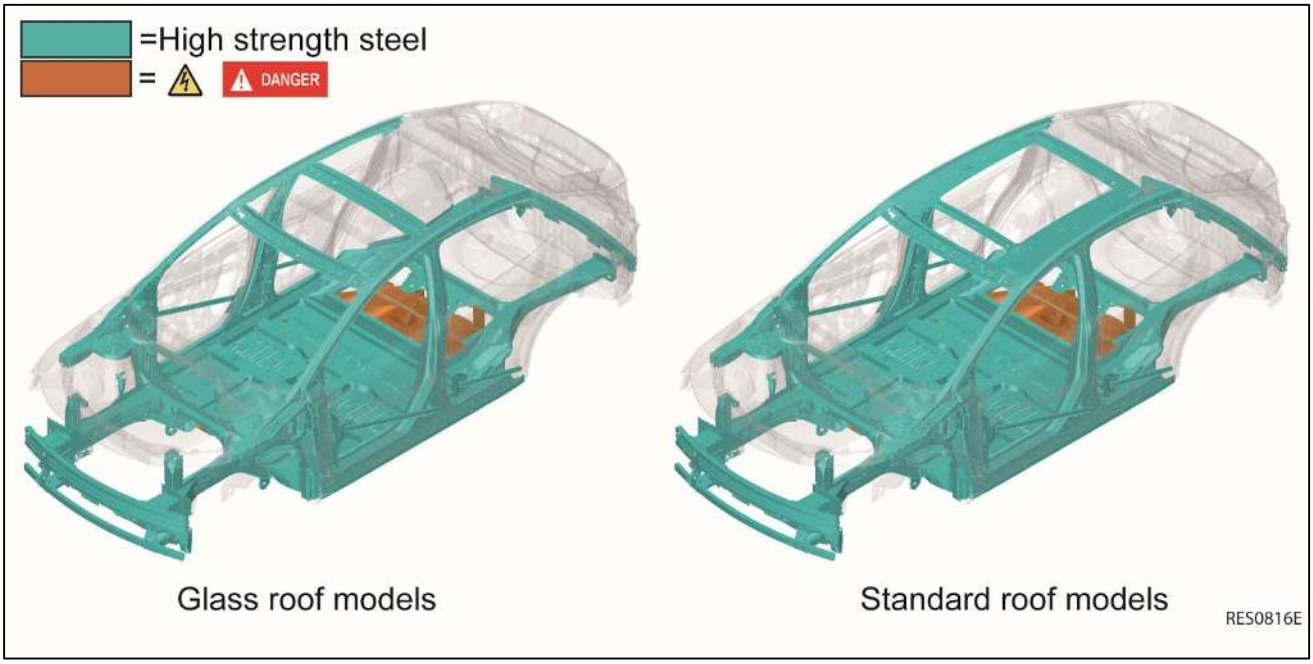


Vehicle bottom surface

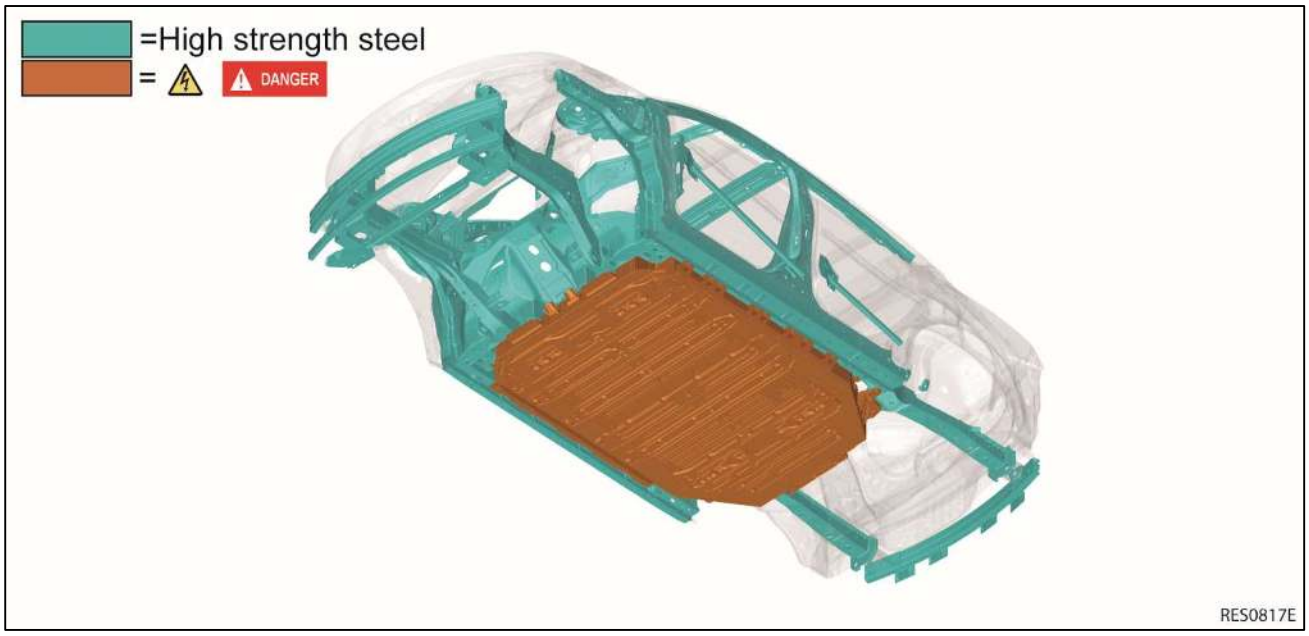

5. Stored Energy / Liquids / Gases / Solids

5-1 General Fluid Spills and Gas Leaks

5-1.1 Fluids and gases used in this vehicle

Type	Capacity	Dangers
	**Lithium-ion 372V**	
	**12-volt**	
	**R-1234yf 550 ± 25 g**	

5-1.2 Gas leaks

There are various types of gas used in vehicles. For example, there is nitrogen (N2) gas used in gas filled dampers and refrigerant gas for air conditioners


Refrigerant Gas

- The refrigerant gas used in air conditioner is R-1234yf.
- The gas is containing carbon and fluorine.
- The gas is colorless, odorless, and harmless.

5-2 Components Requiring Special Attention

The construction and functions of components requiring special attention during emergency response are described in this section.

5-2.1 Low-voltage Battery



- The 12-volt battery supplies power to the ECUs that control various systems and auxiliary components such as the power door lock, power window, power seat, etc.
- For the sake of ensuring safe emergency response operations, it is necessary to completely shut off the vehicle. Before performing any work, disconnect the negative battery terminal from the 12-volt battery and remember to shut off the power to the electrical system. This will prevent electrical fires and keep the vehicle from starting.
- It is important to note that the 12-volt battery electrolyte contains dilute sulfuric acid.
- Depending on the model, the 12-volt battery can be found in various locations in the motor compartment.



5-2.2 High-voltage Battery



First Responders:

If electrolyte solution leakage, or damage such as any problem with the high-voltage battery casing are observed, first responders should attempt to neutralize the battery by applying a large volume of water to the battery pack while wearing appropriate Personal Protective Equipment (PPE). The neutralization process helps stabilize the thermal condition of the battery pack but does not discharge the battery.

Dismantlers/Roadside Assistance Workers:

In cases of battery case breach or electrolyte leakage, contact the fire department immediately. If you must walk away from the vehicle, notify an appropriate responder of the fact that the vehicle contains a high-voltage system and warn all others.

High-voltage Battery Electrolyte Solution Characteristics:

- Clear in color
- Sweet odor
- Similar viscosity to water
- Since the high-voltage battery is made up of many small, sealed battery modules, electrolyte solution leakage should be minimal.

Please refer to 1-1.5 High-Voltage-Related and 12-volt-Related Component Locations and Descriptions (ERG-10) for battery specifications.

WARNING



When conventional coolant leaks (check reservoir) from the high-voltage (HV) battery cooling system, HV-battery can become unstable with risk of thermal runaway. An increasing HV-battery temperature might be an indicator of thermal runaway.

WARNING

The battery assembly cover should never be breached or removed under any circumstances, including fire. Doing so might result in severe electrical burns, shocks, or electrocution.

WARNING

When dealing with wastewater from extinguishing lithium-ion battery fires, fire services must treat it as hazardous waste due to its potential chemical contamination.

WARNING

The high-voltage battery contains electrolyte solution. To avoid exposure to electrolyte solution and serious personal injury, always wear appropriate solvent resistant Personal Protective Equipment (PPE) and read the following precautions:

- **Electrolyte solution is a skin and eye irritant – If contact with skin or eyes, rinse with plenty of water and see a doctor immediately.**
- **If electrolyte leak occurs, wear appropriate solvent resistant PPE. Absorb the electrolyte with a piece of dry cloth or equivalent absorbent material and keep it in an airtight container for proper disposal. Be sure to adequately ventilate the area.**
- **Electrolyte solution is highly flammable.**
- **Electrolyte liquid or fumes that have come into contact with water vapours in the air will create an oxidized substance. This substance may irritate skin and eyes. In these cases, rinse with plenty of water and see a doctor immediately.**
- **Electrolyte fumes (when inhaled) can cause respiratory irritation and acute intoxication. Move to fresh air and wash mouth with water. See a doctor immediately.**

6. In Case of Fire

6-1 Vehicle Fire

When dealing with “MITSUBISHI MOTORS” vehicle fires in emergency situations, it's important to follow specific procedures and take note of crucial points. For information on the pictograms used, please refer to chapter 10. Explanation of Pictograms Used (ERG-97) for an explanation.



6-1.1 Fire Extinguishing

Water is a proven effective extinguishing agent. Additionally, it is essential to use a fire extinguisher suitable for flammable liquid fires (such as gasoline, grease, oil, etc.), electrical fires (involving electrical wiring, electric devices, etc.), and general fires (involving solid objects, etc.).

LARGE AMOUNTS OF PURE WATER

⚠ **• Always utilize full Personal Protective Equipment (PPE) and self-contained breathing apparatus during firefighting operations. Smoke from a “MITSUBISHI MOTORS” vehicle fire is similar to smoke from a conventional vehicle fire**
• In the case of extinguishing a fire with water, large amounts of water from a fire hydrant (if possible) must be used. DO NOT extinguish fire with a small amount of water.

⚠ **• In the event of a small fire, a Type ABC fire extinguisher may be used for an electrical fire caused by wiring harnesses, electrical components, etc. or oil fire.**

Fire attack should follow standard firefighting practices.

If you must walk away from the vehicle, notify an appropriate responder or a rescue person of the fact that the vehicle is a hybrid car and contains a high-voltage system and warn all others.

During overhaul operations (late-stage fire suppression process to examine for remaining sources of heat), make sure the battery is fully cooled to avoid fire re-ignition. The battery could reignite if it is placed near fire. To avoid possible electrical shock and serious personal injury, do not breach the high-voltage battery case.

In a fire situation involving electrolyte burning, smoke from vehicles, or inhalation of toxic gases or vapours, there are several serious health and safety risks. Here's a breakdown of what to watch for and how to respond:

Electrolyte Burning (e.g., Lithium-ion Batteries):

Electrolyte materials, especially from lithium-ion batteries, can burn intensely and release toxic and corrosive vapours, including:

- **Hydrogen fluoride (HF)**
- **Phosphorus oxides**
- **Carbon monoxide and dioxide**
- **Volatile organic compounds (VOCs)**

Risks:

- **Severe eye, skin, and respiratory irritation or damage**
- **Risk of chemical burns and asphyxiation**

Advice

- **Avoid exposure; use self-contained breathing apparatus (SCBA) and chemical-resistant gear**


6-1.2 Use a thermal imaging camera

As a precaution, it is strongly recommended for first responders to utilize a thermal imaging camera to verify that there is no potential for thermal runaway and reignition.


Once the battery has been completely cooled down (which may require up to 24 hours), it should be continuously monitored for an additional hour to ensure that there is no reoccurrence of heat. Subsequently, the vehicle should be driven to an open and level area, and a 15-meter safety zone should be established to prevent individuals from approaching the vehicle.

Responders should always protect themselves with Personal Protective Equipment (PPE), including a Self-Contained Breathing Apparatus (SCBA), and take appropriate measures to protect civilians downwind from the incident.

POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE!



6-1.3 Gas strut - Risk of missile effect



Gas struts in the vehicle tailgate present a significant missile effect hazard during a vehicle fire. These struts are under high internal pressure from gas (typically nitrogen) and oil. In a fire, the intense heat can cause the gas to expand rapidly, leading to failure and propelling components at high speeds.



7. In Case of Submersion

7-1 Water Submersion

Even if a vehicle equipped with a high-voltage battery is partially or completely submerged, the vehicle body and high-voltage circuit are insulated, so there is no risk of electric shock from touching the vehicle.
Also, since the water and the vehicle are at the same potential, there is no risk of electric shock when entering the water.

The statements above assume that the high-voltage system and its insulation remain intact. However, the condition of the high-voltage system and the integrity of its insulation cannot be confirmed without proper inspection after submersion. Therefore, until the vehicle has been properly inspected, all submerged vehicles must be treated as presenting a potential electrical hazard and handled using appropriate Personal Protective Equipment (PPE).

⚠DANGER

⚠ Damage level of submerged vehicle may not be apparent. Handling a submerged vehicle without appropriate Personal Protective Equipment (PPE) will result in serious injury or death from electrical shock.

⚠WARNING

- **⚠ The power switch of the submerged vehicle must be turned OFF first, if possible. Then the vehicle must be completely out of the water and drained to avoid electrical shock.**
- **⚠ Always wear appropriate Personal Protective Equipment (PPE) and remove/ drain water before removing the service plug when working on a vehicle after a fire or submersion to avoid electrical shock.**
- **⚠ If the vehicle is in the water, to avoid electrical shock NEVER touch the high- voltage components, harnesses or service plug. PPE must always be worn when touching or working on high-voltage components.**

8. Towing / Transportation / Storage

8-1 Roadside Assistance

8-1.1 Jump Starting

To start the EV system with a booster battery, the instructions and precautions below must be followed.

⚠WARNING

If done incorrectly, jump starting can lead to a 12-volt battery explosion, resulting in severe personal injury or death. It could also damage your vehicle.

Discharged 12-volt battery may cause the following issues:

- The instrument cluster cannot be displayed while the power switch is turned ON. The start-up sound is not audible. (The electric car system cannot start.)
- The high-voltage battery cannot be charged.
- The vehicle cannot be shifted out of PARK normally.


⚠WARNING

- **⚠ To avoid electrical shock, the high-voltage battery CANNOT be jump started.**
- **Explosive hydrogen gas is always present in the vicinity of the 12-volt battery. Keep all sparks and flames away from the 12-volt battery.**
- **Do not allow battery fluid to come into contact with eyes, skin, clothing or painted surfaces. Battery fluid is a corrosive sulfuric acid solution that can cause severe burns. If the fluid comes into contact with anything, immediately flush the contacted area with water.**
- **The booster battery must be rated at 12-volt. Use of an improperly rated battery can damage the vehicle.**
- **Whenever working on or near a 12-volt battery, always wear suitable eye protectors (for example, goggles or industrial safety spectacles) and remove rings, metal bands, or any other jewelry. Do not lean over the 12-volt battery when jump starting.**
- **Do not attempt to jump start a frozen battery. It could explode and cause serious injury.**
- **ECLIPSE SPORTBACK is equipped with an automatic cooling fan. It could come on at any time. Keep hands and other objects away from it.**
- **Always follow the jump starting instructions below. Failure to do so could result in damage to the charging system and cause personal injury.**

⚠CAUTION

- **Do not use ECLIPSE SPORTBACK to jump start another vehicle.**
- **Do not attempt to perform a jump start on the 12-volt battery at the same time that the high-voltage battery is being charged. Doing so may damage the vehicle or charging equipment and could cause an injury.**

Jump Starting Procedures

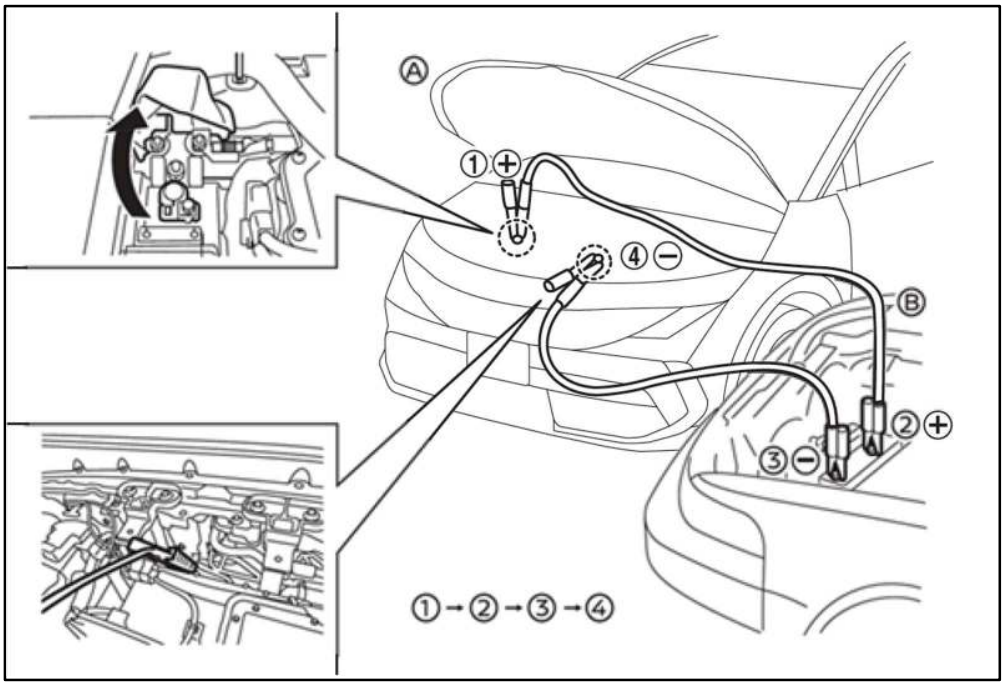

1. If the booster battery is in another vehicle (**B**), position the two vehicles (**A** and **B**) to bring their 12-volt batteries into close proximity to each other.

   DO NOT allow the two vehicles to touch.
2. Apply the parking brake.

   If the 12-volt battery is discharged, the power switch cannot be moved from the OFF position. Connect the jumper cables to the booster vehicle (B) before pushing the power switch.
3. Push the P (Park) position switch to place the vehicle in the P (Park) position.
4. Switch off all unnecessary electrical systems (headlights, heater, air conditioner, etc.).
5. Place the power switch in the OFF position.
6. Remove the vent caps (if so equipped) on the 12-volt battery.
7. Connect jumper cables in the sequence as illustrated **(** ①→ ②→③→④**)**.

⚠CAUTION

- **If the 12-volt battery is discharged, the power switch cannot be moved from the OFF position. Connect the jumper cables to the booster vehicle (B) before pushing the power switch.**
- **Always connect positive (+) to positive (+) and negative (-) to body ground (for example, as illustrated), not to the 12-volt battery.**
- **Make sure the jumper cables do not touch moving parts in the motor compartment and that the cable clamps do not contact any other metal.**

8. Start the engine of the booster vehicle (**B**).
9. While the booster vehicle (**B**) engine is running, turn the power switch ON while pressing the brake pedal in order to place the ECLIPSE SPORTBACK in READY mode.

⚠CAUTION

If the system does not start right away, push the power switch to the OFF position and wait at least 10 seconds before trying again.

10. After starting the EV system, carefully disconnect the negative cable and then the positive cable (④ →③→②→①). Keep the EV system on for over twenty (20) minutes to charge the 12-volt battery.
11. Replace the vent caps (if so equipped).
12. If necessary, connect the vehicle to a charging station or EVSE (Electric Vehicle Supply Equipment) to charge the high-voltage battery. The vehicle cannot be driven unless the high-voltage battery is charged.

    NOTE:


    If it is not possible to turn the ECLIPSE SPORTBACK system ON by following this procedure, it is recommended you contact a "MITSUBISHI MOTORS" certified ECLIPSE SPORTBACK dealer immediately.

8-1.2 Electric Parking Brake Release Procedures

Releasing Electric Parking Brake Using Parking Brake Switch

If so equipped, the electric parking brake can be released by operating the parking brake switch shown below.

1. With the power switch in the ON position, depress the brake pedal and push the switch down.
   The indicator light (**A**) will turn off.

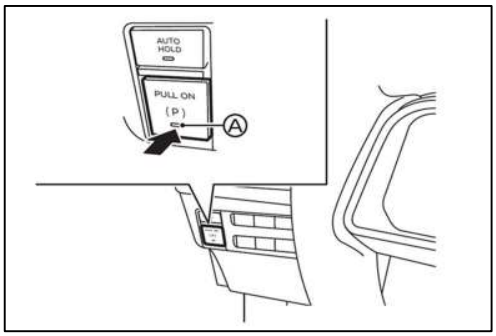

2. Check that the electric parking brake indicator light (Ⓟ or PARK) goes out.
3. If the electric parking brake indicator light remains illuminated or parking brake cannot be released, refer to 8-1.2 Electric Parking Brake Release Procedures in this section.

Releasing Electric Parking Brake Where Parking Brake Switch Cannot Be Used

If the vehicle is equipped with electric parking brake and cannot be released using the parking brake switch, the following steps can be used to mechanically release the electric parking brake on each rear brake caliper assembly.


⚠WARNING

To avoid possible personal injury or vehicle damage, use wheel chocks or take appropriate steps to prevent the vehicle from rolling freely.


⚠WARNING

Never reuse the parking brake actuator. Doing so may cause brake system failure and possibly result in serious personal injury.


1. Disconnect the parking brake actuator harness connector (**1**) from the rear caliper assembly (**2**).

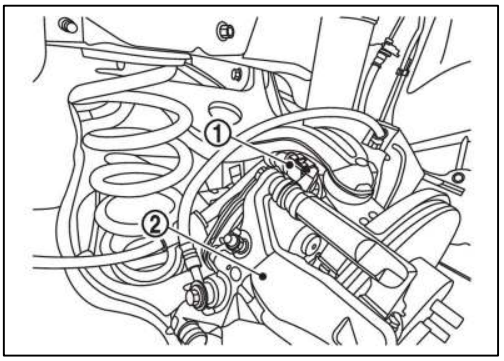

2. Remove the parking brake actuator (**1**) from the rear brake caliper assembly (**2**).

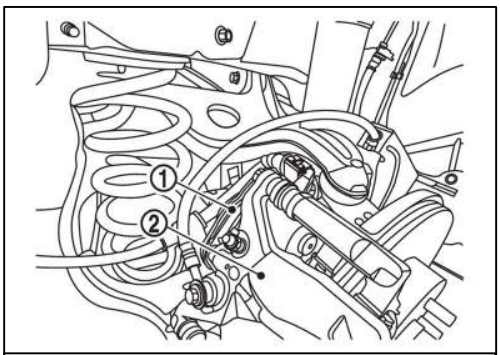

3. Rotate the rear brake caliper assembly (**1**) spindle part (**A**) clockwise to release the parking brake.

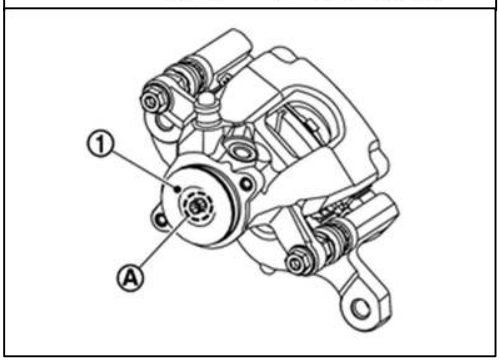

8-1.3 P (Park) Position Release Procedure

If you need to release the vehicle from the P (Park) position, proceed as follows. When power switch is turned OFF, ECLIPSE SPORTBACK automatically shifts to P position.

⚠WARNING


To avoid possible personal injury or vehicle damage, use wheel chocks or take appropriate steps to prevent the vehicle from rolling freely.

Never set the vehicle in READY state

Be sure to firmly position wheel chocks before P (Park) position is released.

1. 12-volt electric power is supplied with booster cable to the 12-volt battery.
2. Set the power switch to ON without depressing brake pedal.
3. Check that parking brake is activated. (Check that indicator lamp for parking brake is ON.)
4. Press the N button on the shift buttons.
    a. Depress brake pedal and shift to “N” position. After maintaining this status sometime, check that shift position indicator is indicated to “N” position.

5. Open hood and remove fuse and fusible link block cover (**1**).

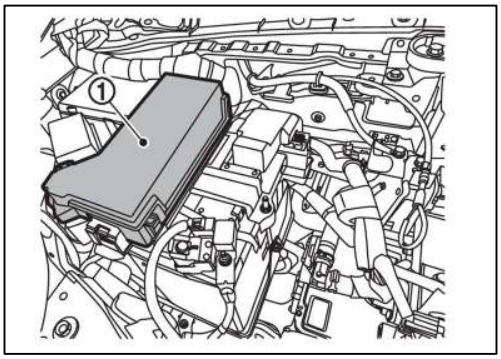


NOTE:

When the shift position is in N and the driver side door is opened, the shift position will automatically change to P.

If the passenger side door is opened, the shift position will remain in N. Therefore, when working alone, exit the vehicle from the passenger side door.

6. Remove 30A fuse (shown as SHIFT MOTOR) (**1**).

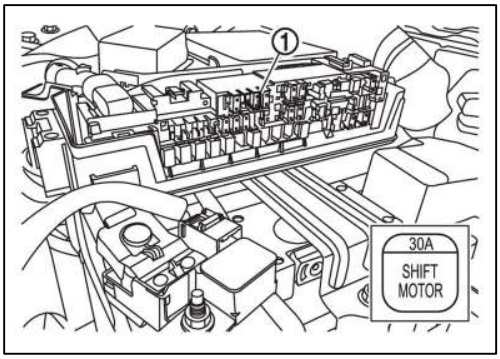

7. Release parking brake.

⚠WARNING

To avoid possible personal injury or vehicle damage, use wheel chocks or take appropriate steps to prevent the vehicle from rolling freely.

8. Set the power switch to OFF.
9. Remove booster cable from 12-volt battery.
10. Move the vehicle while power switch is OFF.

⚠WARNING

To avoid possible personal injury or vehicle damage, use wheel chocks or take appropriate steps to prevent the vehicle from rolling freely.

Be sure to firmly position wheel chocks when P (Park) position is manually released.

Reset Procedure

1. Disconnect the 12-volt battery cable from the negative terminal.
2. Install 30A fuse (shown as SHIFT MOTOR).
3. Install fuse and fusible link block cover.
4. Connect the 12-volt battery cable to the negative terminal.
5. Wait for 5 seconds after set the power switch to ON and then push P position switch.
6. Set the power switch to OFF and wait for 5 seconds.

8-1.4 Towing

Vehicle Specifications

Length	173.5 in. (4,405 mm)
Width (with outside mirrors)	71.3 in. (1,810 mm)
Overall Height (with antenna)	61.3 in. (1,557 mm)
Wheelbase	116.6 in. (2,690 mm)
Minimum Ground Clearance	5.4 in. (135 mm)
Overall Vehicle Weight	4167.5-4381.4 lbs. (1,890-1,987 kg) (Weight varies by equipment and trim level.)
Front Approach Angle	18.0°
Rear Departure Angle	23.7°


Towing Guidelines

"MITSUBISHI MOTORS" strongly recommends that ECLIPSE SPORTBACK be towed with the vehicle be placed on a flatbed truck.

⚠ CAUTION

- **Never tow with the four (4) wheels on the ground.**
- **Transport the vehicle only after turning the power switch OFF.**
- **Safety chains or cables must be attached only to the main structural members of the vehicle. Otherwise, the vehicle body will be damaged.**
- **Do not use the vehicle tie down hook to free a vehicle stuck in sand, snow, mud, etc.**
- **Never tow a vehicle using the vehicle tie down hook.**
- **Pulling devices should be routed so they do not touch any part of the suspension, steering, brake, high-voltage or cooling systems.**
- **Pulling devices such as ropes or canvas straps are not recommended for use in vehicle towing or recovery.**
- **All applicable state, local, and regional laws concerning towing operations must be complied with.**

"MITSUBISHI MOTORS" recommends that the vehicle be placed on a flatbed truck as illustrated:

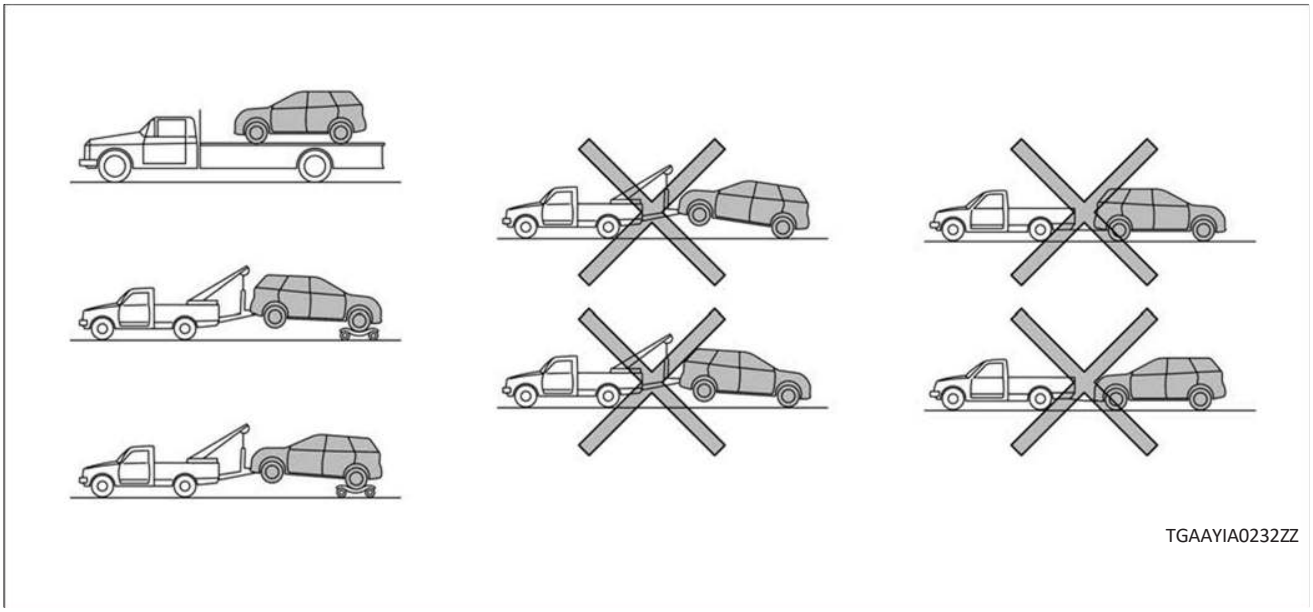

TGAAYIA0232ZZ

NOTE:

It is also permissible to transport the ECLIPSE SPORTBACK facing rearward on a flatbed.

NOTE:
If the vehicle cannot be placed in Neutral, a P (Park) release procedure may be required. Refer to 8-1.2 Electric Parking Brake Release Procedures (ERG-51).

Use of Vehicle Equipped Hooks for Recovery Operations

If the vehicle is stuck in sand, snow, mud, etc., use a tow strap or other device designed specifically for vehicle recovery. Always follow the manufacturer's instructions for the recovery device.


⚠WARNING

To avoid vehicle damage, serious personal injury or death when recovering a stuck vehicle:

- **Tow chains or cables must be attached only to main structural members of the vehicle.**
- **Do not use the vehicle tie-downs to tow or free a stuck vehicle.**
- **Only use devices specifically designed for vehicle recovery and follow the manufacturer's instructions.**
- **Always pull the recovery device straight out from the front of the vehicle. Never pull at an angle.**
- **Route recovery devices so they do not touch any part of the vehicle except the attachment point.**


Front Tie Down Hook:

- Do not use the front tie down hook for towing or vehicle recovery.

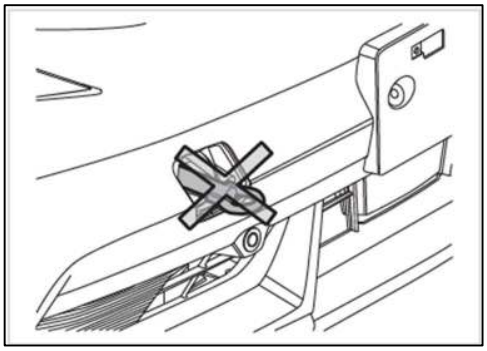

Rear Tie Down Hook:

- Do not use the rear tie down hook for towing or vehicle recovery.

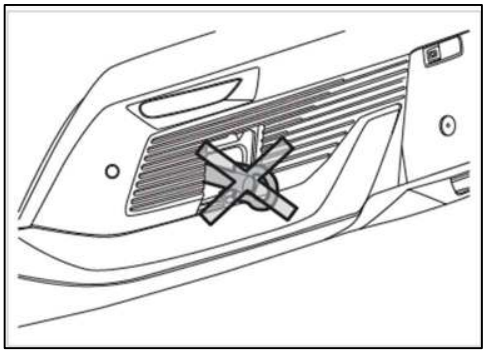


8-1.5 Storing the Vehicle

If ECLIPSE SPORTBACK needs to be stored or left unattended, the high-voltage system must be shut down and a sign put on the vehicle indicating it is an electric vehicle with high-voltage dangers.
Refer to 8-1.5 Storing the Vehicle .

8-1.6 Tools Installed In The Vehicle

The tools are located in the inside the cargo area. The jack, jack rod, and wheel nut wrench are dealer options for this vehicle and may not be equipped.

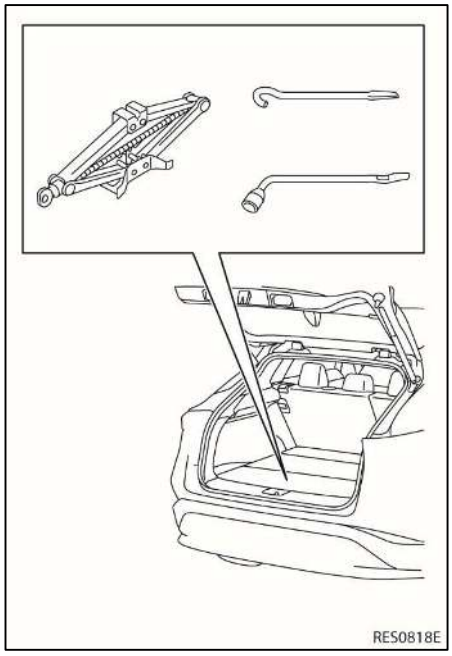


8-1.7 Jacking Up the Vehicle and Changing a Tire

ECLIPSE SPORTBACK is not equipped with a jack or spare tire as standard equipment. However, the following jacking instructions apply when using the optional “MITSUBISHI MOTORS” jack.

1. Remove floor under cover lid fixing floor under cover clips toward arrows as shown in figure.

(**A**) : Front side

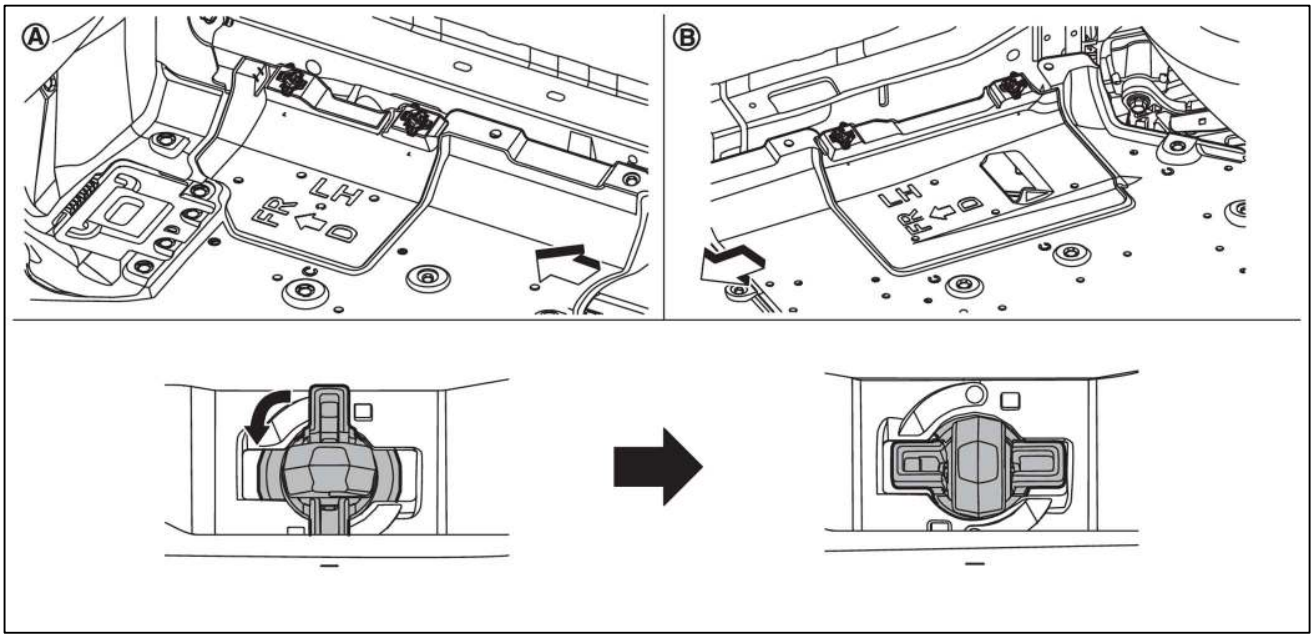


(**B**) : Rear side

⇦ : Vehicle front

2. Remove floor under cover lid according to numerical order 1→2 indicated arrows as shown in figure


(**A**) : Front side

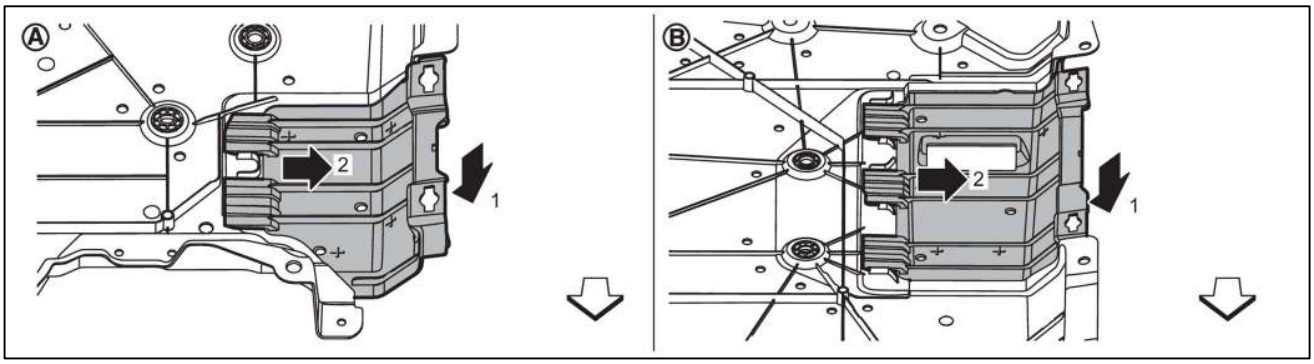


(B) : Rear side

⇦ : Vehicle front


3. Place the jack directly under the jack-up point as illustrated so the top of the jack contacts the vehicle at the jack-up point. Align the jack head between the two notches in the front or the rear as shown. Also fit the groove of the jack head between the notches as shown. The jack should be used on level firm ground.

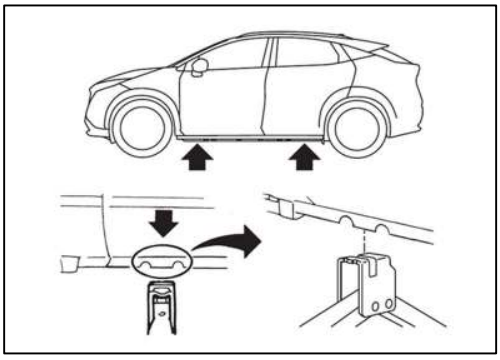

4. If so equipped, to remove the wheel cover.
5. Loosen each wheel nut one or two turns by turning it counterclockwise with the wheel nut wrench. Do not remove the wheel nuts until the tire is off the ground.
6. To lift the vehicle, securely hold the jack lever and rod with both hands as shown. Carefully raise the vehicle until the tire clears the ground. Remove the wheel nuts, and then remove the tire.

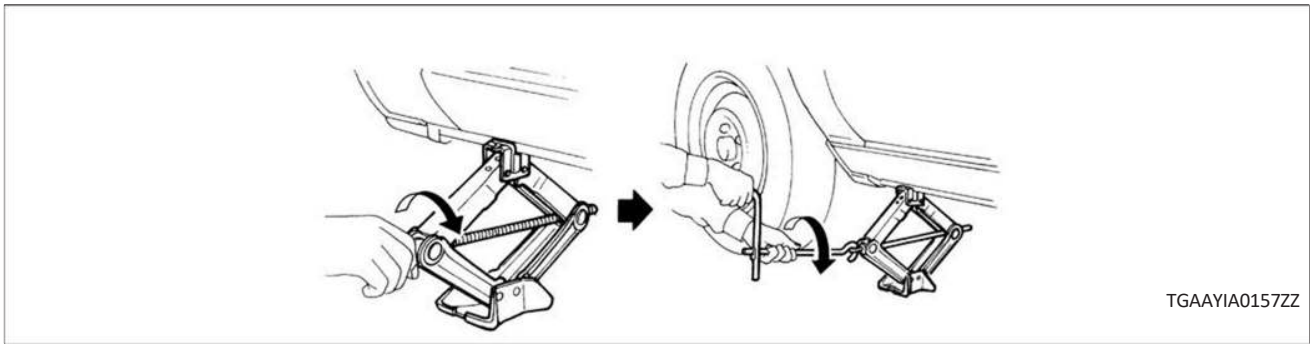

7. Install new or repaired tire and hand-tighten the wheel nuts with the wheel nut wrench in an alternating pattern.

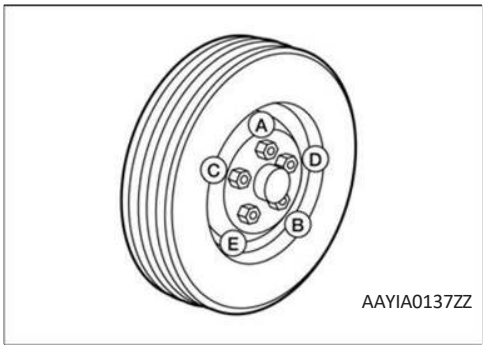

8. Securely torque the wheel nuts in an alternating pattern to 80 ft-lbs. (108 Nm).

8-1.8 Repairing a Flat Tire with "MITSUBISHI MOTORS" Emergency Tire Puncture Repair Kit

ECLIPSE SPORTBACK is equipped with a tire repair kit as standard equipment. It is intended to be used to temporarily repair minor tire punctures.

⚠WARNING

- **After using the Emergency Tire Sealant to repair a minor tire puncture, do not drive the vehicle at speeds faster than 50 MPH (80 km/h).**
- **Immediately after using the Emergency Tire Sealant to repair a minor tire puncture, it is recommended you visit a "MITSUBISHI MOTORS" certified ECLIPSE SPORTBACK dealer to inspect, and repair or replace the tire. The Emergency Tire Sealant cannot permanently seal a punctured tire. Continuing operation of the vehicle without a permanent tire repair can lead to a crash.**
- **If you used the Emergency Tire Sealant to repair a minor tire puncture, it is recommended you visit a "MITSUBISHI MOTORS" certified ECLIPSE SPORTBACK dealer to replace the TPMS sensor in addition to repairing or replacing the tire.**
- **"MITSUBISHI MOTORS" recommends using only "MITSUBISHI MOTORS" Genuine Emergency Tire Sealant provided with the vehicle. Other tire sealants may damage the valve stem seal which can cause the tire to lose air pressure.**
- **Make sure the parking brake is applied.**
- **Turn the power switch OFF while using the Emergency Tire Sealant to repair a flat tire.**
- **Have all passengers get out of the vehicle and stand in a safe place away from traffic and clear of the vehicle.**
- **Make sure the vehicle is located safely away from oncoming traffic and other hazards.**
- **Observe the following precautions when using the tire repair compound:**
  - **Swallowing the compound is dangerous. Immediately drink as much water as possible and seek prompt medical assistance.**
  - **Rinse well with lots of water if the compound comes into contact with skin or eyes. If irritation persists, seek prompt medical attention.**
  - **Keep the repair compound out of the reach of children.**
  - **The emergency repair compound may cause a malfunction of the tire pressure sensors and cause the low tire pressure warning light to illuminate. Have the tire pressure sensor replaced as soon as possible.**

⚠ CAUTION


- **To avoid the Emergency Tire Puncture Repair Kit from being damaged during storage or use:**
  - **Only use the Emergency Tire Puncture Repair Kit on the ECLIPSE SPORTBACK vehicle. Do not use it on other vehicles.**
  - **Only use the kit to inflate the tires of the ECLIPSE SPORTBACK and to check the vehicle's tire pressure.**
  - **Only plug the compressor into a 12-volt DC car power point.**
  - **Keep the kit free of dirt and water.**
  - **Do not disassemble or modify the kit.**
  - **Do not drop the kit or allow hard impacts to the kit.**
- **Do not use the Emergency Tire Puncture Repair Kit under the following conditions. It is recommended you contact a "MITSUBISHI MOTORS" certified ECLIPSE SPORTBACK dealer or professional road assistance:**
  - **when the sealant has passed its expiration date (shown on the label attached to the bottle).**
  - **when the cut or the puncture in the tire is approximately 0.20 in (5 mm) or longer.**
  - **when the tire sidewall is damaged.**
  - **when the vehicle has been driven with extremely low tire pressure.**
  - **when the tire has come off the inside or the outside of the wheel.**
  - **when the wheel is damaged.**
  - **when two (2) or more tires are flat.**

Take out the emergency tire puncture repair kit from the storage area under the luggage floor board. The repair kit consists of the following items:

(1). "MITSUBISHI MOTORS" Genuine Emergency Tire Sealant bottle

(2). Air compressor*

*: The compressor shape may differ depending on the models.

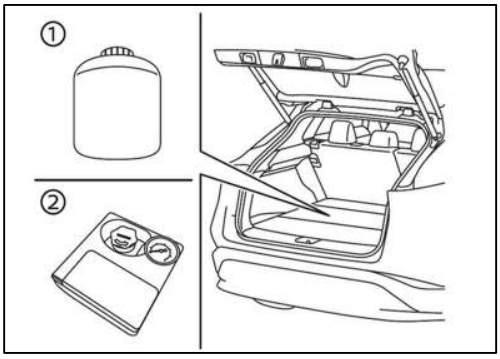

Before Using Emergency Tire Puncture Repair Kit


- If any foreign object (for example, a screw or nail) is embedded in the tire, do not remove it.
- Check the expiration date of the sealant (shown on the label attached to the bottle). Never use a sealant if the expiration date has passed.

Repairing the Tire

1. Take out the speed restriction sticker from the air compressor, then put it in a location where the driver can see it while driving.


⚠ CAUTION

Do not obstruct the view of gauges or warning lights with the sticker. Do not put the sticker on the steering wheel pad.

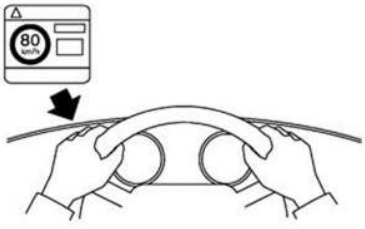


TGAAYIA0162ZZ


2. Take the hose (**1**) and power plug (**2**) out of the air compressor. Remove the cap of the bottle holder from the air compressor.

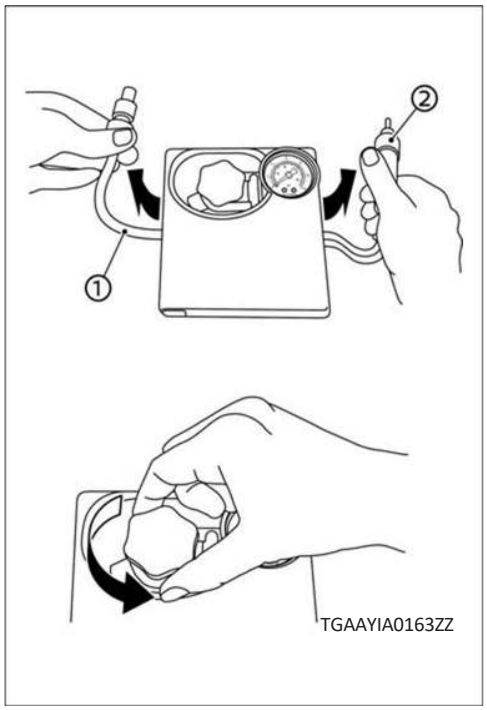


3. Remove the cap from the tire sealant bottle and screw the bottle clockwise onto the bottle holder. Leave the bottle seal intact. Screwing the bottle onto the bottle holder will pierce the seal of the bottle.

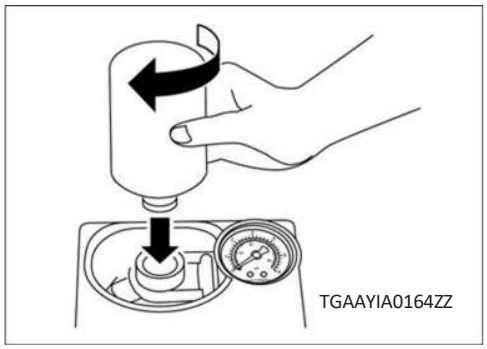

4. Remove the cap from the tire valve on the flat tire.
5. Remove the protective cap (**A**) of the hose and screw the hose securely onto the tire valve. Make sure that the pressure release valve (**B**) is securely tightened. Make sure that the air compressor switch is in the OFF (O) position and then insert the power plug into the power outlet in the vehicle.

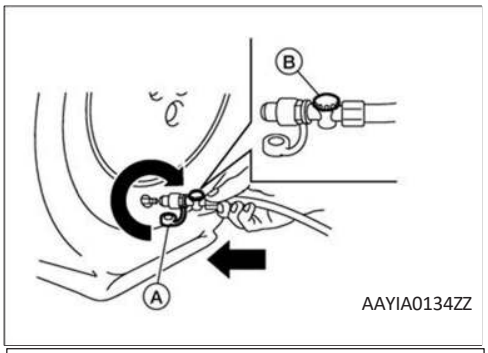

6. Place the power switch in the "ON" position.
7. Turn the air compressor switch to the ON (-) position and inflate the tire up to the pressure that is specified on the tire and loading information label affixed to the driver's side center pillar if possible or to the minimum of 26 psi (180 kPa). Turn the air compressor off briefly in order to check the tire pressure with the pressure gauge.
   If the tire is inflated to higher than the specified pressure, lower the tire pressure by releasing air with the pressure release valve.

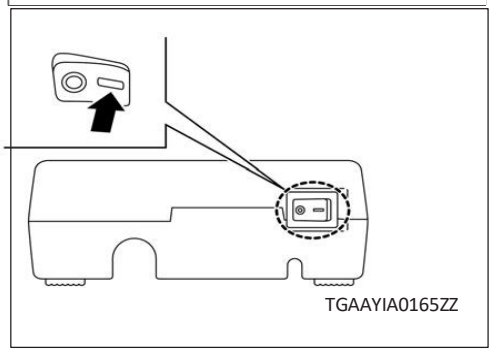

NOTE:

- **There is a possibility that the pressure reaches 87 psi (600 kPa) while the tire is being inflated, but it is normal condition. Usually the pressure will drop in about 30 seconds.**
- **Do not operate the compressor for more than 10 minutes.**

⚠WARNING

- **To avoid serious personal injury while using the emergency tire puncture repair kit:**
  - **Securely tighten the compressor hose to the tire valve. Failure to do so can cause the sealant to spray into the air and get into your eyes or on your skin.**
  - **Do not stand directly beside the damaged tire while it is being inflated because of the risk of rupture. If there are any cracks or bumps in the tire, turn the compressor OFF immediately.**

If the tire pressure does not increase to 26 psi (180 kPa) **within ten (10) minutes**, the tire may be seriously damaged and **the tire cannot be repaired with this tire repair kit**.

It is recommended you contact a "MITSUBISHI MOTORS" certified ECLIPSE SPORTBACK dealer.

8. When the tire pressure is at the specified amount, turn the air compressor OFF. If the tire cannot be inflated to the specified amount, the air compressor can be turned OFF at the minimum of 26 psi (180 kPa). Remove the power plug from the power outlet and quickly remove the hose from the tire valve. Attach the protective cap and the valve cap.

⚠WARNING

To avoid serious personal injury when stowing the emergency tire puncture repair kit keep the sealant bottle screwed into the compressor. Failure to do so can cause the sealant to spray into the air and get into your eyes or on your skin.

9. Immediately drive the vehicle for ten (10) minutes or 2 miles (3 km) at a speed below 50 MPH (80 km/h).
10. After driving, make sure the air compressor switch is in the OFF position. Then screw the hose securely onto the tire valve. Check the tire pressure with the pressure gauge. Temporary repair is completed if the tire pressure does not drop. Make sure the pressure is adjusted to the pressure specified on the tire and loading information label before driving.
11. If the tire pressure drops, repeat the steps from 5 to 10. If the pressure drops again or under 19 psi (130 kPa), **the tire cannot be repaired with this tire repair kit**. It is recommended you contact a "MITSUBISHI MOTORS" certified ECLIPSE SPORTBACK dealer. The sealant bottle and hose cannot be reused to repair another punctured tire. It is recommended you contact a "MITSUBISHI MOTORS" certified ECLIPSE SPORTBACK dealer to purchase replacements.

After Repairing the Tire

It is recommended you visit a "MITSUBISHI MOTORS" certified ECLIPSE SPORTBACK dealer for tire repair/replacement as soon as possible.

⚠WARNING

- **After using Emergency Tire Sealant to repair a minor puncture, do not drive the vehicle at speeds faster than 50 MPH (80 km/h).**
- **Immediately after using Emergency Tire Sealant to repair a minor tire puncture, it is recommended you take the vehicle to a "MITSUBISHI MOTORS" certified ECLIPSE SPORTBACK dealer to inspect and repair or replace the tire. The Emergency Tire Sealant cannot permanently seal a punctured tire. Continuing operation of the vehicle without a permanent tire repair can lead to a crash.**
- **Do not inject any tire liquid or aerosol tire sealant into the tires as this may cause a malfunction of the tire pressure sensors.**
- **If you used the Emergency Tire Sealant to repair a minor tire puncture, it is recommended you visit a "MITSUBISHI MOTORS" certified ECLIPSE SPORTBACK dealer to replace the TPMS sensor in addition to repairing or replacing the tire.**
- **"MITSUBISHI MOTORS" recommends using only "MITSUBISHI MOTORS" Genuine Emergency Tire Sealant provided with the vehicle. Other tire sealants may damage the valve stem seal which can cause the tire to lose air pressure.**

8-2 Storing the Vehicle

⚠WARNING

- **The service plug must be removed to shut down the high-voltage system for storage.**
- **Do not store a vehicle inside a structure. Keep the vehicle away from any structures or other vehicles if the high-voltage battery is severely damaged. There is possibility of delayed fire from a severely damaged high-voltage battery.**

8-2.1 Danger Sign Example

If ECLIPSE SPORTBACK needs to be stored or left unattended, the high-voltage system must be shut down by removing the service plug (refer to 8-2.3 Removing the Service Plug (ERG-67)), and a sign put on the vehicle indicating it is an electric vehicle with high-voltage dangers. For example:

Person in charge:_____

DANGER:
HIGH VOLTAGE REPAIR
IN PROGRESS.
DO NOT TOUCH!

DANGER:
HIGH VOLTAGE REPAIR
IN PROGRESS.
DO NOT TOUCH!

Person in charge:_____

Copy this page and put it after folding on the roof of the vehicle in service.

AAYIA0020GB

8-2.2 Preparation Items

Preparation Items	Specification	Purpose
Personal Protective Equipment (PPE): Insulated gloves 	Up to 1,000V	For protection from high-voltage electrical shock
Insulated shoes 	–	
Safety shield 	–	
Leather gloves 	Must be able to fasten tight around the wrist (worn over insulated gloves).	To protect insulated gloves
Wrenches 	Size: 10mm	To remove the service plug access cover bolts. To remove the 12-volt battery terminal bolt.
Solvent resistant protection gloves	–	To utilize in the event of a high-voltage battery electrolytic solution leak.
Solvent resistant protection shoes	–	
Absorbent pad	The same pad used for internal combustion engine fluids can be used.	To absorb any high-voltage battery electrolytic solution leakage.
Standard fire fighting equipment	Standard fire fighting equipment Depending on type of fire (vehicle or battery) use standard fire fighting equipment (water or extinguisher).	To extinguish a fire.
Insulated tape	Insulating	To cover any damaged harnesses to protect from and prevent electrical shock. Tape should cover all bare or damaged wire.

Personal Protective Equipment (PPE) Protective Wear Control

Perform an inspection of the Personal Protective Equipment (PPE) items before beginning work. Do not use any damaged PPE items.

Daily Inspection

This inspection is performed before and after use. The responder who will be using the items should perform the inspection and check for deterioration and damage.

- Insulated rubber gloves should be inspected for scratches, holes and tears. (Visual check and air leakage test)
- Insulated safety boots should be inspected for holes, damage, nails, metal pieces, wear or other problems on the soles. (Visual check)
- Insulated rubber sheet should be inspected for tears. (Visual check)

Insulated Tools

When performing work at locations where high-voltage is applied (such as terminals), use insulated tools meeting 1,000V/300A specifications.

8-2.3 Removing the Service Plug

⚠ DANGER


- **Do not remove the service plug without always wearing appropriate Personal Protective Equipment (PPE) to help protect the responder from serious injury or death by electrical shock.**
- **Immediately cover the service plug socket with insulated tape. The high- voltage battery retains high-voltage power even when the service plug is removed. To avoid electric shock, NEVER touch the terminals inside the socket.**

⚠WARNING

⚠ To avoid unintended reinstallation and risk of electrical shock and severe personal injury or death, the service plug should be securely stored away from the vehicle while the vehicle is in storage.


1. Check the READY indicator status. If it is ON, the high-voltage system is active.
2. Place the selector lever in the Park (P) position.

3. Press the power switch once to turn OFF the high-voltage system. Then verify whether the READY indicator is OFF.

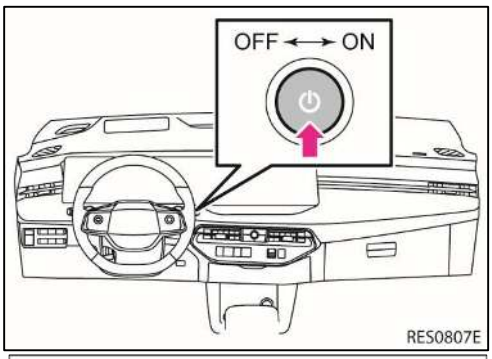


4. Open the zipper (**1**) on the lower front-facing surface of the rear center seat cushion.


   ⇦ : Vehicle front.

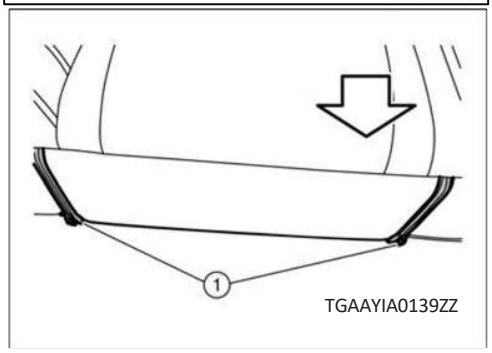

5. Remove the service plug terminal cover mounting bolt (**A**) and nuts (**B**), and remove the service plug terminal cover.

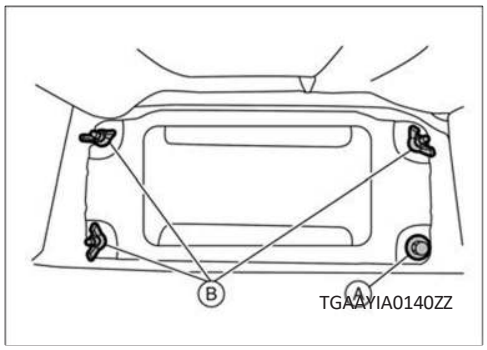


6. Remove the service plug using the following steps: (**1**) push up lever until it stops, (**2**) press pawl to unlock, (**3**) push up lever, (**4**) pull out service plug.

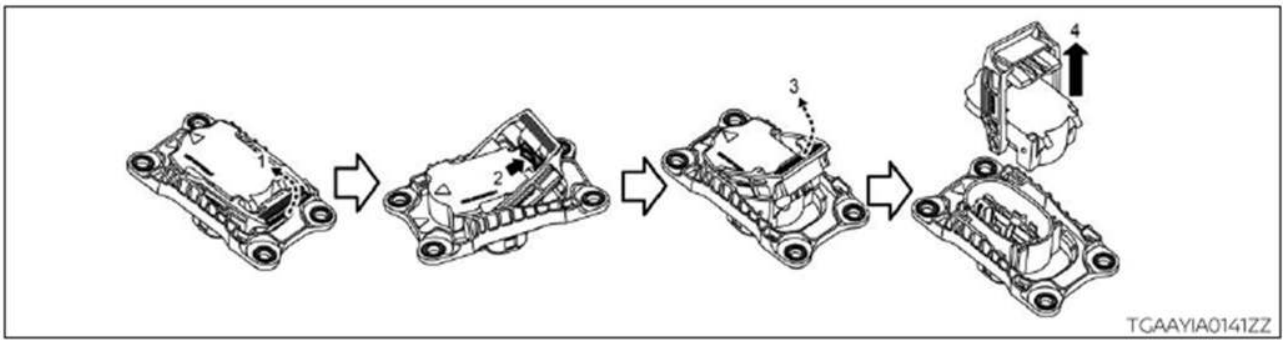


7. **Wait at least (10) minutes for complete discharge** of the high-voltage capacitor after the service plug has been removed.

8. Open the hood.

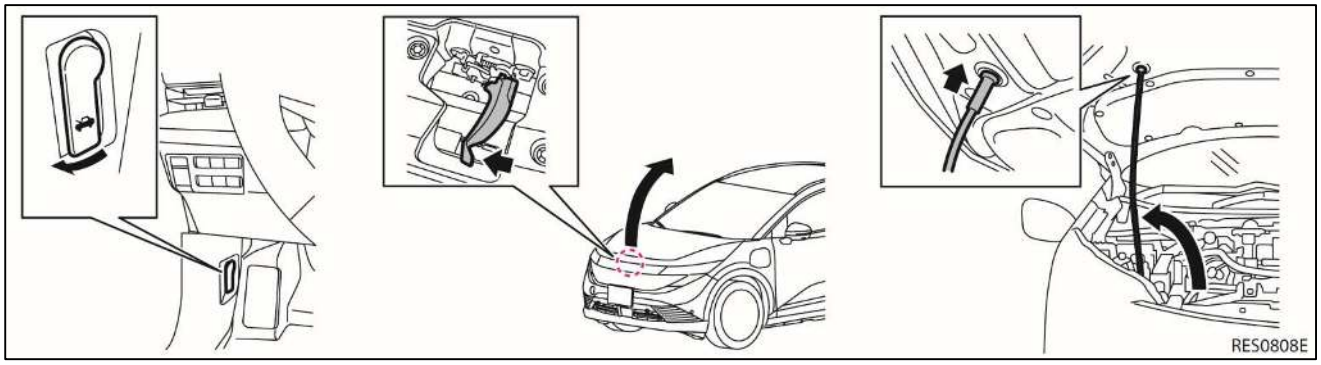

9. Disconnect the 12-volt battery (**1**) negative (-) cable (**A**). Insulate the negative (-) battery cable terminal with insulated tape.

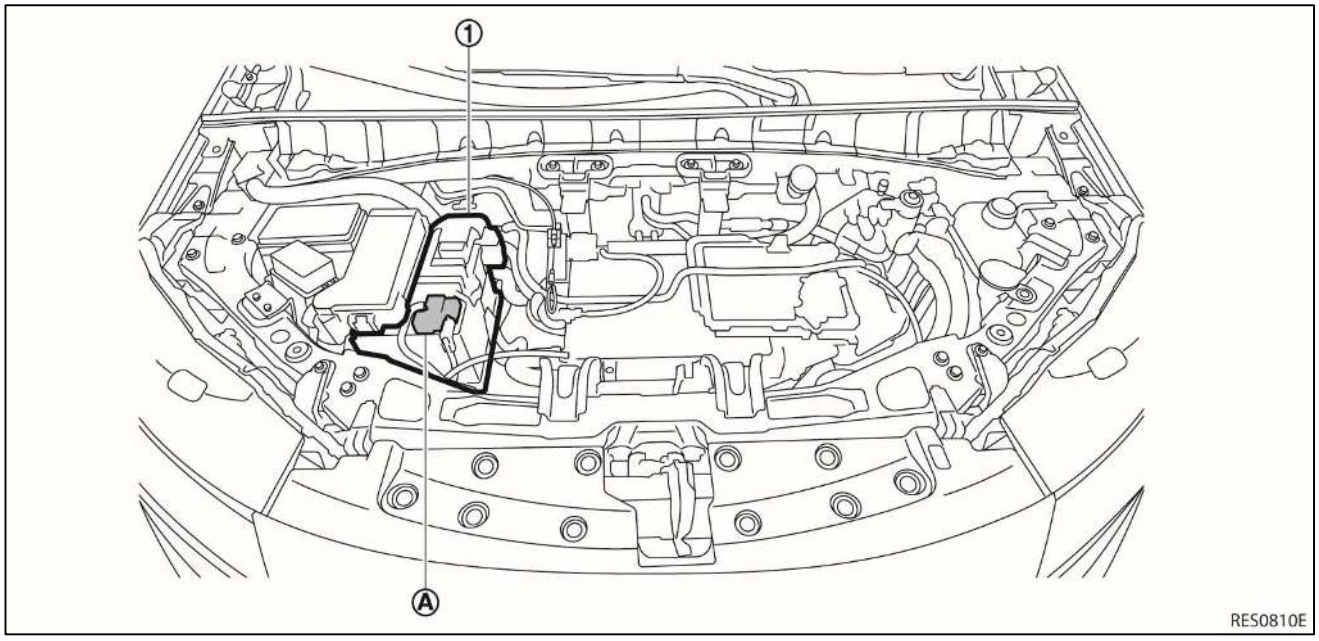

10. The vehicle is now ready for storage.

8-3 Preparation for Dismantling

⚠ DANGER

- **⚠ Failure to properly shut down the high-voltage electrical system before the Dismantling Procedures are performed will result in serious injury or death from electrical shock. To prevent serious injury or death, NEVER touch high- voltage harnesses or components without always wearing appropriate Personal Protective Equipment (PPE).**
  voltage harnesses or components without always wearing appropriate Personal Protective Equipment (PPE).
- **⚠ If it is necessary to touch any of the high-voltage harnesses or components you must always wear appropriate PPE to avoid electrical shock. Shut down the high-voltage system by following the steps outlined in 1-1.7 High-Voltage Circuit Shut-Off Syst (ERG-15). Wait at least ten (10) minutes for complete discharge of the high-voltage capacitor after the high-voltage system has been shut down.**

⚠WARNING

- **⚠ NEVER assume the ECLIPSE SPORTBACK is shut OFF simply because it is quiet.**
- **⚠ If it becomes necessary for the dismantler to leave the vehicle, place a "DANGER" sign (for example, refer to 8-2.1 Danger Sign Example (ERG–64)) on the vehicle to alert other people that the vehicle contains a high-voltage battery.**
- **⚠ If the READY indicator or charging indicator are ON, the high-voltage system is active.**
- **⚠ If possible, be sure to verify that the READY indicator on the instrument cluster is OFF and the high-voltage system is stopped.**

8-3.1 Discharging Procedures


⚠ DANGER

Do not perform this procedure if the high-voltage battery is damaged. If you are unsure of battery damage, use extreme caution and always wear appropriate Personal Protective Equipment (PPE) when working on high-voltage components.


High-voltage battery discharging must take place before dismantling. Sufficient discharging can be achieved by following these steps.

1. Place the selector lever into the Park (P) position.
2. Apply the parking brake.
3. Set wheel chocks to ensure the vehicle is completely immobilized.


4. Apply brake pedal (**1**) and press the power switch (**2**) to turn the system ON. Confirm READY indicator (**3**) in instrument cluster turns ON.

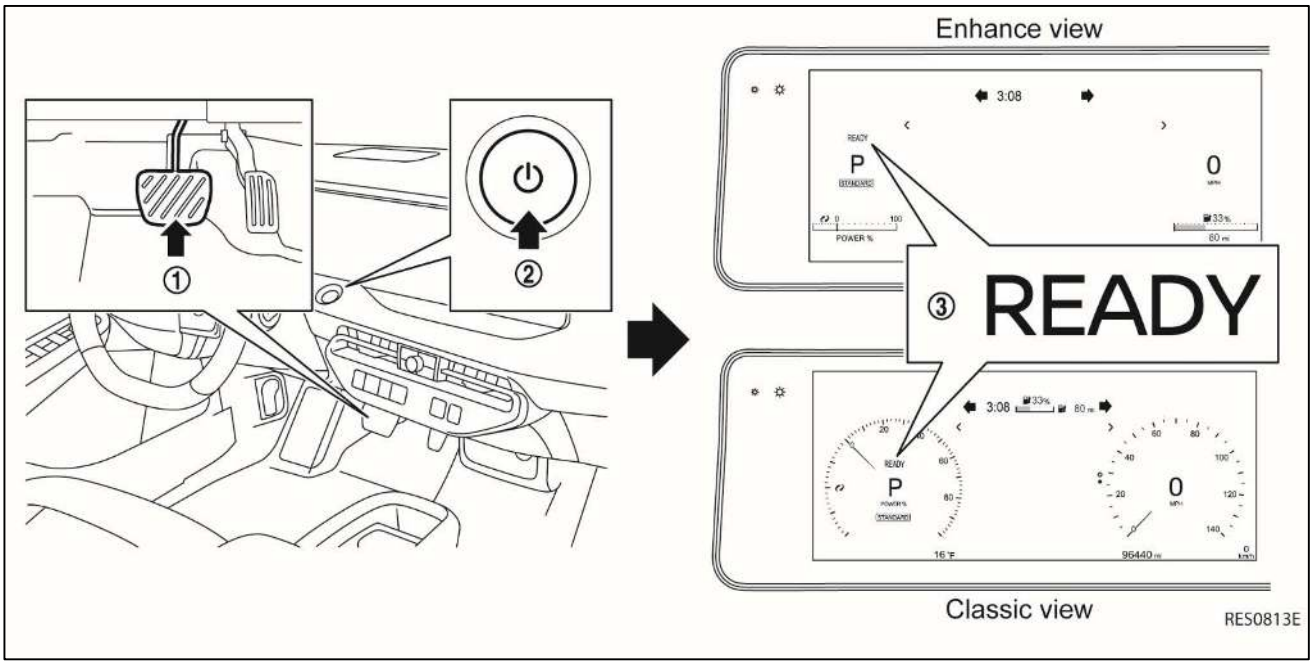

5. Turn ON electric devices such as headlamps, cabin heater (set to the highest temperature and maximum fan speed; do not use AUTO A/C setting), navigation system and rear window defroster to discharge the high-voltage battery.
6. Monitor high-voltage battery available charge gauge (**1**) in the vehicle information display. (**A**) Enhance view (**B**) Classic view.

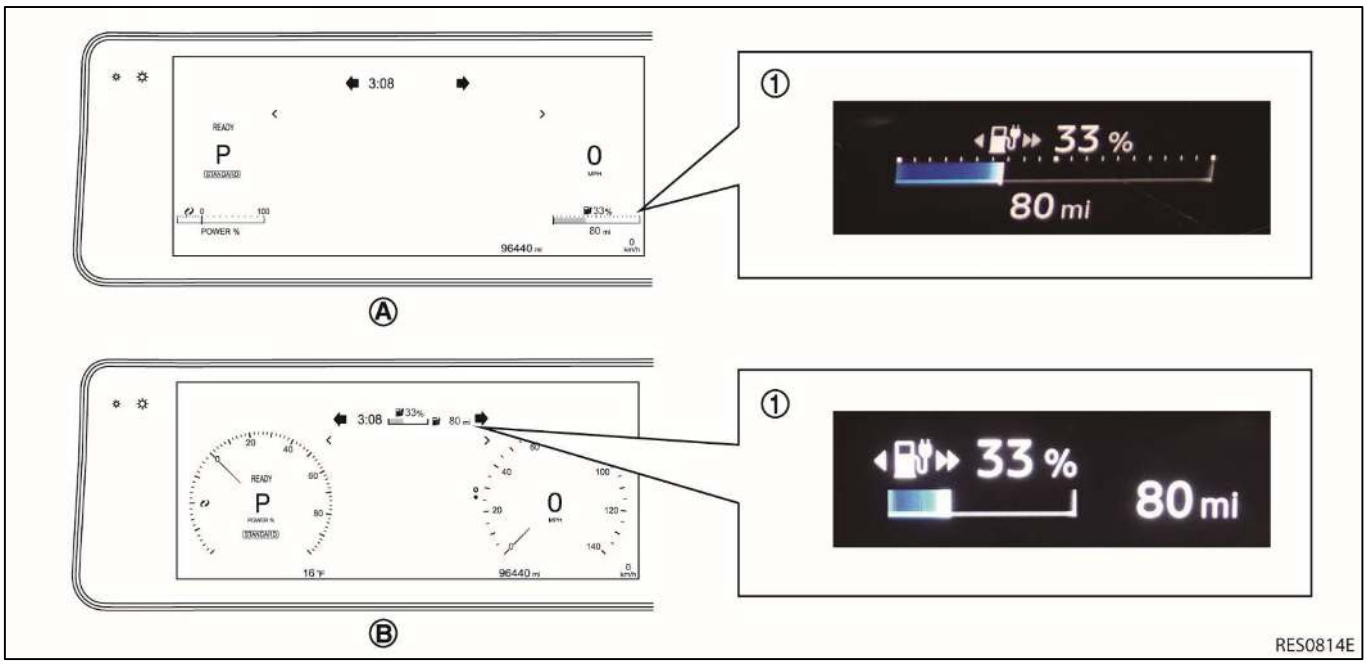

7. Discharge is complete when the READY indicator and orange electric vehicle (EV) system warning indicator both turn off and message is displayed "Push brake and power switch to drive".

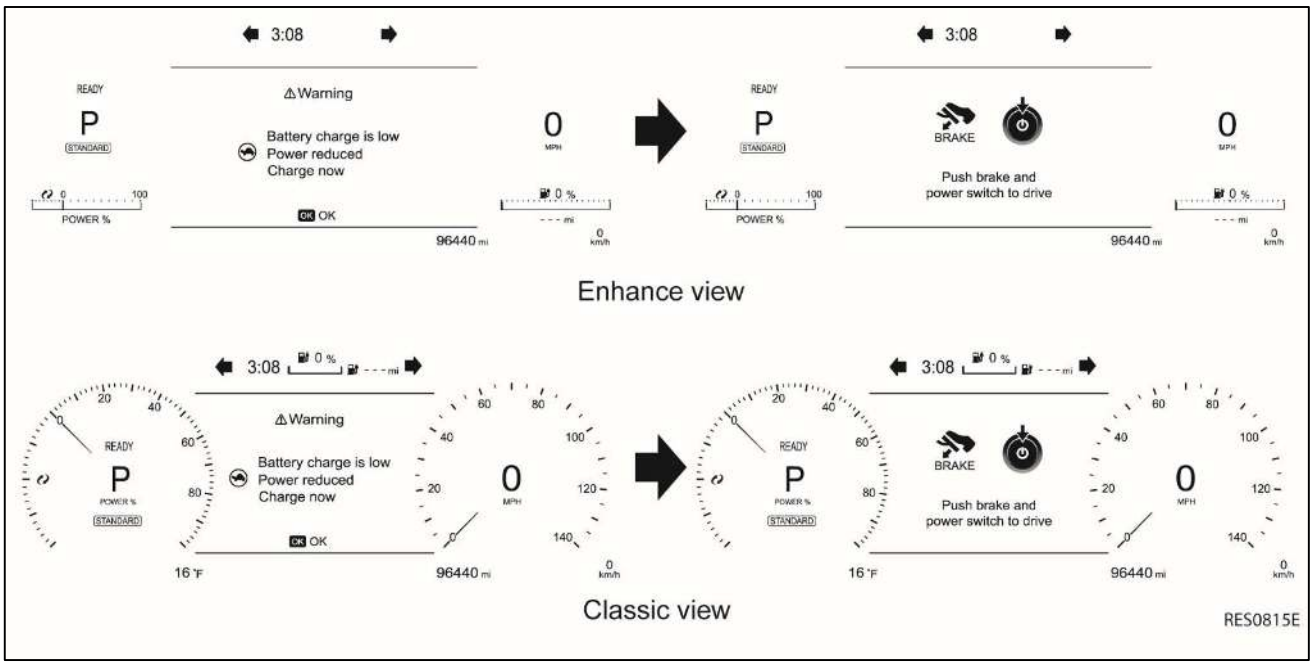

8. Press the power switch to turn the system OFF.

8-3.2 Preparation Items

Preparation Items	Specification	Purpose
Personal Protective Equipment (PPE): Insulated gloves 	Up to 1,000V	For protection from high-voltage electrical shock
Insulated shoes 	–	
Safety shield 	–	
Leather gloves 	Must be able to fasten tight around the wrist (worn over insulated gloves).	To protect insulated gloves
Wrenches 	Size: 10mm	To remove the service plug access cover bolts. To remove the 12-volt battery terminal bolt.
Solvent resistant protection gloves	–	To utilize in the event of a high-voltage battery electrolytic solution leak.
Solvent resistant protection shoes	–	
Absorbent pad	The same pad used for internal combustion engine fluids can be used.	To absorb any high-voltage battery electrolytic solution leakage.
Standard fire fighting equipment	Standard fire fighting equipment Depending on type of fire (vehicle or battery) use standard fire fighting equipment (water or extinguisher).	To extinguish a fire.
Insulated tape	Insulating	To cover any damaged harnesses to protect from and prevent electrical shock. Tape should cover all bare or damaged wire.

8-3.3 Personal Protective Equipment (PPE) and Insulated Tools

Personal Protective Equipment (PPE) Protective Wear Control

Perform an inspection of the Personal Protective Equipment (PPE) items before beginning work. Do not use any damaged PPE items.

Daily Inspection

This inspection is performed before and after use. The responder who will be using the items should perform the inspection and check for deterioration and damage.

- Insulated rubber gloves should be inspected for scratches, holes and tears. (Visual check and air leakage test)
- Insulated safety boots should be inspected for holes, damage, nails, metal pieces, wear or other problems on the soles. (Visual check)
- Insulated rubber sheet should be inspected for tears. (Visual check)

Insulated Tools

When performing work at locations where high-voltage is applied (such as terminals), use insulated tools meeting 1,000V/300A specifications.

8-3.4 High-voltage System Shut-Down Procedures

Once the high-voltage battery is properly discharged, any of the following procedures can shut down and isolate the high-voltage system. The dismantling operation can only begin after shutting down the high-voltage system. If the vehicle is heavily damaged, for example the high-voltage battery is deformed, broken or cracked, appropriate Personal Protective Equipment (PPE) must always be used and the high-voltage battery and high-voltage components must not be touched.

⚠ DANGER

- **⚠ Failure to properly shut down the high-voltage system before the dismantling procedures are performed will result in serious injury or death from electrical shock. To prevent serious injury or death, NEVER touch high-voltage harnesses or components without always wearing appropriate Personal Protective Equipment (PPE). PPE must always be worn when touching or working on high-voltage components**
- **⚠ When contact with high-voltage components or high-voltage harnesses is unavoidable, or when there is risk of such contact, you must always wear appropriate PPE. PPE must always be worn when touching or working on high- voltage components.**

⚠WARNING

- **⚠ If the charge connector is connected to the vehicle, remove it. Refer to 3-1.2_Removing_the_Charge_Connector (ERG-22).**
- **⚠ The vehicle contains parts that contain powerful magnets. If a person who is wearing a pacemaker or other medical device is close to these parts, the medical device may be affected by the magnets. Such persons must not perform work on the vehicle.**
- **Be sure to verify that the READY indicator is off and the high-voltage system is stopped.**
- **After the high-voltage system is shut down, please wait at least ten (10) minutes for complete discharge of the high-voltage capacitor. While waiting, do not operate any vehicle functions.**
- **After shutting down the high-voltage system and removing the 12-volt battery negative (-) terminal, wait at least three (3) minutes to discharge the air bag capacitor. Even though the 12-volt battery negative (-) is disconnected, the Supplemental Restraint System (SRS) air bag maintains voltage at least three (3) minutes. During this time, there is a possibility of sudden SRS air bag inflation due to harness short circuit or damage and it may cause serious injuries.**
- **Always shut down the high-voltage system before disconnecting the 12-volt battery. Not doing so may result in serious injury or death from electrical shock.**
- **The 12-volt system will remain active even after the 12-volt battery negative (-) terminal is removed while the high-voltage system is active. The high-voltage system is active during any of the following conditions:**
- **grille emblem illumination is turned ON**
- **charging indicator is turned ON**
- **READY indicator is turned ON**

Refer to 1-1.2_Interior_Component_Location (ERG-07) for location of these indicators. This is because DC/DC converter will not shut down and power will be supplied to the 12-volt system and high-voltage system continuously.

Powering Down the High-voltage System

The high-voltage system can be shut down with any 1 of the following procedures:

- Turn OFF the power switch **and** disconnect the 12-volt battery. Refer to 3-1.5__Primary_Procedure (ERG-26).
- When the power switch cannot be operated due to vehicle damage. Refer to 3-1.6_Alternate_Procedure_1_(Remove_Fuse) (ERG-28)).
- Remove the service plug and disconnect the 12-volt battery. Refer to 3-1.7_Alternate_Procedure_2_(Remove Service Plug)(ERG-30).

8-4 Dismantling Information

Removal or repair of the high-voltage battery requires special tools and specific training. “MITSUBISHI MOTORS” strongly recommends that only “MITSUBISHI MOTORS” certified ECLIPSE SPORTBACK dealer technicians perform these operations.

8-4.1 Precautions for Handling High-voltage Battery

⚠ DANGER

- **⚠ Because ECLIPSE SPORTBACK contains a high-voltage battery, there is the risk of electric shock, electric leakage, or similar accidents if the high-voltage components or vehicle is handled incorrectly. Be sure to follow the correct work procedures when performing inspection and dismantling.**
- **⚠ If it is necessary to touch any of the high-voltage harnesses or components you must always wear appropriate Personal Protective Equipment (PPE) and properly shut-down the high-voltage system by removing the service plug.**
- **⚠ Be sure to always wear appropriate PPE before beginning work on the high- voltage system.**
- **⚠ Be sure to remove the service plug in order to shut-down the high-voltage system before performing inspection or dismantling of high-voltage system harnesses and parts.**
- **⚠ If the vehicle is heavily damaged, for example the high-voltage battery is deformed, broken, or cracked; appropriate PPE must always be used at all times to avoid electrical shock.**

⚠WARNING


- ⚠ The colors of the high-voltage harnesses and connectors are all orange. Orange "High-voltage" labels are applied to the high-voltage battery and other high- voltage devices. Do not touch the high-voltage battery or other high-voltage devices without always wearing appropriate PPE.
- ⚠ Clearly identify the persons responsible for high-voltage work and ensure that other persons do not touch the vehicle. When not working, cover high-voltage parts with an insulating cover sheet and sign or similar item to prevent other persons from contacting them.
- ⚠ Be sure to put the removed service plug in your pocket and carry it with you so another person does not accidentally reinstall it while work is in progress.
- ⚠ The high-voltage battery retains high-voltage at all times. Personal Protective Equipment (PPE) must always be worn when touching or working on high- voltage components to avoid risk of electrical shock and severe personal injury or death.
- ⚠ Immediately insulate disconnected high-voltage connectors and terminals with insulated tape.
- ⚠ The vehicle contains parts that contain powerful magnets. If a person who is wearing a pacemaker or other medical device is close to these parts, the medical device may be affected by the magnets. Such persons must not perform work on the vehicle.
- ⚠ Because this vehicle uses components that contain high-voltage and powerful magnetism, do not carry any metal products which may cause short circuits, or any magnetic media (cash cards, credit cards, etc.) which may be damaged when working on the vehicle.
- ⚠ Keep removed high-voltage battery packs away from rain to avoid electric shock.
- Do not heat remove battery packs higher than 158° F (70° C).

⚠CAUTION

There is the possibility of a malfunction occurring if the vehicle is changed to READY status while the service plug is removed.


8-4.2 High-voltage Battery Pack Removal

Exploded View: High-voltage battery

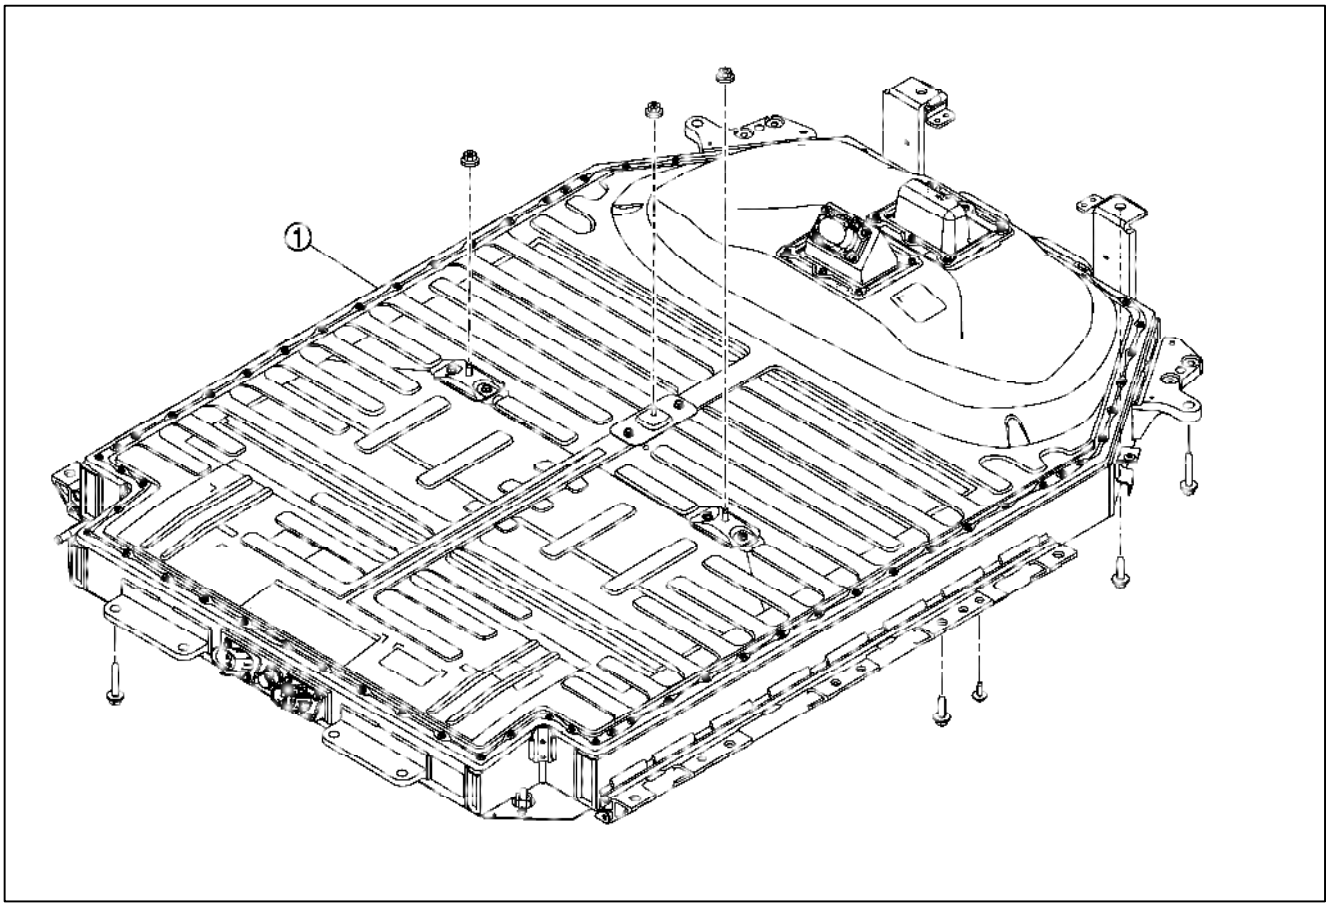

1. High-voltage battery

Exploded View: Luggage Trim

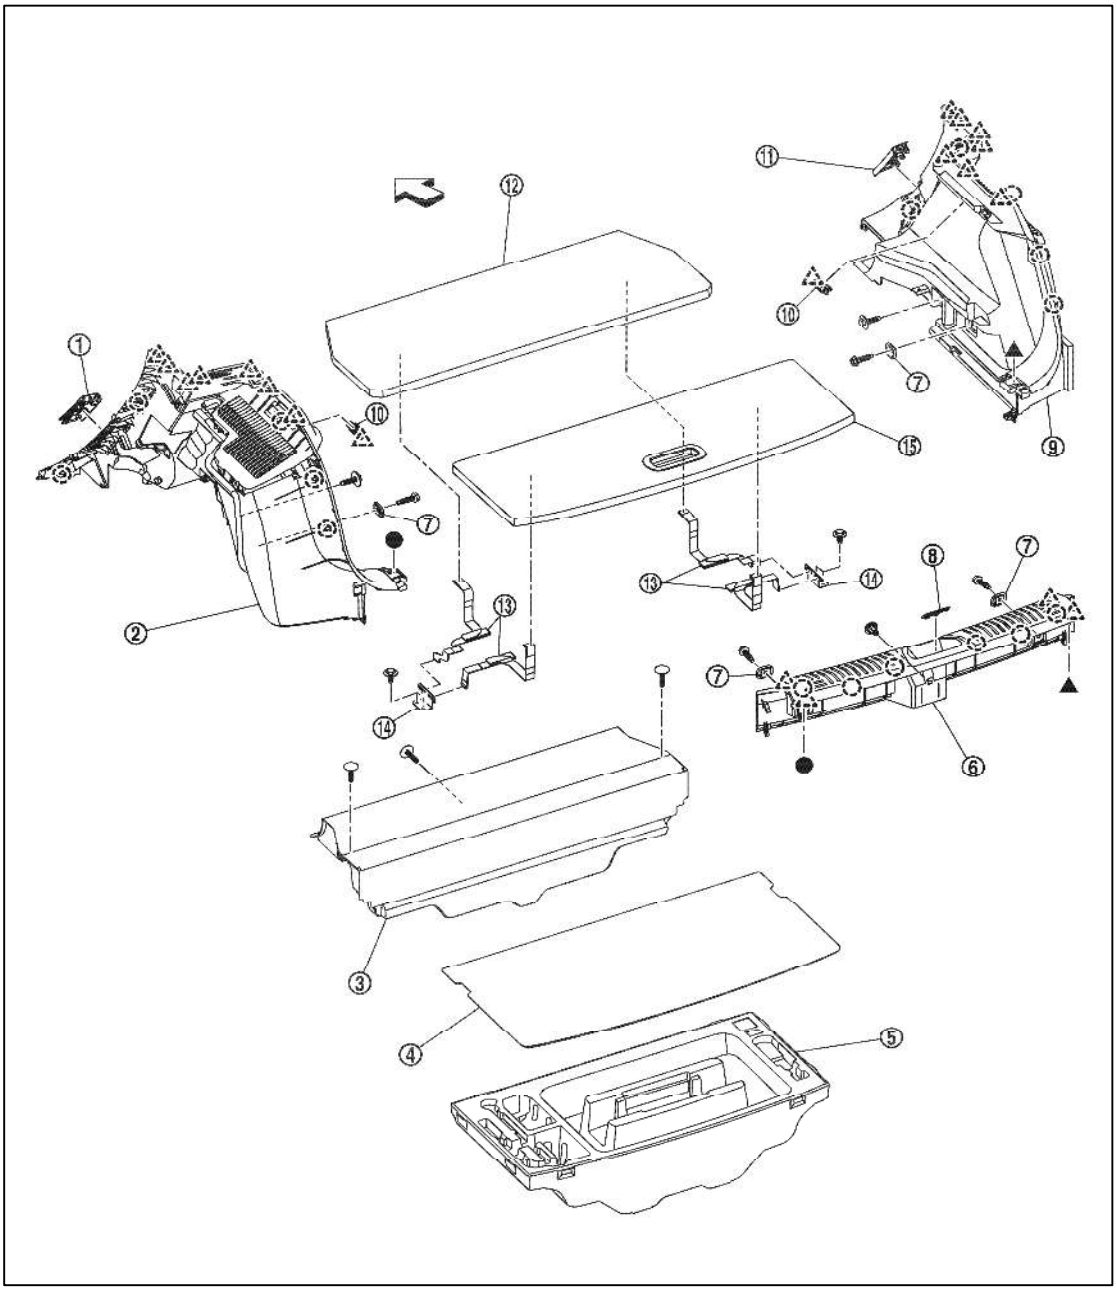


⇦ : Vehicle front.

◌ : Clip △ :Pawl

1.	Luggage finisher mask left	2.	Luggage side lower finisher left	3.	Luggage floor spacer
4.	Luggage floor carpet	5.	Luggage floor box	6.	Luggage rear plate
7.	Rope hook	8.	Luggage rear plate mask	9.	Luggage side lower finisher right
10.	Luggage room lamp	11.	Luggage finisher mask right	12.	Front center luggage floor board
13.	Luggage belt	14.	Luggage side lower bracket	15.	Rear center luggage floor board

●,▲: Indicates that the part is connected at points with same symbol in actual vehicle.

Exploded View: Rear Diffuser

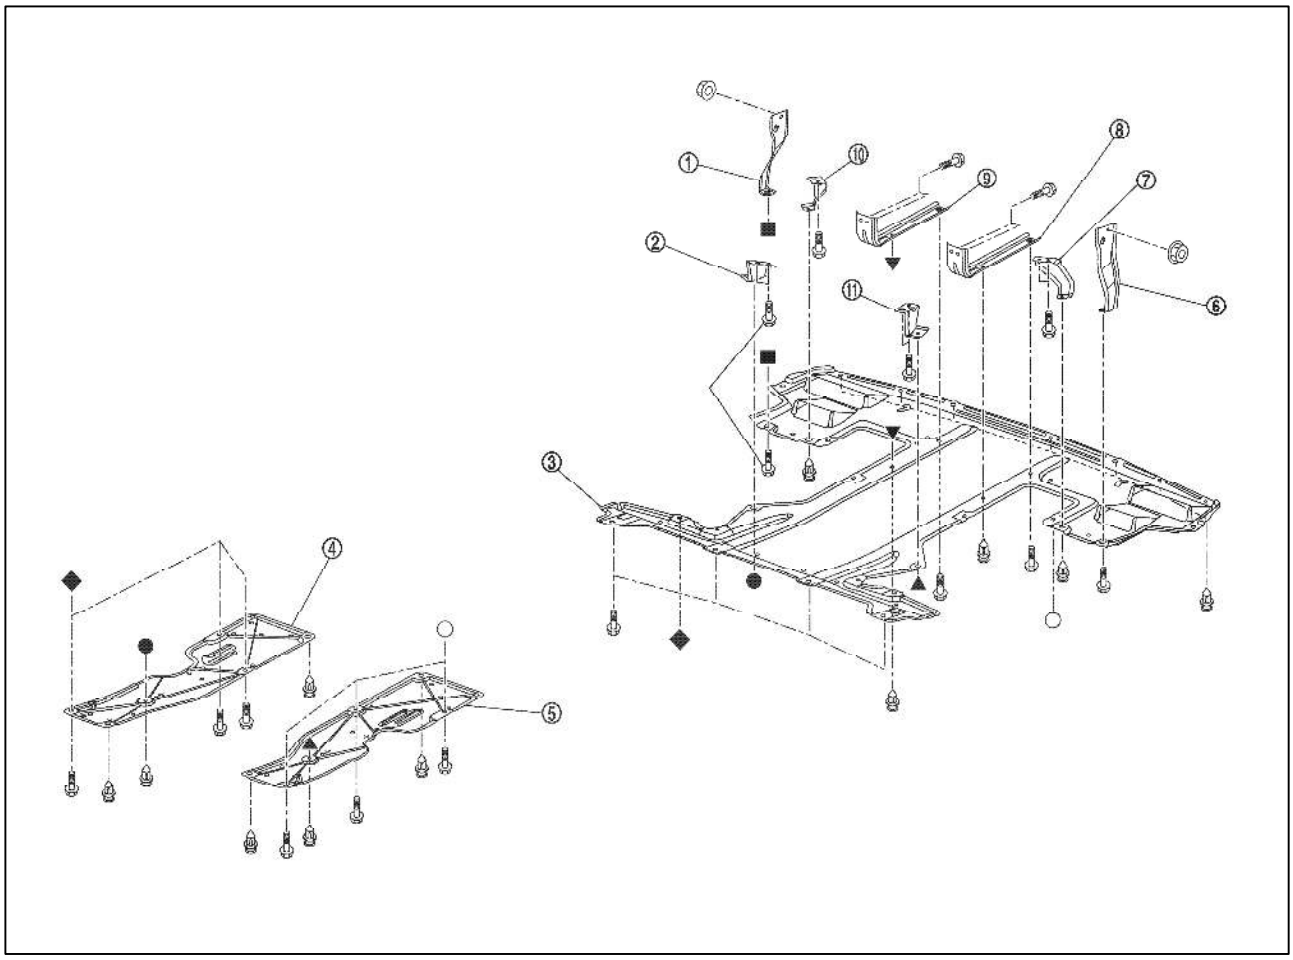

1.	Rear diffuser bracket A right	2.	Rear diffuser bracket B right	3.	Rear diffuser
4.	Rear side diffuser right	5.	Rear side diffuser left	6.	Rear diffuser bracket A left
7.	Rear diffuser bracket C left	8.	Rear diffuser bracket D left	9.	Rear diffuser bracket D right
10.	Rear diffuser bracket C right	11.	Rear diffuser bracket B left	.	

●,▲,■,▼,◆,○: Indicates that the part is connected at points with same symbol in actual vehicle.

Removal


DANGER

NEVER disassemble or open the high-voltage battery to avoid severe personal injury or death by electrical shock.

1. Discharge the high-voltage battery. Refer to 8-3.1 Discharging Procedures (ERG–69) .
2. Remove coolant reservoir tank cap.
3. Remove center console finisher rear.


   a. Fully open center console lid.

   b. Disengage fixing clips and metal clips according to the numerical order 1→3 indicated by arrows as shown in figure, and then remove center console rear finisher.

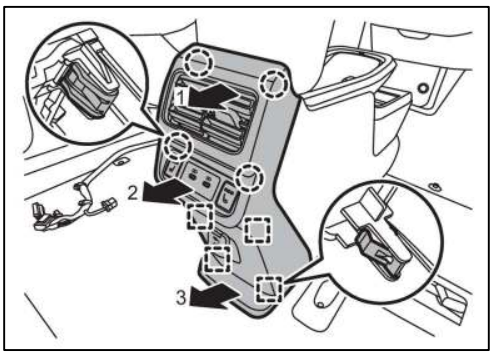

: Clip
: Metal clip


4. Turn over floor carpet and remove high-voltage battery

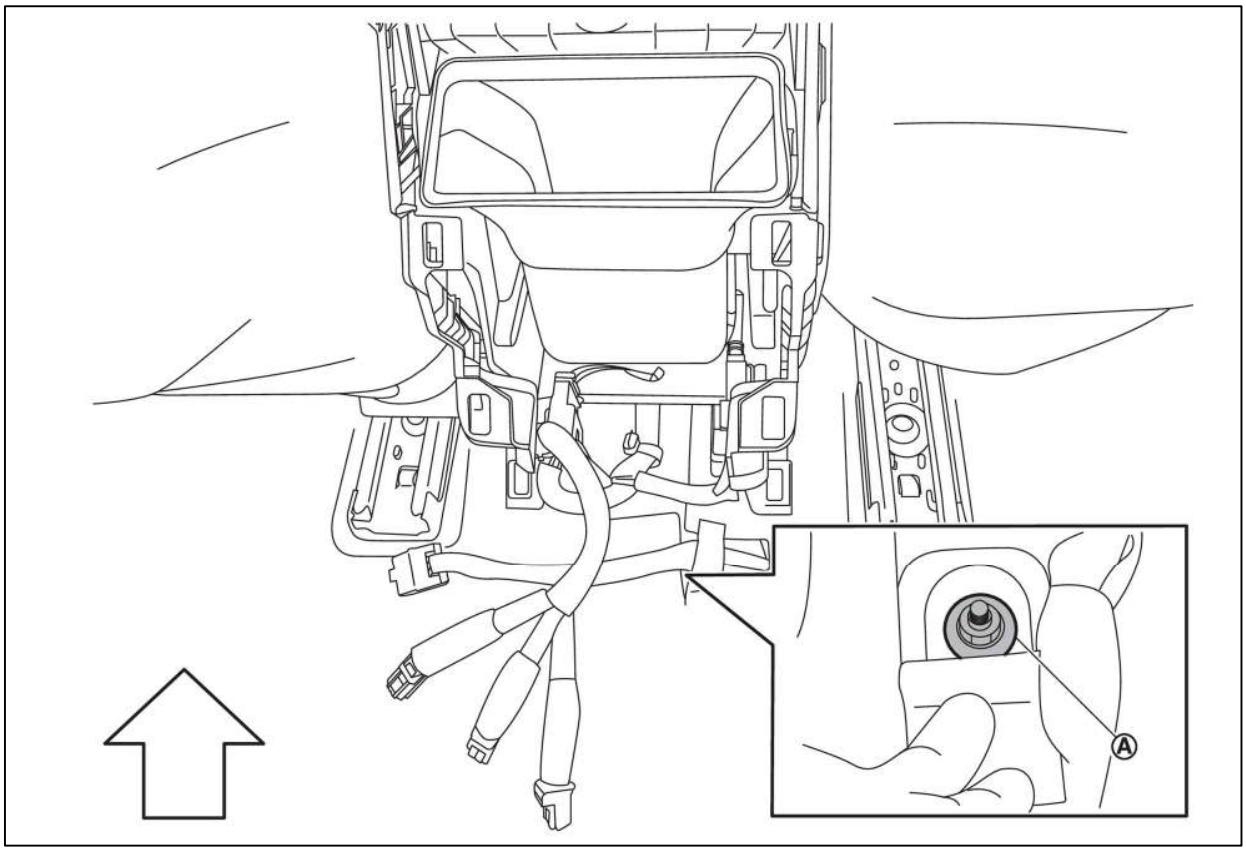

mounting nut (**A**).

: Vehicle front.


5. Turn over floor carpet and remove high-voltage battery mounting bolts (**A**).

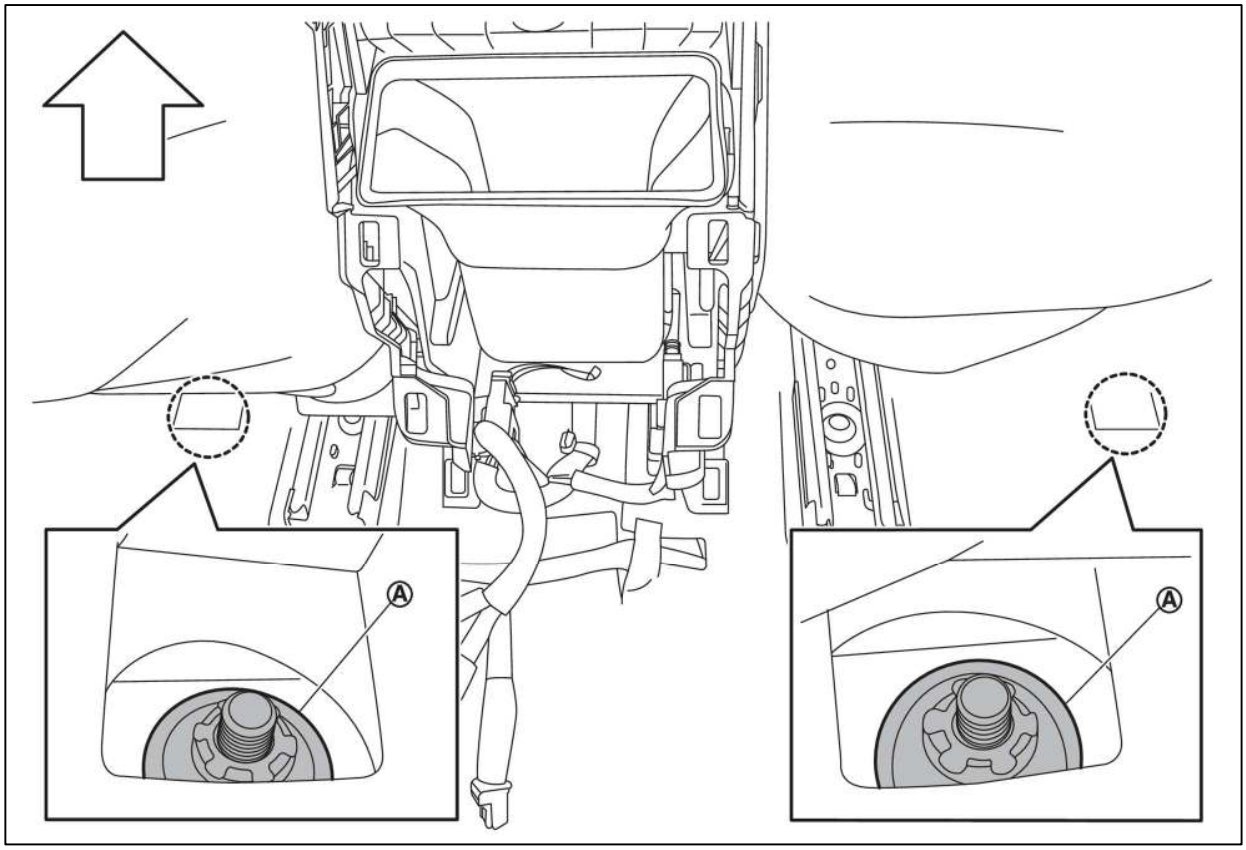

⇦ : Vehicle front.


6. Remove the connector to the power plug junction box. [With DC/AC inverter (power plug inverter) models]

   a. Lift up seat cushion assembly at a close position (**A**) of engaging portion (**B**), and then disengage seat cushion hooks.

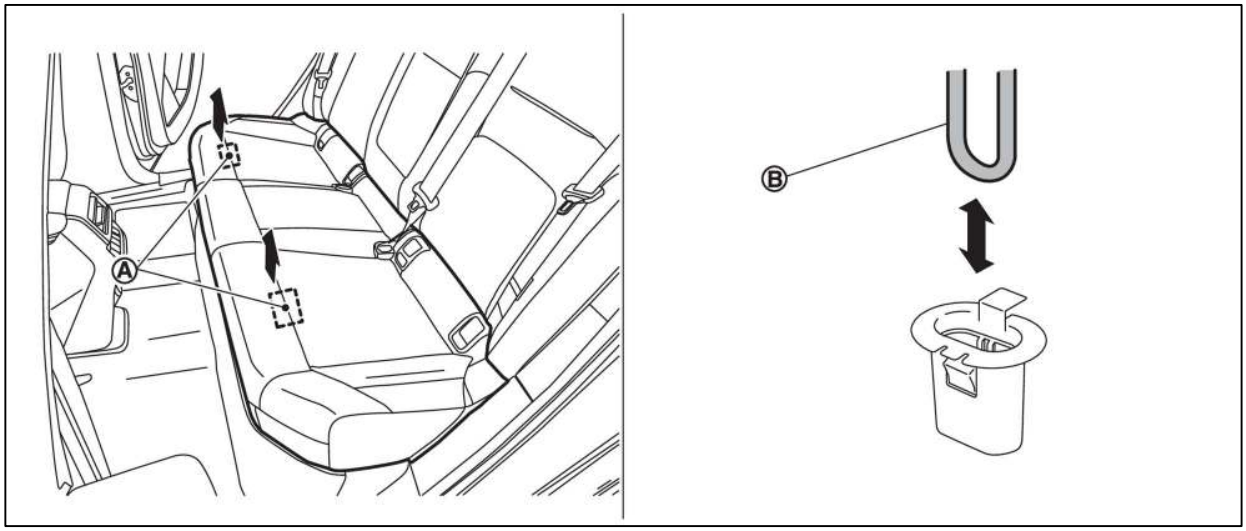


   b. Pull out seatbelt buckles while pulling up seat cushion assembly.
   c. Disengage harness fixing clips of seat cushion, and then disconnect harness connectors (with seat heater models).
   d. Remove seat cushion assembly from vehicle.

e. Remove grommet (**A**) of the inverter unit harness from the plate (**B**).

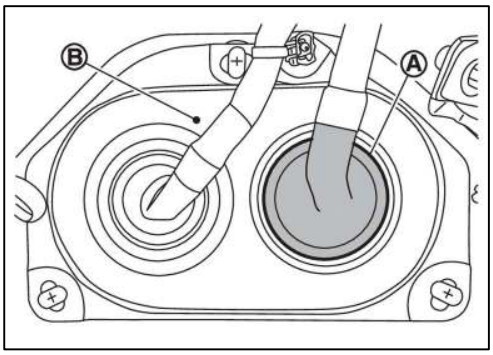


f. Open the tailgate.
g. Remove the luggage floor board, luggage floor carpet, and luggage floor box.
Refer to Exploded View: Luggage Trim (ERG-78).
h. Disengage seatback assembly fixing lock fasteners.
i. Disconnect inverter unit harness connector (A).

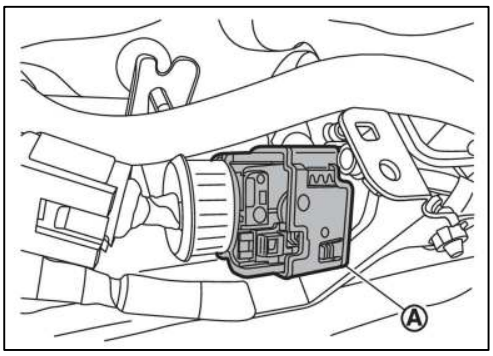

DANGER


Touching high-voltage components without wearing appropriate Personal Protective Equipment (PPE) will cause electrocution.

j. Remove clip (**A**) from the inverter unit harness and relocate the harness connector to the seat cushion assembly.

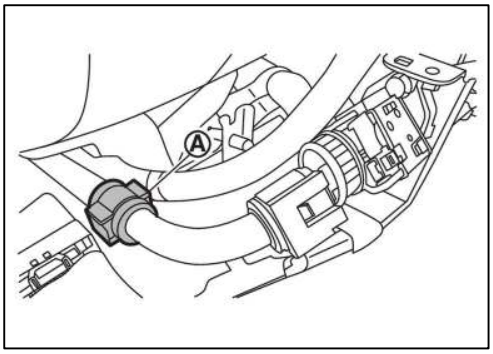


7. Remove road wheels and tires. (If possible)
8. Turn over rear wheel house protector to ensure it will not interfere with the work.

9. Remove front under cover rear (**1**), floor under cover (**2**) and rear diffuser (**3**).

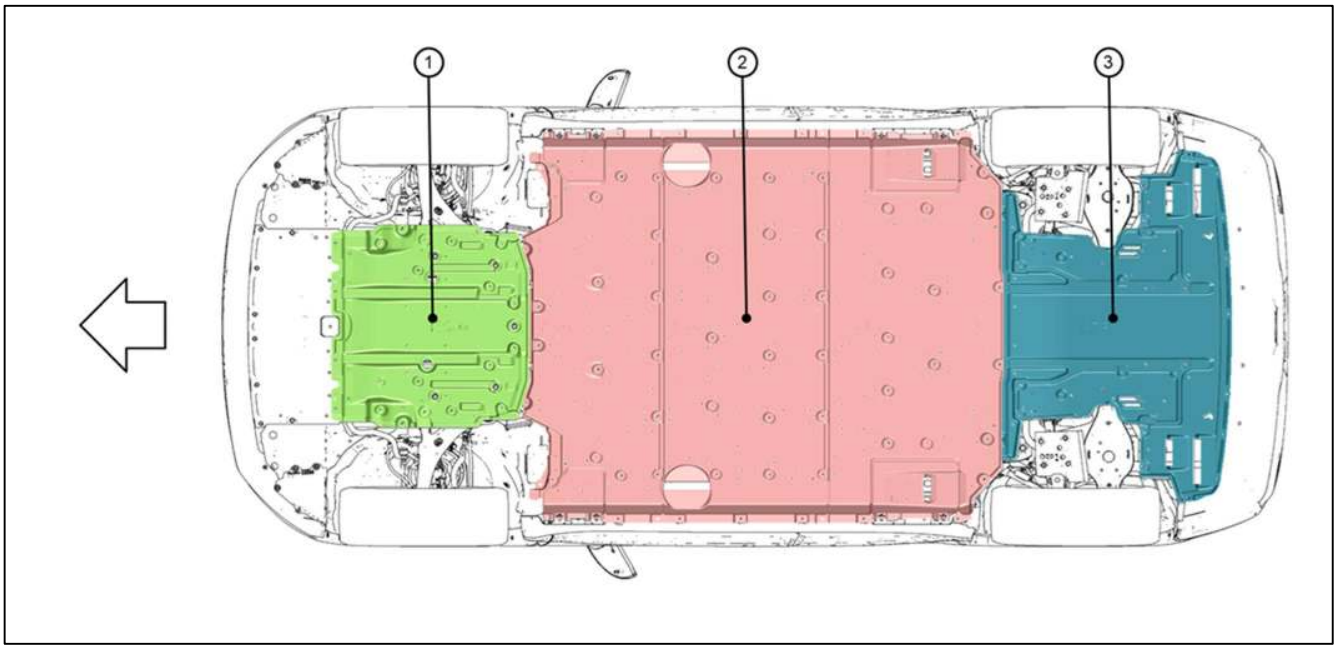


⇦: Vehicle front.

10. Drain high-voltage coolant from high-voltage cooling system.
11. Disconnect each hose connected to the high-voltage battery.
12. Remove reinforce (**1**).

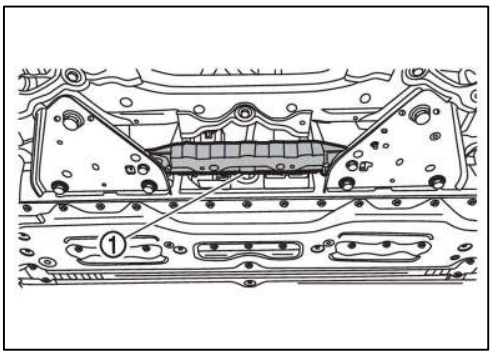


13. Remove high-voltage harness bracket mounting bolt (**A**) of inverter side.

⇦ : Vehicle front.

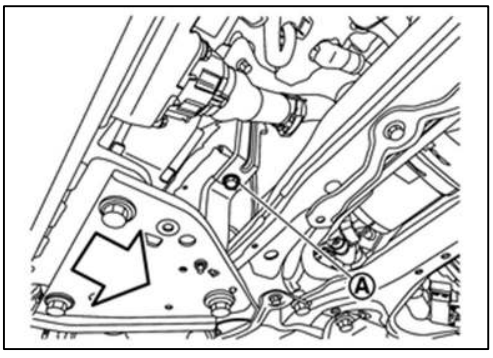

14. Remove high-voltage harness connector (**A**) of inverter side.

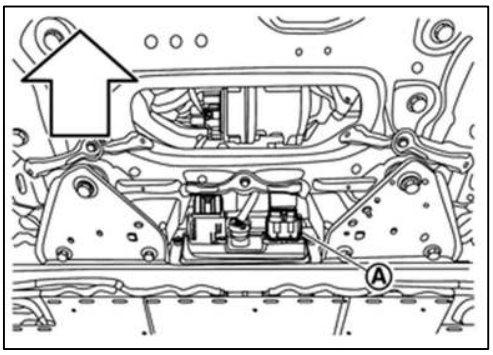

⇦ : Vehicle front.


DANGER

Touching high-voltage components without wearing appropriate Personal Protective Equipment (PPE) will cause electrocution.


DANGER

To prevent electrocution, cover battery side of high- voltage connector with insulated tape.

a. Remove high-voltage harness connector by the following procedure. (**1**) to (**3**).

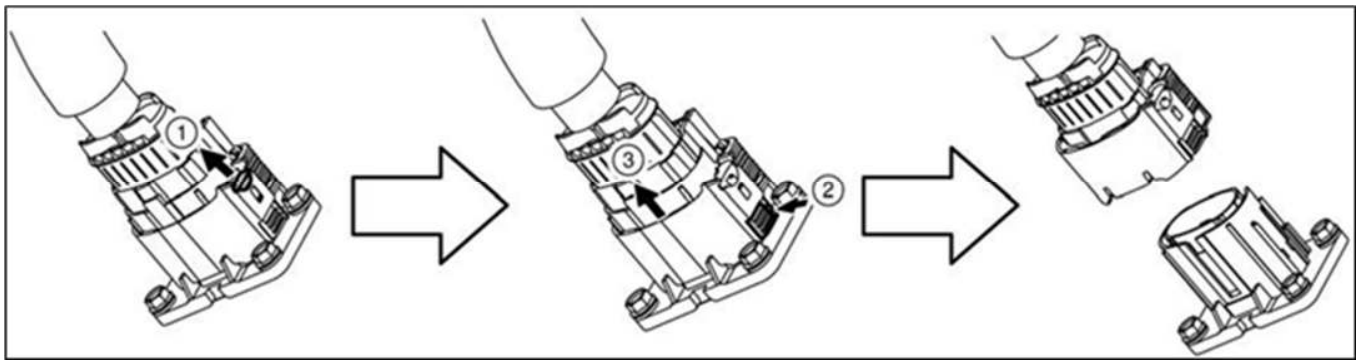

15. Remove vehicle communication harness connector (**A**) from the high-voltage battery by turning it counterclockwise.

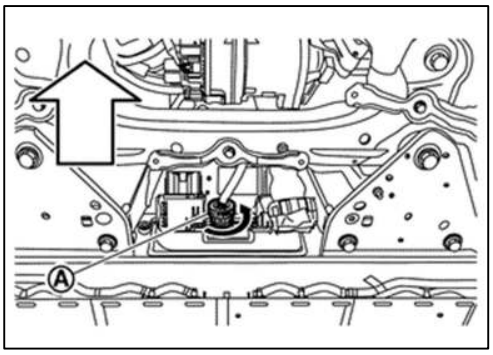


DANGER

Touching high-voltage components without wearing appropriate Personal Protective Equipment (PPE) will cause electrocution.

⇦ : Vehicle front.

16. Remove high-voltage harness connector (**A**) of quick charge port.

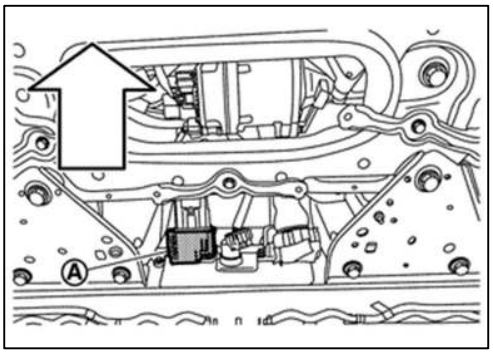


DANGER

Touching high-voltage components without wearing appropriate Personal Protective Equipment (PPE) will cause electrocution.

⇦ : Vehicle front.

a. Remove high-voltage harness connector of quick charge port by the following procedure (**1**) to (**5**).

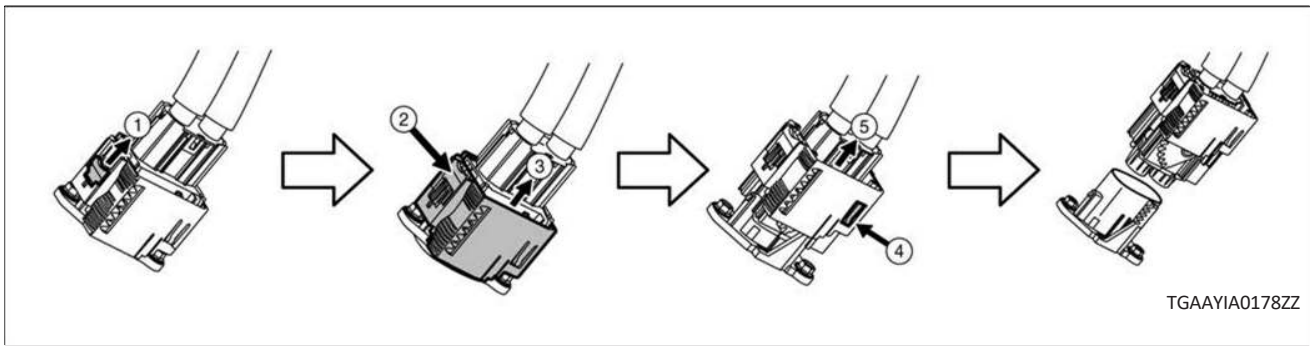


DANGER

To prevent electrocution, cover battery side of high-voltage connector with insulated tape.

17. Remove left member stay (rear side) (**1**).

⇦ : Vehicle front.

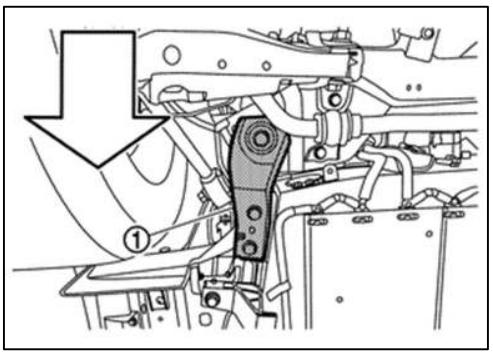


DANGER

Touching high-voltage components without wearing appropriate Personal Protective Equipment (PPE) will cause electrocution.

18. Install left member stay (rear side) mounting bolt (**A**while left member stay (rear side) is removed.

⇦ : Vehicle front.

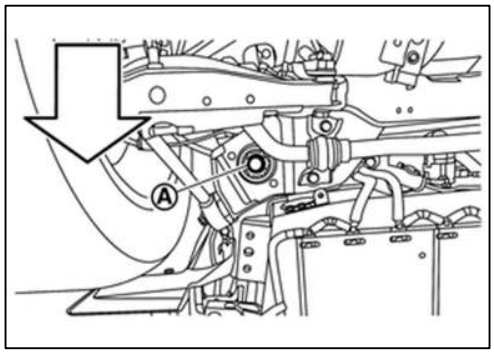


DANGER

Never remove mounting bolts of driver side member stay (rear side) and passenger member stay (rear side) at the same time together.

19. Remove right member stay (rear side) (**1**).

⇦ : Vehicle front.

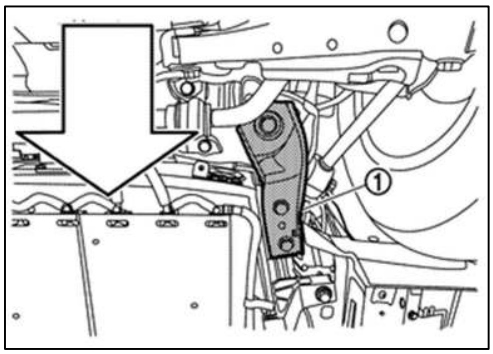


⚠ DANGER

Touching high-voltage components without wearing appropriate Personal Protective Equipment (PPE) will cause electrocution.


20. Install right member stay (rear side) mounting bolt (**A**) while right member stay (rear side) is removed.

⇦ : Vehicle front.

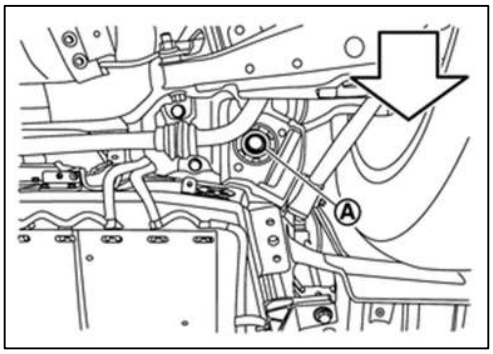

21. Remove left member stay (front side) (**1**).

⇦ : Vehicle front.

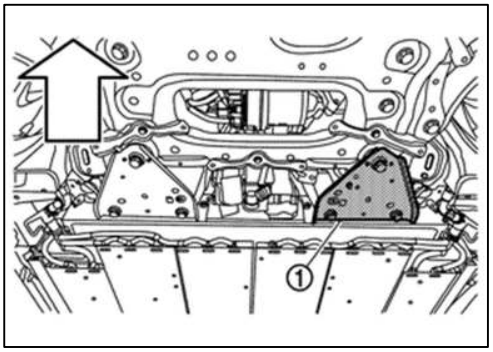


⚠ DANGER

Touching high-voltage components without wearing appropriate Personal Protective Equipment (PPE) will cause electrocution.

22. Install left member stay (front side) mounting bolt (**A**) while left member stay (front side) is removed.

⇦ : Vehicle front.

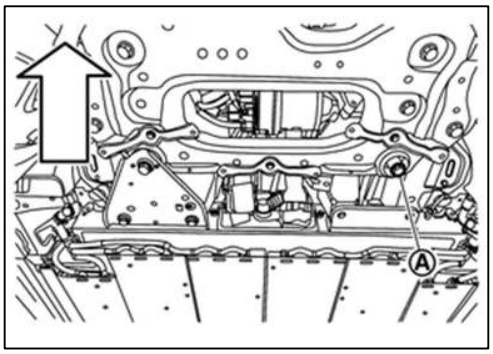


⚠ DANGER

Never remove mounting bolts of driver side member stay (front side) and passenger side member stay (front side) at the same time together.

23. Remove right member stay (front side) (**1**).

⇦ : Vehicle front.

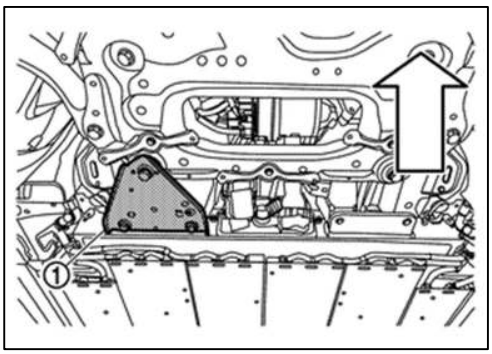


DANGER


Touching high-voltage components without wearing appropriate Personal Protective Equipment (PPE) will cause electrocution.

24. Install right member stay (front side) mounting bolt (**A**) while right member stay (front side) is removed.


⇦ : Vehicle front.

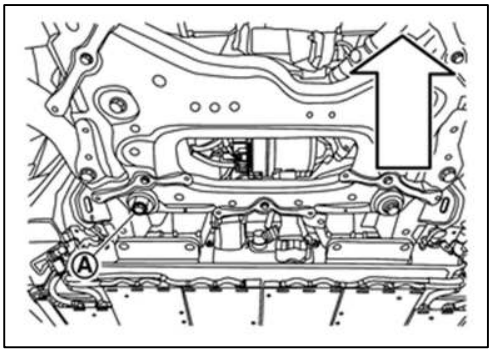

25. Remove rear diffuser bracket B.
Refer to Exploded View: Rear Diffuser (ERG-79).
26. Remove rear stabilizer clamp bolts (**A**) and move stabilizer bar (**1**).

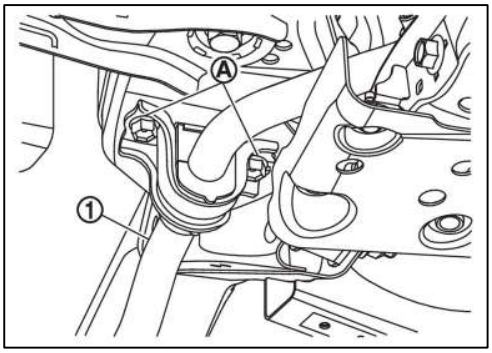

27. Disconnect PTC battery heater harness connector (**A**).

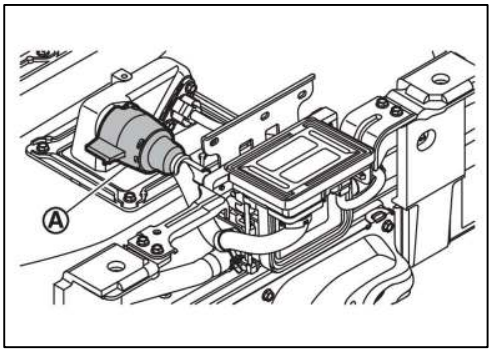


DANGER

Touching high-voltage components without wearing appropriate Personal Protective Equipment (PPE) will cause electrocution.

28. Set battery lift table to high-voltage battery, paying attention to the followings;

⚠CAUTION

- **Place urethane block or rubber block in the position shown in the figure between battery lift table and high-voltage battery.**
- **Be sure to install urethane blocks or rubber blocks so that it straddles 0.39 in (10 mm) or more on both the left and right sides of the reinforcement bracket.**

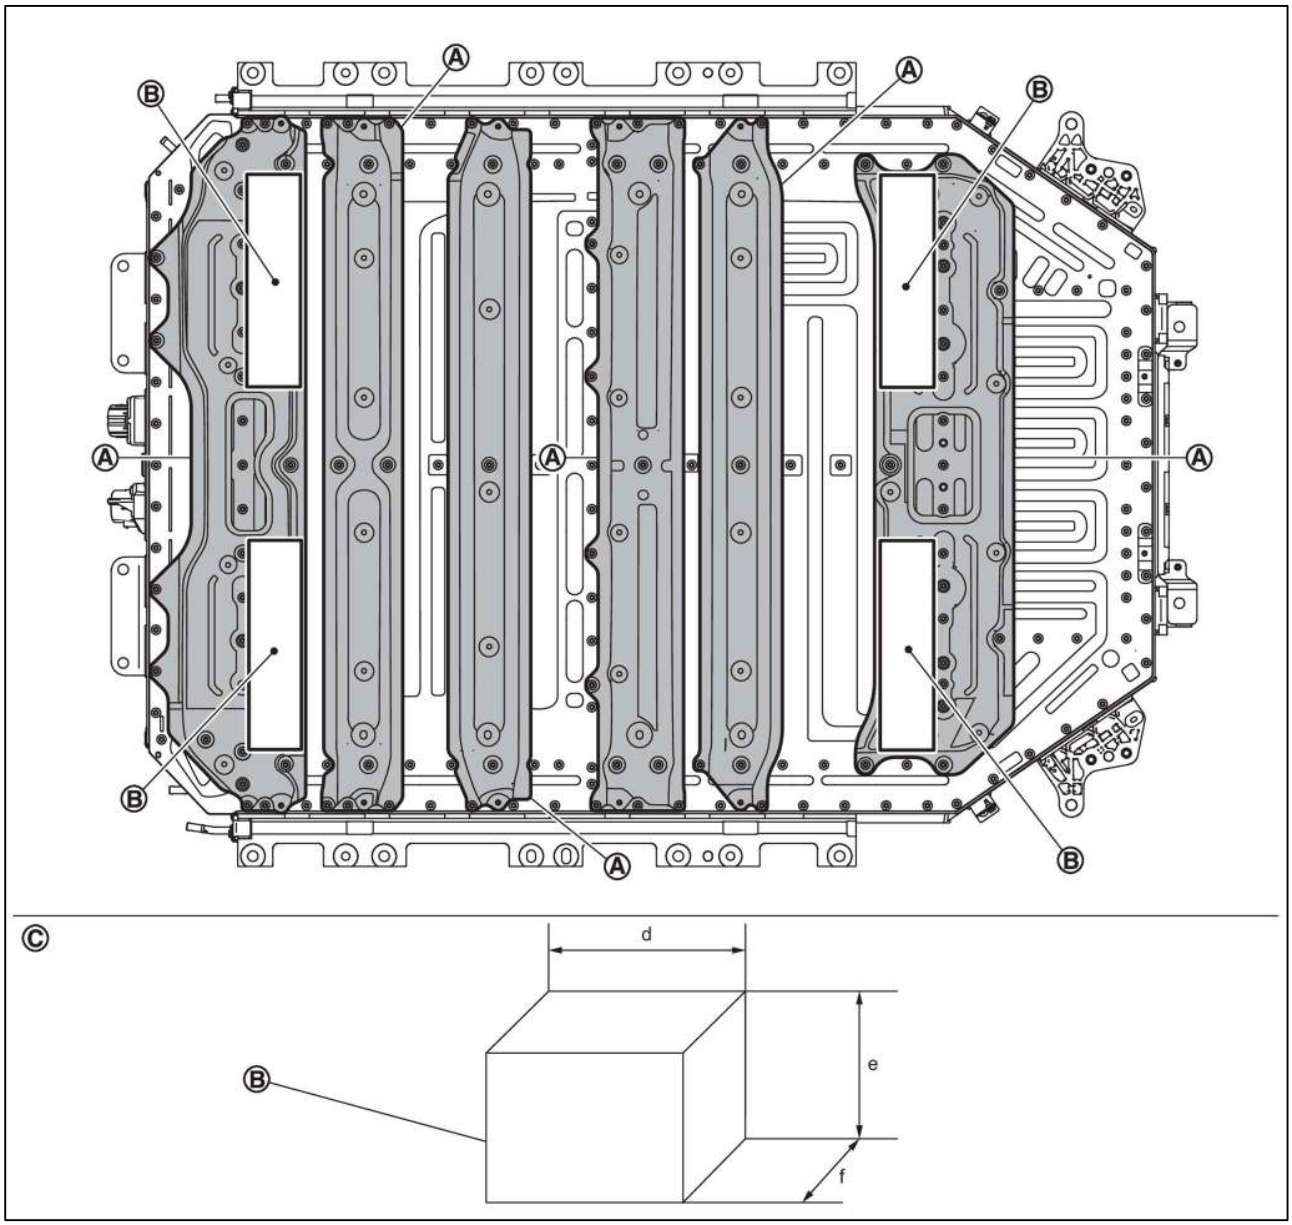


(A) : Reinforcement bracket
(B) : Block
(C) : Urethane block or rubber block dimensions
d : Horizontal 180 mm (7.09 in) or more
e : Height 150 mm (5.91 in)
f : Vertical 80 mm (3.15 in) or more

⚠CAUTION

After lowering manual lift table caddy, set urethane blocks or rubber blocks, so that claw of hand lifter can be inserted to high-voltage battery.

NOTE:
Add a block to the reinforcement brackets if necessary.


29. Align the battery lift table center mark with the center of gravity of high-voltage battery.

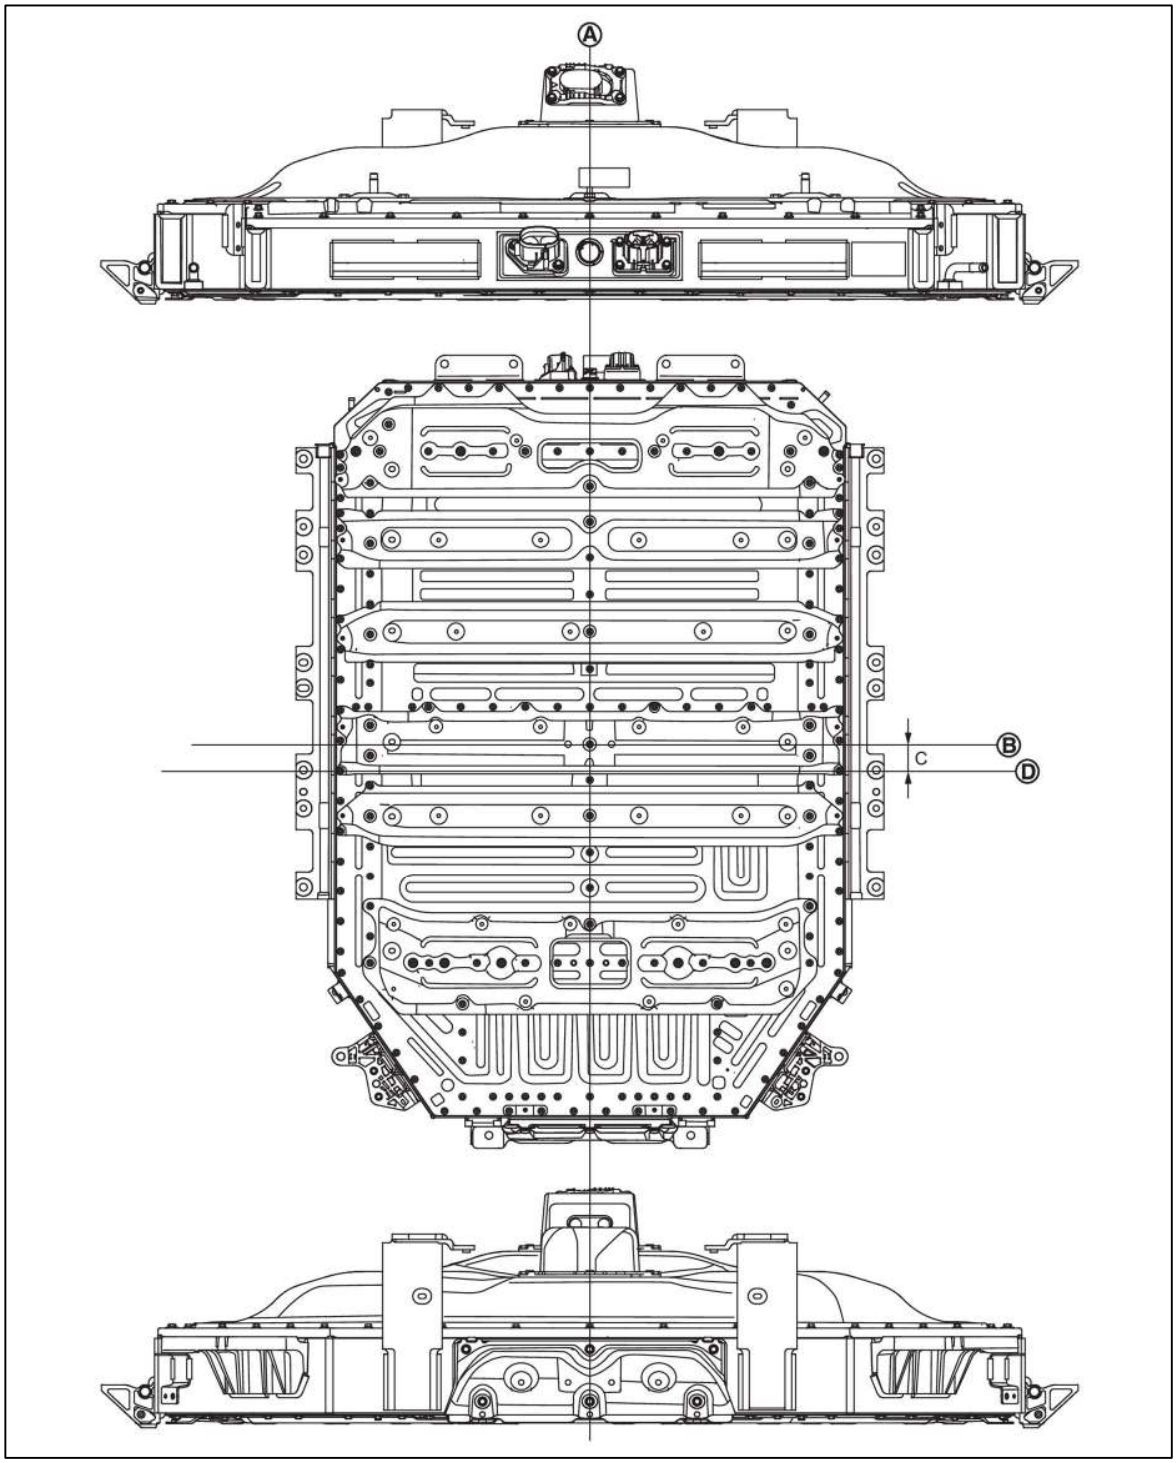


(A) : High-voltage battery left and right center of gravity
(B) : High-voltage battery front and rear center of gravity
(C) : 56.0 mm (2.205 in)
(D) : Center of mounting hole for high-voltage battery

30. Remove locate pin (**1**).


(A) : RH
(B) : LH

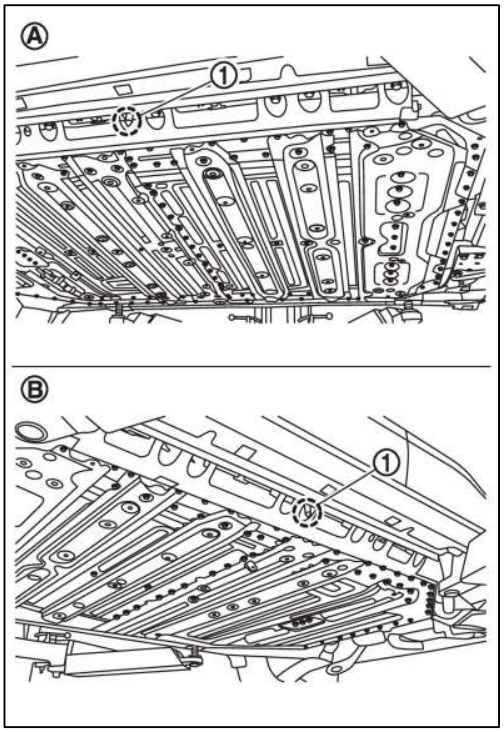


31. Install locate pin (**A**) in the position from which the vehicle-side locate pin was removed.

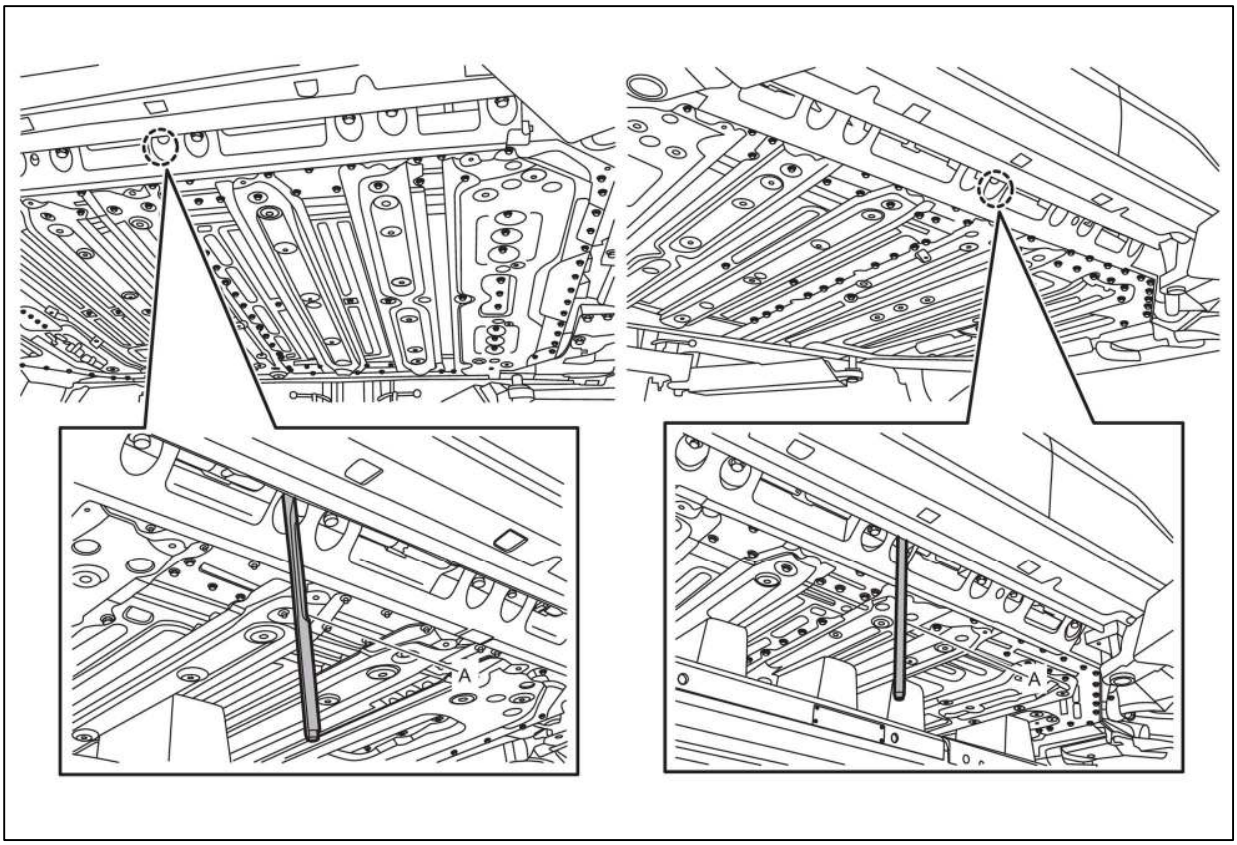

32. Remove left and right brake tube (**1**) mounting clip (**A**).

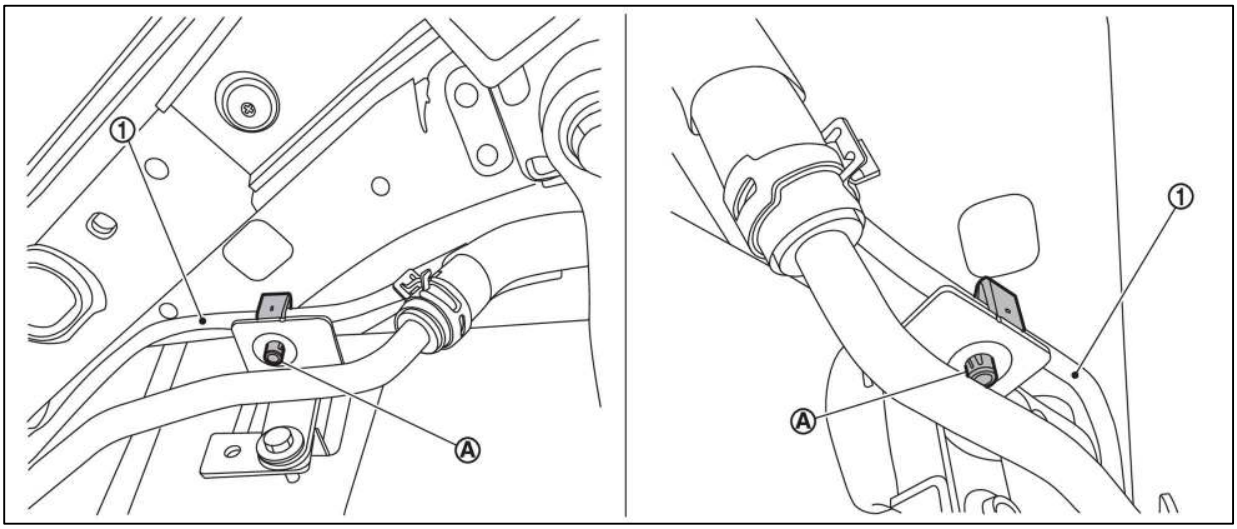


33. Remove ground bolts (**A**).

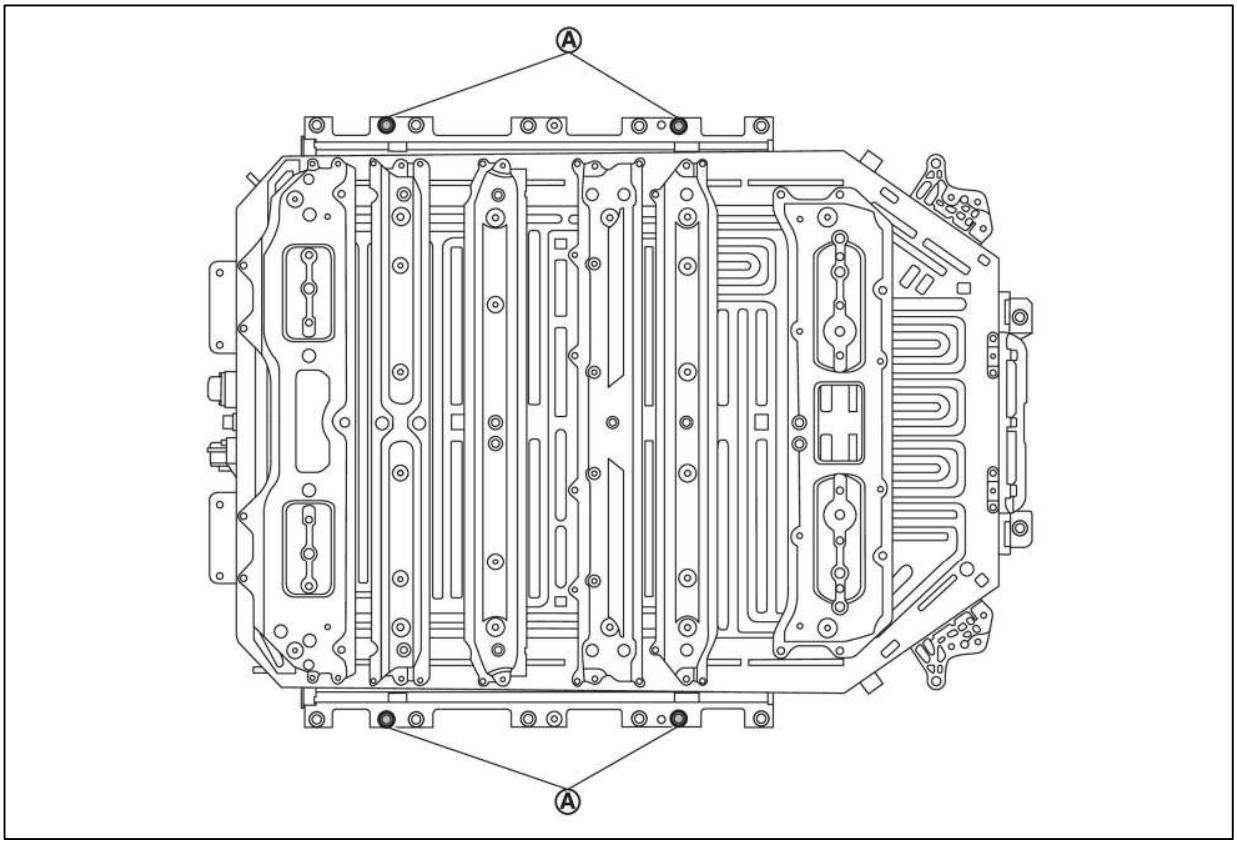

DANGER

Touching high-voltage components without wearing appropriate Personal Protective Equipment (PPE) will cause electrocution.


34. Remove mounting bolts (**A**).

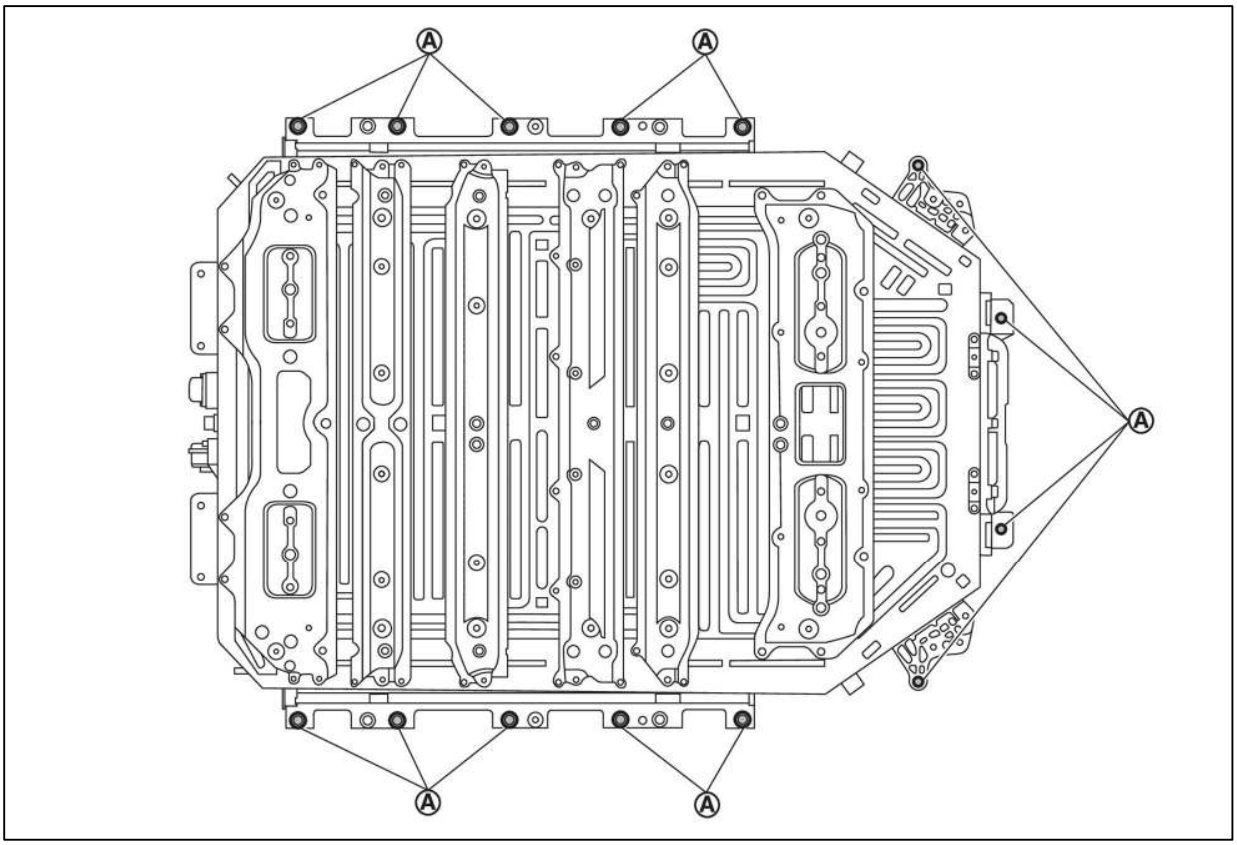

DANGER

Touching high-voltage components without wearing appropriate Personal Protective Equipment (PPE) will cause electrocution.

35. Lower battery lift table and remove high-voltage battery (**1**) from vehicle.

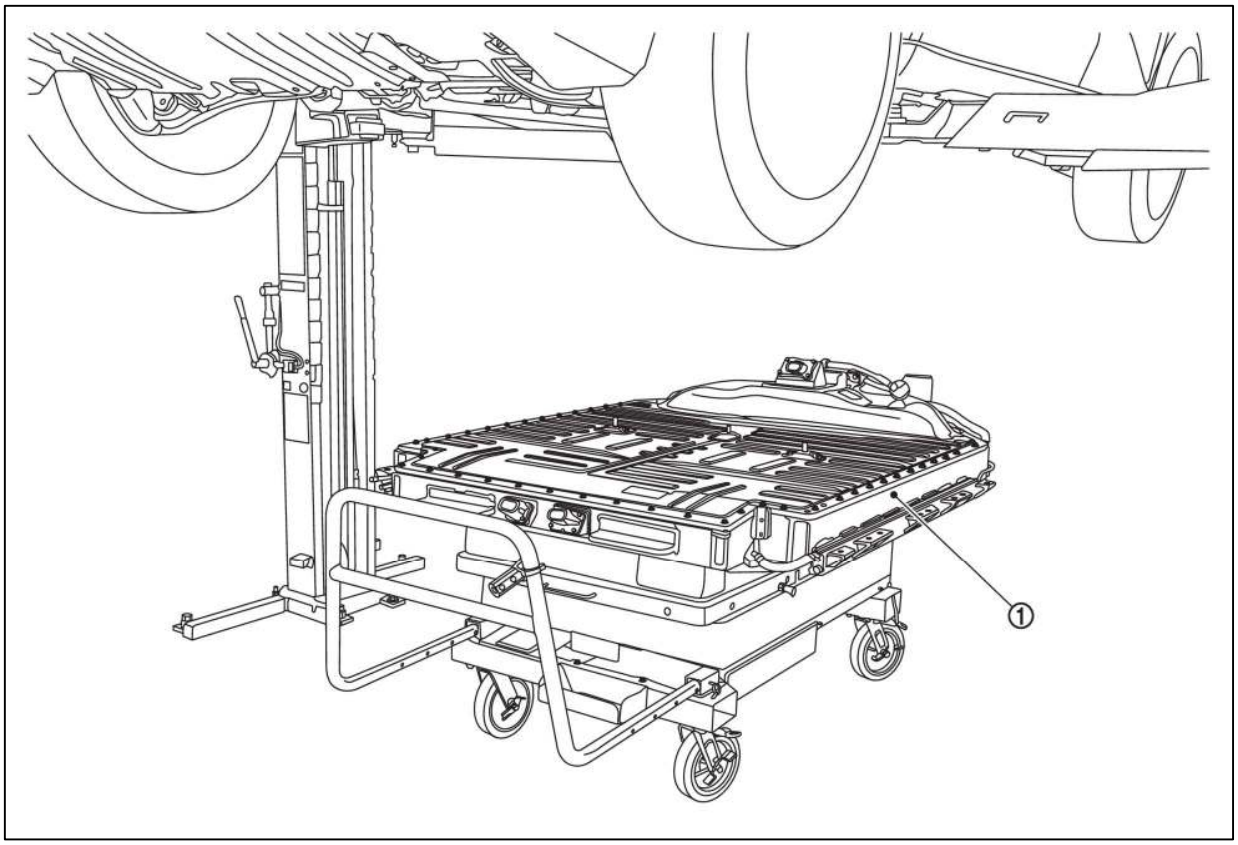

9. Important Additional Information


9-1 Recovery/Recycling of the High-voltage Battery

The high-voltage battery is fully recyclable. For information regarding safe recovery and recycling of the high-voltage battery, it is recommended you contact the nearest “MITSUBISHI MOTORS” certified ECLIPSE SPORTBACK dealer.

9-2 Centre airbag

Driver’s seat has a center airbag in addition to the side airbag.

Location of center airbag. Refer to 4-2.1 SRS Air Bag System Components Location (ERG-37).

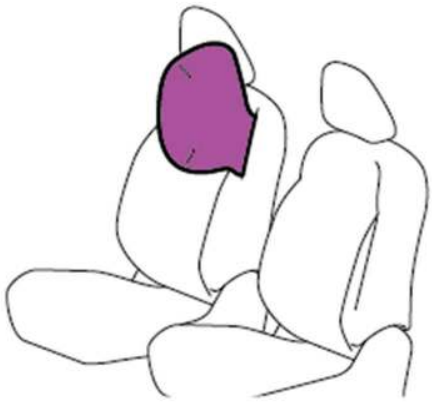



Do not apply excessive force to nor strongly hit the airbag installation area.

10. Explanation of Pictograms Used

10-1 Explanation of Pictograms Used

This manual describes emergency response operations and **important safety** related warnings for this vehicle.

This vehicle is an electrically driven car equipped with a high-voltage battery pack. **Failure to follow recommended practices during emergency responses will cause death or serious personal injury.**

Please read this manual in advance in order to understand the features of this vehicle and to help you deal with incidents involving this vehicle. Follow the procedures in order to help assure a safe and successful first response operation.

IMPORTANT INFORMATION ABOUT THIS MANUAL

You may see various symbols in this manual. They have the following meanings:

 **⚠DANGER**

This symbol is used to inform you of an operation which will result in death or serious personal injury if instructions are not followed.


Example: Touching high-voltage components without using the appropriate protective equipment will result in electrocution.


 **⚠DANGER**

This symbol is used to inform you of an operation which may cause death or serious personal injury if instructions are not followed.

⚠CAUTION

This symbol is used to inform you of an operation which may cause personal injury or component damage if instructions are not followed.

	Remove smart key		Electric Vehicle
	Warning, electricity		Flammable
	General warning sign		Hazardous to the human health
	Warning, low temperature		Acute toxicity
	High-voltage device that disconnects high-voltage		Cable cut
	Air-conditioning component		Corrosives
	Battery pack, high-voltage		Use ABC powder to extinguish the fire

	Use water to extinguish the fire		Explosives
	Use thermal infrared camera		Bonnet
	Seat adjustment, longitudinal		Boot
	Seat height adjustment		Steering wheel, tilt control
	Battery low voltage		

Please note that there may be differences between this manual and the vehicle specification due to specification changes.


MITSUBISHI
MOTORS