
TOYOTA CROWN HYBRID

MY: 2027 – Present





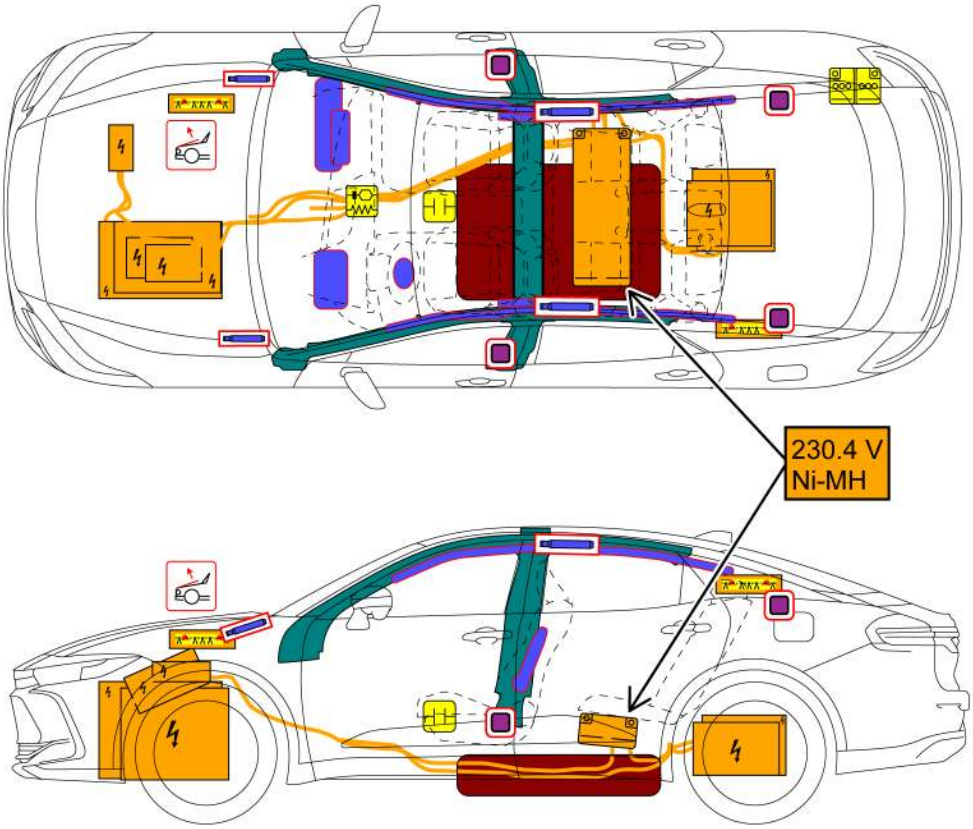

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	High strength zone		Battery low voltage		Ultra-capacitor, low-voltage		Fuel tank		Battery pack, high-voltage
	High voltage power cable		High voltage component		Cable cut				


	ID No.	Version No.	Version date	Page
	CROWN30	01	09 / 2026	1 / 4

© 2026 Toyota Motor Sales, USA

1. Identification / Recognition

LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.

■ Location of vehicle badges

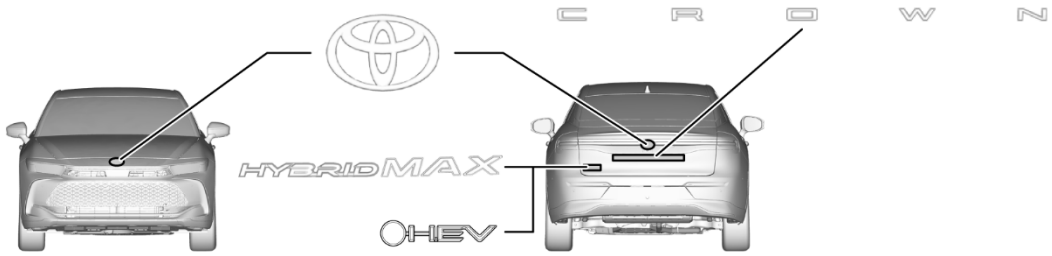


■ Energy source: Nickel-metal hydride battery




2. Immobilisation / Stabilisation / Lifting

■ Completely immobilize the vehicle

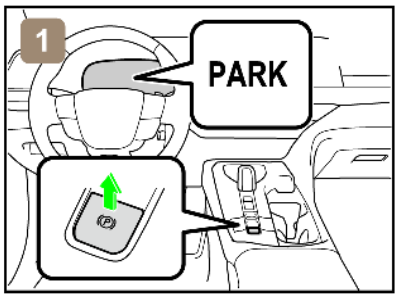


1) Chock the wheels and engage the parking brake.

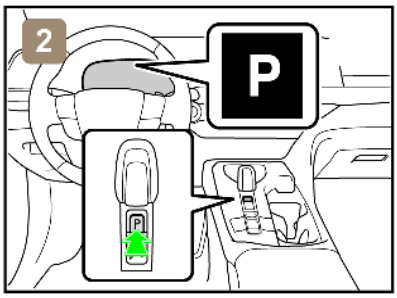

2) Press the P position switch.

■ Stabilisation-lifting point

Place cribbing such as wooden blocks at the four points under the front and rear pillars.

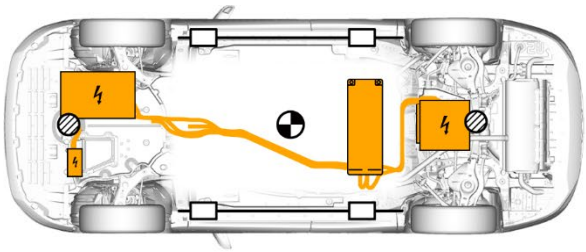

Extra Reinforced Lifting Points　Standard Jack Locations　Vehicle Center of Gravity

DO NOT PLACE CRIBBING SUCH AS WOODEN BLOCKS OR RESCUE AIR LIFTING BAGS UNDER THE EXHAUST SYSTEM, FUEL SYSTEM OR HIGH VOLTAGE POWER CABLES. DOING SO MAY RESULT IN FUEL LEAKS, FIRE OR ELECTRIC SHOCK.

© 2026 Toyota Motor Sales, USA

3. Disable direct hazards / Safety regulations


■ **If any of the following systems are required to be operated, operate them BEFORE disconnecting the battery.**

Power door lock	Power window	Power seat
Power tilt and telescopic steering	Electric parking brake	Trunk opener
Electronic shift lever		

When the 12 V battery is disconnected, electrical components cannot be operated.


■ **Perform procedure Main or Alternative to completely shut off the vehicle.**

<Main Procedure>

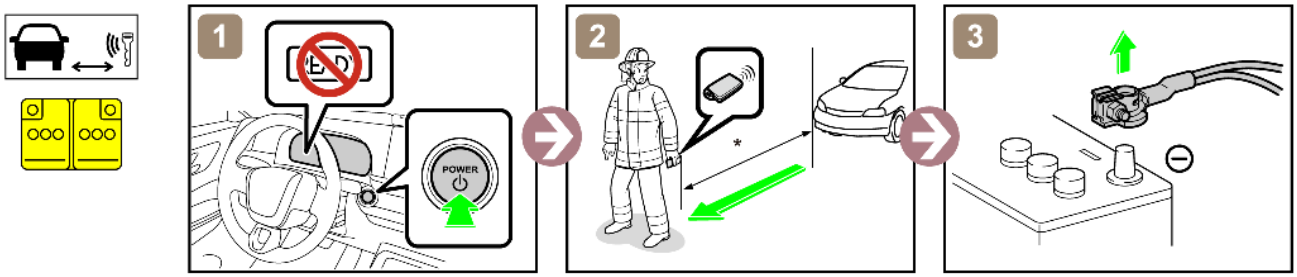


*: 5 m (16.4 ft) or more

<Alternative Procedure>

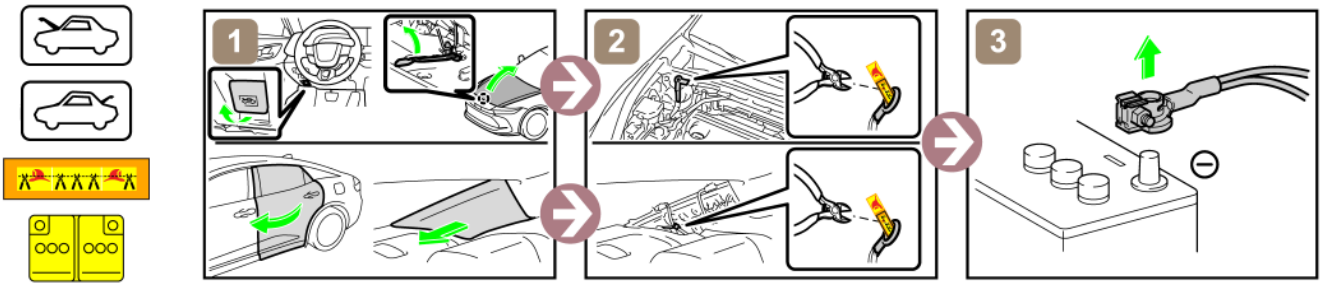


In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated.

■ **Access to 12 V Battery**

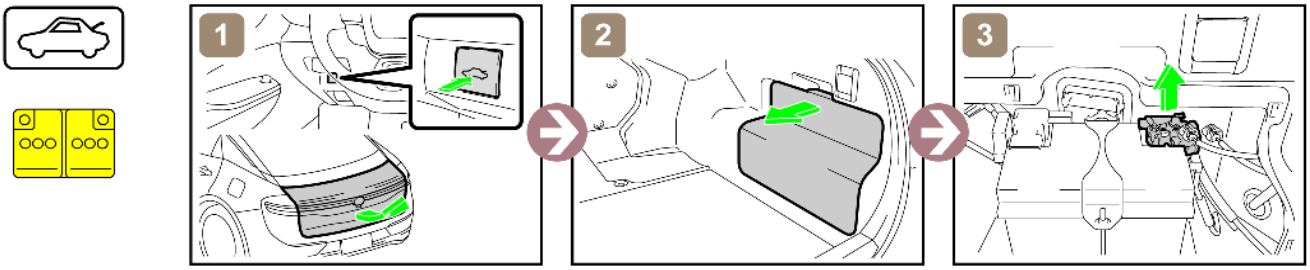

4. Access to the occupants

■ **Window Glass**

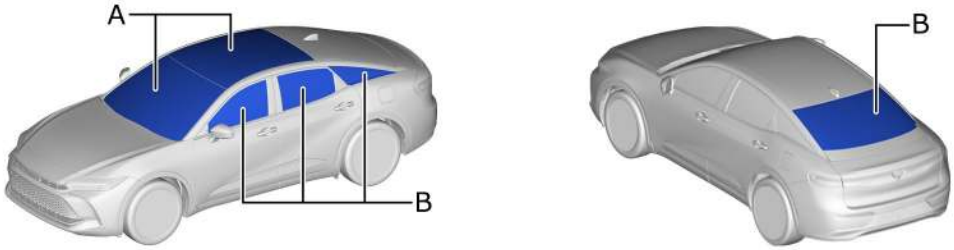

A	Laminated	B	Tempered

© 2026 Toyota Motor Sales, USA

5. Stored energy / Liquids / Gases / Solids



High Voltage Ni-MH Battery: 230.4 V



Low Voltage Battery: 12 V



Gasoline Tank: 55 L



Air Conditioner Refrigerant Gas





- ALWAYS WEAR APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT (PPE) WHEN DEALING WITH ANY OF THESE ITEMS.
- NEVER BREACH OR REMOVE THE BATTERY ASSEMBLY COVER UNDER ANY CIRCUMSTANCES, INCLUDING FIRE. DOING SO MAY RESULT IN SERIOUS INJURY OR DEATH FROM SEVERE BURNS OR ELECTRIC SHOCK.

6. In case of fire



USE COPIOUS AMOUNTS OF WATER

If it is difficult to apply copious amounts of water to the high voltage battery, it is recommended to allow the high voltage battery to burn itself out.



RE-IGNITION POSSIBLE !





7. In case of submersion



DO NOT TOUCH ANY OF THE HIGH-VOLTAGE COMPONENTS OR CABLES, INCLUDING THE SERVICE PLUG, WHILE THE VEHICLE IS SUBMERGED. DOING SO MAY RESULT IN ELECTRIC SHOCK.
WORK ON THE VEHICLE ONLY AFTER THE VEHICLE HAS BEEN PULLED OUT OF THE WATER.

8. Towing / Transportation / Storage

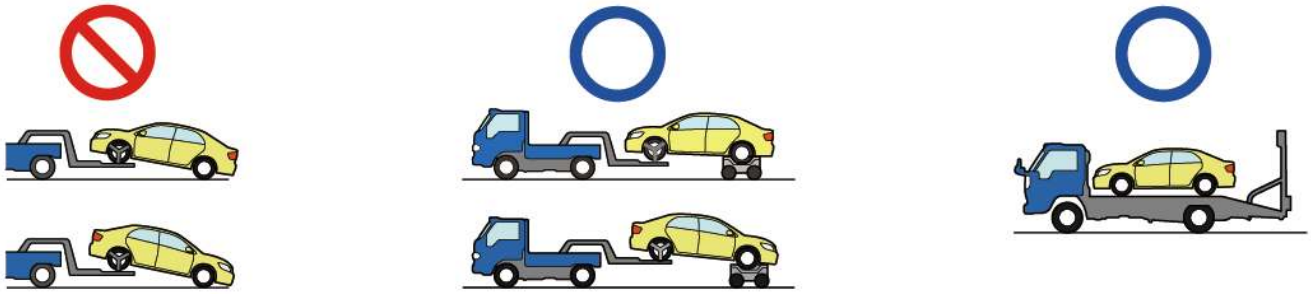

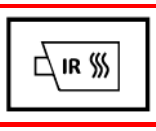

RE-IGNITION POSSIBLE !

Store the vehicle at a safe distance (15 m (49.2 ft) or more) from other vehicles.

9. Important additional information

For further details, please refer to “Emergency Response Guide”.
https://www.techinfo.toyota.com/

© 2026 Toyota Motor Sales, USA