
Volkswagen **ID. Buzz AD 1.0**
as of 2021

Prototyp

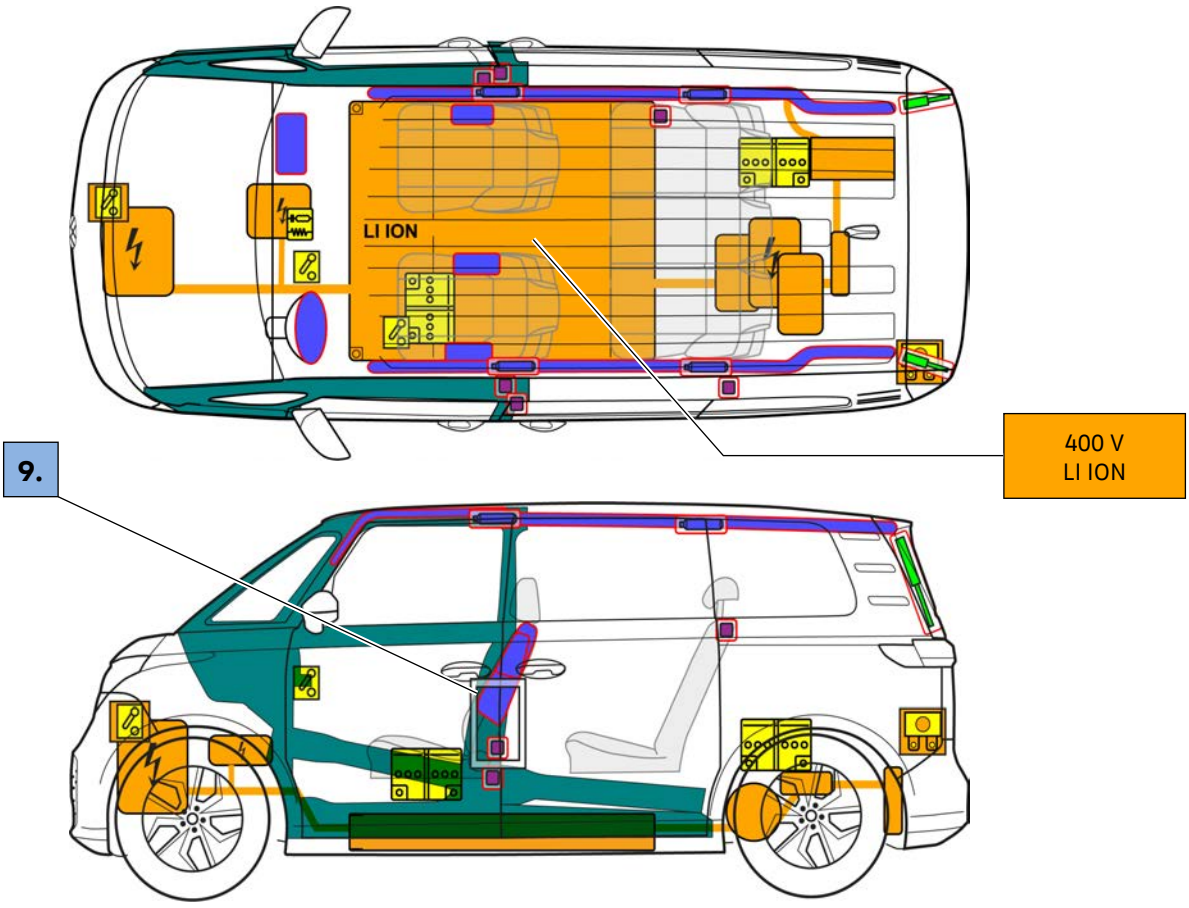





	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Gas strut / preloaded spring
	High-strength zones		Special attention		Battery pack, low-voltage		Low voltage device that disconnects high voltage		Fuse box disabling high voltage
	Battery pack, high-voltage		High-voltage power cable		High voltage component		Low-voltage disconnect		

1. Identification / recognition

The electric motor is silent. The indicator on the left of the instrument cluster (power meter) indicates whether the electric drive is switched "OFF" or "READY" for operation.

Logo



Charging connection



2. Immobilization / stabilization / lifting

Immobilize the vehicle

Apply the parking brake



Lifting points




suitable lifting points

High-voltage battery

Turn off the ignition (Powermeter "OFF")

Press the START-STOP button without depressing the brake pedal.





Remove vehicle key, key card and/or smartphone app so that they are more than 5 m away from the vehicle if possible.

Deactivate the autonomous driving function (SDS)



1. Locate the emergency stop SDS in the instrument panel
2. Press the emergency stop SDS


3. Disable direct hazards / safety regulations


Do not touch, cut or open damaged high voltage components, cables and high voltage batteries!
Wear appropriate personal protective equipment!

In the event of an accident in which the airbag is triggered, the high voltage system is automatically deactivated as soon as airbag triggering is detected. The high voltage system is de-energised approx. 20 seconds after deactivation.

For all other cases, the high-voltage system can be deactivated as follows:


Option 1: From the engine compartment

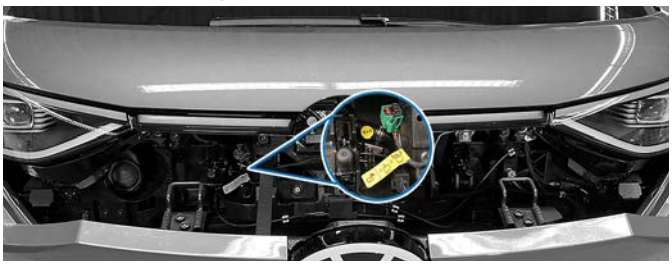


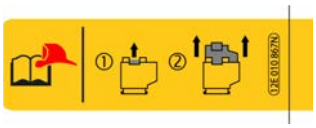



Option 2: from the luggage compartment

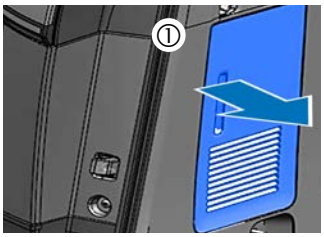

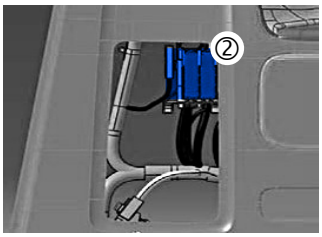

1. Remove the left side panel
2. Locate the fuse (yellow flag).
3. Pull out the fuse.



Disconnect the 12-volt battery

In the footwell in front of the driver's seat


1. Move the driver's seat forward
2. Remove cover
3. Disconnect the negative (-) terminal of the battery

Battery in the trunk on the right

1. Disconnect the negative (-) terminal of the battery


The 12-volt vehicle electrical system voltage is u. a. used for unlocking and opening electrically operated doors and flaps as well as electric seat adjustment.

Disconnect from the charging station (emergency release)

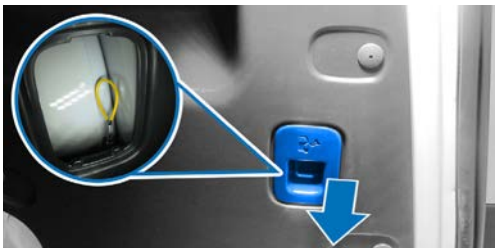

1. Remove right side panel
2. Locate the emergency release yellow loop
3. pull loop

4. Access to the occupants

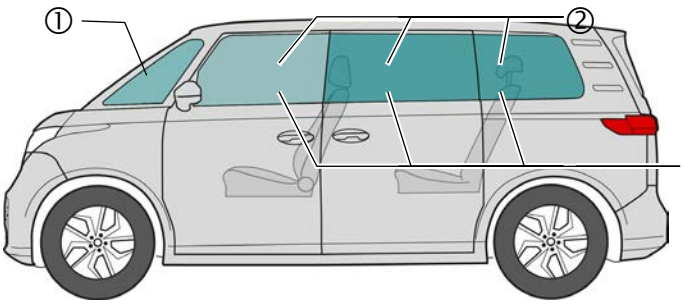

Glas types:

① Laminated safety glass

② Toughened safety glass

③ Optionally composite safety glass

In the event of an accident with airbag deployment, electrically operated doors and flaps are automatically unlocked.

5. Stored energy / liquids / gases / solids



12 V



400 V

If coolant escapes from the battery cooling system, there is a risk of a thermal reaction in the high-voltage battery.
Monitor the temperature of the high-voltage battery!



6. In case of fire



Lithium-ion batteries can self-ignite spontaneously, sometimes several hours after an event causing damage or incorrect use, and can re-ignite after a fire has been suppressed. Wear appropriate protective equipment!



7. In case of submersion


After rescuing the vehicle from the water, deactivate the high-voltage system (see Chapter 3) and allow the water to drain. Wear appropriate protective equipment!

8. Towing / transportation / storage

Lithium-ion batteries can self-ignite, or re-ignite after a fire has been extinguished.
Wear appropriate protective equipment!



If the vehicle has been involved in an accident or if the high-voltage battery is damaged or unstable: Deactivate the high-voltage system (see Section 3). Park the vehicle at a safe distance from buildings and other vehicles in accordance with local regulations (quarantine area).

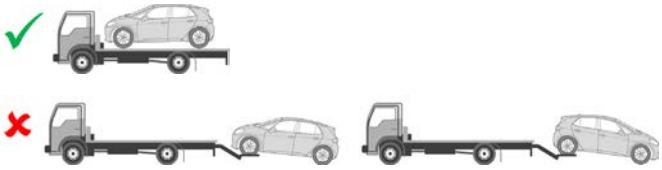


Do not tow a vehicle that has been involved in an accident on its drive axles.

9. Important additional information



The belt tensioners can be damaged when cutting through the B-pillar!

10. Explanation of pictograms used

 flammable	 explosive	 corrosive	 Hazards to the human health	 Environmental hazard	 Electric vehicle	 High voltage warning	 Caution, danger
 Use water to extinguish the fire	 Dangerous voltage	 Remove smart key	 Use thermal Infrared camera	 Release the hood	 Release the trunk		