



		Hyundai Nexo SUV, 5 doors From 2025. NOV ~							
									
									
	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		High voltage component
	Battery pack, high-voltage		Gas strut / Preloaded spring		High strength zone		High voltage power cable		Gas tank with gas type indication
	Disconnect high voltage device								
ID No. KM8-NH2-RS-202512			Version No. 01		Version date: 11/2025		Page 1/4		

1. Identification / recognition

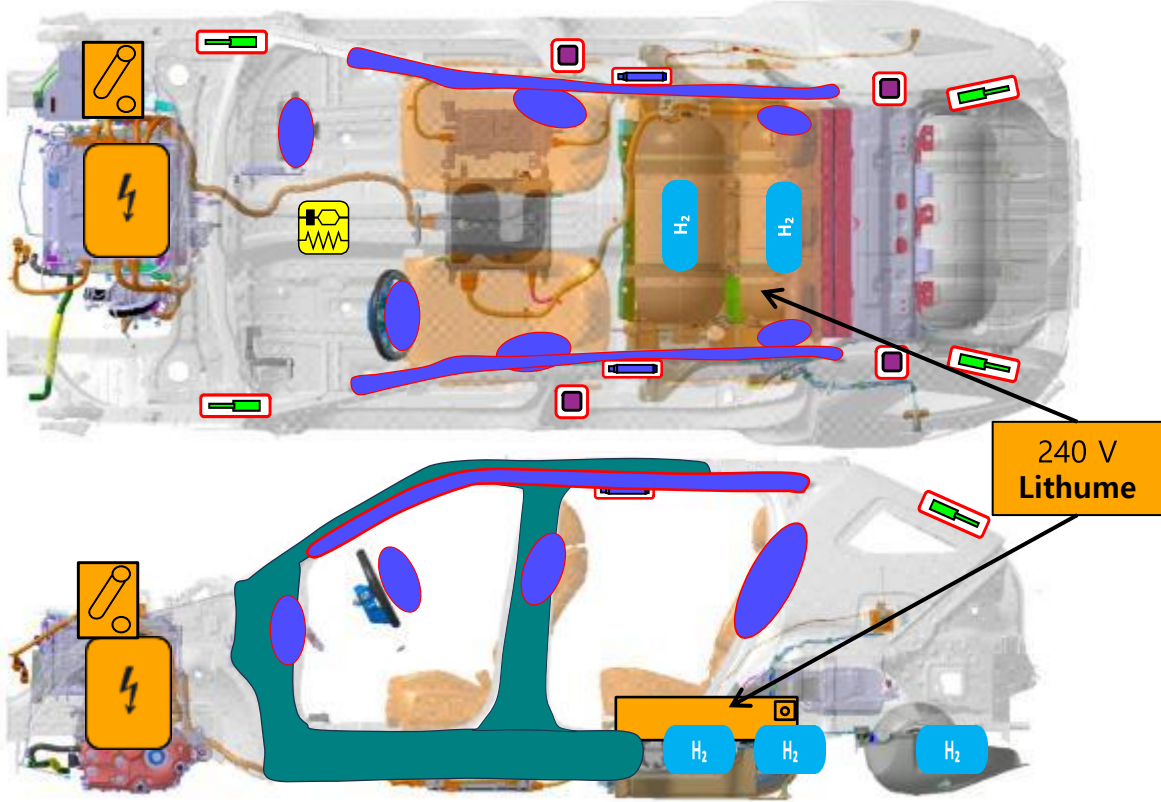

LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART MAY OCCUR UNTIL VEHICLE SHUTS DOWN.



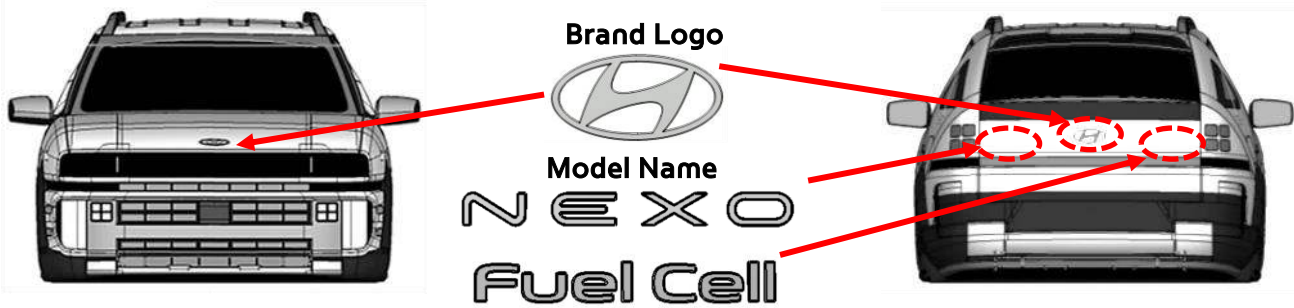

2. Immobilization / stabilization / lifting

■ Immobilization:



1. Chock the wheels and pull the EPB switch to activate the parking brake.




2. Engage the parking brake and press the park (P) button.

■ Lifting points under the vehicle:



To stabilize the vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects

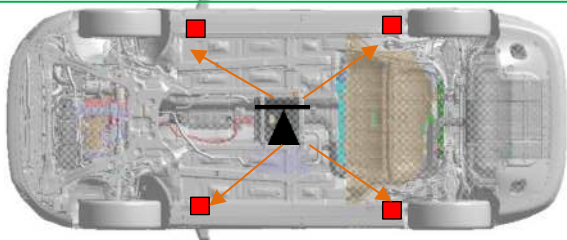

3. Disable direct hazards / safety regulations


■ Disabling High-Voltage Battery



1. Pull the hood release lever to unlatch the hood.



2. Open the hood.

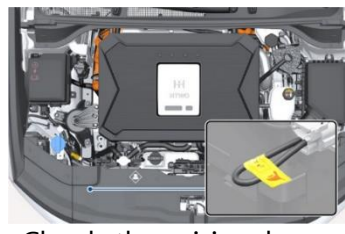

3. Check the wiring harness around the right headlamp and inside the motor room.


■ Disabling the System

- ① Turn off the motor.
- ② Locate a high voltage cut-off switch in the motor room (see the previous page).
- ③ Disconnect the high-voltage cutoff switch.
(Pull the labeled ring wire harness.)



4. Access to the occupants

■ Seat Adjustment

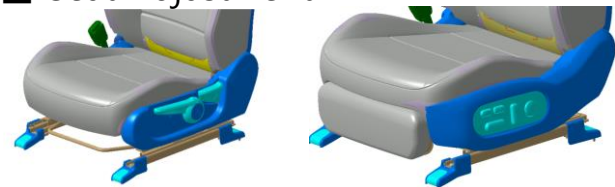

Manual : Use the lever Automatic : Use the button

■ Steering Wheel Adjustment




Use the lever to adjust the steering wheel height and reach.

■ Door Handle



Press the front of the handle and the door handle pops out. Pull the popped-out handle to open the door.

■ Hardened Steel

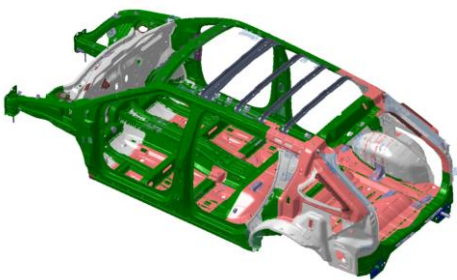

■ High Sterngth Steel (590Mpa ↑)

■ Glasses



① : Laminated / ② :Tempered

5. Stored energy / liquids / gases / solids

	240V	     
	12V (In high-voltage battery)	     
	Coolant :R-1234yf weight : 575g	   
	162.6 Liters (54.2 Liters X 3ea)	    



WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL IMAGING CAMERA.



6. In case of fire



Use large amount of water



BATTERY RE-IGNITION!



Gas strut!



Risk of missile effect of hood and tailgate.



7. In case of submersion



Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.



8. Towing / transportation / storage

OK :



Notice: The use of wheel dollies (1) or flatbed is recommended. Use a wheel lift or flatbed equipment.

Not OK :



Notice : Do not tow with sling-type equipment (1). Do not tow the vehicle with the front wheels touching the ground as this may cause damage to the vehicle (2).

10. Explanation of pictograms used

	Fuel Cell Electric Vehicle		Warning, Electricity
	General warning sign		Flammable
	Corrosives		Hazardous to the human health
	Explosive		Acute toxicity
	Air-conditioning component		Use water to extinguish the fire
	Use thermal infrared camera		Bonnet
	Boot		