



IC Bus™ Electric CE Series School Bus - PB10E

Model Year 2021–2026




0000490524




0000490528

NOTE: If vehicle grille differs from the graphics shown, refer to document 4328948 (PB11E - Rescue Sheet)

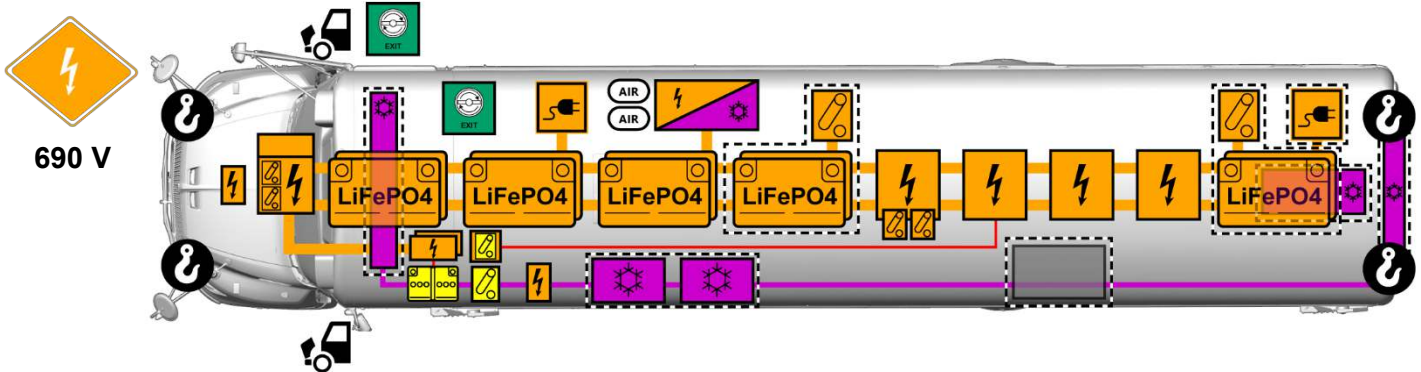

0000490526

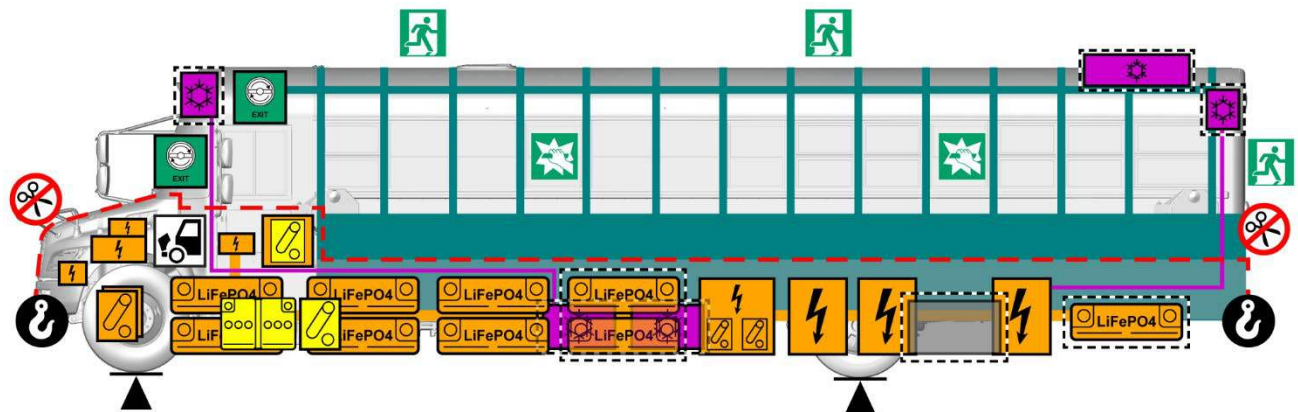

0000490527

WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, NEVER CUT OR ATTEMPT TO BREACH HIGH-VOLTAGE BATTERIES, HIGH-VOLTAGE COMPONENTS, OR HIGH-VOLTAGE WIRING.

	Low-Voltage Battery		High-Voltage Battery		High-Voltage Component		High-Voltage Charge Port		Battery Thermal Mgmt System
	Low-Voltage Disconnect		12V Shutoff for High-Voltage		High-Voltage Disconnect		Tow Hook		Air Conditioning Component
	High-Voltage Power Cable		Low-Voltage Power Cable		Air Condition Line		Lift Point		Compressed Air Tank
	Emergency Exit		Break For Access		Emergency Door Opener		Diesel Heater Tank		Hood Release
	High Strength Structure		No Cut Below Line		Optional Feature		Electric Propulsion		

1. Identification / Recognition

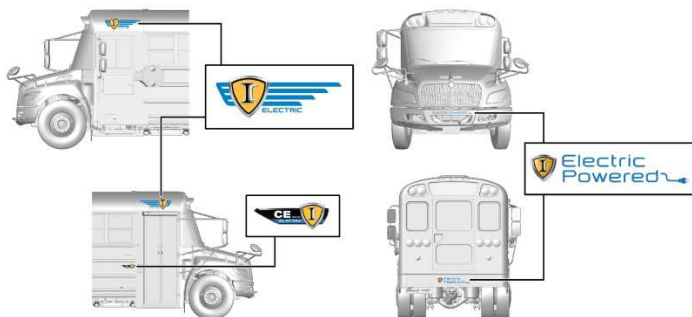


Figure 1. Exterior Decals and Badging

Exterior Identification

Electric bus badges and decals are located on the roof, next to entry door, and on bumpers.

Some localities may not include all badging or decals.



Figure 2. Instrument Cluster

Interior Identification

Instrument cluster shows POWER / REGEN gauge and Regenerative Braking System (RBS) indicator, Levels 1, 2, 3.

Dash panel has RBS 1-2-3 selector switch.



Figure 3. RBS 1-2-3 Selector Switch



Figure 4. High-Voltage Cable and Component Labels

HIGH-VOLTAGE CABLE AND COMPONENT IDENTIFICATION

High-voltage cables and components can be identified by the following:

- A triangle with lightning bolt
- ORANGE in color and / or ORANGE with stripes

Figure 5. High-Voltage Cables

2. Immobilization / Stabilization / Lifting




WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, OR DAMAGE TO PROPERTY, DRAIN ALL AIR FROM THE SUSPENSION SYSTEM PRIOR TO MOVING A COMPROMISED VEHICLE WHENEVER POSSIBLE. FAILURE TO DO SO COULD RESULT IN THE VEHICLE UNCONTROLLABLY SHIFTING OR MOVING DUE TO AIR BEING RELEASED.



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, OR DAMAGE TO PROPERTY, DO NOT LIFT OR APPLY FORCE UNDER HIGH-VOLTAGE BATTERIES, COMPONENTS, OR CABLES. WHEEL LIFTS OR PLATFORM LIFTS ARE RECOMMENDED.




Use of an emergency plug inserted into the vehicle's charge port will not disconnect the high-voltage system.

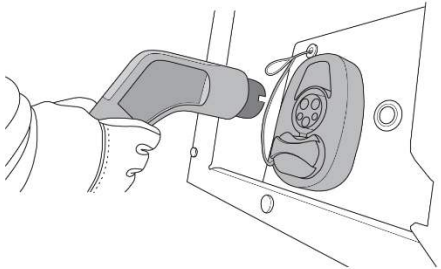

0000490506

Figure 6. Emergency Plug


Install emergency plug in the charge port.

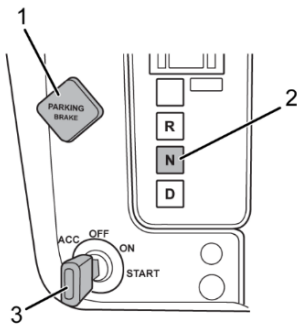

0000490510

Figure 7. Dashboard

1. Push Neutral button (Figure 7, Item 2).
2. Set parking brake (Figure 7, Item 1).
3. Turn key OFF (Figure 7, Item 3).

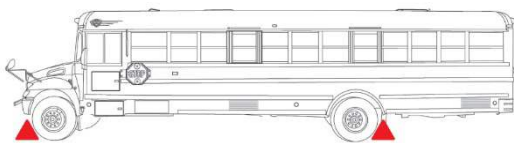

0000491088

Figure 8. Wheel Chocks

Install wheel chocks.



Raise the vehicle under the axles at the lifting points shown. Install support stands under the axles and side members for stability.




Only use tow hooks to lift or recover the vehicle short distances.

3. Disable Direct Hazards / Safety Regulations




WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, ALWAYS REMEMBER THE HIGH-VOLTAGE DISCONNECT SWITCH ONLY ISOLATES HIGH-VOLTAGE FROM COMPONENTS AFTER THE S-BOX. THE HIGH-VOLTAGE DISCONNECT SWITCH DOES NOT DISCONNECT HIGH-VOLTAGE IN THE S-BOX, THE HIGH-VOLTAGE BATTERIES, OR THE CABLES BETWEEN THESE ITEMS. THE VEHICLE'S 12 VOLT SYSTEM COULD STILL BE ENERGIZED. ALWAYS SHUT OFF BOTH THE HIGH-VOLTAGE DISCONNECT SWITCH AND THE 12V DISCONNECT SWITCH WHENEVER INTERACTING WITH A DAMAGED VEHICLE. NEVER TOUCH ORANGE CABLES WITHOUT WEARING APPROPRIATE HIGH-VOLTAGE PERSONAL PROTECTION EQUIPMENT (PPE).

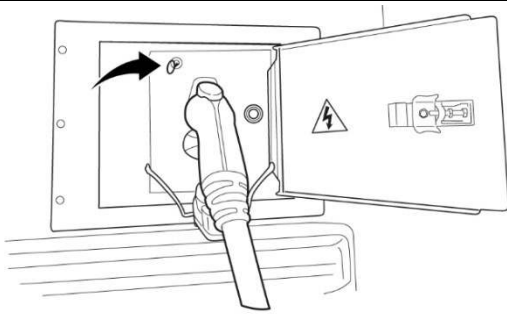

0000490509

Figure 9. Emergency Charger Plug Release Cable


If necessary, pull emergency charger plug release cable and remove the charger from the port.

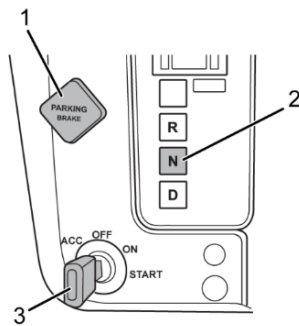

0000490510

Figure 10. Dashboard


1. Push Neutral (N) button (Figure 10, Item 2).
2. Set parking brake (Figure 10, Item 1).
3. Turn key OFF (Figure 10, Item 3).

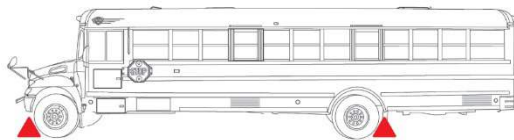

0000491088

Figure 11. Wheel Chocks

Install wheel chocks.

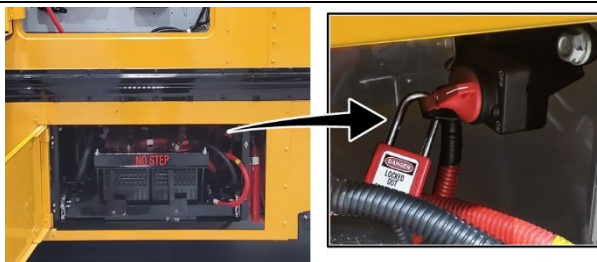


0000491089

Figure 12. 12V Disconnect Switch

The only 12V disconnect switch to shut down low voltage is located under driver-side window.

3. Disable Direct Hazards / Safety Regulations

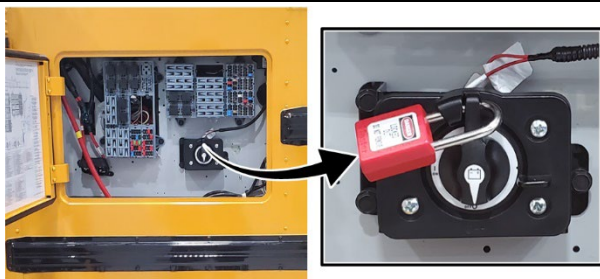

0000491090

Figure 13. High-Voltage Disconnect Switch


The only high-voltage disconnect switch is located on the exterior under the driver-side window.



Wait 3 minutes for high-voltage energy to dissipate.



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, HIGH-VOLTAGE COMPONENTS REMAIN LIVE AFTER THE HIGH-VOLTAGE DISCONNECT SWITCH IS TURNED OFF. THESE COMPONENTS ARE LOCATED PRIMARILY BETWEEN THE FRAME RAILS ON THE UNDERSIDE OF THE VEHICLE AND ARE LABELED.

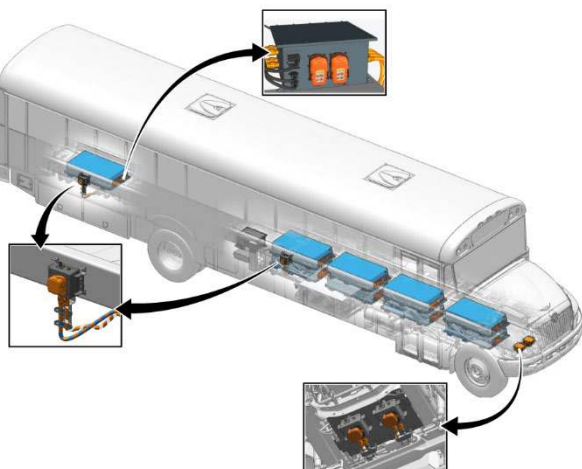


0000491086

Figure 14. Manual Service Disconnects (MSDs)

If necessary, shut down component high-voltage at three places at frame level. The Manual Service Disconnects (MSDs) are located under front of vehicle, forward of left rear axle, and rear of right rear axle.

4. Access to the Occupants

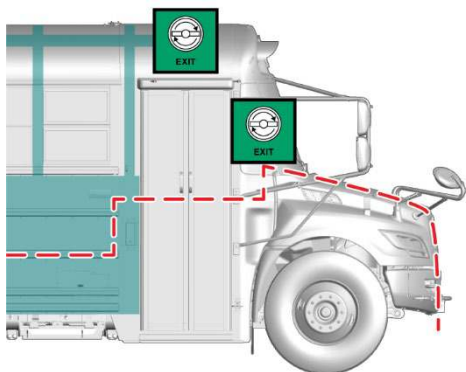

0000491087

Figure 15. Do Not Cut Below Line

Do not cut below the red dotted line.

Be aware of the high-strength body structure as shown.

4. Access to the Occupants



0000490517

Figure 16. Entrance Door Release (Outside)



0000490518

Figure 17. Entrance Door Release (Inside)

ENTRANCE DOOR MANUAL RELEASE

Outside: Rotate key switch counterclockwise.

Inside: Push handle above entrance door.



0000490520

Figure 18. Emergency Window

EMERGENCY WINDOW EXIT

1. Break glass if accessing from outside.
2. Lift red handle.
3. Pull window outward on hinge.



0000490519

Figure 19. Emergency Rear Door Exit

EMERGENCY REAR DOOR EXIT

1. Open interlock latch.
2. Rotate door handle.

4. Access to the Occupants




0000490531

Figure 20. Emergency Roof Hatch Exit

EMERGENCY ROOF HATCH EXIT

1. Rotate handle.
2. Push from interior.

Bus may have optional exterior handle.

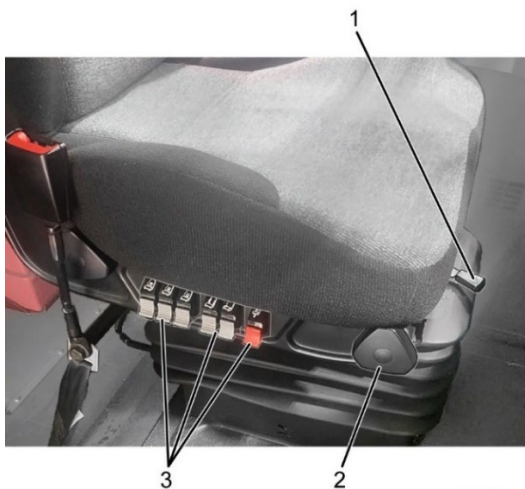

0000490532

Figure 21. Driver Seat Controls

The driver seat can be adjusted by air-operated switches and / or mechanical lever.



0000490534


Figure 22. Steering Column Control

The steering column will tilt and telescope.


5. Stored Energy / Liquids / Gases / Solids



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, ALWAYS WEAR FULL PERSONAL PROTECTION EQUIPMENT (PPE), INCLUDING SELF-CONTAINED BREATHING APPARATUS (SCBA), WHENEVER FIRE IS INVOLVED.

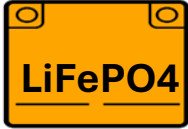

- RED glycol-based automotive coolant



- Red glycol-based automotive coolant
- R-134a refrigerant



- 18-gallon (68 liter) diesel heater tank



- Nominal air pressure 100-140 psi (690-965 kPa)

6. In Case of Fire



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, ALWAYS WEAR FULL PERSONAL PROTECTION EQUIPMENT (PPE), INCLUDING SELF-CONTAINED BREATHING APPARATUS (SCBA), WHENEVER FIRE IS INVOLVED. FIRES IN CRASH-DAMAGED ELECTRIC VEHICLES COULD EMIT TOXIC OR COMBUSTIBLE GASES. SMALL AMOUNTS OF EYE, SKIN, OR LUNG IRRITANTS MAY BE PRESENT. IF EXPOSED, RINSE WITH LARGE AMOUNTS OF WATER FOR 10–15 MINUTES. CONSIDER THE ENTIRE VEHICLE AS ENERGIZED.



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, PAY ATTENTION TO SECONDARY FIRE EVENTS. THERE IS A HIGH RISK OF REIGNITION AFTER FIRE IS EXTINGUISHED.



7. In Case of Submersion



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, PAY ATTENTION TO SECONDARY FIRE EVENTS. THERE IS A HIGH RISK OF REIGNITION DUE TO DAMAGE AND CORROSION. SALTWATER INCREASES THIS RISK FOR ELECTRICAL SHORTS POST INCIDENT. KEEP FULL PERSONAL PROTECTION EQUIPMENT (PPE), INCLUDING SELF-CONTAINED BREATHING APPARATUS (SCBA), READY.



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, HANDLE A SUBMERGED VEHICLE WITH APPROPRIATE PERSONAL PROTECTION EQUIPMENT (PPE). CONSIDER THE ENTIRE VEHICLE AS ENERGIZED.



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, AVOID ANY CONTACT WITH A SUBMERGED HIGH-VOLTAGE SYSTEM. DO NOT ATTEMPT TO DISABLE THE HIGH-VOLTAGE SERVICE DISCONNECT SWITCH WHILE THE VEHICLE IS SUBMERGED. THE VEHICLE KEY MAY BE TURNED TO THE OFF POSITION.



Follow Section 2 – Immobilization / Stabilization / Lifting and Section 3 – Disable Direct Hazards / Safety Regulations.

8. Towing / Transportation / Storage



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, PAY ATTENTION TO SECONDARY FIRE EVENTS. EVEN DAYS LATER SECONDARY FIRE EVENTS CANNOT BE EXCLUDED.



- Check battery temperature.

9. Important Additional Information

Accident assistance and vehicle recovery information for high-voltage systems can be found at:

- NFPA Alternative Fuel Vehicle Training
<http://www.nfpa.org/for-professionals/training-for-me/buy-alternative-fuel-vehicles-training>
- VDIK Accident Assistance and Recovery of Vehicles with High-Voltage or 48-Volt Systems
vdik.de/wp-content/uploads/2020/07/Accident_Assistance_Recovery_FAQ_en_072020_VDIK-1.pdf
- SAE J2990 Hybrid and EV First and Second Responder Recommended Practice
www.sae.org/standards/content/j2990
- National Transportation Safety Board (NTSB)
www.nts.gov

10. Explanation of Pictograms Used




Electric Vehicle





Lithium Iron Phosphate Battery



Hood Release

10. Explanation of Pictograms Used	
	Device to Shut Down Power In Vehicle
	12V Shutoff for High-Voltage
	High-Voltage Disconnect
	Battery, Low-Voltage
	Emergency Exit Left-Side
	Emergency Exit Right-Side
	Break for Access
	Emergency Door Opener
	High-Voltage Component

10. Explanation of Pictograms Used	
	High-Voltage Charge Port
	Battery Thermal Management System
	Air Conditioning Component
	High Strength Structure
	High-Voltage Power Cable
	Low-Voltage Power Cable
	Air Conditioning Line
	Warning, Electricity

10. Explanation of Pictograms Used	
	General Warning Sign
	Low Temperature
	Use Only These Lifting Points
	Air Tank
	Tow Hook
	Diesel Heater Tank
	Optional Feature
	Do Not Cut
	Use Thermal Infrared Camera

10. Explanation of Pictograms Used

	Use Water to Extinguish the Fire
	Explosive
	Flammable
	Hazardous to Human Health
	Corrosives
	Acute Toxicity
	Environmental Hazard
	Gas Under Pressure