



IC Bus™ Electric CE Series School Bus - PB11E

Model Year 2026–Present



0000492138




0000490528


NOTE: If vehicle grille differs from the graphics shown, refer to document 4328940 (PB10E - Rescue Sheet)



690 V

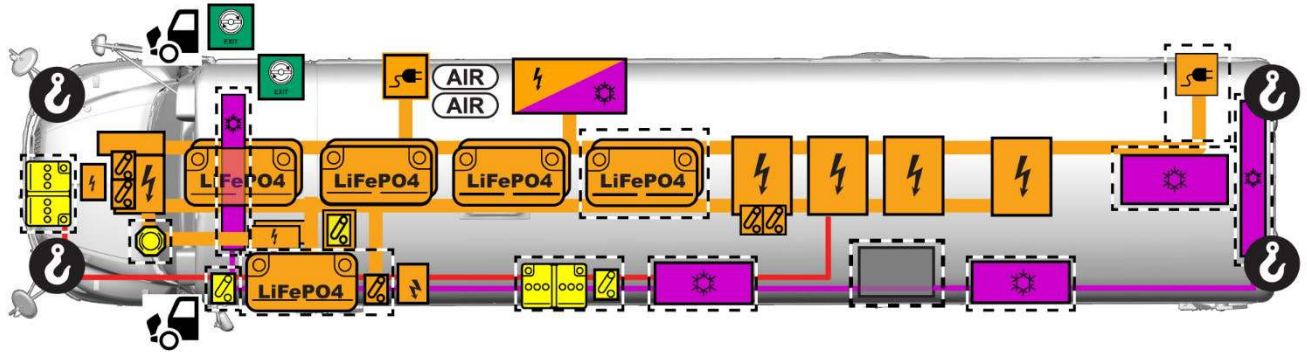

0000492179

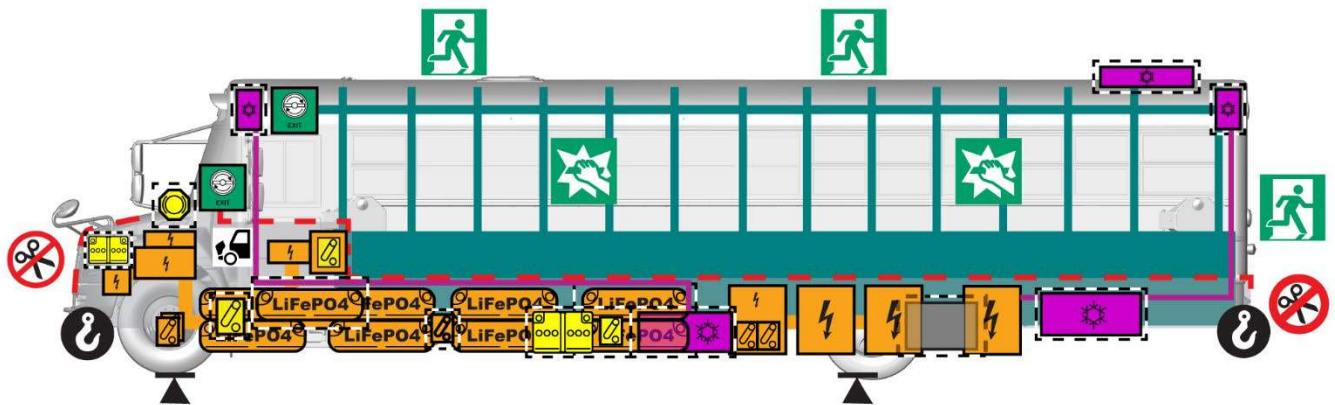


0000492180

WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, NEVER CUT OR ATTEMPT TO BREACH HIGH-VOLTAGE BATTERIES, HIGH-VOLTAGE COMPONENTS, OR HIGH-VOLTAGE WIRING.

	Low-Voltage Battery		High-Voltage Battery		High-Voltage Component		High-Voltage Charge Port		Battery Thermal Mgmt System
	Low-Voltage Disconnect		12V Shutoff for High-Voltage		High-Voltage Disconnect		Tow Hook		Air Conditioning Component
	High-Voltage Power Cable		Low-Voltage Power Cable		Air Condition Line		Lift Point		Compressed Air Tank
	Emergency Exit		Break For Access		Emergency Door Opener		Diesel Heater Tank		Hood Release
	High Strength Structure		No Cut Below Line		Optional Feature		Electric Propulsion		Hydraulic Brake Reservoir

1. Identification / Recognition

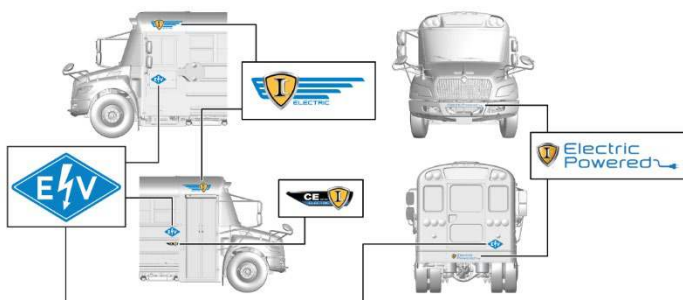

0000492046

Figure 1. Exterior Decals and Badging

Exterior Identification

Electric bus badges and decals are located on the roof, next to the entry door, and on bumpers.

Some localities may not include all badging or decals.



0000491092

Figure 2. Instrument Cluster

Interior Identification

1. REGEN
2. Regenerative Braking System (RBS) indicator, Levels 1, 2, 3

Regenerative Braking System (RBS) controls: dash mounted switches or steering column stalk (right-side of steering wheel).



0000492041

Figure 3. RBS



0000490454

Figure 4. High-Voltage Cable and Component Labels

High-Voltage Cable and Component Identification

High-voltage cables and components can be identified by the following:

- A triangle with a lightning bolt
- ORANGE in color and / or ORANGE with stripes

0000490485

2. Immobilization / Stabilization / Lifting



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, OR DAMAGE TO PROPERTY, DRAIN ALL AIR FROM THE SUSPENSION SYSTEM PRIOR TO MOVING A COMPROMISED VEHICLE WHENEVER POSSIBLE. FAILURE TO DO SO COULD RESULT IN THE VEHICLE UNCONTROLLABLY SHIFTING OR MOVING DUE TO AIR BEING RELEASED.



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, OR DAMAGE TO PROPERTY, DO NOT LIFT OR APPLY FORCE UNDER HIGH-VOLTAGE BATTERIES, COMPONENTS, OR CABLES. WHEEL LIFTS OR PLATFORM LIFTS ARE RECOMMENDED.



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, OR DAMAGE TO PROPERTY, USE OF AN EMERGENCY PLUG INSERTED INTO THE VEHICLE'S CHARGE PORT WILL NOT DISCONNECT THE HIGH-VOLTAGE SYSTEM.



Figure 6. Emergency Plug

Install emergency plug in charge port.

Use of an emergency plug inserted will not disconnect the high-voltage system.

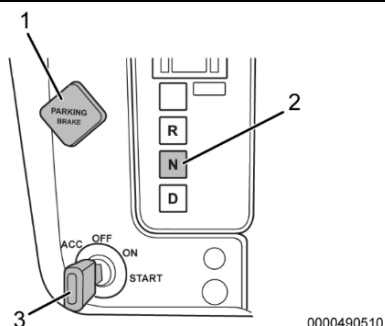


Figure 7. Dashboard

1. Push Neutral (N) button (Figure 7, Item 2) or turn to Neutral (N) position (Figure 8, Item 1).
2. Set parking brake (Figure 7, Item 1) or depress the parking brake pedal down.
3. Turn key OFF (Figure 7, Item 3).



Figure 8. Stalk Shifter

2. Immobilization / Stabilization / Lifting

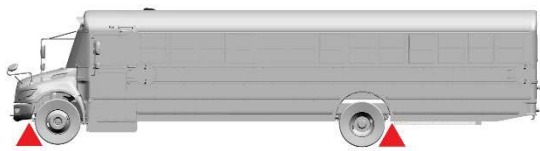


Figure 9. Wheel Chocks

Install wheel chocks.



Raise the vehicle under the axles at the lifting points shown. Install support stands under the axles and side members for stability.




Only use tow hooks to lift or recover the vehicle short distances.

3. Disable Direct Hazards / Safety Regulations



WARNING: To prevent personal injury and / or death, **ALWAYS REMEMBER** to turn OFF the 12V disconnect switch and high-voltage disconnect switch when interacting with a damaged electric vehicle. Turning OFF these switches will fully isolate high voltage of Level 1 / Zone 1. There is still high voltage potential in Level 2 / Zone 2 and Level 3 / Zone 3. Never touch **ORANGE** cables without wearing appropriate High-Voltage Personal Protective Equipment (PPE).

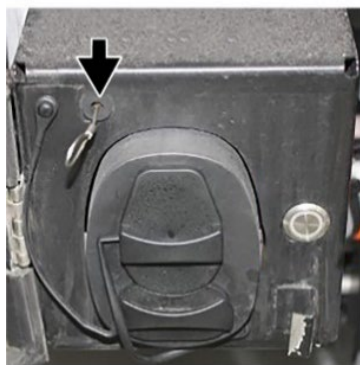

0000490670

Figure 10. Emergency Charger Plug Release Cable

If necessary, pull emergency charger plug release cable and remove the charger from the port.

3. Disable Direct Hazards / Safety Regulations

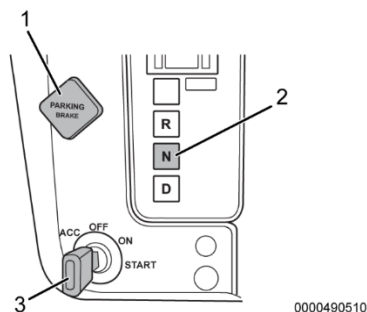


Figure 11. Dashboard

1. Push Neutral (N) button or turn to Neutral (N) position.
2. Set parking brake.
3. Turn key OFF.



Figure 12. Stalk Shifter

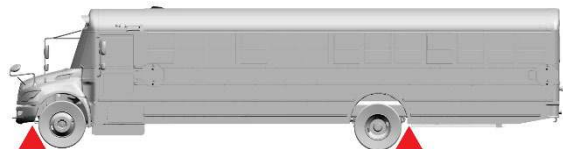


Figure 13. Wheel Chocks

Install wheel chocks.

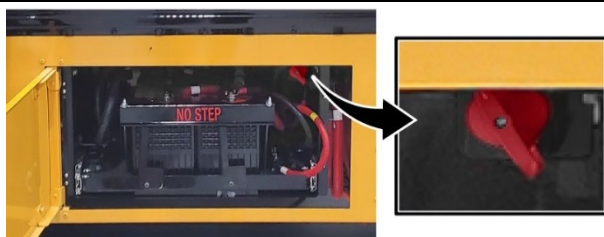



Figure 14. 12V Disconnect Switch

The only 12V disconnect switch to shut down low voltage is located on the driver-side exterior in the 12V battery compartment.

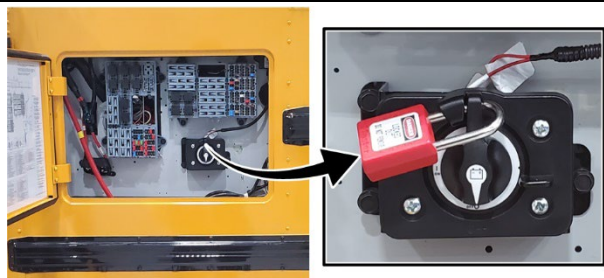


Figure 15. High-Voltage Disconnect Switch

The only high-voltage disconnect switch is located under the driver-side window on the exterior.




Wait 3 minutes for high-voltage energy to dissipate.

3. Disable Direct Hazards / Safety Regulations



TO PREVENT PERSONAL INJURY AND / OR DEATH, HIGH-VOLTAGE COMPONENTS REMAIN LIVE AFTER THE HIGH-VOLTAGE DISCONNECT SWITCH IS TURNED OFF. THESE COMPONENTS ARE LOCATED PRIMARILY BETWEEN THE FRAME RAILS ON THE UNDERSIDE OF THE VEHICLE AND ARE LABELED.

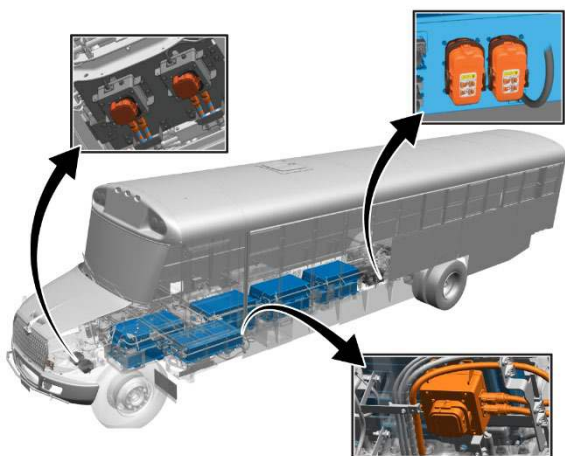


0000492043

Figure 16. Manual Service Disconnects (MSDs)

The three places to shut down component high voltage are located at frame level. The Manual Service Disconnects (MSDs) are located on the underside of the vehicle:

- at the front of the vehicle
- forward of driver-side rear axle
- outside the frame rail under the driver-side window

4. Access to the Occupants

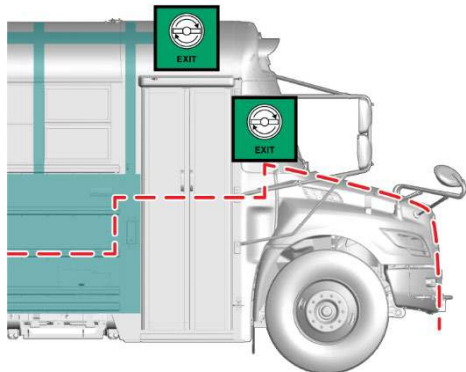

0000491087

Figure 17. Do Not Cut Below Line

Do not cut below the red dotted line.

Be aware of the high-strength body structure as shown.



0000490517

Figure 18. Entrance Door Release (Outside)

ENTRANCE DOOR MANUAL RELEASE

Outside: Rotate key switch counterclockwise.

Inside: Push handle above entrance door.

4. Access to the Occupants



0000490518

Figure 19. Entrance Door Release (Inside)

ENTRANCE DOOR MANUAL RELEASE

Outside: Rotate key switch counterclockwise.

Inside: Push handle above entrance door.



0000490520

Figure 20. Emergency Window

EMERGENCY WINDOW EXIT

1. Break glass if accessing from outside.
2. Lift red handle.
3. Pull window outward on hinge.



0000490519

Figure 21. Emergency Rear Door Exit

EMERGENCY REAR DOOR EXIT

1. Open interlock latch.
2. Rotate door handle.



0000490531

Figure 22. Emergency Roof Hatch Exit

EMERGENCY ROOF HATCH EXIT

1. Rotate handle.
2. Push from interior.

Bus may have optional exterior handle.

4. Access to the Occupants

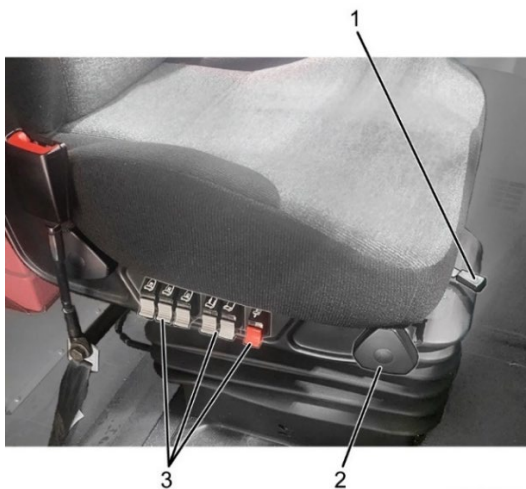


Figure 23. Driver Seat Controls

The driver seat can be adjusted by air-operated switches and / or mechanical lever.



Figure 24. Steering Column Control

The steering column will tilt and telescope.

5. Stored Energy / Liquids / Gases / Solids




WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, ALWAYS WEAR FULL PERSONAL PROTECTION EQUIPMENT (PPE), INCLUDING SELF-CONTAINED BREATHING APPARATUS (SCBA), WHENEVER FIRE IS INVOLVED.



- RED glycol-based automotive coolant

5. Stored Energy / Liquids / Gases / Solids

 		
	   	
	• RED glycol-based automotive coolant • R134a refrigerant	
 		
	• 18-gallon (68 liter) diesel heater tank (optional) • Hydraulic brake reservoir (optional)	
		
	• Air pressure of 100–140 psi (690–965 kPa)	

6. In Case of Fire



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, ALWAYS WEAR FULL PERSONAL PROTECTION EQUIPMENT (PPE), INCLUDING SELF-CONTAINED BREATHING APPARATUS (SCBA), WHENEVER FIRE IS INVOLVED. FIRES IN CRASH-DAMAGED ELECTRIC VEHICLES COULD EMIT TOXIC OR COMBUSTIBLE GASES. SMALL AMOUNTS OF EYE, SKIN, OR LUNG IRRITANTS MAY BE PRESENT. IF EXPOSED, RINSE WITH LARGE AMOUNTS OF WATER FOR 10–15 MINUTES. CONSIDER THE ENTIRE VEHICLE AS ENERGIZED.



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, PAY ATTENTION TO SECONDARY FIRE EVENTS. THERE IS A HIGH RISK OF REIGNITION AFTER FIRE IS EXTINGUISHED.

7. In Case of Submersion



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, PAY ATTENTION TO SECONDARY FIRE EVENTS. THERE IS A HIGH RISK OF REIGNITION DUE TO DAMAGE AND CORROSION. SALTWATER INCREASES THIS RISK FOR ELECTRICAL SHORTS POST INCIDENT. KEEP FULL PERSONAL PROTECTION EQUIPMENT (PPE) READY, INCLUDING SELF-CONTAINED BREATHING APPARATUS (SCBA).



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, HANDLE A SUBMERGED VEHICLE WITH APPROPRIATE PERSONAL PROTECTION EQUIPMENT (PPE). CONSIDER THE ENTIRE VEHICLE AS ENERGIZED.



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, AVOID ANY CONTACT WITH A SUBMERGED HIGH-VOLTAGE SYSTEM. DO NOT ATTEMPT TO DISABLE THE HIGH-VOLTAGE SERVICE DISCONNECT SWITCH WHILE THE VEHICLE IS SUBMERGED. THE VEHICLE KEY MAY BE TURNED TO THE OFF POSITION.




Follow Section 2 – Immobilization / Stabilization / Lifting and Section 3 – Disable Direct Hazards / Safety Regulations.

8. Towing / Transportation / Storage



WARNING: TO PREVENT PERSONAL INJURY AND / OR DEATH, PAY ATTENTION TO SECONDARY FIRE EVENTS. EVEN DAYS LATER SECONDARY FIRE EVENTS CANNOT BE EXCLUDED.






- Check battery temperature.

9. Important Additional Information

Accident assistance and vehicle recovery information for high-voltage systems can be found at:

- NFPA Alternative Fuel Vehicle Training
<http://www.nfpa.org/for-professionals/training-for-me/buy-alternative-fuel-vehicles-training>
- VDIK Accident Assistance and Recovery of Vehicles with High-Voltage or 48-Volt Systems
vdik.de/wp-content/uploads/2020/07/Accident_Assistance_Recovery_FAQ_en_072020_VDIK-1.pdf
- SAE J2990 Hybrid and EV First and Second Responder Recommended Practice
www.sae.org/standards/content/j2990
- National Transportation Safety Board (NTSB)
www.nts.gov

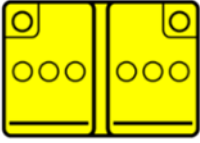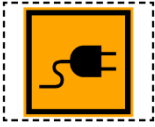10. Explanation of Pictograms Used	
Pictogram	Designation
	Electric Vehicle
	Electric Vehicle
	Battery, Low-Voltage
	Lithium Iron Phosphate Battery
	High-Voltage Component
	Charge Port
	Optional Charge Port
	Battery Thermal Management System

10. Explanation of Pictograms Used	
	Device to Shut Down Power in Vehicle
	High-Voltage Disconnect
	12V Shutoff for High-Voltage
	Height Control Truck, by Air System
	Steering Wheel Tilt Control
	Seat Height Adjustment by Air System
	Seat Adjustment, Longitudinal
	Air Tank
	Emergency Exit Left-Side

10. Explanation of Pictograms Used	
	Emergency Exit Right-Side
	Break for Access
	Emergency Door Opener
	High-Voltage Power Cable
	Low-Voltage Power Cable
	Air Conditioning Line
	Warning, Electricity
	General Warning Sign
	Warning Low Temperature

10. Explanation of Pictograms Used	
	Air Conditioning Component
	High Strength Structure
	Use Thermal Infrared Camera
	Hydraulic Brake Reservoir (Optional)
	Use Water to Extinguish Fire
	Wheel Chock
	Use Only These Lifting Points
	Hood Release
	Optional Feature
	Optional Tow Hook

10. Explanation of Pictograms Used	
	Diesel Fuel Tank
	No Cut Below Line
	Explosive
	Flammable
	Hazardous to Human Health
	Corrosives
	Acute Toxicity
	Environmental Hazard
	Gases Under Pressure