




Kia Carnival Hybrid MPV, 5doors From 2025

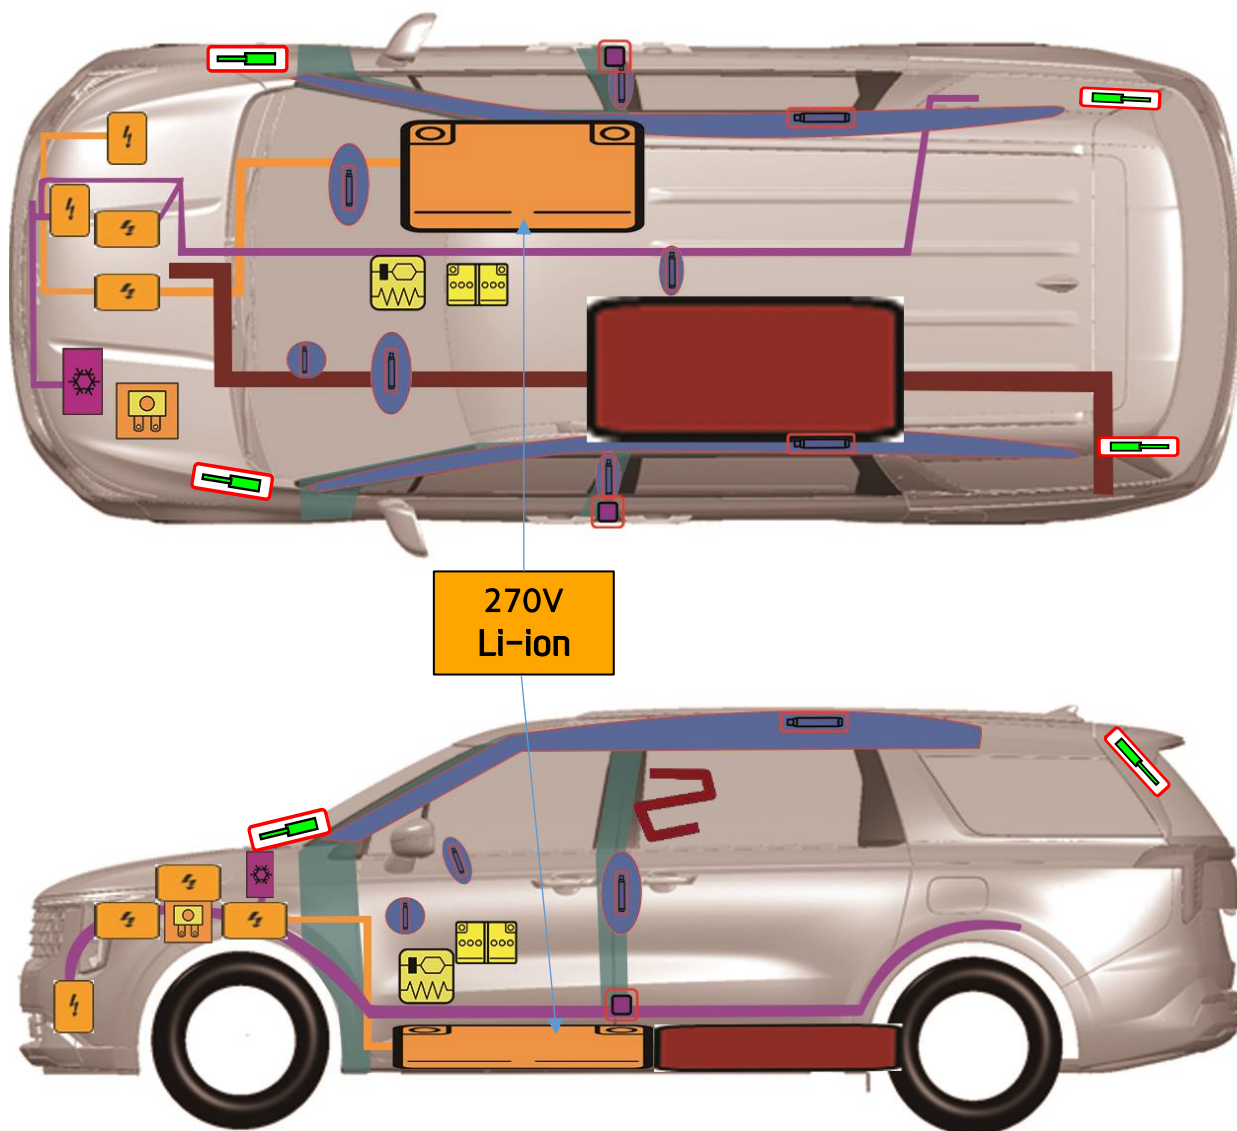

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		High voltage component
	Battery, low-voltage		Gas strut / Preloaded spring		High strength zone		Fuel tank content gasoline / ethanol		Battery pack, high-voltage
	High voltage power cable		Fuse box disabling high voltage		Air-conditioning component		Air-conditioning line		

1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.



Brand Logo Name



Model name



Hybrid emblem



2. Immobilization / stabilization / lifting


Immobilization:



1. Chock the wheels and pull the **EPB** switch to set the parking brake.
2. For automatic vehicles the shift button to the park(P) position.

For stabilize vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects

Lifting points under the vehicle:

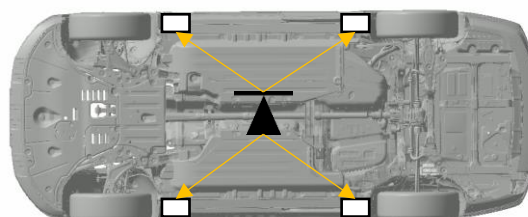

3. Disable direct hazards / safety regulations

IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. FOR ALL OTHER CASES USE THE DISABLING METHODS BELOW




Disabling High Voltage System:




Disabling:





"Service Interlock" is not completely removable.

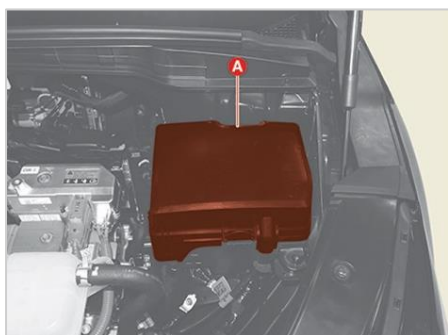

Remove the engine room fuse box cover (A).

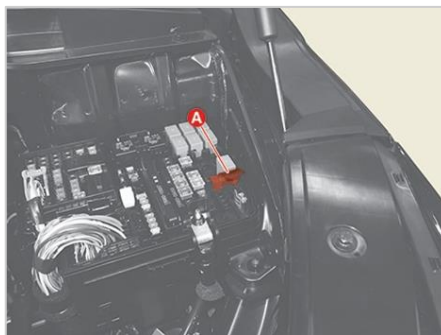

Disconnect the service interlock (A) ensuring the whole fuse is NOT removed from the junction box.

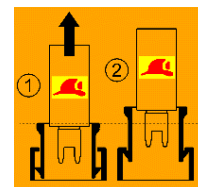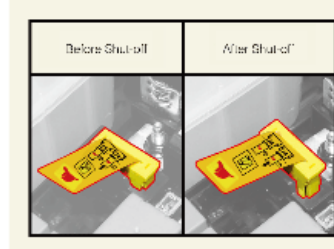

Disabling battery, low-voltage:



Pull the release lever to unlatch the hood.




Push the secondary hood release lever (1) upside.

Disabling:



Lift the hood.

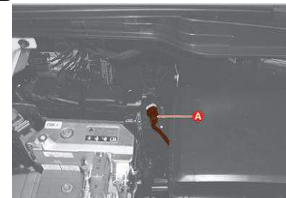

Disconnect the positive (+) connector (A) of the auxiliary battery (12 V).

4. Access to the occupants

Steering column adjustment:



Glass:

- ① Laminated
- ②③ Laminated
- ④⑤ Tempered




Seat adjustment:

Manuals




Automatic

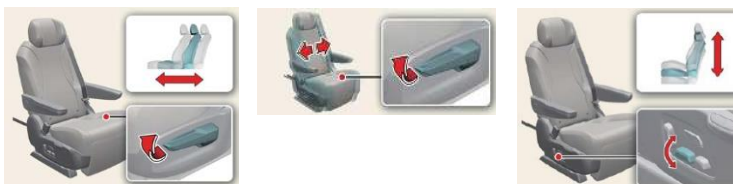

Vehicle body

→ Hardened Steel

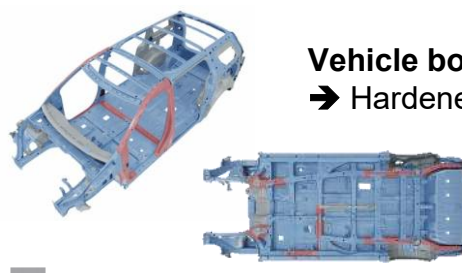

- Mild zone
- Advanced high strength zone
- High strength zone

Liftgate :



1. Insert a long, flat object into the opening at the bottom of the liftgate.
2. Slide the latch in the direction of the arrow to unlock the liftgate.
3. Push the liftgate to open.

5. Stored energy / liquids / gases / solids

		72L	
		12V	R-1234yf 770g
		270V	




WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL INFRARED CAMERA.



6. In case of fire



USE LARGE AMOUNT OF WATER

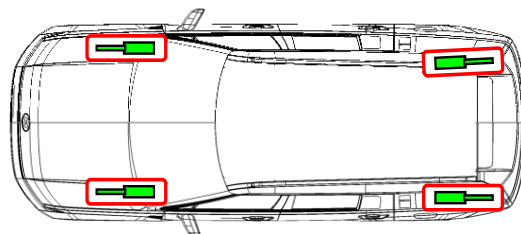

BATTERY RE-IGNITION!



GAS STRUT!

RISK OF MISSILE EFFECT
OF HOOD AND LIFTGATE.



7. In case of submersion




DO NOT TOUCH ANY OF THE HIGH-VOLTAGE COMPONENTS OR CABLES INCLUDING THE HIGH VOLTAGE CUT-OFF SWITCH, AS DOING SO POSES AN ELECTROCUTION HAZARD. WORK ON THE VEHICLE ONLY AFTER THE VEHICLE HAS BEEN PULLED OUT OF THE WATER.



8. Towing / transportation / storage

OK

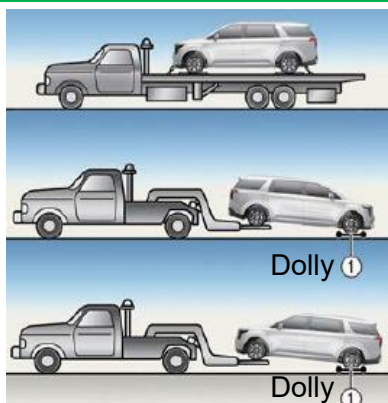

Notice : The use of wheel dollies (1) or flatbed is recommended. Use a wheel lift or flatbed equipment.

**Not
OK**

1



2



Notice : Do not tow with sling-type equipment. Do not tow the vehicle with the driven wheels on the ground as this may cause damage to the vehicle.

9. Additional key information

10. Explanation of pictograms used

	Hybrid electric vehicle		Fuel tank content gasoline / ethanol		Hood
	General warning sign		Air-conditioning component		Trunk
	Corrosives		Hazardous to the human health		Flammable
	Explosive		Acute toxicity		Environmental hazard
	Use thermal Infrared camera		Use water to extinguish the fire		Warning, Electricity