




# Kia Niro Plug in Hybrid SUV, 5doors From 2023

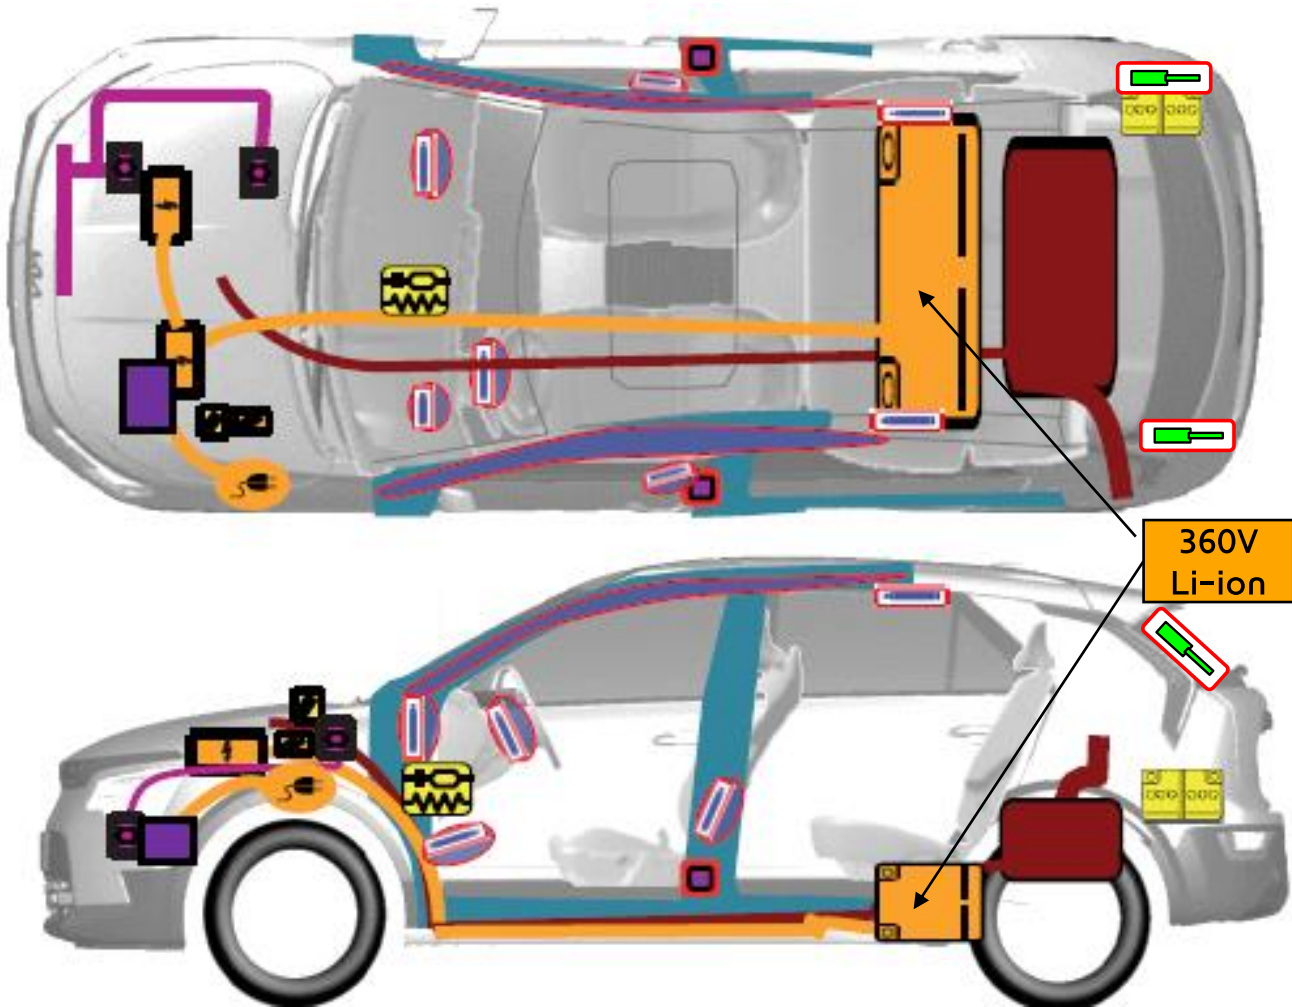

|  |                          |  |                              |  |                        |  |                                      |  |                            |
|--|--------------------------|--|------------------------------|--|------------------------|--|--------------------------------------|--|----------------------------|
|  | Airbag                   |  | Stored gas inflator          |  | Seat belt pretensioner |  | SRS control unit                     |  | High voltage component     |
|  | Battery, low-voltage     |  | Gas strut / Preloaded spring |  | High strength zone     |  | Fuel tank content gasoline / ethanol |  | Battery pack, high-voltage |
|  | High voltage power cable |  | Air-conditioning component   |  | Air-conditioning line  |  |                                      |  |                            |

## 1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.



Brand Logo Name



Model name



Charging door



Plug-in Hybrid  
"PHEV"

## 2. Immobilization / stabilization / lifting

Immobilization:

1



1. Chock the wheels and pull the switch to set the parking brake.

2




2. Put the vehicle in P (Park) position by pressing the 'P' button on the rotary shifter.

Lifting points under the vehicle:



JACK/SUPPORT POSITION

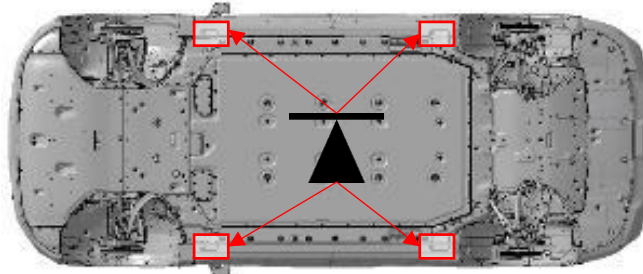

## 3. Disable direct hazards / safety regulations




IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. FOR ALL OTHER CASES USE THE DISABLING METHODS BELOW




Disabling High Voltage System:




Disabling:

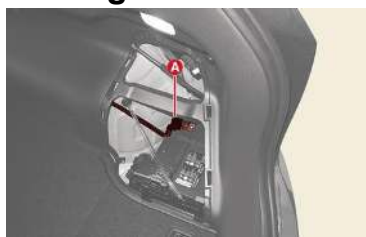

Turn the IG OFF, disconnect the negative connector from the auxiliary battery, low-voltage (A) after loosening the nut.

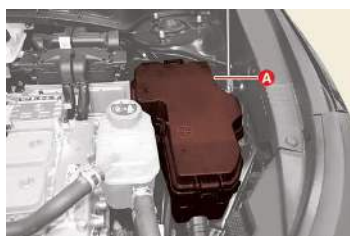

Remove the engine room junction box cover.

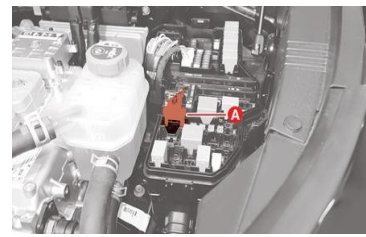


Disconnect the service interlock connector (A).


## Disabling battery, low-voltage: Disabling:



Open the liftgate.

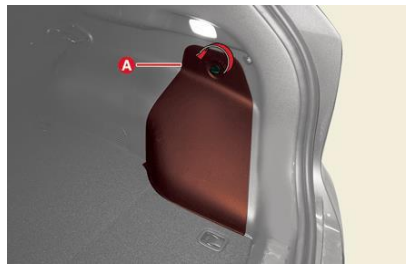

Remove the upper battery cover (A) after rotating valve in the direction of the arrow.

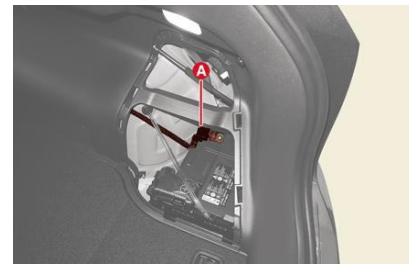

Disconnect negative connector from the auxiliary battery, low-voltage (A) after loosening the nut.

## 4. Access to the occupants

### Steering column adjustment:



MANUAL

### Seat Adjustment :




POWER




### Glass:

1. Laminated
2. Laminated
3. Laminated
4. Tempered

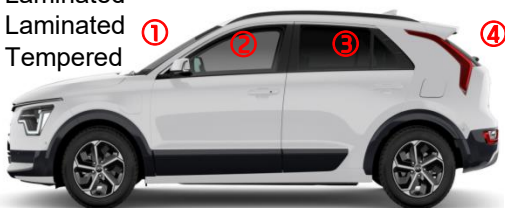

### Hardened Steel :

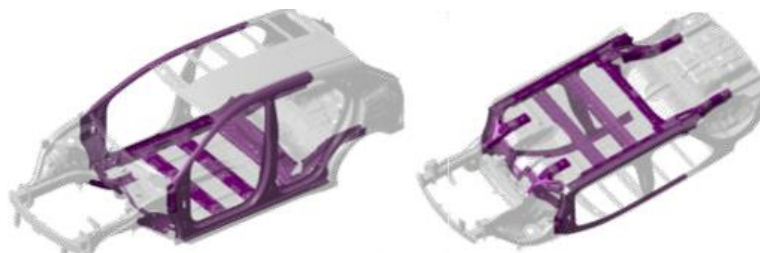

### Liftgate : emergency safety release



1. Insert a long, flat object into the opening at the bottom of the liftgate.
2. Slide the latch in the direction of the arrow to unlock the liftgate.
3. Push the liftgate open.

## 5. Stored energy / liquids / gases / solids

|  |  |       |                  |
|--|--|-------|------------------|
|  |  | 12 V  |                  |
|  |  | 360 V | R-1234yf<br>480g |
|  |  | 37 L  |                  |



IF COOLANT LEAKS FROM THE BATTERY PACK, IT IS DANGEROUS AND THE BATTERY IS UNSTABLE. CHECK BATTERY PACK TEMPERATURE WITH THERMAL INFRARED CAMERA.



## 6. In case of fire



**USE LARGE AMOUNT OF WATER**



**BATTERY RE-IGNITION!**



**GAS STRUT!**

RISK OF MISSILE EFFECT  
OF HOOD AND LIFTGATE.

## 7. In case of submersion




DO NOT TOUCH ANY OF THE HIGH-VOLTAGE COMPONENTS OR CABLES INCLUDING THE HIGH VOLTAGE CUT-OFF SWITCH, AS DOING SO POSES AN ELECTROCUTION HAZARD. WORK ON THE VEHICLE ONLY AFTER THE VEHICLE HAS BEEN PULLED OUT OF THE WATER.



## 8. Towing / transportation / storage

**OK**

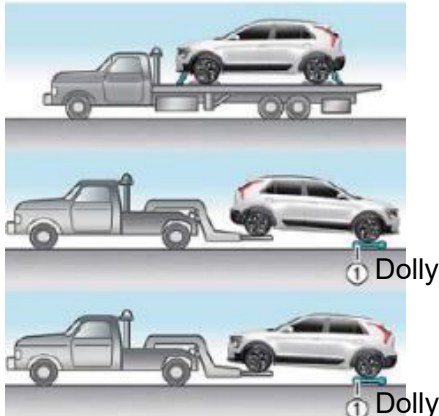

Notice: The use of wheel dollies (1) or flatbed is recommended. Use a wheel lift or flatbed equipment.

**Not OK**

1



2



Notice : Do not tow with sling-type equipment. Do not tow the vehicle with the driven wheels on the ground as this may cause damage to the vehicle.

## 9. Important additional information

## 10. Explanation of pictograms used

|  |                             |  |                                      |  |                      |
|--|-----------------------------|--|--------------------------------------|--|----------------------|
|  | Plug-in hybrid vehicle      |  | Fuel tank content gasoline / ethanol |  | Hood                 |
|  | General warning sign        |  | Air-conditioning component           |  | Trunk                |
|  | Corrosives                  |  | Hazardous to the human health        |  | Flammable            |
|  | Explosive                   |  | Acute toxicity                       |  | Environmental hazard |
|  | Use thermal Infrared camera |  | Use water to extinguish the fire     |  | Warning, electricity |