




Kia Sorento Plug in Hybrid
SUV, 5doors
From 2025

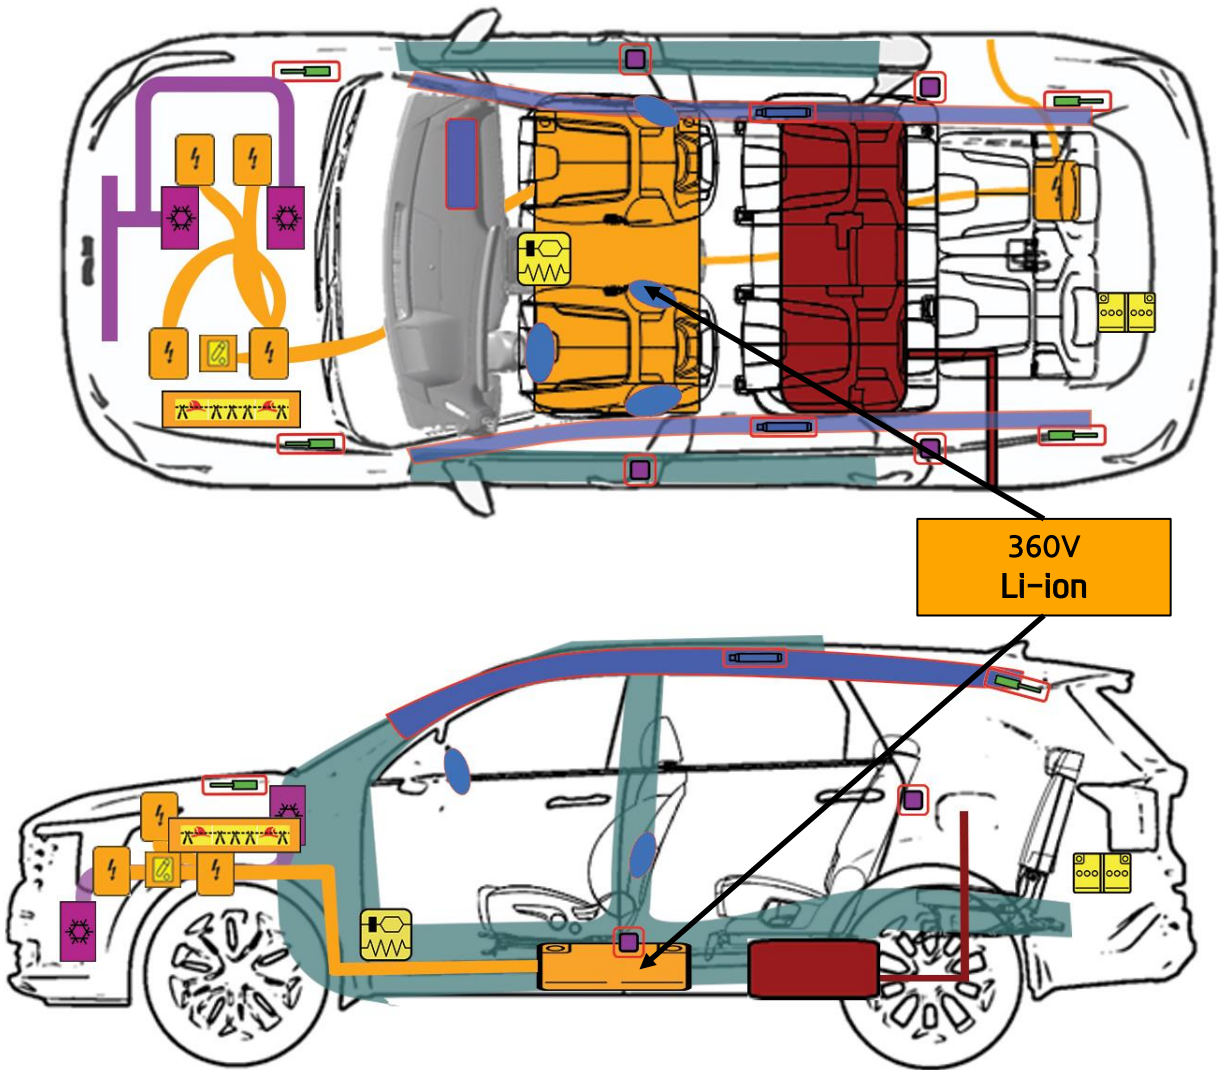

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		High voltage component
	Battery, low-voltage		Gas strut / Preloaded spring		High strength zone		Fuel tank content gasoline / ethanol		Battery pack, high-voltage
	High voltage power cable		Disconnect high voltage device		Air-conditioning component		Air-conditioning line		Cable cut

1. Identification / recognition




LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.



Brand Logo Name



Model name

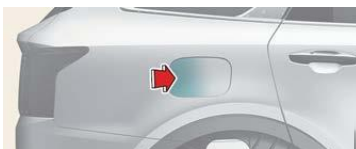

Charging Door



Plug-in Hybrid "PHEV"

2. Immobilization / stabilization / lifting

Immobilization:




1. Chock the wheels and pull the **EPB** switch to set the parking brake.
2. For automatic vehicles the shift button to the park(P) position.

For stabilize vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects

Lifting points under the vehicle:



□ JACK/SUPPORT POSITION

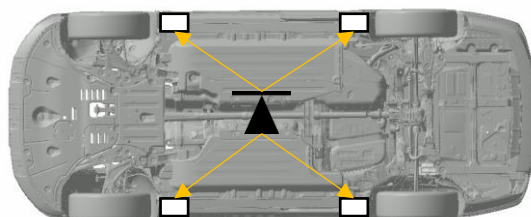


3. Disable direct hazards / safety regulations


IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. FOR ALL OTHER CASES USE THE DISABLING METHODS BELOW



Disabling High Voltage System:

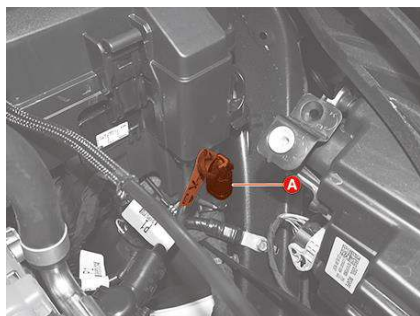

1. Disconnect the service interlock connector (A).

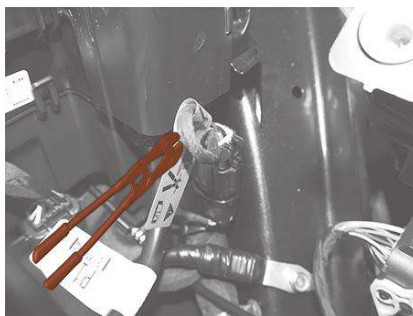


※ Cut the high voltage service interlock connector wire when the service interlock connector cannot be disconnected.




Wait more than 3 minutes for capacitor in the inverter to be discharged completely after disconnecting the high voltage service interlock connector.




Disabling battery, low-voltage:

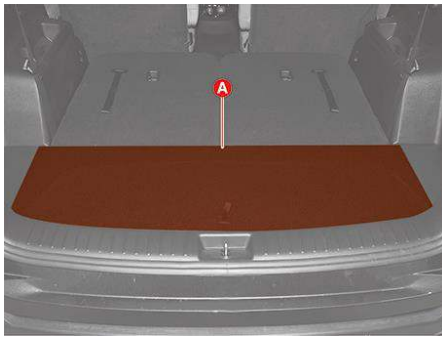

1. Open the luggage mat (A).

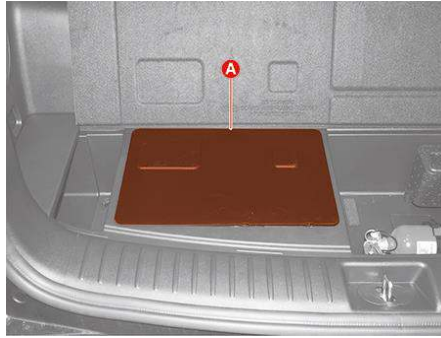


2. Remove the auxiliary battery service cover (A).

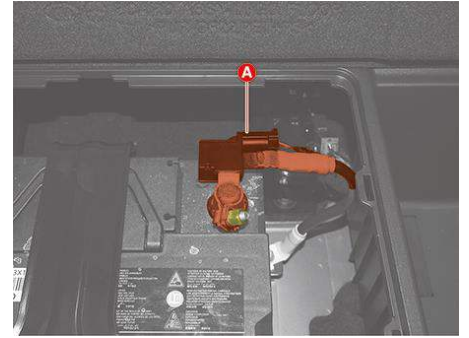

3. Disconnect the auxiliary battery (-) terminal (A) after loosening the nut.

4. Access to the occupants


Steering column adjustment:

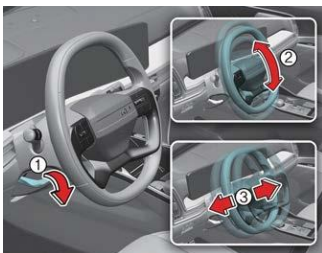


Glass: ①②③ : Laminated
④ : Tempered



Seat adjustment:

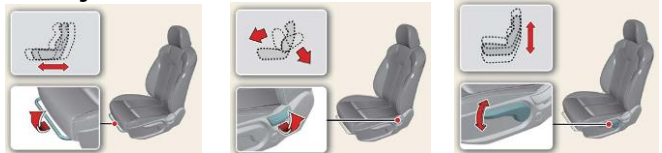


MANUAL (if equipped)

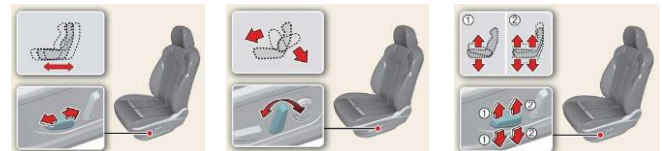


POWER (if equipped)

Vehicle body → High strength zone

Side

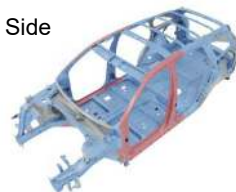

Bottom



Mild zone
Advanced high strength zone
High strength zone

Liftgate:



1. Insert a long, flat object, such as a key into the opening at the bottom of the liftgate.
2. Slide the latch in the direction of the arrow to unlock the liftgate.
3. Push the liftgate to open.

5. Stored energy / liquids / gases / solids

		47L	
		12V	R-1234yf 800g
		360V	




WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL INFRARED CAMERA.




6. In case of fire



USE LARGE AMOUNT OF WATER

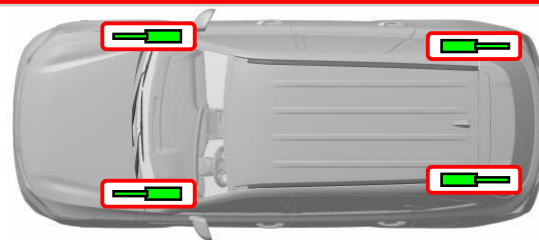

BATTERY RE-IGNITION!



GAS STRUT!

RISK OF MISSILE EFFECT
OF HOOD AND LIFTGATE.



7. In case of submersion




DO NOT TOUCH ANY OF THE HIGH-VOLTAGE COMPONENTS OR CABLES INCLUDING THE HIGH VOLTAGE CUT-OFF SWITCH, AS DOING SO POSES AN ELECTROCUTION HAZARD. WORK ON THE VEHICLE ONLY AFTER THE VEHICLE HAS BEEN PULLED OUT OF THE WATER.



8. Towing / transportation / storage

OK

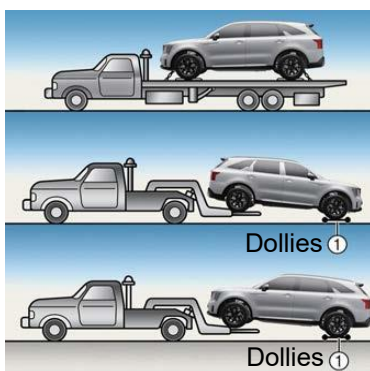

Notice: The use of wheel dollies (1) or flatbed is recommended. Use a wheel lift or flatbed equipment.

Not OK

1



2



Notice : Do not tow with sling-type equipment. Do not tow the vehicle with the driven wheels on the ground as this may cause damage to the vehicle.

9. Important additional information

10. Explanation of pictograms used

	Plug-in hybrid electric vehicle		Fuel tank content gasoline / ethanol		Hood
	General warning sign		Air-conditioning component		Trunk
	Corrosives		Hazardous to the human health		Flammable
	Explosive		Acute toxicity		Environmental hazard
	Use thermal Infrared camera		Use water to extinguish the fire		Warning, electricity