

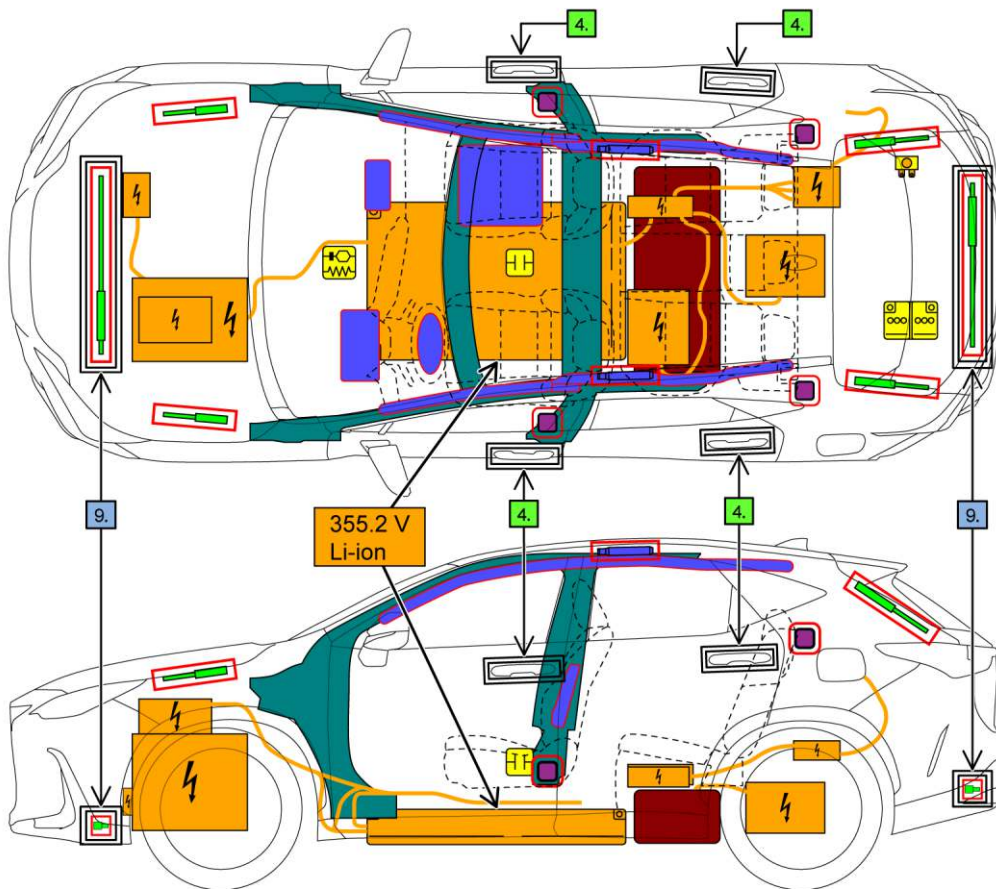


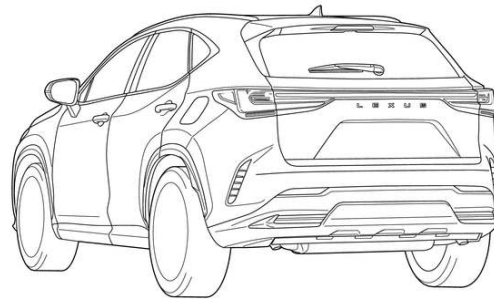

LEXUS NX450h+
5 doors / 5 seats / wagon
2026 -

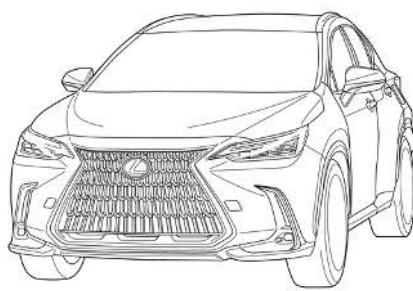


	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Gas strut / Preloaded spring
	High strength zone		Zone requiring special attention		Battery low voltage		Ultra capacitor, low voltage		Fuel tank
	High voltage battery pack		High voltage component		High voltage power cable		Fuse box disabling high voltage system		
ID No.		Version No.		Version date		Page			
NXPHV26		01		07 / 2025		1 / 4			

1. Identification / Recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.

■ Location of vehicle badges

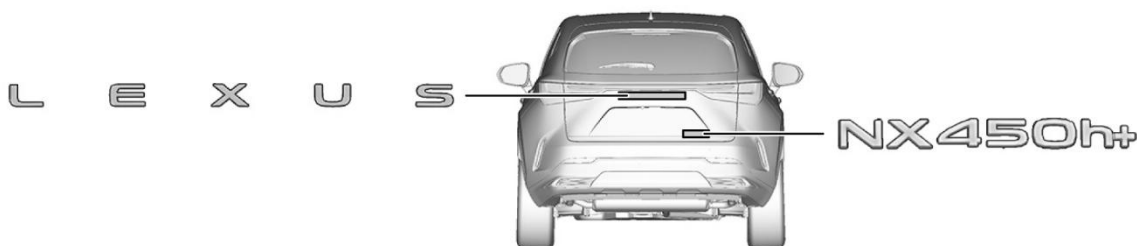


■ Energy source: Lithium-ion battery




2. Immobilisation / Stabilisation / Lifting

■ Completely immobilize the vehicle

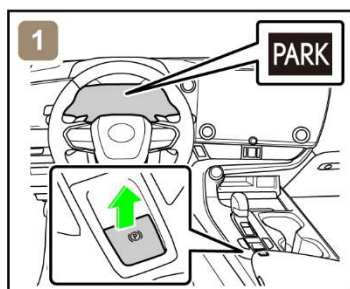


1) Chock the wheels and engage the parking brake.

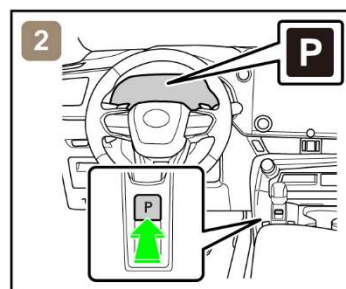

2) Press the P position switch.

■ Stabilisation-lifting point

Place cribbing such as wooden blocks at the four points under the front and rear pillars.

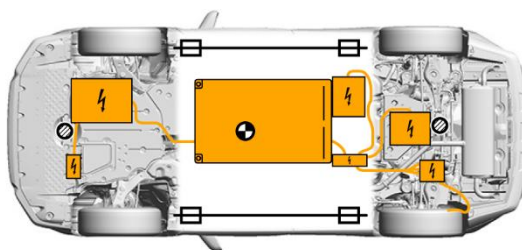

Extra Reinforced Lifting Points



Standard Jack Locations



Vehicle Center of Gravity



DO NOT PLACE CRIBBING SUCH AS WOODEN BLOCKS OR RESCUE AIR LIFTING BAGS UNDER THE EXHAUST SYSTEM, FUEL SYSTEM OR HIGH VOLTAGE POWER CABLES. DOING SO MAY RESULT IN FUEL LEAKS, FIRE, OR ELECTRIC SHOCK.

ID No.	Version No.	Version date	Page
NXPHV26	01	07 / 2025	2 / 4

3. Disable direct hazards / Safety regulations

■ If any of the following systems are required to be operated, operate them **BEFORE** disconnecting the battery.

Power door lock

Power window

Power Back door

Moon roof

Panoramic moon roof

Power seat

Power tilt and telescopic steering


Electric parking brake

Electronic shift lever

When the 12 V battery is disconnected, electrical components cannot be operated.


■ Perform procedure Main or Alternative to completely shut off the vehicle.

<Main Procedure>

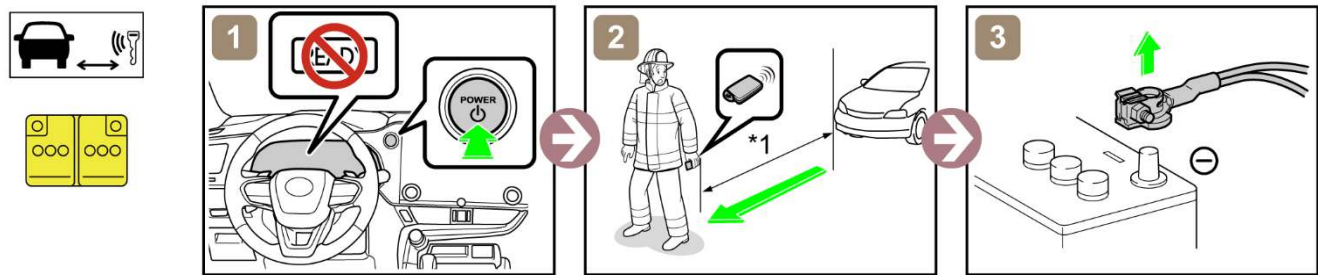

*1: 5 m (16.4 ft) or more


<Alternative Procedure>

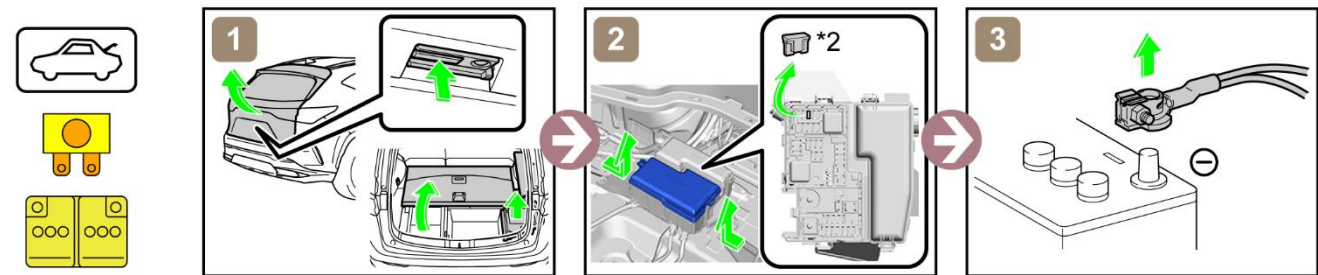

*2: PM-IGCT FUSE (7.5 A BROWN)


In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated.

■ Access to 12 V Battery

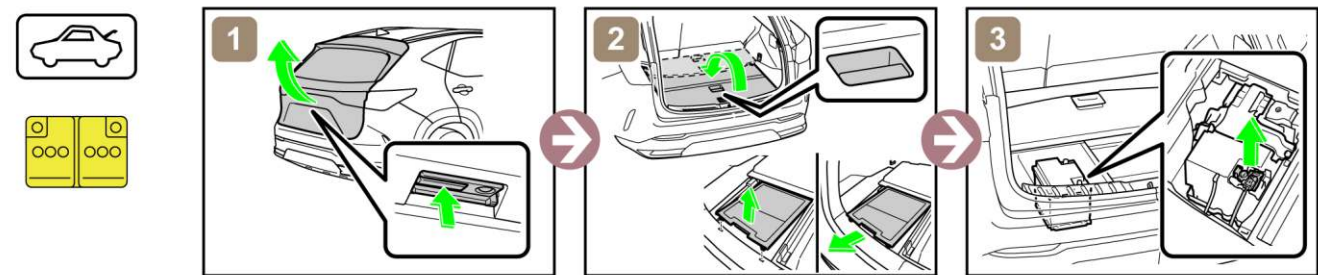

4. Access to the occupants

■ Window Glass

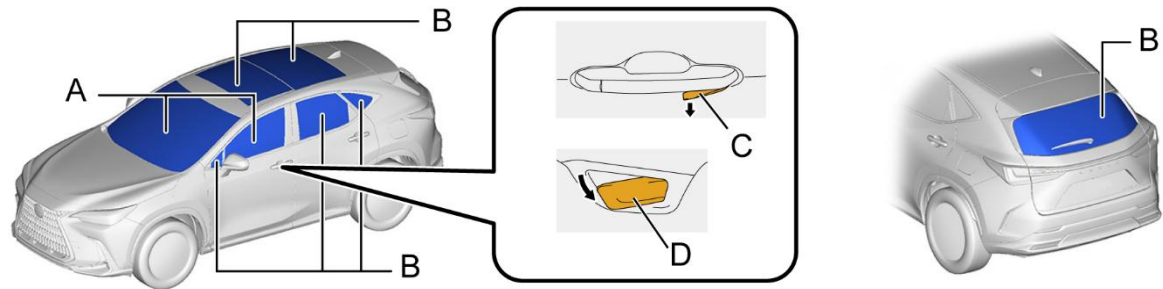

A	Laminated	B	Tempered
C	Outside Release Handle	D	Inside Release Handle (pull twice)

	ID No.	Version No.	Version date	Page
	NXPHV26	01	07 / 2025	3 / 4

5. Stored energy / Liquids / Gases / Solids



High Voltage Li-ion Battery



12 V Battery



Gasoline Tank: 55 L




- ALWAYS WEAR APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT (PPE) WHEN DEALING WITH ANY OF THESE ITEMS.
- NEVER BREACH OR REMOVE THE BATTERY ASSEMBLY COVER UNDER ANY CIRCUMSTANCES, INCLUDING FIRE. DOING SO MAY RESULT IN SERIOUS INJURY OR DEATH FROM SEVERE BURNS OR ELECTRIC SHOCK.

6. In case of fire



USE COPIOUS AMOUNTS OF WATER

If it is difficult to apply copious amounts of water to the high voltage battery, it is recommended to allow the high voltage battery to burn itself out.



RE-IGNITION POSSIBLE !



Gas strut / Preloaded spring

As it is possible for a gas strut / preloaded spring to become a projectile, refer to the component layout drawing.

7. In case of submersion



DO NOT TOUCH ANY OF THE HIGH-VOLTAGE COMPONENTS OR CABLES, INCLUDING THE SERVICE PLUG, WHILE THE VEHICLE IS SUBMERGED. DOING SO MAY RESULT IN ELECTRIC SHOCK. WORK ON THE VEHICLE ONLY AFTER THE VEHICLE HAS BEEN PULLED OUT OF THE WATER.

8. Towing / Transportation / Storage



RE-IGNITION POSSIBLE !

Store the vehicle at a safe distance (15 m (49.2 ft) or more) from other vehicles.

9. Important additional information

Performance dampers (gas-filled dampers) are installed the right and left sides of the front and the rear lower structural frame (near the bumpers).

For further details, please refer to "Emergency Response Guide".
<http://www.techinfo.toyota.com>

	ID No.	Version No.	Version date	Page
	NXPHV26	01	07 / 2025	4 / 4