
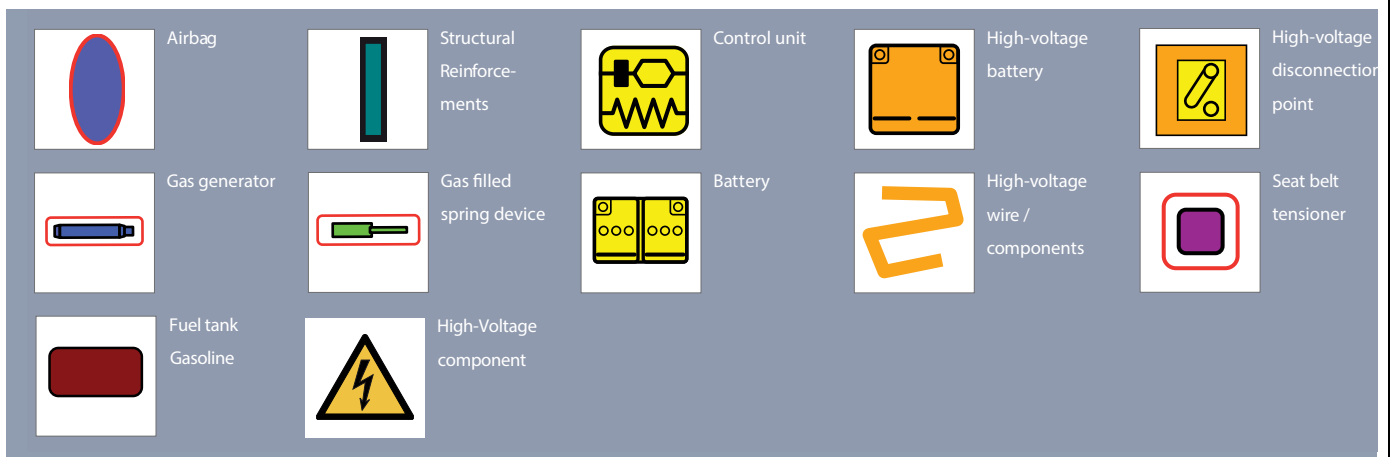


LINCOLN Nautilus Hybrid

2026

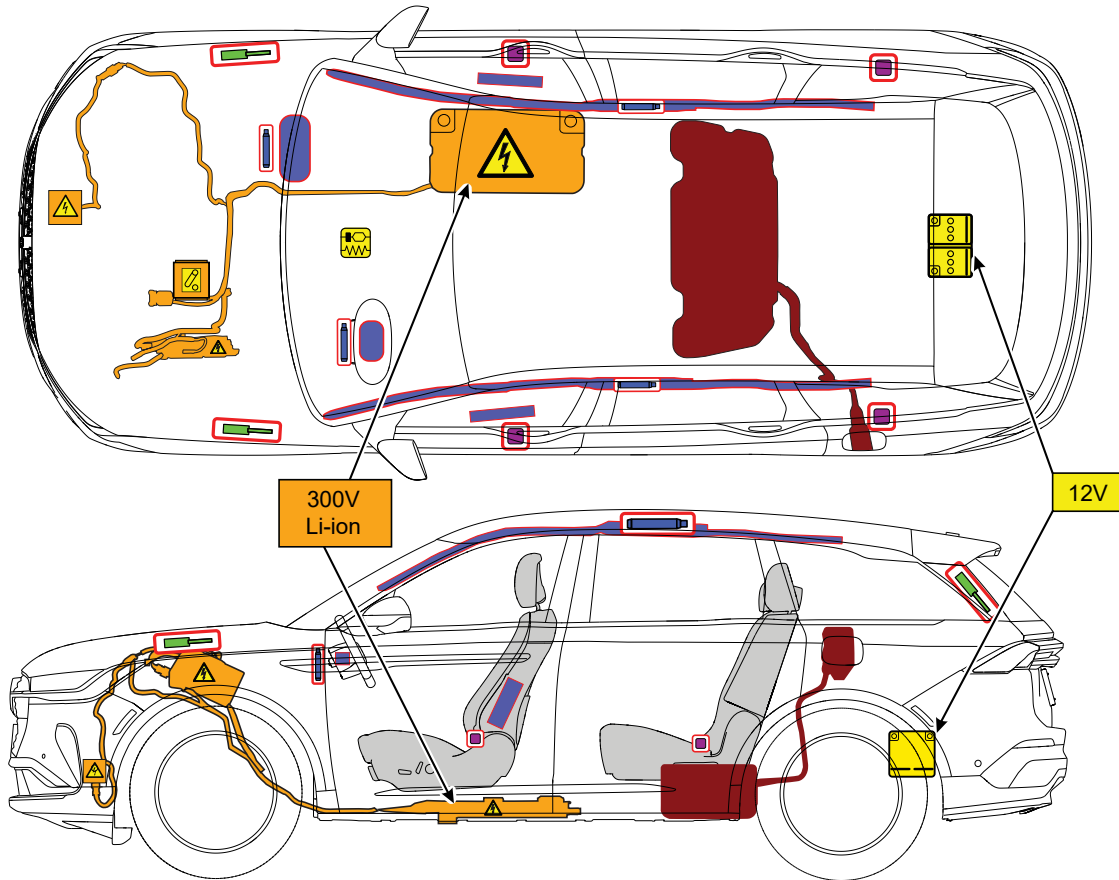

CPR © 2025 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
11/2025

VERSION:
Lincoln_Nautilus_Hybrid_2026_11_v01

Page
1 of 4

LINCOLN Nautilus Hybrid

2026

L I N C O L N

For more detailed information, please refer to the full Nautilus Hybrid Emergency Response Guide.



1. Identification / recognition



HYBRID VEHICLES MAY NOT HAVE ENGINE NOISE. LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.





1. Vehicle Identification Number (VIN)
8th position identifies engine type
• 4 - 2.0L, I4 (in-line 4-cylinder), FHEV
2. Blue Lincoln symbol in front grill
3. Blue Nautilus badging
(Badging is not applicable on all vehicles)

2. Immobilization / stabilization / lifting

IMMOBILIZATION

1. Position wheel and tire chocks
2. Put vehicle into PARK position (1).
Ensure parking brake is engaged (2).
3. Shut vehicle off with the push button.
Remove the key or PAAK (Phone As A Key) from the vehicle to prevent vehicle from turning back on.

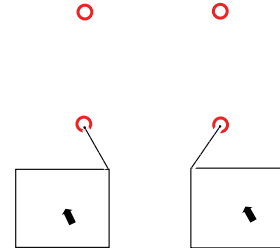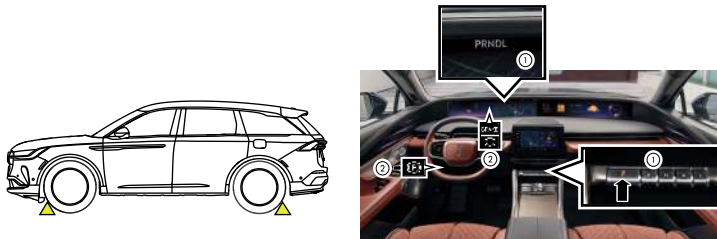


3. Disable direct hazards / safety regulations

Under Non-urgent situations refer to, "Non-urgent situations" in the Emergency Response Guide.

Deactivate the high-voltage system.

1. Cut the wires adjacent to the Low Voltage Service Disconnect.
Isolate the wires to prevent reconnection.

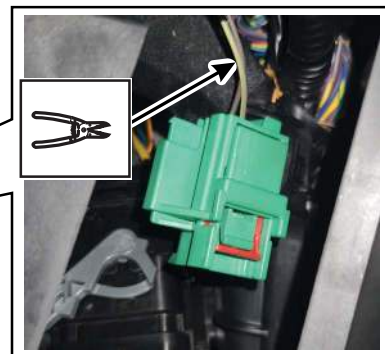

CPR © 2025 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
11/2025

VERSION:
Lincoln_Nautilus_Hybrid_2026_11_v01

Page
2 of 4

LINCOLN Nautilus Hybrid

2026

L I N C O L N

12-Volt Battery Disconnect. (Disables Safety Restraint System)

1. Remove loadspace floor covering.
2. Position the liftgate opening weather strip aside.
3. Release the clips and remove the loadspace scuff plate trim panel.




4. Remove the retainer and spare tire and jack.
5. Remove the floor storage bin.
6. Locate and cut the negative battery cable to ground at two locations 3 in (7.6 cm) apart from each other. Isolate cable to prevent reconnection.




4. Access to the occupants


- ① Laminated Safety Glass
- ② Tempered Safety Glass

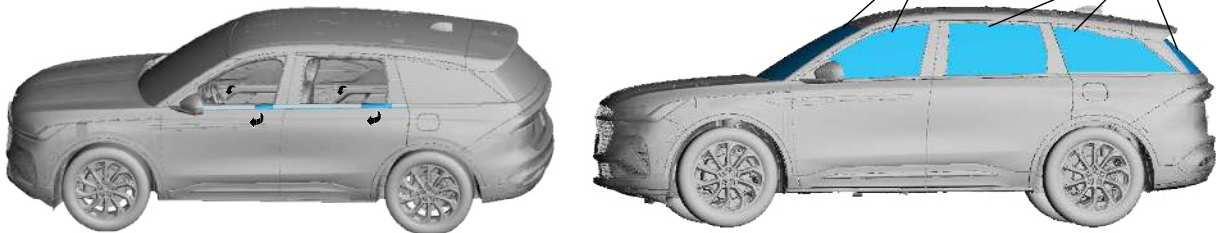

5. Stored energy / liquids / gases / solids



12 V

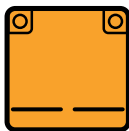

300 V

Refer to the vehicle overview illustration on Page 1 for location reference of the high voltage battery, 12-volt battery, gas tank, and other vehicle component locations.



CPR © 2025 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
11/2025

VERSION:
Lincoln_Nautilus_Hybrid_2026_11_v01

Page
3 of 4

LINCOLN Nautilus Hybrid

2026



L I N C O L N

 For more detailed information, please refer to Section 9 to access the full Nautilus Hybrid Emergency Response Guide.

6. In case of fire



LITHIUM-ION BATTERIES CAN IGNITE SPONTANEOUSLY OR RE-IGNITE AFTER THE FIRE HAS BEEN EXTINGUISHED. WEAR APPROPRIATE PPE.



7. In case of submersion

After removing the vehicle from the water, deactivate the high-voltage system (See Section 3) and allow the water to drain.

Wear appropriate PPE.




8. Towing / transportation / storage



LITHIUM-ION BATTERIES CAN IGNITE SPONTANEOUSLY OR RE-IGNITE AFTER THE FIRE HAS BEEN EXTINGUISHED. WEAR APPROPRIATE PPE.



If the vehicle has been involved in an accident or if the HV battery is damaged or unstable: Deactivate the high-voltage system (See Section 3). Do not store a severely damaged vehicle inside a structure or within 50 ft (15m) of any structure or vehicle.



9. Important additional information

For specific information and safety preparation regarding the High Voltage system, refer to: <https://www.motorcraftservice.com>, select Free Resources>Quick Guides>Reference Guides for the appropriate vehicle emergency response guide.

For First Responder Resources, refer to <https://www.ford.com/firstresponder/>

© Copyright 2025, Ford Motor Company. All rights reserved. This document may be reproduced in its entirety and distributed for emergency responder use only. It may not be excerpted for any purpose.

10. Explanation of pictograms used



Flammable



Explosive



Corrosives



Hazardous to the human health



Environmental hazard



Electric vehicle



Left-Hand Drive



Use water to extinguish the fire



General warning



Warning, Electricity



Open Hood/Front



Use infrared thermometer / Thermal Infrared camera



CPR © 2025 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
11/2025

VERSION:
Lincoln_Nautilus_Hybrid_2026_11_v01

Page
4 of 4