
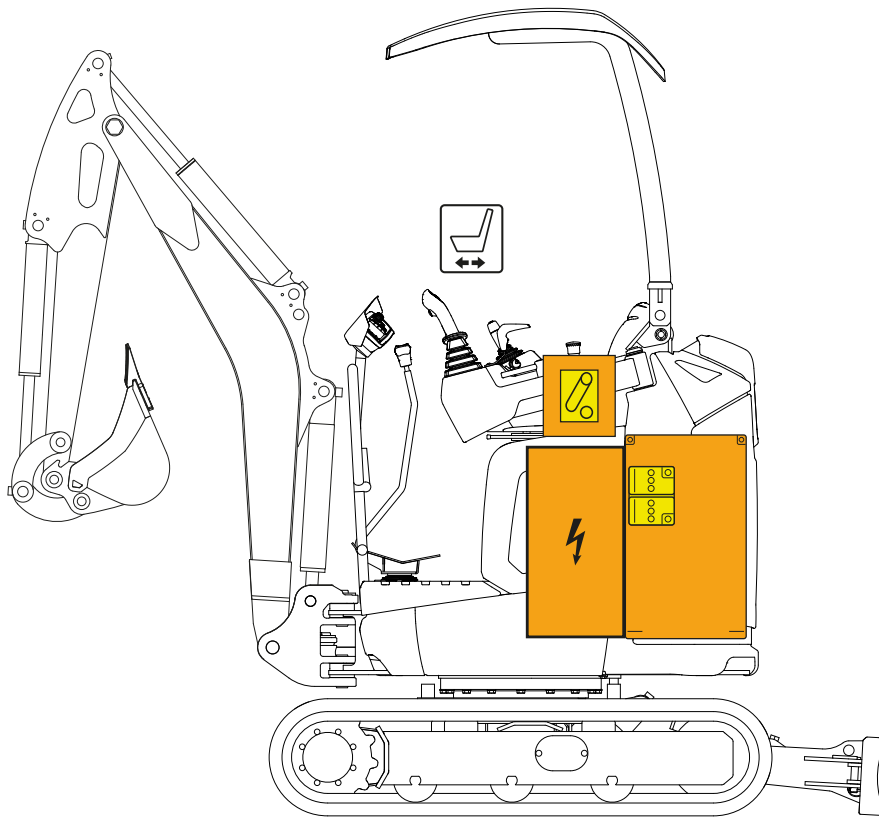
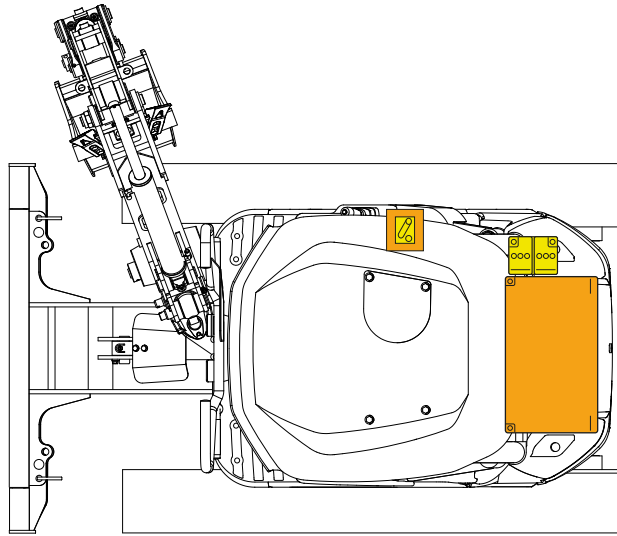

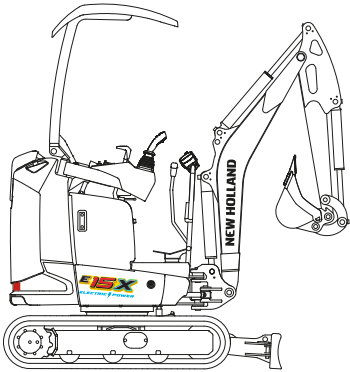
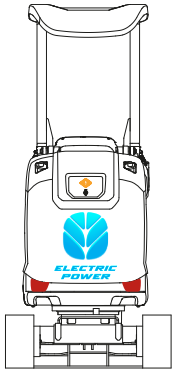



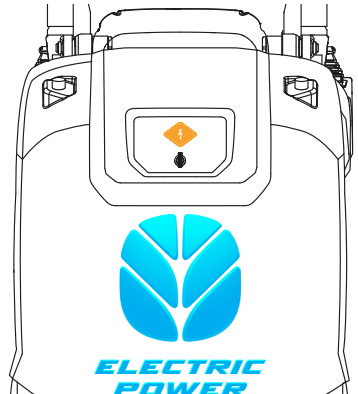


|                                                                                     |                         |                                                                                     |                                                                        |                                                                                       |                           |
|-------------------------------------------------------------------------------------|-------------------------|-------------------------------------------------------------------------------------|------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------|
|  | Battery low voltage     |  | Low voltage<br>Power<br>shutdown able<br>to disconnect<br>High voltage |  | High voltage<br>component |
|  | Battery High<br>voltage |  | Seat<br>longitudinal<br>adjustment                                     |                                                                                       |                           |


## 1 - IDENTIFICATION / RECOGNITION

|                                                                                   |                                                                                   |                                                                                     |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |  |
| <p>"E15X"<br/>Lateral frame badging</p>                                           | <p>"Electric Power"<br/>Rear frame badging</p>                                    | <p>"Electric vehicle"<br/>Rear hood</p>                                             |



## 2 - IMMOBILIZATION / STABILIZATION / LIFTING
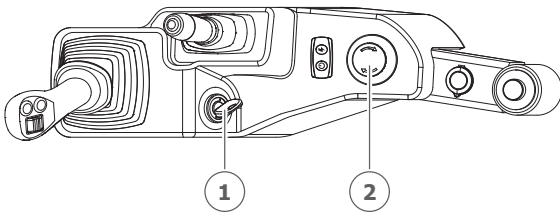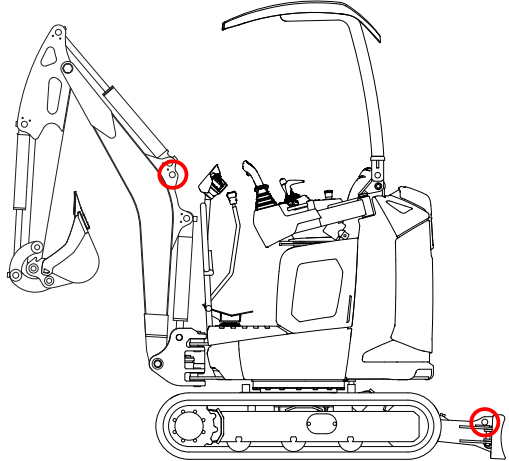
|                                                                                     |                                                                                                                                                                              |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | <ul style="list-style-type: none"> <li>- Turn off the key (1);</li> <li>- push the emergency button (2);</li> <li>- the parking brake is automatically activated.</li> </ul> |
|  | <ul style="list-style-type: none"> <li>- The lifting points are located on the blade and on the boom.</li> </ul>                                                             |

## 3 - DISABLE DIRECT HAZARDS / SAFETY REGULATIONS

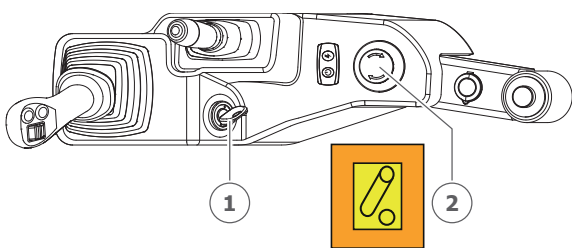
|                                                                                     |                                                                                                                                                                                                                                                                                                                                                              |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none"> <li>- Engine stop: turn off the key (1) close to right joystick on the right armrest and remove it from machine;</li> <li>- push the emergency button (2), located on the right armrest, behind the key;</li> <li>- the battery is disconnected.</li> </ul> <p><i>Note: wait 2 minutes for system to de-energize.</i></p> |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

#### 4 - ACCESS TO THE OCCUPANTS
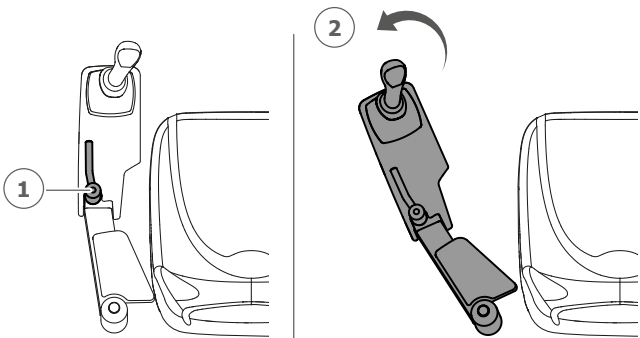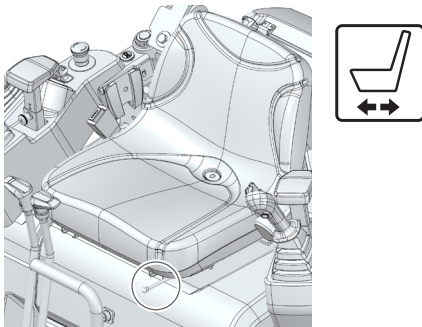
|                                                                                   |                                                                                    |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
|  |  |
| <p>Pulling the lever (1) outwards (2) opens the armrest</p>                       | <p>Driver seat adjustment longitudinal</p>                                         |

#### 5 - STORED ENERGY / LIQUIDS / GASES / SOLIDS

| Li-ion battery   |          | Hydraulic oil |       |
|------------------|----------|---------------|-------|
| Rated voltage    | 102V DC  | Type          | ISO46 |
| Nominal capacity | 21,5 kWh | Quantity      | 24 l  |

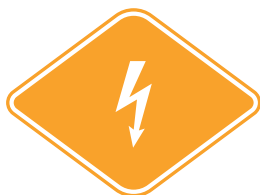

**All the High Voltage cables have orange insulation, DON'T TOUCH.**

#### 6 - IN CASE OF FIRE

|                                                                                     |                                                                                                                                                 |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Use water (H<sub>2</sub>O) to extinguish vehicle and cool the heat source(s).<br/>To cool the Li-ion battery use water (H<sub>2</sub>O).</p> |
|  | <p>Use an ABC, CO<sub>2</sub> or class D extinguisher in case of fire.</p>                                                                      |
|  | <p>It is strongly recommended to monitor the battery pack temperature through the use of a thermal imaging camera.</p>                          |



**WARNING: in case of damage to the traction battery, a risk of undetected fire later exists. In this case, it is necessary to place the vehicle under surveillance or the damaged battery in a dedicated and secure storage area in order to prevent any fire starting or re-ignition.**



## 7 - IN CASE OF SUBMERSION

If the vehicle is submerged or partially submerged, first pull the vehicle out of water.  
Then shut down the high voltage system.



**If the vehicle is fully submerged, the HV battery may generate flammable hydrogen gas.**


**When seawater enters, a large amount of hydrogen gas could be generated by rapid electrolysis due to salinity, which may cause a fire and hydrogen gas.**



**Do not touch electrical parts. Risks of severe injury and electric shock.**



## 8 - TOWING / TRANSPORTATION / STORAGE

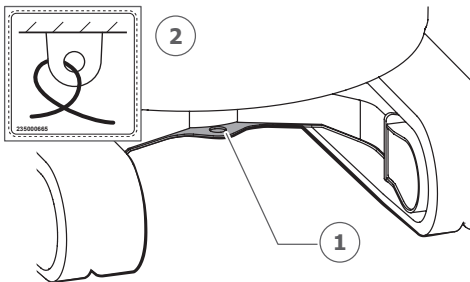

- While towing, the operator **MUST NOT** be on the towed machine;
- connect a tow device to the dedicated tow hook of the undercarriage (1), the hooks are indicated by the dedicated labels (2);
- **DO NOT** use other anchorage points (e.g. boom, bucket or any accessory installed);
- **NEVER** continue towing unless both tracks are fully in contact with the ground.



**WARNING: do not cut, breach, or touch High Voltage components or cabling.**

## 9 - IMPORTANT ADDITIONAL INFORMATION

N.A.

## 10 - EXPLANATION PICTOGRAMS USED

|                                                                                     |                  |                                                                                     |                                                     |                                                                                       |                                                 |
|-------------------------------------------------------------------------------------|------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------|---------------------------------------------------------------------------------------|-------------------------------------------------|
|  | Electric vehicle |  | Danger of heat                                      |  | Flammable                                       |
|  | Corrosive        |  | Use an ABC, CO <sub>2</sub> or class D extinguisher |  | Use water (H <sub>2</sub> O) to extinguish fire |
|  | General warning  |  | Warning HV voltage                                  |  | Use IR Camera                                   |