




PORSCHE

Porsche AG, Cayenne S E-Hybrid (92A)
SUV
from Model Year 2015

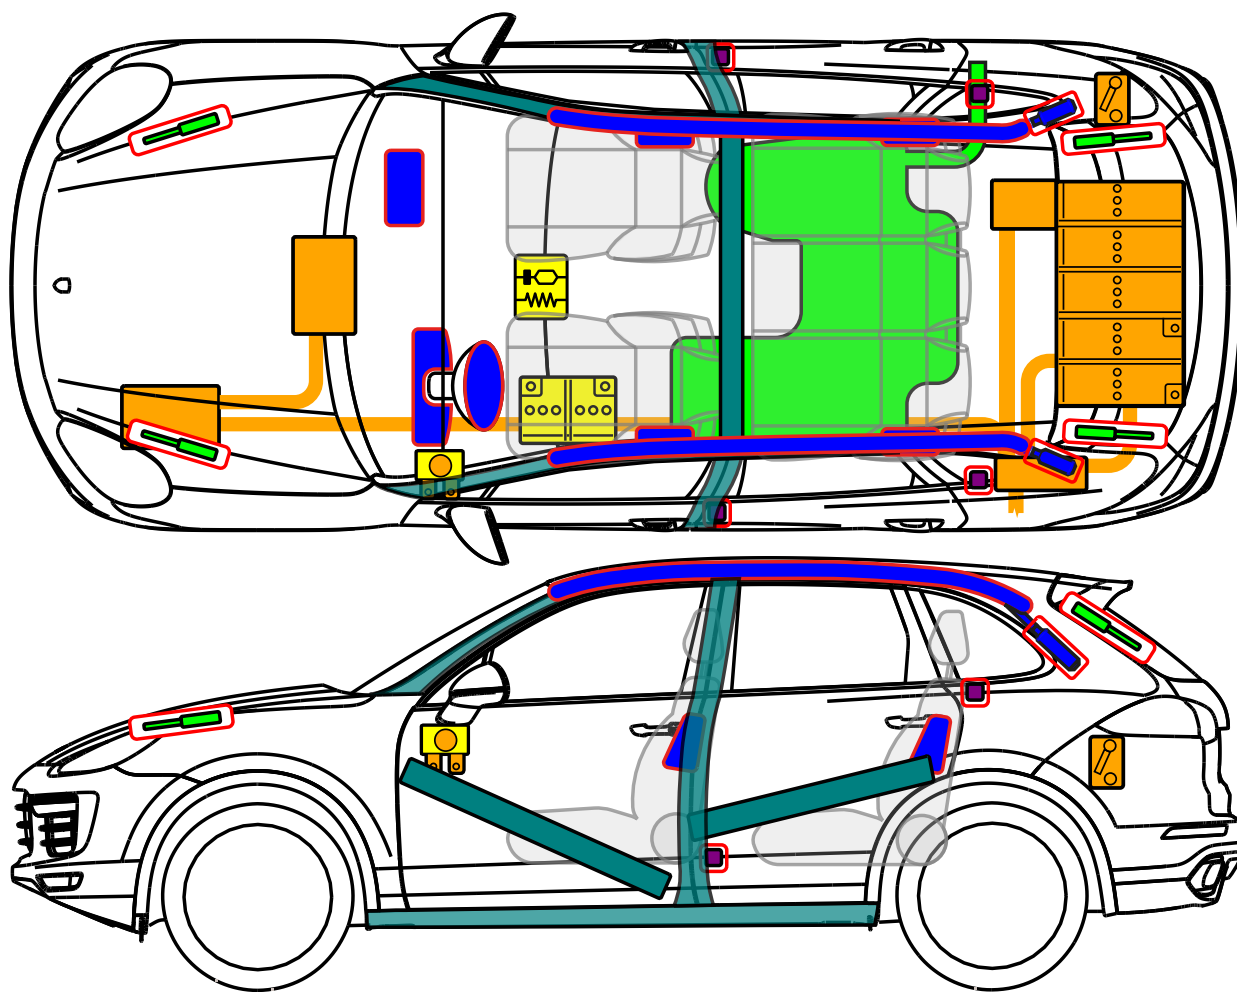

Airbag



Body
reinforcement



SRS-
Control unit



High voltage
battery



Gas generator



Gas strut



12-volt
Battery



High voltage
cable / compo-
nent



Seat belt
pretensioner



Pedestrian
protection
system



Fuse box



High voltage
cut-off



Fuel tank



Roll-over
protection




Condenser

Vehicle identification and marking


Cayenne S E-Hybrid identification features – standard equipment



“e-hybrid” logo on the **engine** cover

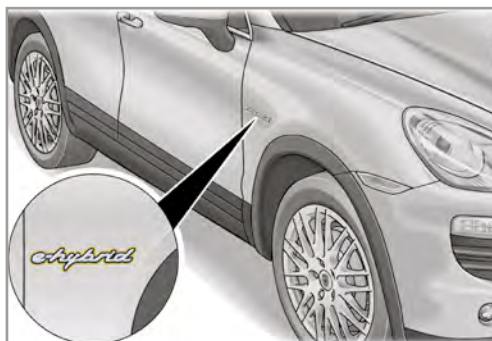


“e-hybrid” logo on the **right- and left-hand doors**

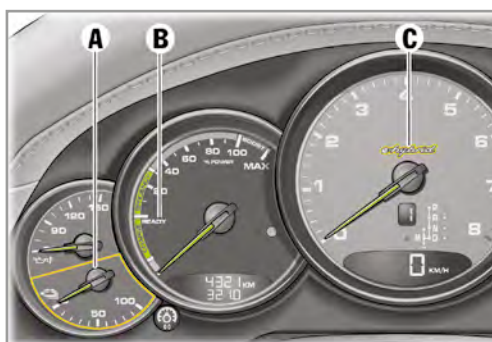

On the **instrument cluster**

A = battery charge state,
B = E-Power meter indicator,
C = “e-hybrid” logo

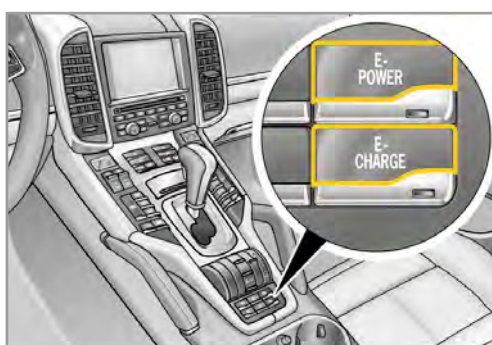

E-POWER and E-CHARGE buttons on the center console



Vehicle charging connection behind the charging-socket lid
on rear left side of the vehicle

Marking of the hybrid components



All high-voltage components are clearly marked with warning labels.

Orange insulation is used on all high-voltage lines.

Safety information about the hybrid system

Undamaged plugs, connectors, cables and sockets in the high-voltage vehicle electrical system are safe to touch.

⚠ DANGER Risk of serious or fatal injury from electric shock if handled incorrectly!

If high-voltage components are not handled correctly, there is a risk of fatal injury from high voltage and the possible flow of current through the human body.

- Do not touch high-voltage components that are in operation.
- Do not damage the orange high-voltage lines in the high-voltage vehicle electrical system.
- There may still be voltage in the high-voltage battery even after the high-voltage vehicle electrical system has been deactivated. The high-voltage battery must not be damaged or opened.

Switching off the passive safety system and high-voltage system

WARNING

The electric motor is silent when stationary!

You cannot always tell from the operating noise whether the vehicle is ready to start because the electric motor is silent when stationary.

- The vehicle may be ready to start even when no engine noises can be heard.
- If the ignition is switched on, the combustion engine may start automatically depending on the state of charge of the high-voltage battery.

NOTE

Deactivating the HV system

The high-voltage system switches off automatically in the event of accidents where the airbags or seat-belt pre-tensioners are triggered.

To make sure that the **high-voltage system** is deactivated, it is recommended – depending on accessibility – to use the **primary or secondary emergency disconnection point as the deactivation method**:

1. Primary emergency disconnection point: Switch ignition key to “OFF” and unplug the 12-volt service plug (marked with a flag) on the rear right side of the luggage compartment.
2. Secondary emergency disconnection point: Switch ignition key to “OFF” and pull out fuse number 40 (marked with a flag) in the front left fuse box.

Other deactivation methods as described in the Workshop Manuals may only be performed by appropriately qualified personnel.

NOTE

Deactivating the passive safety systems


The following steps should be taken to make sure that the **passive safety systems** (airbags and seat belt pre-tensioners) are switched off:

1. Disconnect the 12-volt battery in the driver’s footwell. The waiting time after disconnection of the 12-volt battery is 1 minute.
2. Switch off the high-voltage system via the primary or secondary emergency disconnection point to ensure there is no voltage in the on-board 12-volt battery network.

Deactivating the high-voltage system


Switching off the ignition

The method of switching off the high-voltage system described below applies to both vehicles with a conventional key and those with Porsche Entry & Drive (keyless entry system). In either case, the ignition key must be turned to “OFF” position first.

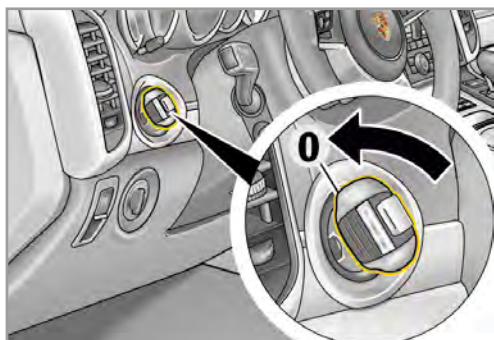

1. Turn the ignition key to “OFF” (position -0-).


Primary emergency disconnection point: unplugging the 12-volt service plug on the rear right side of the luggage compartment

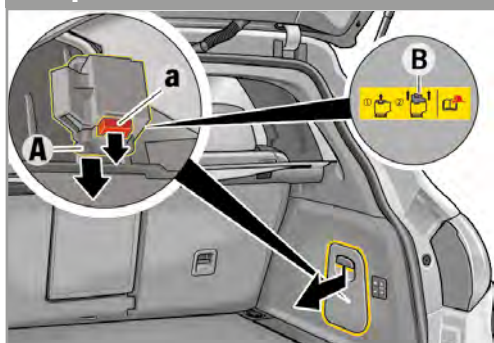

1. Unplug the 12-volt service plug.
2. Unplug -a- and open -A- the service plug (marked with a flag -B-).

- ➔ There is no voltage in the high-voltage system approx. 20 seconds after it has been switched off.
- ➔ The passive safety systems, such as airbags and seat-belt pre-tensioners, are still supplied with voltage from the on-board 12-volt battery.

Secondary emergency disconnection point: removing fuse number 40 from the fuse box on the left-hand side of the dashboard

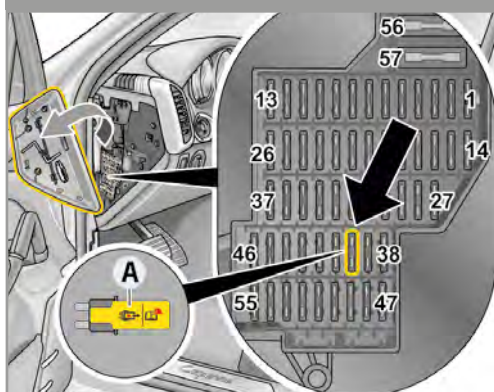


1. Open the lid of the fuse box on the left-hand side of the dashboard.
2. Unplug fuse number **40** (marked with a flag **A**).

- ➔ There is no voltage in the high-voltage system approx. 20 seconds after it has been switched off.
- ➔ The passive safety systems, such as airbags and seat-belt pretensioners, are still supplied with voltage from the on-board 12-volt battery.


Deactivating the passive safety systems

Disconnecting the 12-volt battery

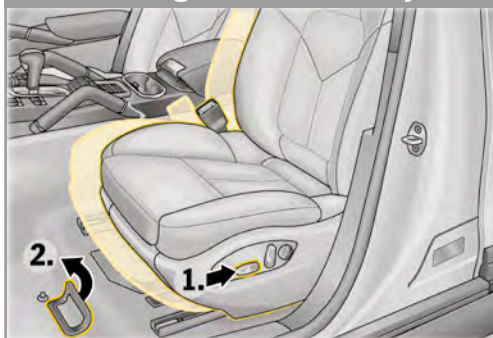

Make sure that no jumper cables are connected to the vehicle.

1. If possible, move the driver's seat back to the furthest position (-1-).
2. Remove the carpet section (-2-) in the front left footwell.

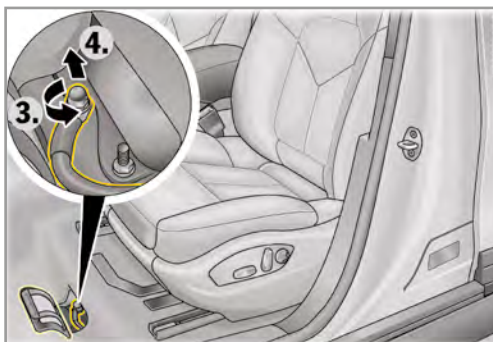

3. Detach the negative cable of the 12-volt battery at the threaded connection (-3-) and secure it against unintentional contact (-4-).

- Additionally deactivate the HV system at an emergency disconnection point.
- The passive safety systems (airbags and seat belt pre-tensioners) are deactivated. The waiting time after disconnection of the 12-volt battery is 1 minute.

Other accident situations

Vehicle in water

There is no risk that the vehicle body will be live. Once the vehicle has been recovered:

1. Allow the water to run out of the interior and
2. Start deactivating the high-voltage system.

Vehicle/battery fire

Suitable extinguishing agent:

water (H₂O), larger quantities to cool the lithium ion battery

Battery fire

Suitable extinguishing agent for a battery fire:

dry sand, carbon dioxide (CO₂)

⚠ WARNING

Battery cells explode when hot!

Battery modules might explode if the high-voltage battery becomes too hot.

- Keep to the required safety distances when fighting the fire.