





SUBARU

SUBARU Crosstrek HYBRID

5 door / 5 seats / Wagon

CY:2025-

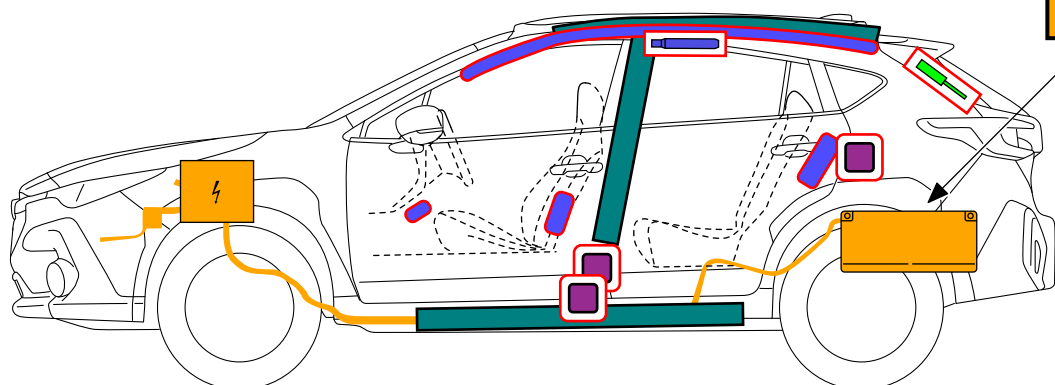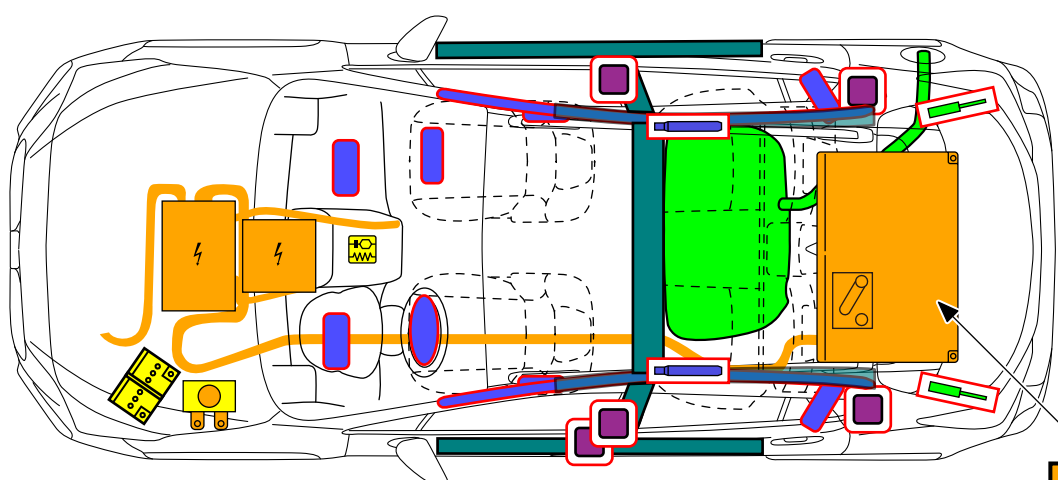


259 V
Li-ion

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		
	Battery low voltage		Gas strut / Preloaded spring		Fuel tank		High strength zone		Zone requiring special attention
	Battery pack, high-voltage		High voltage power cable		High voltage device that disconnects high voltage		Fuse box disabling high voltage		High voltage component
ID No.		Version No.		Version date		Page			
JF2-T1670BE		02		10 / 2025		1 / 4			

1. Identification / Recognition


■ Location of vehicle badges

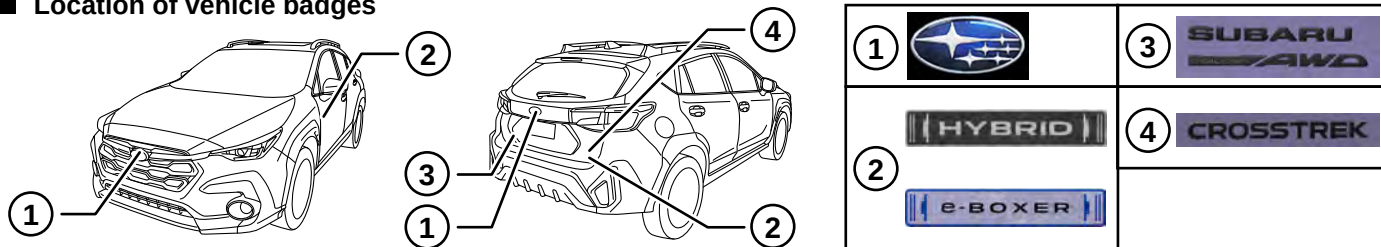


LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.

2. Immobilisation / Stabilisation / Lifting

■ Immobilize the vehicle

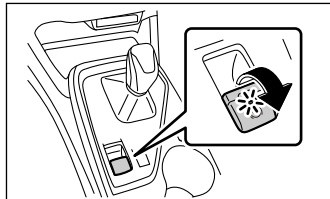



1. Chock wheels and set the parking brake.

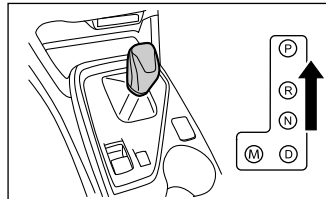

2. Shift the select lever to the Park position.

■ Lifting point

Crib at 4 points directly under the front and side sills.

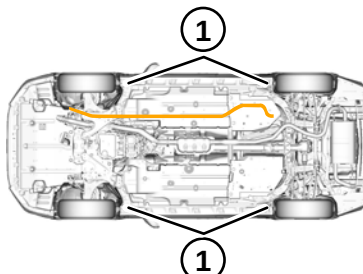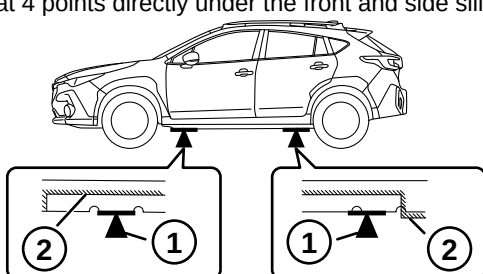

- 1 Cribbing Points
- 2 Side Sill Garnish
- High Voltage



Do not place cribbing under the orange colored power cables, exhaust system, or fuel system.

3. Disable direct hazards / Safety regulations

■ If any of the following systems are required to be operated, operate them BEFORE disconnecting the battery.

Power door lock
Electric parking brake

Power window
Power seat controls



Rear gate opener



Once the 12 Volt auxiliary battery is disconnected, power controls will not operate.

High-voltage circuit and 12V circuit disable procedure

1. Turn the ignition switch to OFF

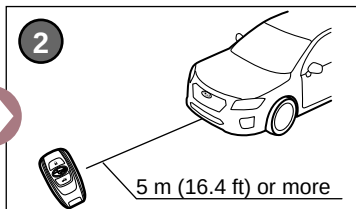
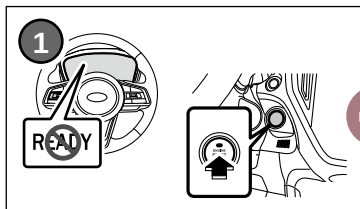


2A. <Main disabling method>

Remove the service plug



- If cannot disable the high-voltage circuit, do not touch, disconnect, or open the high-voltage components and high-voltage battery.
- To prevent injury wear personal protective equipment suitable for organic solvents including SCBA.

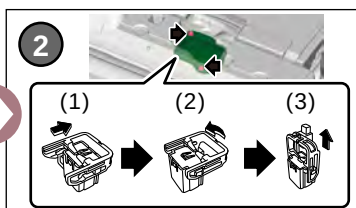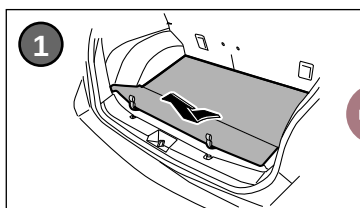

In case of a collision with airbag deployment and/or seat belt pretensioner activation, the hybrid system and fuel pump will be disabled. The restraint systems are still active.

ID No.

JF2-T1670BE

Version No.

02

Version date

10 / 2025

Page





2 / 4

2B. <Alternative disabling methods>







If the ground terminal of the 12V battery cannot be removed, the 12V circuit cannot be disabled.
Be careful when working, as the SRS Airbag System may suddenly deploy due to a short circuit or if force is applied to the wiring harness, which may result in serious injury.

Disconnect the ground terminal from battery sensor

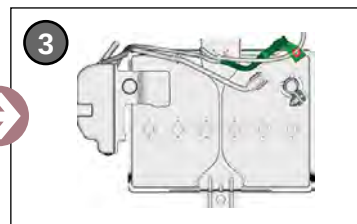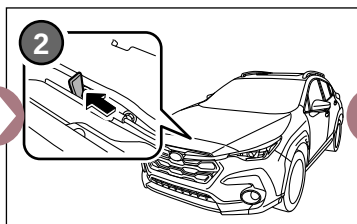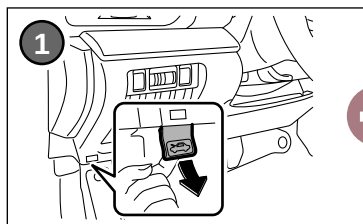


Alternatively, remove the FUSE

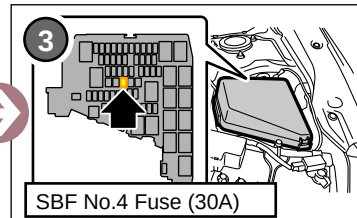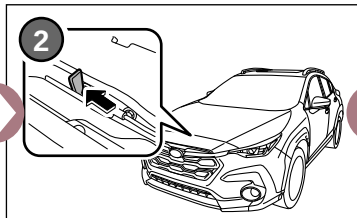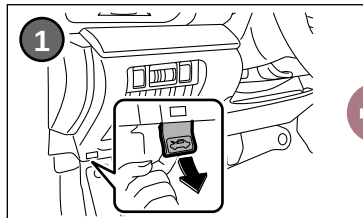


4. Access to the occupants


■ Window Glass

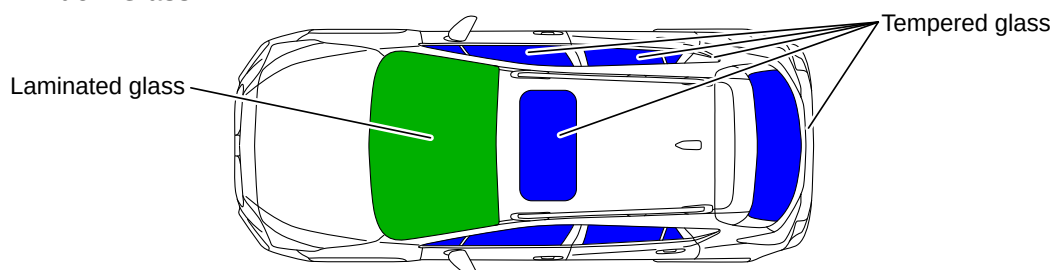


■ Seat adjustment

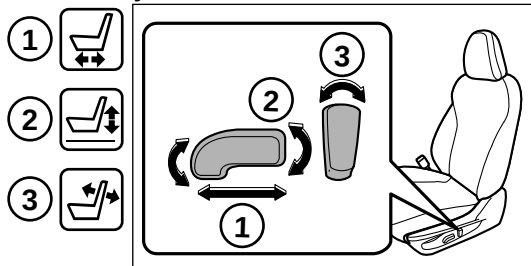

■ Steering Column adjustment

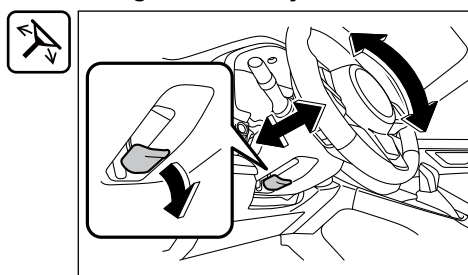


■ High strength steel in Body

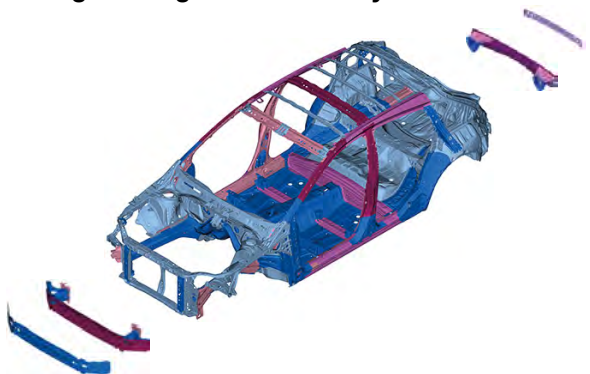

270 Mpa (2,753 kgf /cm ² , 39,150 psi)
340 Mpa (3,467 kgf /cm ² , 49,299 psi)
400 to 440 Mpa (4,079 to 4,487 kgf /cm ² , 57,999 to 63,799 psi)
590 Mpa (6,016 kgf /cm ² , 85,549 psi)
980 MPa (9,993 kgf /cm ² , 142,099 psi)
1,180 MPa (12,032 kgf /cm ² , 171,098 psi)
1,500 Mpa (15,295 kgf /cm ² , 217,498 psi)

■ Door Latches

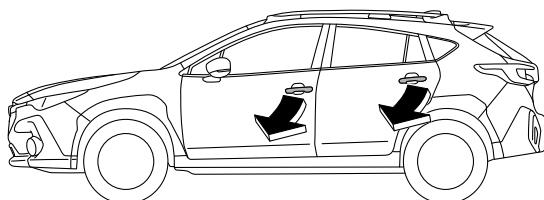

ID No.

JF2-T1670BE

Version No.

02

Version date

10 / 2025

Page

3 / 4

5. Stored energy / Liquids / Gases / Solids

	Li-ion : 259 V	
	12 V	
	63 L	
	HFO-1234yf : 0.475 kg (1.05 lb)	

6. In case of fire




Wear appropriate protective equipment such as rubber gloves, protective goggles, a protective mask, and a self-contained breathing apparatus (SCBA) when performing work.

- In order to cool off the battery (to mitigate overheating), extinguish fires using plenty of water.
- Specific methods of fire-fighting: If the battery is burning with other combustible materials, use a fire-extinguishing method suitable for the combustible materials. Extinguish the fire from up-wind to avoid the smoke and fumes.



USE COPIOUS AMOUNTS OF WATER

If it is difficult to apply copious amounts of water to the high voltage battery, it is recommended to allow the high voltage battery to burn itself out.



RE-IGNITION POSSIBLE !






7. In case of submersion



To prevent electric shock, do not touch the service disconnect plug, high voltage parts and wiring when vehicle is submerged. Please shut off the hybrid system after completely pulling the vehicle out of the water. (see chapter 3)

8. Towing / Transportation / Storage




RE-IGNITION POSSIBLE !

Store the vehicle at a safe distance (15 m (49.2 ft) or more) from other vehicles.


Location Front Hook



Location Rear Hook

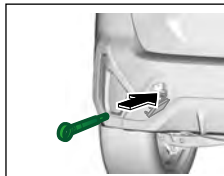

Location Tools

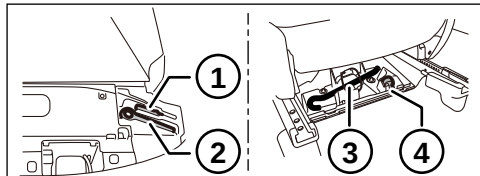

- ① Screwdriver
- ② Towing hook (eyebolt)
- ③ Jack handle
- ④ Wheel nut wrench

9. Important additional information

■ Emergency Response Guide

For further details, please refer to "Emergency Response Guide". <<https://www.nhtsa.gov/ERG>>

10. Explanation of pictograms used

	Hybrid Electric Vehicle on fuel of liquid group 2		Air-conditioning component		Bonnet
	Boot		Steering wheel, tilt control		Seat height adjustment
	Seat adjustment, seat back recline		Seat adjustment, longitudinal		General warning sign
	Warning, Electricity		Remove smart key		Use thermal Infrared camera
	Flammable		Gases under pressure		Explosive
	Acute toxicity		Corrosives		Hazardous to the human health
	Lifting point; central support		Use water to extinguish the fire		

ID No.

JF2-T1670BE

Version No.

02

Version date

10 / 2025

Page

4 / 4