





Volkswagen ID.4

SUV, as of 2020

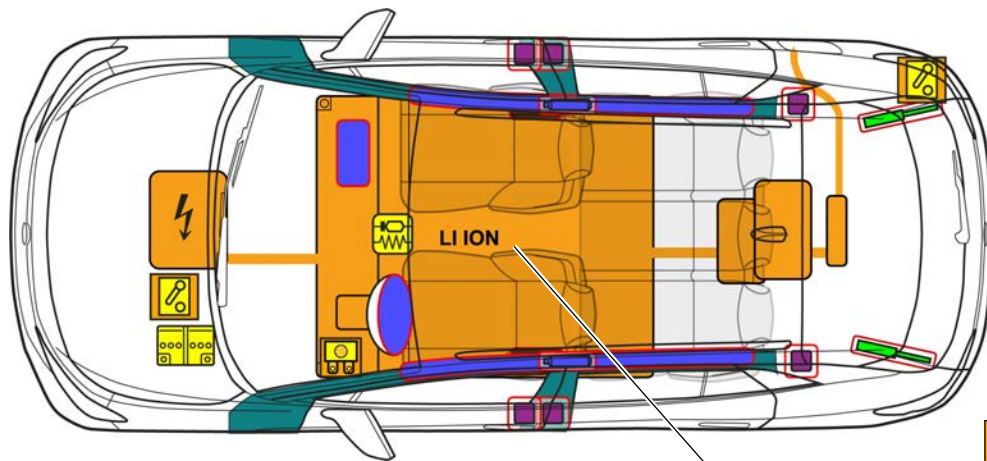

400 V
LI ION

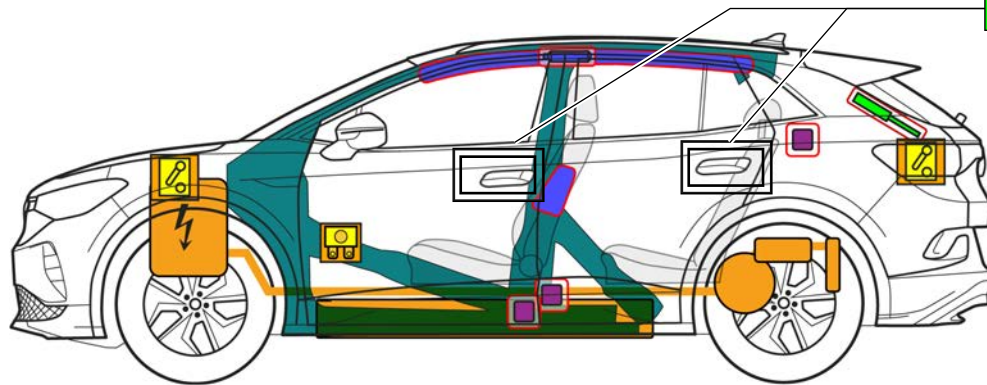

Note: The illustration shows the maximum possible range of equipment.

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / preloaded spring		High-strength zones		Special attention		
	Battery pack, low-voltage		Ultracapacitor, low-voltage		Fuel tank		Gas tank		Safety valve
	Battery pack, high-voltage		High-voltage power cable		High-voltage disconnect		Fuse box, disabling high-voltage system		Ultracapacitor, high-voltage
	Low-voltage device that disconnects high-voltage		Fuse box disabling high-voltage		High-voltage component				



Volkswagen ID.4

SUV, as of 2020

1. Identification / recognition



The electric motor is silent. The indicator on the instrument cluster (power meter) indicates whether the electric drive is switched "OFF" or "READY" for operation.

lettering



Charging connection



Engine Compartment




2. Immobilization / stabilization / lifting

Immobilize the vehicle

Apply the parking brake



Lifting points

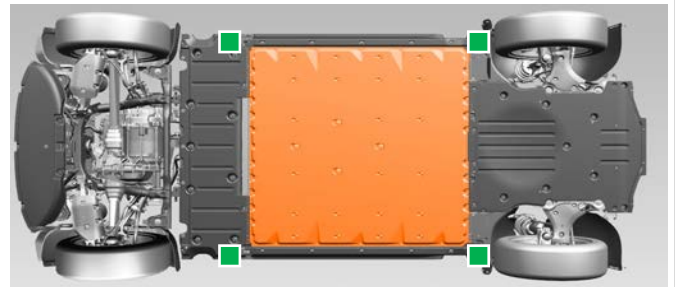

suitable lifting points

High-voltage battery

Turn off the ignition (Powermeter "OFF")

Press the START-STOP button without depressing the brake pedal



3. Disable direct hazards / safety regulations

The high-voltage system is automatically deactivated in the event of accidents with airbag deployment.
The high-voltage system is de-energized approx. 20 sec. after deactivation.





Do not touch, cut or open damaged high-voltage components, lines and high-voltage battery!
Wear appropriate protective equipment!

For all other cases, the high-voltage system can be deactivated as follows:



Option 1: From the engine compartment

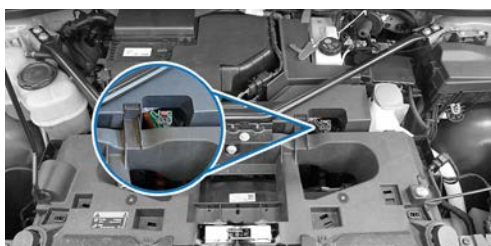



Volkswagen ID.4

SUV, as of 2020



Option 2: From the passenger compartment

left hand drive:




Option 3: from the rear of the vehicle





Disconnect 12 volt battery


Disconnect negative terminal from body contact point



Disconnect from the charging station (emergency release)

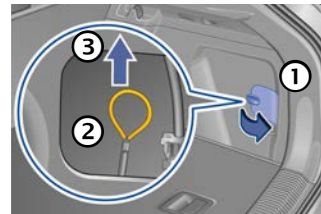

4. Access to the occupants

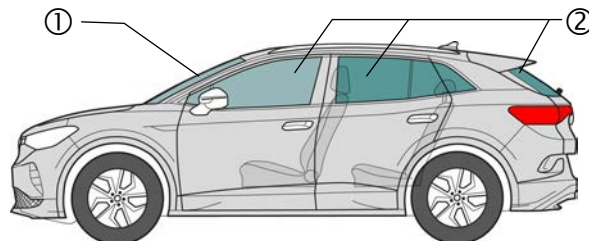

Glas types:

- ① Laminated safety glass
- ② Toughened safety glass



Lever door handles far up to unlock doors.

Increased force may be required to mechanically unlock and open the doors. The use of tools may also be necessary after serious accidents.

5. Stored energy / liquids / gases / solids



12 V



Volkswagen ID.4

SUV, as of 2020



400 V



If the battery system is mechanically deformed, there is a risk of a thermal reaction in the high-voltage battery.
Monitor the temperature of the high-voltage battery!



6. In case of fire



Lithium-ion batteries can become damaged or corrupt.
Use promptly or with a delay to ignite or after the Ignite fire fighting again!
Wear appropriate protective equipment!



7. In case of submersion

After rescuing the vehicle from the water, deactivate the high-voltage system (see Chapter 3) and allow the water to drain. Wear appropriate protective equipment!

8. Towing / transportation / storage



Lithium-ion batteries can self-ignite, or re-ignite after a fire has been extinguished.
Wear appropriate protective equipment!



If the vehicle has been involved in an accident or if the HV battery is damaged or unstable: Deactivate the high-voltage system (see Section 3). Park the vehicle at a safe distance from buildings and other vehicles in accordance with local regulations (quarantine area).



Do not tow a vehicle that has been involved in an accident on its drive axles.

9. Important additional information

10. Explanation of pictograms used

flammable	corrosive	Hazards to the human health	Environmental hazard	Electric vehicle	High voltage warning	Caution, danger	Use lots of water to extinguish the fire
Dangerous voltage	Remove smart key	Use thermal Infrared camera	Release the bonnet	Release the boot			