


Airbag

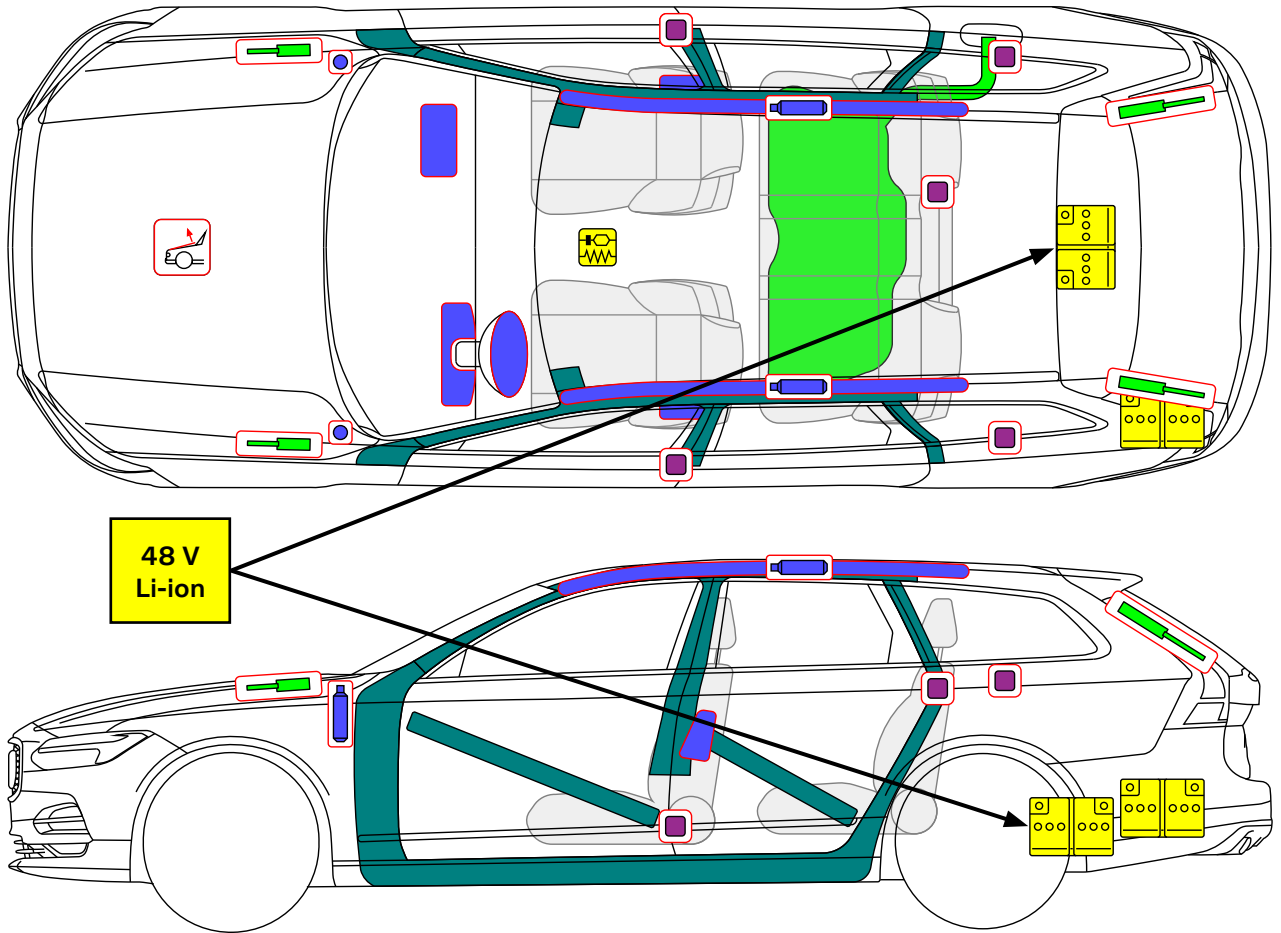

Stored gas inflator



Seat belt pretensioner



SRS control unit



Gas strut / Preloaded spring



Battery low voltage



Fuel tank



High strength zone



Pedestrian protection active system

1. Identification / recognition

Brand name front




Model name rear



2. Immobilisation / stabilisation / lifting


Immobilise vehicle:

1. Block wheels and set parking brake
2. Push the P (park) button to select the P (park) position

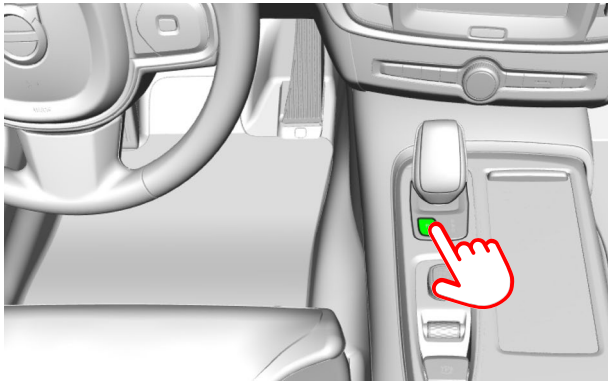



Lifting points:

 Appropriate lifting points


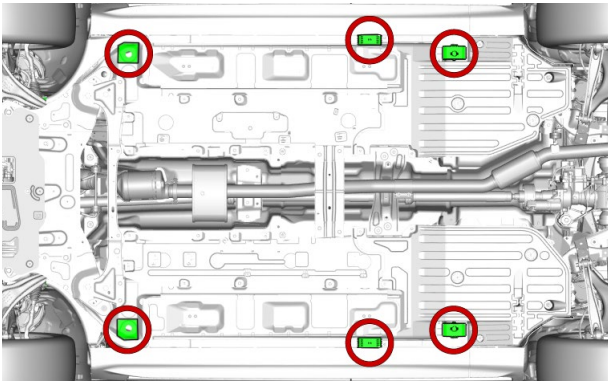


3. Disable direct hazards / safety regulations



Press the Start/Stop button to shut off the engine. Then, remove the electronic key and keep at least 10 ft. (3 m) away from the vehicle.

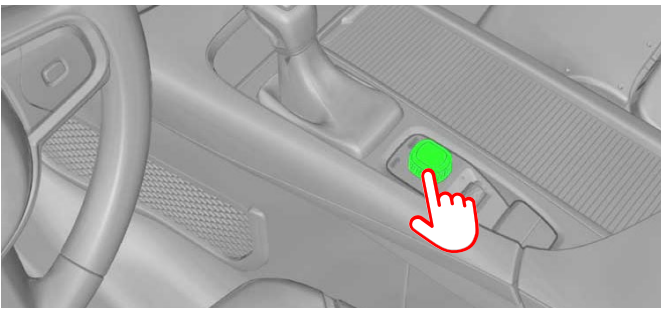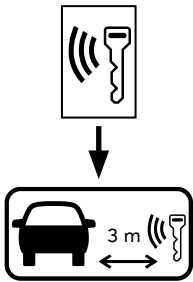

Disconnect 12 Volt battery:

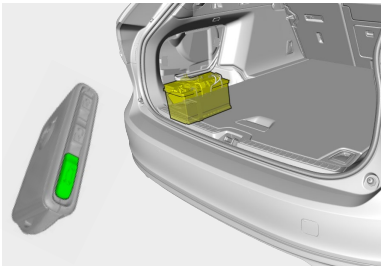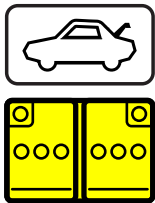


Disconnect 48 Volt battery:

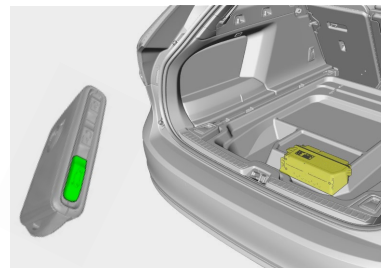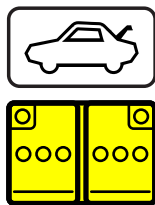


4. Access to the occupants

Glass types


- A. Laminated glass
- B. Tempered glass

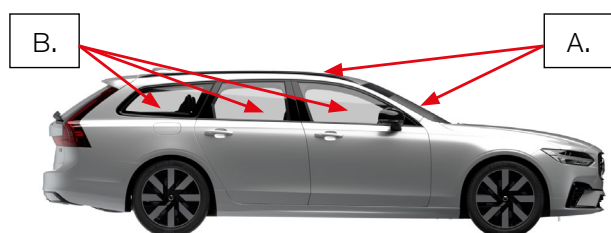


Steering wheel, tilt control

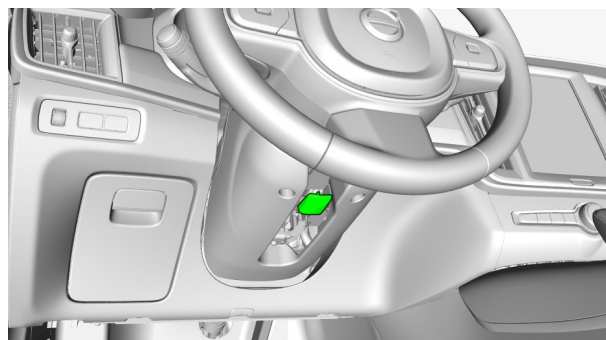

Manual seat adjustment

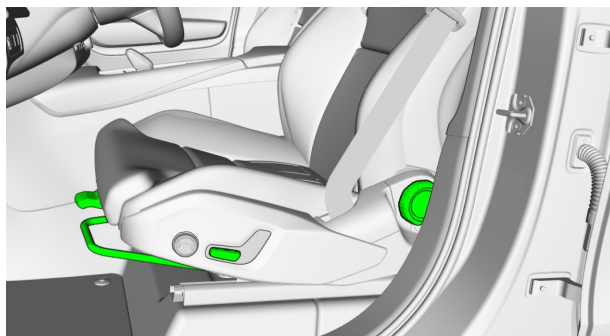

Electrical seat adjustment

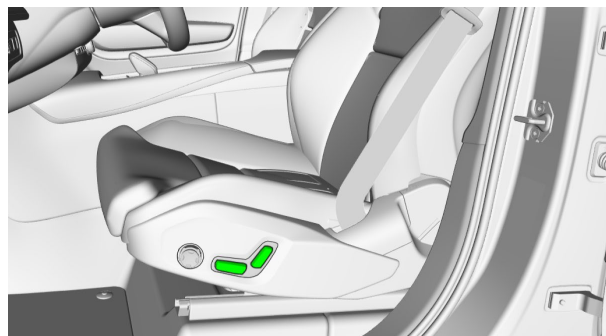


5. Stored energy / liquids / gases / solids


	12V	
	48V Li-ion	
	R-134a 700 g / R-1234yf 600 g	
	60 L / 71 L	
	60 L / 71 L	

8. Towing / transportation / storage

Recovery hook storage

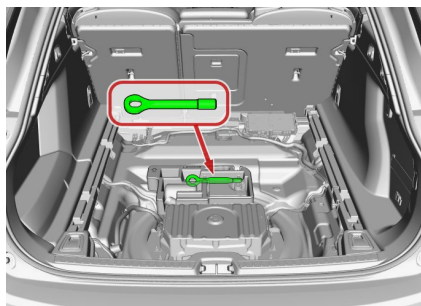


Location front hook

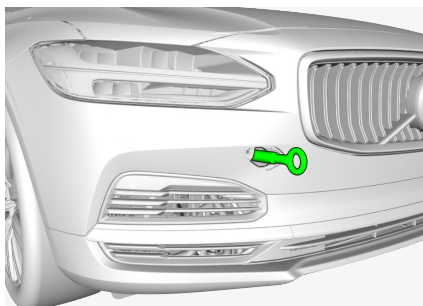

Location rear hook



Towing



10. Explanation of pictograms used

	Remove smart key		Flammable
	Warning, Electricity		Hazardous to the human health
	General warning sign		Explosive
	Warning; low temperature		Corrosives
	Air-conditioning component		Boot
	Vehicle on fuel of liquid group 1		Vehicle on fuel of liquid group 2