




BMW M5 Series G90 PHEV

Sedan
from 07/2023

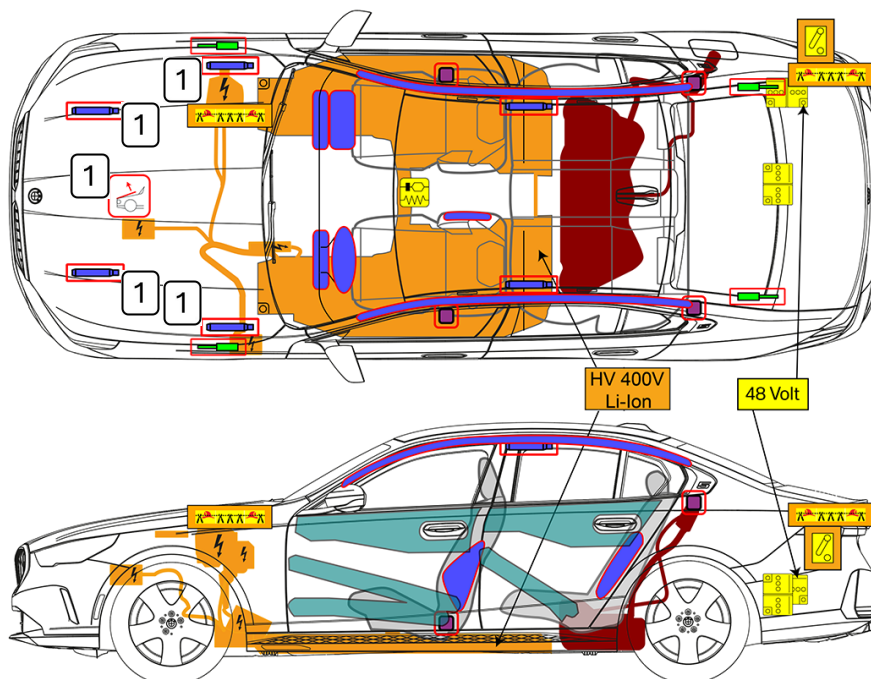

	Airbag		Gas generator		Belt tensioner		Supplementary Restraint System control unit		Pedestrian protection active system
	Gas-filled shock absorber / preloaded spring		Body reinforcement		Cable cut		Fuel tank content gasoline/ethanol		Low voltage battery
	Battery pack, high-voltage		High voltage power cable		Low voltage device that disconnects high voltage				

1) Not equipped on US and Canadian market vehicles

1. Identification / recognition

The absence of engine noise does not mean that the vehicle has been turned off. Quiet movement or restart capability is possible until the vehicle has been switched off completely. Wear appropriate personal protective equipment.

Vehicle identification features

The blue outline around the badge indicates a high-voltage vehicle.



High-voltage charging socket at the front left side panel.



2. Immobilization / stabilization / lifting

Immobilization


1. Press the "Start / Stop" off button of the vehicle



2. Press the vehicle's "parking brake button"



Stabilization points/lifting points

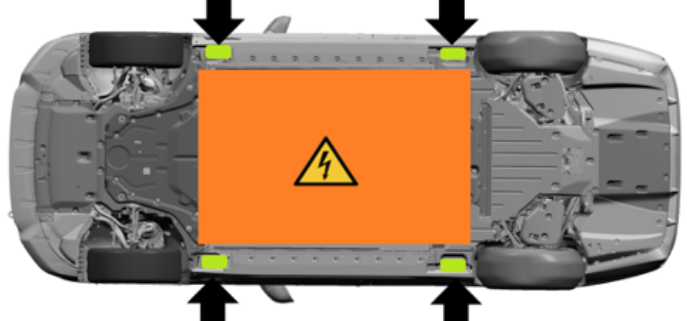

3. Disable direct hazards / safety regulations

Procedure for deactivation


Standard method



1. Open hood.



2. Cut through the labeled low-voltage cable (1) to deactivate the high-voltage system.

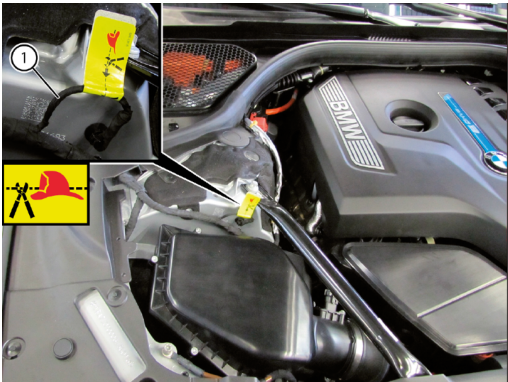

Alternative method



1. Open the tailgate and remove the cover on the right side.



2. Cut through the labeled low-voltage cable to deactivate the high-voltage system.




4. Disconnect the 12V battery.



Disconnecting the negative terminal of the 12V battery

The battery low voltage is located in the cargo area in the center of the vehicle.


- 1. Loosen the nut (1) and remove the negative battery cable in upward direction.
- 2. Cover the negative battery terminal to prevent contact with the negative battery cable.

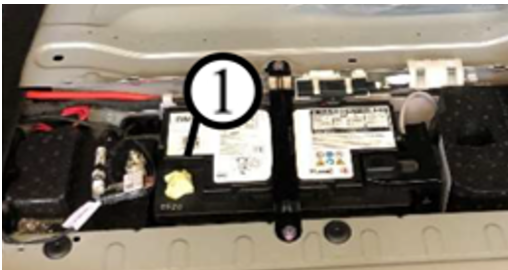

4. Access to the occupants

Interfaces

- A Laminated glass
- B Tempered glass
- 1 Interfaces for removing the roof
- 2 Door lock
- 3 Door hinges

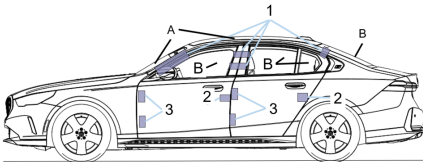

5. Stored energy / liquids / gases / solids

		48V
		400V
		60 l
		900g

6. In the event of fire



Even after a fire, there is an electrical risk. Injury hazard!

Use personal protective equipment identical to the equipment used for conventional vehicle fires.



BGI / GUV-I 8677 Electrical risks at the location of deployment. Injury hazard!

Do not touch any high-voltage components.

Maintain a safety distance when extinguishing the fire:

- 1 m for spray jet
- 5 m for direct jet



Extinguish the fire with large quantities of water.

To do so, open the hood if possible and direct the extinguisher jet in these areas toward the underbody / high-voltage battery. In addition, water can be added through the wheel wells. Large quantities of water are required to cool the battery down.



Use a thermal imaging camera to detect a temperature increase in high-voltage components

7. Vehicles in water

Vehicle partially or completely submerged in water


After the vehicle has been salvaged from the water, remove the high-voltage safety plug and disconnect the low-voltage battery (negative terminal) to switch off the high-voltage system.



After the vehicle has been salvaged from the water:

- Monitor vehicle closely
- Park vehicle outside and far from flammable materials
- Ensure clear access to the firefighters

8. Towing / transportation / storage

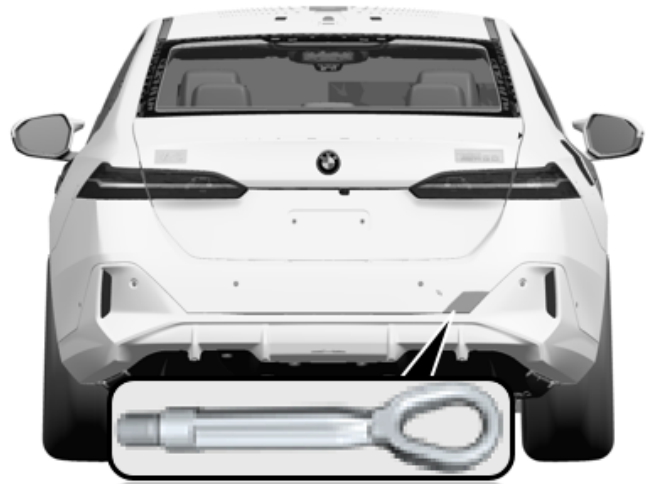

Removing the vehicle from the immediate hazardous area at walking speed is generally permitted.

Transportation is permitted on a truck only. Other variants of towing the vehicle are prohibited. Securing the vehicle by its wheels is recommended.

Use only the tow fitting in the vehicle and screw it in securely all the way to the stop.

Use the towing eye only for towing on a paved road. Prevent transverse loads on the tow fitting. For example, do not lift the vehicle by the tow fitting.

Electric vehicles with damaged batteries or with a red high-voltage warning light must be parked outside of buildings with a safety distance of 5 m to adjacent vehicles/objects.

If 5 m is not feasible, vehicles should be parked next to non-flammable structures such as concrete barriers.



High-voltage battery: Repeat ignition is possible!

9. Important additional information

This document shows all national-market versions and the maximum equipment of the vehicle.