


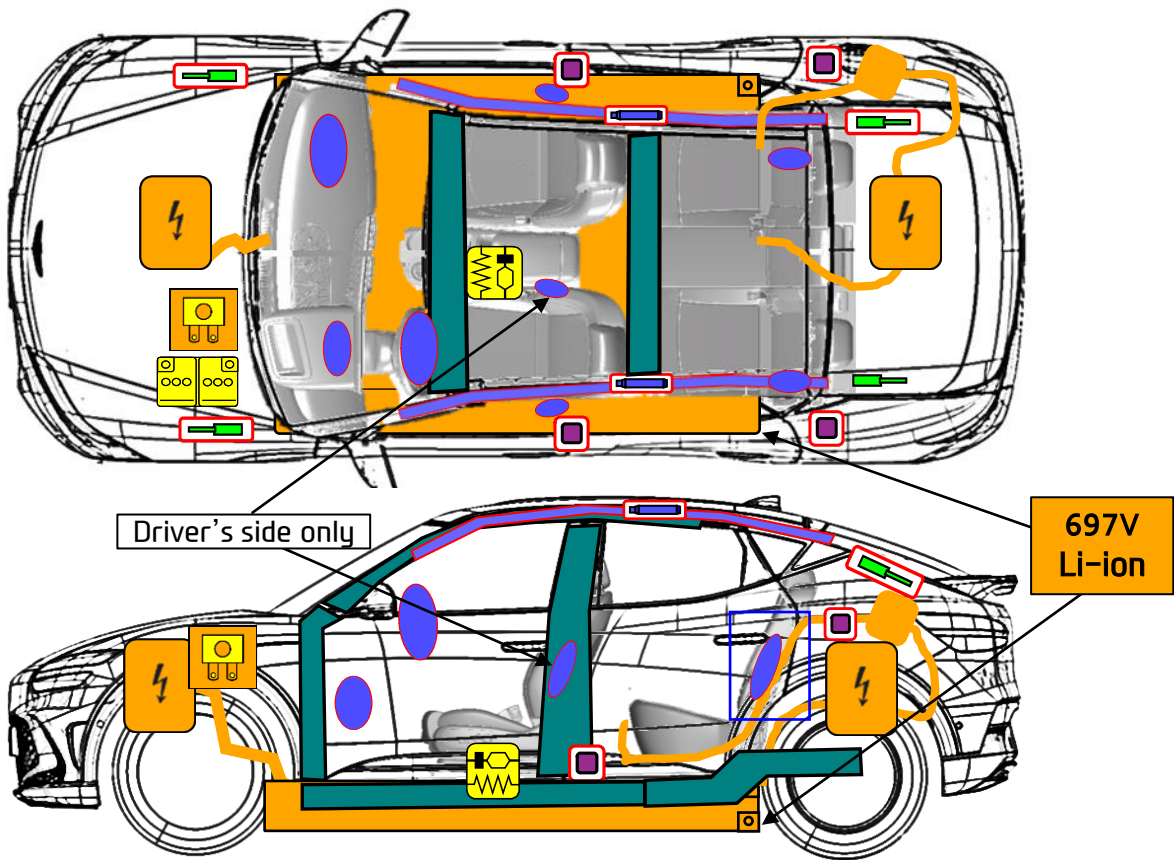

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Battery low-voltage		Preloaded spring / Gas strut		High strength zone		Fuse Box disabling high voltage
	Battery pack, high-voltage		High voltage power cable		High voltage component		

1. Identification / Recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.



Brand logo



Brand name



Borrowed name



Charging port

2. Immobilization / stabilization / lifting

Immobilization :

①




②



- ① Lock the wheel and pull the electric parking brake switch to fix the vehicle.
- ② In the case of an automatic transmission vehicle, the brake pedal is pressed. Press the P button to park the vehicle.

To stabilize the vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects

Lifting points under the vehicle:

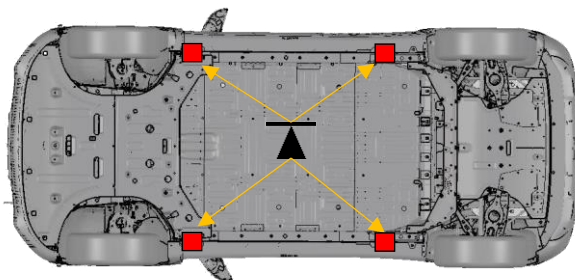

3. Disable direct hazards / safety regulations



IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER ARE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. FOR ALL OTHER CASES, USE THE DISABLING METHODS BELOW




Access to the low-voltage battery :



- ① Pull the hood open lever on the lower left side of the crush pad on the driver's side.



- ② Go to the front of the vehicle and open the hood.

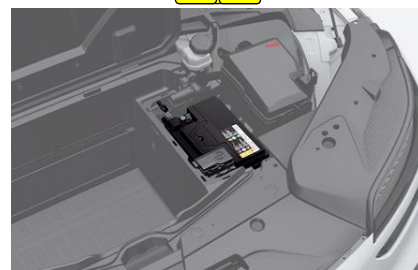

- ③ Wear a fire helmet after locating the 12 V battery.

Disabling Procedure :

12 V battery



① Turn off the engine.

② Disconnect the (-) terminal.

③ Disconnect the (+) terminal .




High-voltage battery



① Open the cover of the junction block.

② Pull up the high voltage cutoff switch (yellow label)

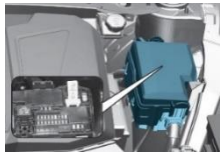

4. Access to the occupants

Adjusting the steering column :




Manual




Auto

Door handle : Manual deployment method

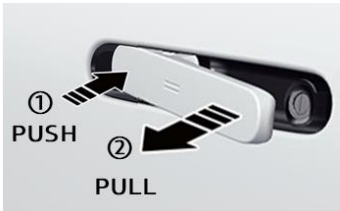

When the door handle doesn't pop out, push the front part of the handle.

Hardened Steel

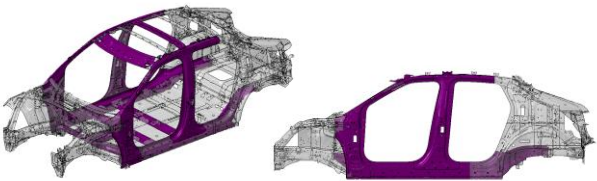

※ Purple : High tensile strength steel plate (590Mpa ↑)

Seat adjustment : Driver's seat / passenger seat



Glass : ①②③ Laminated ④ tempered glass



5. Stored energy / liquids / gases / solids

	697V							
	12V							
	Refrigerant	Heat pump						
	R-1234yf	900g						




WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE USING THERMAL IMAGING CAMERA.




6. In case of fire



Use a large amount of water.

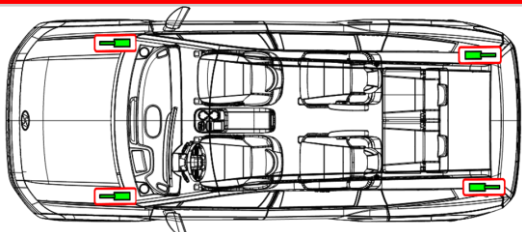

BATTERY RE-IGNITION!



Gas strut!



Risk of missile effect of hood and tailgate

7. In case of submersion



Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.



8. Towing / transportation / storage

OK :



Notice : The use of wheel dollies (1) or flatbed is recommended.

Not OK :

(1)




(2)



(3)

For 2WD



Notice: Do not tow with sling-type equipment (1). Do not tow the vehicle with the front wheels touching the ground as this may cause damage to the vehicle (2). Two-wheel drive (2WD) vehicles can be towed in the method presented in (3).

9. Additional Key Information

10. Description of the pictogram used

	General warning sign		Warning, Electricity		Electric vehicle
	Air-conditioning component		Use thermal Infrared camera		Use water to extinguish the fire
	Acute toxicity		Corrosives		Environmental hazard
	Explosive		Flammable		Hazardous to the human health
	Bonnet		Boot		